


D-Link®

Quick Installation Guide

DFE-550TX

Fast Ethernet 10/100
Adapter

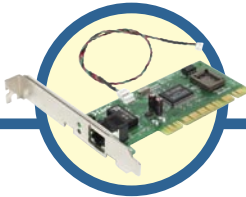

DFE-530TX

Fast Ethernet 10/100
Adapter

Introduction

This Quick Installation Guide gives step-by-step instructions for setting up the D-Link DFE 530TX (Dual speed 10/100Mbps Ethernet PCI Adapter) and DFE-550TX (Dual speed 10/100Mbps Ethernet PCI Adapter). For more detailed information about the adapter, making network connections, and technical specifications, please refer to the User's Guide hardcopy or file included with your adapter.


Check Your Package Contents

These are the items included with your purchase:


If any of the below items are missing, please contact your reseller.



DFE-530TX Network Interface Card (NIC) or

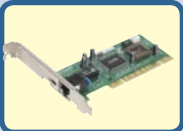

DFE-550TX Network Interface Card (NIC)

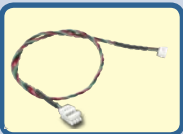

WOL Cable



Driver Diskette or CD-ROM

1

Hardware Installation

- 1-1** Shut down the computer & unplug the power cord.
- 1-2** Remove the chassis cover.
- 1-3** Plug the Boot ROM into the appropriate socket if your order includes Boot ROM, if not, go ahead to 1-4.
- 1-4** Insert the card into an empty PCI slot.
- 1-5** Install the bracket screw to secure the card to the computer chassis.
- 1-6** Connect the WOL cable if your system supports WOL.
(See more details in Step 2)
- 1-7** Replace the computer chassis cover.
- 1-8** Reconnect the power cord and switch the computer power on.

2

Connecting the WOL cable

- 2.1** Connect the end of the WOL cable connector to the NIC WOL connector.
- 2.2** Refer to the motherboard manual to find the WOL socket location and connect the cable.
- 2.3** Power on the PC and press Delete or F1 when prompted to CMOS setup. Enable the WOL function.

3

Connecting Network Cable

3.1 Connecting for 10Mbps Ethernet:

Cat. 3, Cat. 4, and Cat. 5 UTP cables, as well as EIA/TIA-568 100Ω STP cable, all meet Ethernet cabling requirements.

3.2 Connecting for 100Mbps Fast Ethernet:

Cat. 5 UTP cable is required for Fast Ethernet.

4

Connecting Network Cable

The instructions for software installation are given as a README file on the shipping diskette/CD-ROM. See the README.TXT on the diskette/CD-ROM to find the proper program for your operating system.

Technical Support

You can find software updates and user documentation on the D-Link websites.

D-Link provides free technical support for customers within Canada, the United Kingdom, and Ireland.

Customers can contact D-Link technical support through our websites, or by phone.

For Customers within The United Kingdom & Ireland:

D-Link UK & Ireland Technical Support over the Telephone:

08456 12 0003 (United Kingdom)

+44 8456 12 0003 (Ireland)

Monday to Friday 8:00 am to 10:00 pm GMT

Sat & Sun 10.00 am to 7.00 pm GMT

D-Link UK & Ireland Technical Support over the Internet:

<http://www.dlink.co.uk>

<ftp://ftp.dlink.co.uk>

For Customers within Canada:

D-Link Canada Technical Support over the Telephone:

1-800-361-5265 (Canada)

Monday to Friday 7:30 am to 12:00 am EST

D-Link Canada Technical Support over the Internet:

<http://support.dlink.ca>

email: support@dlink.ca

