

QUICK INSTALL GUIDE

DNS-323

VERSION 1.0



D-Link[®]

STORAGE

System Requirements

- 1GHz Processor / 512 MB RAM
- 200MB available space
- CD-ROM drive
- Internet Explorer 6.0 or Mozilla Firefox 1.0 and above
- 3.5" Internal SATA Hard Drive
- Windows XP SP2 or Windows 2000 SP6


Package Contents

- D-Link DNS-323 2-Bay Network Storage Enclosure
- CD-ROM with Manual and Software
- Quick Installation Guide
- Power Adapter (12V;3A / 5V;3A)
- Power Cable Clip
- CAT5 Ethernet Cable

If any of the above items are missing, please contact your reseller.

Hardware Overview

Front View

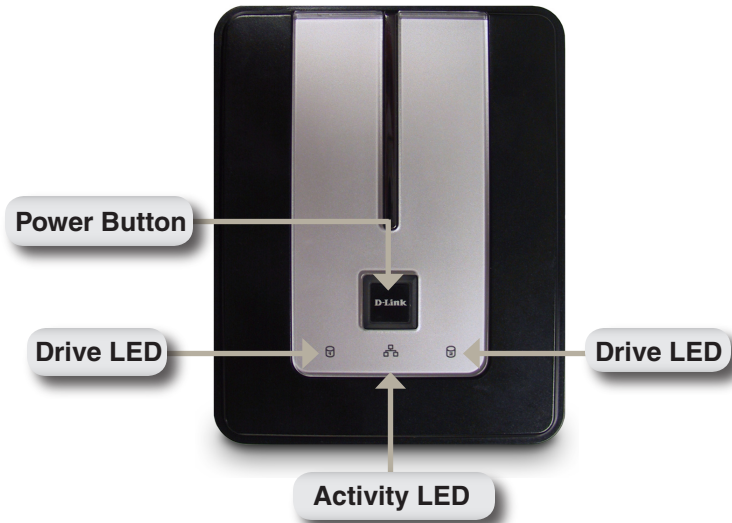

Power Button:

Press once to power on the DNS-323. Press and hold the button until it begins blinking to power down the device.


Drive LEDs:

These LEDs will be solid BLUE when drives are connected. The LEDs will blink when the drives are being accessed, formatted or synchronized. They will illuminate AMBER if a drive has failed.

Activity LED:

This LED will illuminate solid BLUE when there is an Ethernet connection. It will blink to indicate LAN traffic.

Rear View

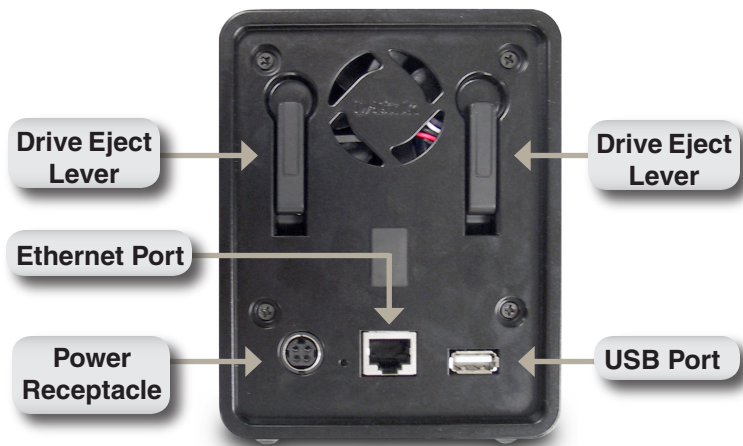

Power Receptacle:

The 12V;3A / 5V;3A power supply connects here.

Ethernet Port:

A Gigabit Ethernet port that connects the DNS-323 to the local network.

USB Port:

USB Print Server port for connecting a USB printer.

Drive Eject Lever:

Use the provided levers to eject the SATA hard drives.

Hardware Installation

1. Access the drive bays by sliding the faceplate up until it unlatches from the device.



2. Once the faceplate is unlatched, pull it off of the device, exposing the drive bays.



3. Insert a 3.5" SATA hard drive into each available drive bay. Make sure to align the drive connectors to the endpoints in the DNS-323. Gently push the drive in until it connects.



4. Attach the faceplate to the front of the device.



5. Connect an Ethernet cable into the available Ethernet port. This cable should connect the DNS-323 to your local network or directly to a computer for configuration.



 
6. Finally, connect the power adapter to the power receptacle.



Easy Search Utility

When first powered on, during the initial boot sequence, the DNS-323 will wait to be assigned an IP address via DHCP. If it does not receive a DHCP assigned IP address, by default it will boot up with a self-assigned IP address of 192.168.0.32.

The Easy Search Utility provided on the DNS-323 CD-ROM makes it simple to find any DNS-323 devices on your network, and it is recommended to use the Easy Search Utility when accessing and configuring the DNS-323 for the first time.

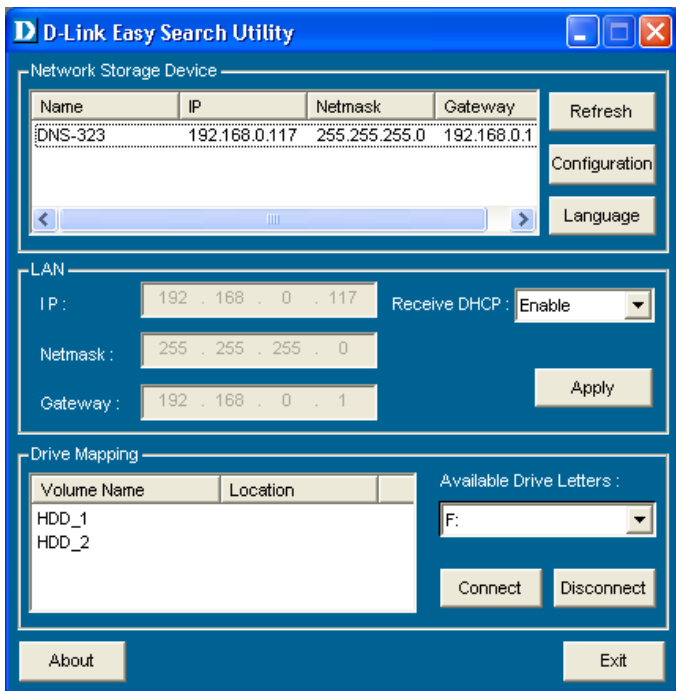


Getting Started

When logging into the DNS-323 for the first time, you will be asked to choose a drive configuration and format the drives. There are four available options, Standard, JBOD, RAID 0 and RAID 1.


From the DNS-323 CD, select **Easy Search Utility**.




Highlight an available DNS-323 and click **Configuration** to access the web-based utility.

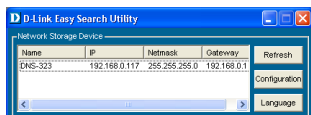


At the login screen, type **admin** for the user name and leave the password field blank. Click **Config**.

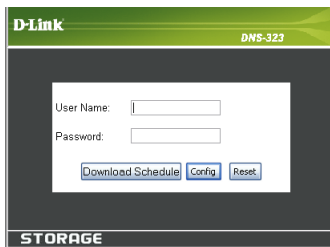

 
Select a type of hard drive configuration, and click **Next**.

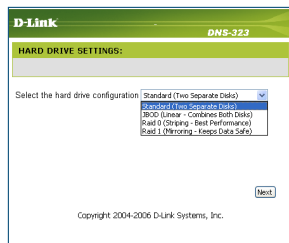


A message appears warning that when the drives are formatted all data will be erased. Click **OK** to continue.

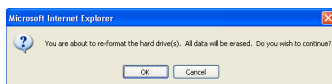

 
Select the disk format type, EXT2 or EXT3, and click **Next**.

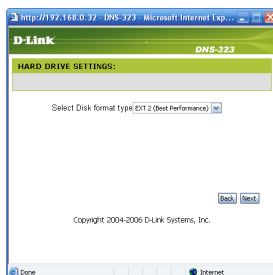


As the drives are formatted, a progress meter will display.

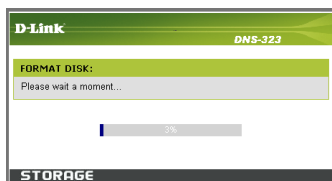


When formatting is complete, the results will display. Click **Close** to continue.

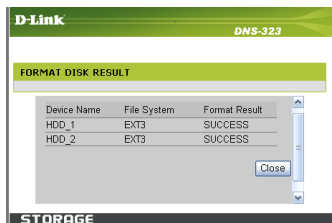



A message informing you that the DNS-323 will restart appears. Click **OK**.

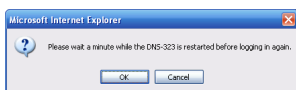

The DNS-323 will restart.

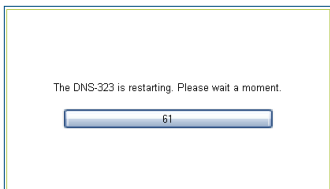

 After the DNS-323 restarts, type **admin** for the user name and leave the password field blank. Click **Config**.

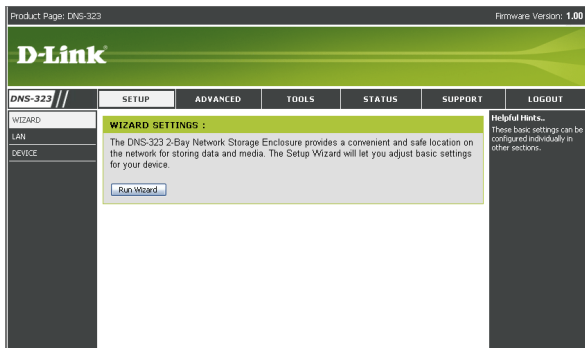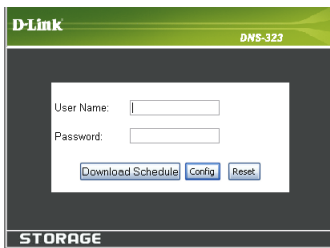

Your DNS-323 setup is now complete.

Mapping a Drive

The Easy Search Utility makes it simple to map drives to your computer. To get started, insert the DNS-323 CD into your CD-ROM and launch the Easy Search Utility and launch the Easy Search Utility.

The screenshot shows the D-Link Easy Search Utility window. It is divided into several sections: Network Storage Device, LAN, and Drive Mapping. The Network Storage Device section contains a table with columns for Name, IP, Netmask, and Gateway. The LAN section contains fields for IP, Netmask, and Gateway, along with a Receive DHCP dropdown and an Apply button. The Drive Mapping section contains a table with columns for Volume Name and Location, an Available Drive Letters dropdown, and Connect and Disconnect buttons. Callouts with arrows point to the DNS-323 entry in the Network Storage Device table, the Drive Mapping table, and the Available Drive Letters dropdown.

Select an available DNS-323.

Available volumes will be displayed under Drive Mapping. Highlight the drive you want to map.

Select an available drive letter from the drop-down menu and click **Connect**.

Name	IP	Netmask	Gateway
DNS-323	192.168.0.117	255.255.255.0	192.168.0.1

Volume Name	Location
HDD_1	
HDD_2	

Once connected, your mapped drive(s) will appear in My Computer as network drives.

Technical Support

D-Link's website contains the latest user documentation and software updates for D-Link products.

U.S. and Canadian customers can contact D-Link Technical Support through our website or by phone.

United States

Telephone

(877) 453-5465

Twenty four hours a day, seven days a week.

World Wide Web

<http://support.dlink.com>

Canada

Telephone

(800) 361-5265

Monday through Friday, 7:30am to 9:00pm EST.

World Wide Web

<http://support.dlink.ca>



Version 1.0
Revised 06/14/2006

Copyright ©2006 D-Link Corporation/D-Link Systems, Inc. All rights reserved. D-Link, and the D-Link logo are registered trademarks of D-Link Corporation or its subsidiaries in the United States and other countries. Other trademarks are the property of their respective owners. Product specifications, size and shape are subject to change without notice, and actual product appearance may differ from that depicted on the packaging. Visit www.dlink.com for more details.