



Manual

Version 2.0

DSM-G600

Wireless Network Storage Enclosure



Table of Contents

Package Contents	4
Introduction	5
Features and Benefits	6
Hardware Overview	7
Hardware Installation	9
Wireless Installation Considerations	12
Windows® Connect Now (WCN)	13
Connecting to a Wireless Network	16
Mapping a Drive	18
Using the Configuration Utility	21
Setup Wizard	22
IP Settings	28
Wireless Security	29
Wireless Settings	30
Client Mode	31
WEP	32
WPA-PSK	33
Access Point Mode	34
WEP	35
WPA-PSK	36
WPA (RADIUS)	37
Device Settings	38
User Creation	39
Network Access	40
FTP Server	42
Performance	46
UPnP AV	47
Admin Password	48
Time Server	49
System Settings	50
Upgrade Firmware	51
Disk Utility	52
Email Alerts	53



Table of Contents (continued)

Device Information	54
Help Screen	55
Download Scheduling	56
Scheduling Status.....	59
Appendix A - Using the Easy Search Utility	60
Networking Basics	61
Troubleshooting	67
Technical Specifications	68
Contacting Technical Support	70
Warranty	71
Registration	74

Package Contents



- **D-Link DSM-G600**
Wireless Network Storage Enclosure
- CD-ROM with Manual and Software
- Ethernet (CAT5 UTP/Straight-Through) Cable
- 12V DC 3A Power Supply
- Rubber Feet (4)

Note: Using a power supply with a different voltage than the one included with the DSM-G600 will cause damage and void the warranty for this product.

If any of the above items are missing, please contact your reseller.

Minimum System Requirements

- Computer with Windows XP or 2000
- Internet Explorer version 6.0 or Netscape Navigator version 7.0 and above
- An internal 3.5" PATA/IDE hard drive and/or USB Hard Drive
- An 802.11g/b Wireless Network
- An available Ethernet port on the network*

* It is required that an Ethernet cable is used during initial setup. Once your wireless configuration is set, you may disconnect the Ethernet cable and begin communicating wirelessly with your DSM-G600.

Introduction

D-Link, an industry leader in networking, introduces the DSM-G600 Wireless G Network Storage Enclosure. Connect your existing hard drives* to a home or office network and create additional storage space with the DSM-G600 Wireless Network Storage Enclosure. With the DSM-G600, you can conveniently share documents, files, and digital media such as music, video, and photos with everyone on your home or office network.

The DSM-G600 Wireless G Network Storage Enclosure can be used with an internal 3.5" PATA/IDE hard drive, giving you the flexibility of choosing the storage capacity required for your network. And with two additional high-speed USB 2.0 ports, expand your storage capabilities even further as your network needs grow by adding your own external USB drives!

In addition, the DSM-G600 also functions as an Access Point. Create an 802.11g wireless network when you attach the DSM-G600 to your wired router. This network can be secured using WEP, WPA, or WPA-PSK encryption. With support for Windows® Connect Now, you can simplify wireless configuration.

By adding your own hard drives to the DSM-G600 Wireless G Network Storage Enclosure, conveniently store, retrieve, and share digital content with everyone on your home or office network. As a central storage location for data, the DSM-G600 is an organized solution for the network.

Free up disk space on the computer and organize data on your network with the DSM-G600 Wireless G Network Storage Enclosure!

* Hard Drives not included

Features and Benefits

- 802.11g Wireless Connectivity**

The DSM-G600 connects to your network using either Fast Ethernet or 802.11g wireless. Wirelessly transfer data to and from the DSM-G600 with a maximum wireless signal rate of up to 54Mbps*. The DSM-G600 is also backward compatible with 802.11b networks.
- Connect an Internal and/or USB 2.0 hard drives on the Network**

Add extra storage space to your network! Connect a 3.5" PATA/IDE hard drive and up to two stand-alone USB 1.1 or 2.0 hard drives or flash drives to the DSM-G600 and easily have access to all stored files.
- Built-in FTP Server**

The DSM-G600 can be configured so that your internal/USB drives are accessible over the Internet, making it convenient to access your files, even when you're away.
- Safely Add and Remove USB Drives**

The DSM-G600 does not require you to reboot the system when adding USB drives to the network, thus eliminating downtime. You can safely remove the USB drives using the **Dismount** button on the back of the DSM-G600.
- Plug & Play**

Through plug and play setup, installing the DSM-G600 into your network has never been easier. Simply connect the DSM-G600 to a 10/100/1000 Fast Ethernet port on your network router or switch, plug in USB hard drives or flash drives, and configure additional setup options using the Web-based configuration utility.
- Web-based Configuration Utility**


Additional setup options can be configured using the built-in Web-based configuration utility including firmware upgrade, user account management, folder management, scheduled downloads, and DHCP/manual network settings.
- Backup Function**

You can schedule the DSM-G600 to automatically create full or incremental backups of important information from the network.

* Maximum wireless signal rate based on IEEE Standard 802.11g specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead lower actual data throughput rate.

Hardware Overview

Front Panel

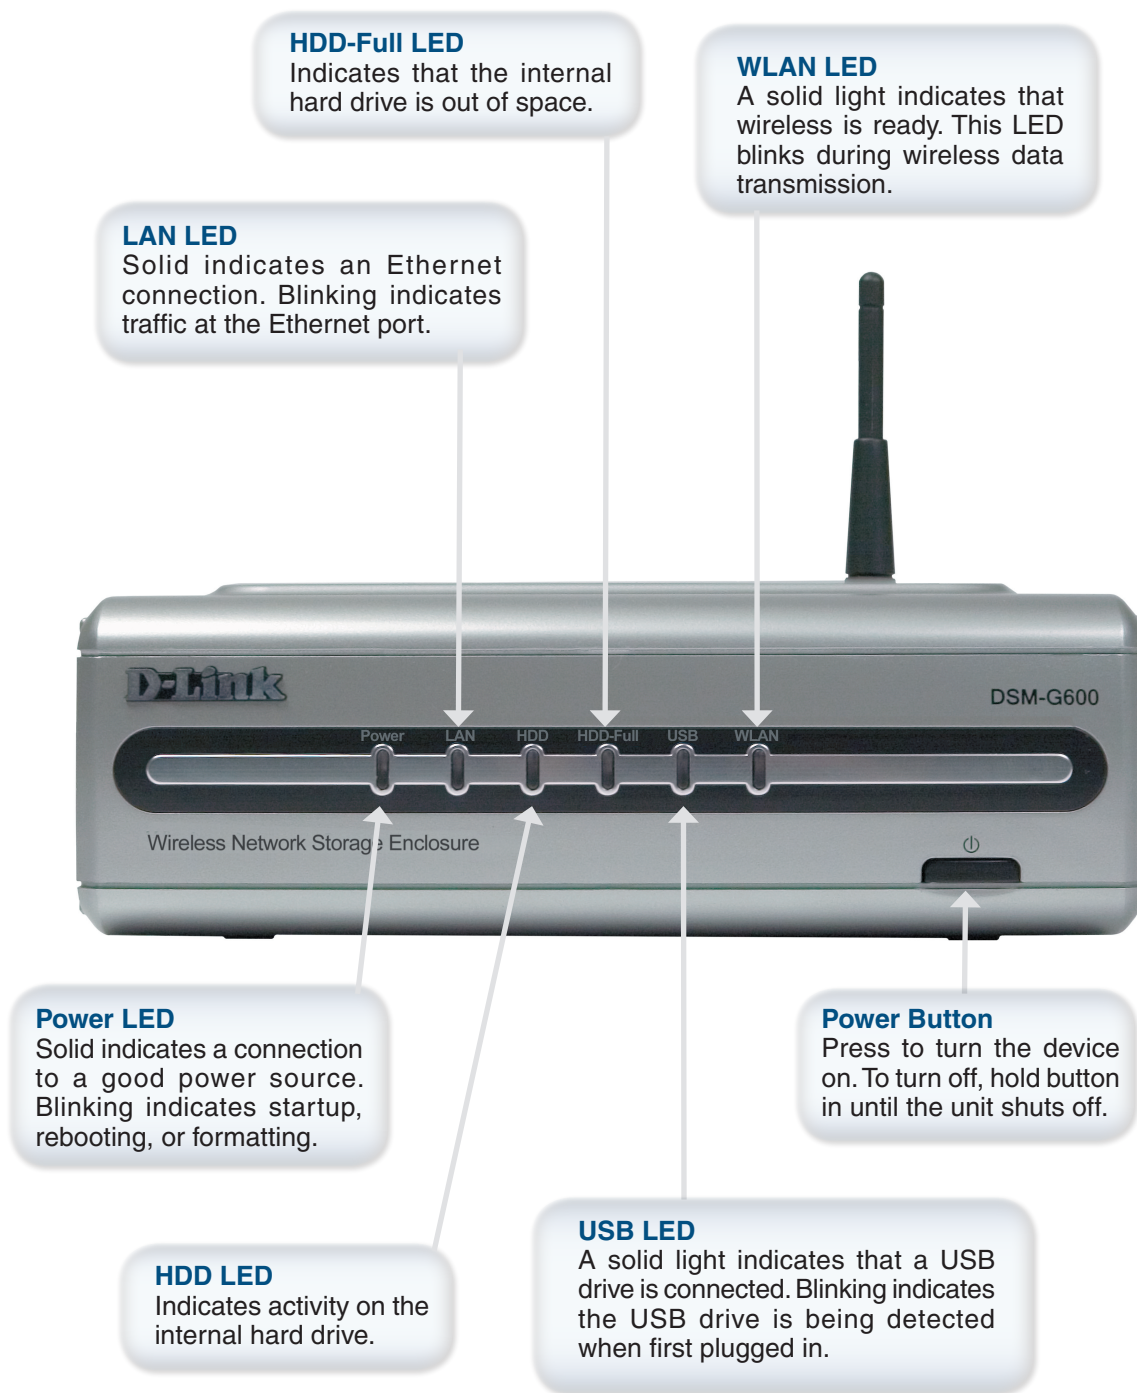

Hardware Overview

Rear Panel



Hardware Installation

WARNING: Disconnect the power cord before inserting or removing the internal hard disk drive.

- A.** Unscrew the two screws on the back panel of the DSM-G600 to remove the cover.



- B.** Connect the IDE cable to the IDE cable connector on your hard drive.

Note: Make sure the jumper setting on your hard drive is set to *Master* or *Cable Select*.




- C.** Connect the power cable to the power connector on your hard drive.



- D. While facing the back of the DSM-G600, insert the right side of the hard drive into the case. Once in place, snap down the left side.



- E. Use the mounting screw to secure the hard drive to the DSM-G600. Replace the cover and screw the two screws on the back panel of the DSM-G600.

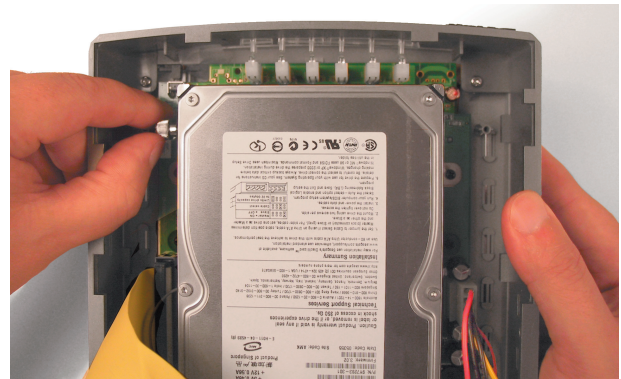

- F. Connect an Ethernet cable to the Ethernet jack located on the back of the DSM-G600 for initial setup.



Note: It is required that an Ethernet cable is used during initial setup. Once your wireless configuration is set, you may disconnect the Ethernet cable and begin communicating wirelessly with your DSM-G600.

- G.** Connect the antenna to the antenna connector located on the back of the DSM-G600.



- H.** Connect the power adapter to the power receptor on the back panel. Then plug the other end of the power adapter into a wall outlet or power strip. The Power LED will turn on to indicate proper operation.



Note: When you first power on, the DSM-G600 will offer to format your hard drive if it is unformatted. This process may take several minutes depending on the size of your hard drive. During this process, the power LED will blink. Once the power LED is solid, you may then access the web based configuration of the DSM-G600. Do not power the unit off during this process.

Wireless Installation Considerations

The DSM-G600 lets you access your stored data and media files using a wireless connection from virtually anywhere within the operating range of your wireless network. Keep in mind, however, that the number, thickness and location of walls, ceilings, or other objects that the wireless signals must pass through, may limit the range. Typical ranges vary depending on the types of materials and background RF (radio frequency) noise in your home or business. The key to maximizing wireless range is to follow these basic guidelines:

- 1** Keep the number of walls and ceilings between the DSM-G600 and other network devices to a minimum - each wall or ceiling can reduce your DSM-G600's range from 3-90 feet (1-30 meters.) Position your devices so that the number of walls or ceilings is minimized.
- 2** Be aware of the direct line between network devices. A wall that is 1.5 feet thick (.5 meters), at a 45-degree angle appears to be almost 3 feet (1 meter) thick. At a 2-degree angle it looks over 42 feet (14 meters) thick! Position devices so that the signal will travel straight through a wall or ceiling (instead of at an angle) for better reception.
- 3** Building Materials make a difference. A solid metal door or aluminum studs may have a negative effect on range. Try to position access points, wireless routers, and computers so that the signal passes through drywall or open doorways. Materials and objects such as glass, steel, metal, walls with insulation, water (fish tanks), mirrors, file cabinets, brick, and concrete will degrade your wireless signal.
- 4** Keep your product away (at least 3-6 feet or 1-2 meters) from electrical devices or appliances that generate RF noise.
- 5** If you are using 2.4GHz cordless phones or X-10 (wireless products such as ceiling fans, lights, and home security systems), your wireless connection may degrade dramatically or drop completely. Make sure your 2.4GHz phone base is as far away from your wireless devices as possible. The base transmits a signal even if the phone is not in use.


Windows® Connect Now (WCN)

Note: This feature is only available through Windows XP with Service Pack 2 installed.

In this section, you will learn how to use the Wireless Network Setup Wizard to easily and securely set up the DSM-G600 on a wireless network. You will need to have a USB flash drive available to complete the WCN wireless setup on the DSM-G600.

If you do not have Windows XP (SP2) or do not wish to use WCN to setup your wireless settings, skip to page 16 to connect to a wireless network.


Click **Start > Accessories > Communications > Wireless Network Setup Wizard**.

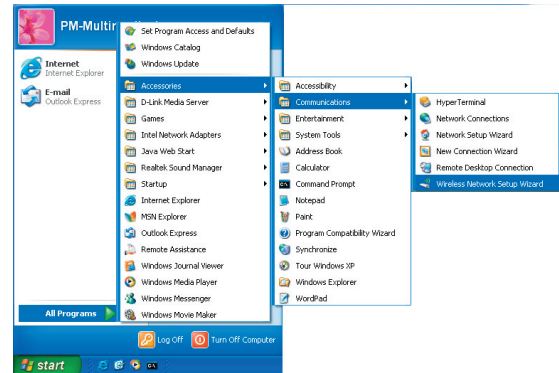

Click **Next**.

If you have already used WCN to configure other wireless devices on your network and would like to use the same settings on your DSM-G600, click **Add new computers or devices to the 'Wireless Network' network** and skip to page 15 to continue.

To create new wireless settings, click **Setup a new wireless network**.

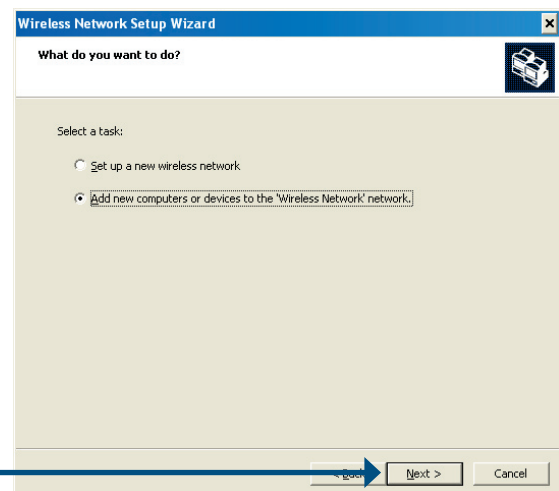

Click **Next**.

Windows® Connect Now (Continued)


Enter the network name (SSID).

If you want Windows to assign a random network key (encryption key), select **Automatically assign a network key**.

If you want to manually assign a network key select **Manually assign a network key**.


To use WPA-PSK, select **Use WPA Encryption instead of WEP**.

Click **Next**.

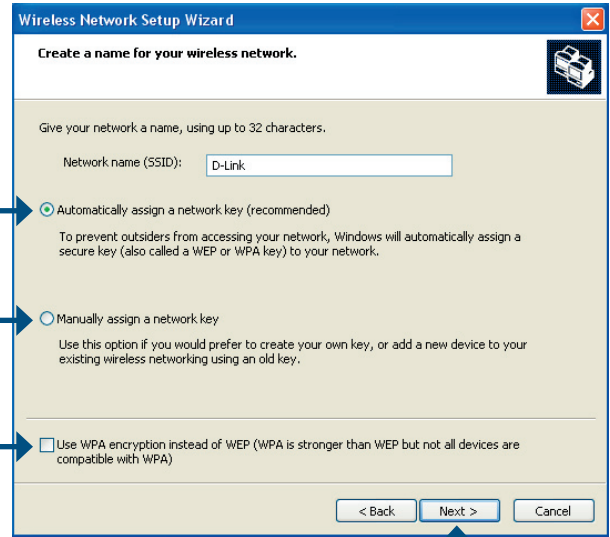


This screen appears if you choose to set the WEP key manually. Enter the desired encryption key in the space provided and then enter the key again to confirm.

Click **Next**.

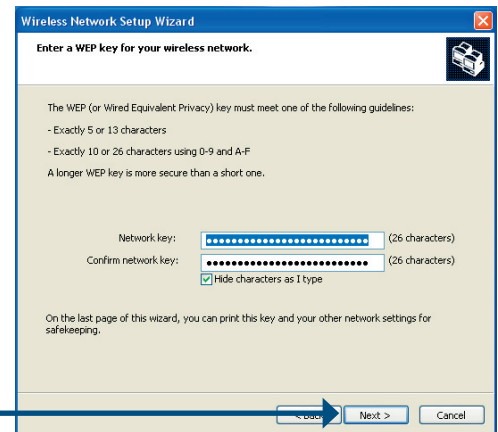


This screen appears if you choose to set the WPA key manually. Enter the desired encryption key in the space provided and then enter the key again to confirm.

Click **Next**.

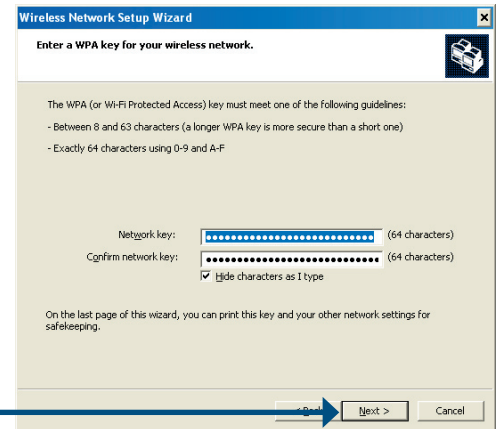


Windows® Connect Now (Continued)

This screen appears when the WEP or WPA key has been assigned. Follow the directions on the screen to transfer settings to the USB flash drive.

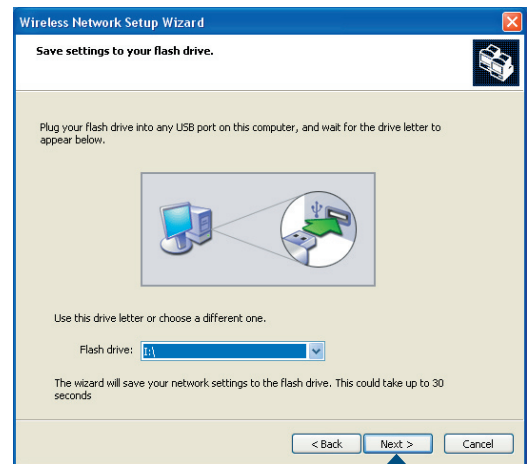

Click **Next**.


This screen appears after the settings are successfully transferred to the USB flash drive. Follow the directions on the screen.

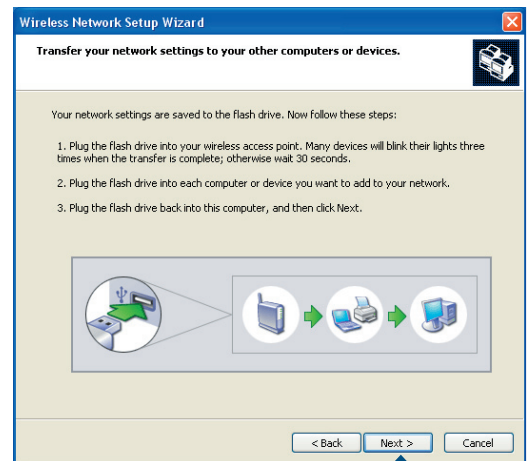

Click **Next**.

When the DSM-G600 wireless setup is successful, a window similar to this one will appear.

You have completed the wireless configuration of the DSM-G600.

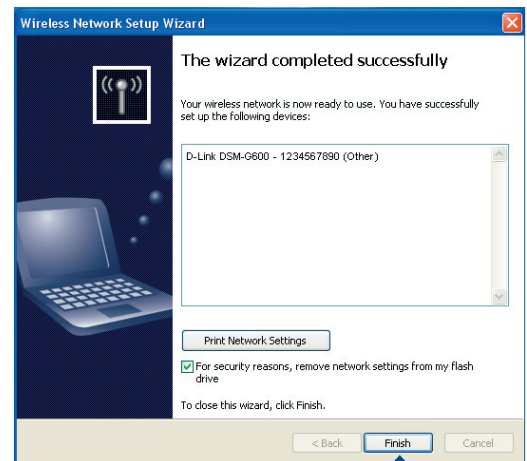

Click **Finish**.


Connecting to a Wireless Network

If you have configured the wireless settings using Windows® Connect Now (WCN), you may skip this section and continue to page 18.


The following is to connect the DSM-G600 to an existing wireless network (Client Mode).

Insert the DSM-G600 CD into your CD-ROM drive.

Click **Launch D-Link Easy Search Utility**.

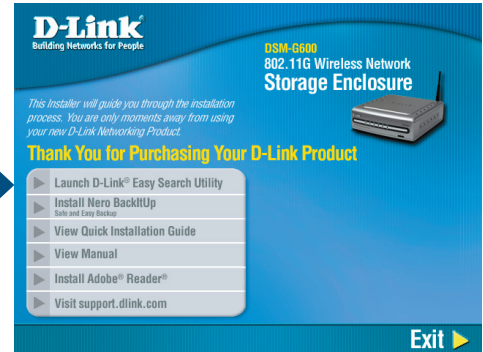

Highlight an available DSM-G600 and click **Configuration** to access the web-based utility.

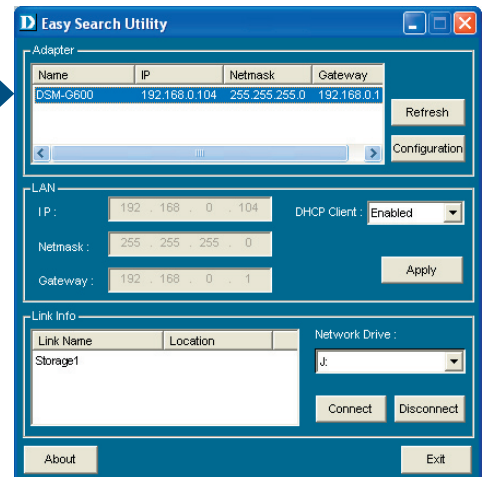

The logon screen will appear.

Type **admin** for the username and leave the password field blank.



Click **Config**

Connecting to a Wireless Network (continued)

Next, click **Wireless** on the left side and select **Client** mode.

Click **Enable**

Click **Site Survey**



Select an available wireless network by clicking on the radio button under **Join**.

Click **Connect**

If the wireless network you've selected has any wireless security enabled, you will be prompted to enter the WEP or WPA-PSK information.

Refer to page 29 for more information regarding encryption.

Click **Apply**

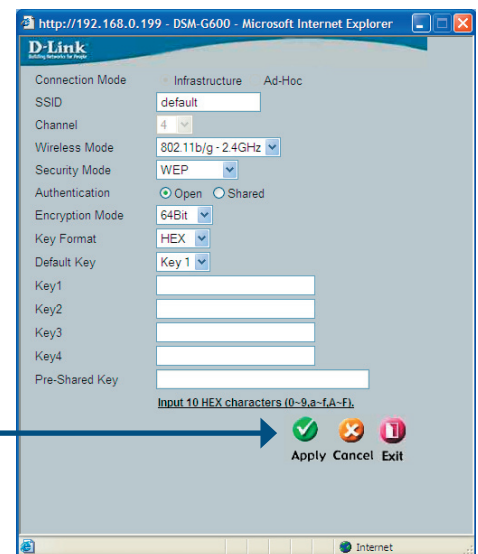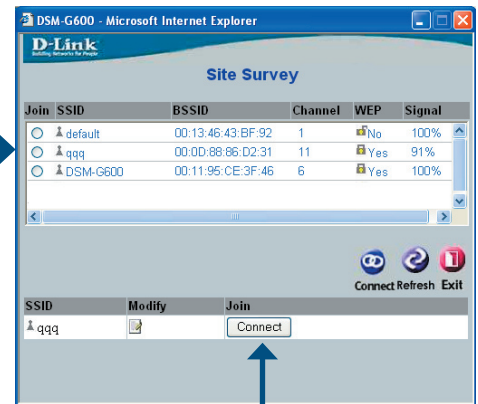


Your wireless connection setup is now complete!

Mapping a Drive


You can use the D-Link Easy Search Utility to map drives to your computer.

Insert the DSM-G600 CD into your CD-ROM drive.

Click **Launch D-Link Easy Search Utility**.

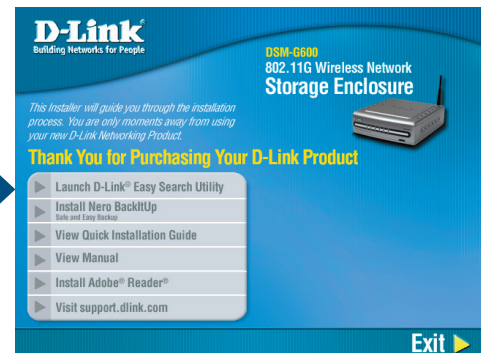

Highlight an available DSM-G600.

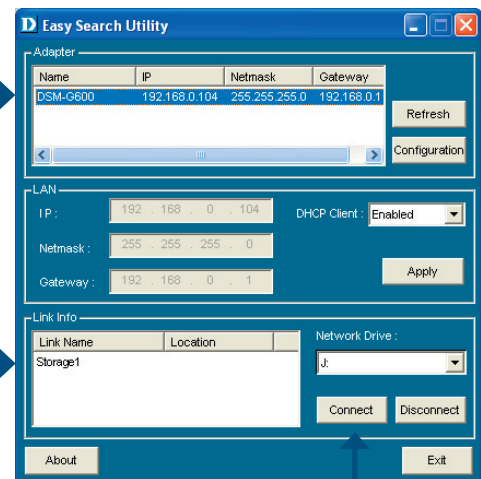

Available shares will be displayed under Link Info. Highlight the share you want to map.

Select an available drive letter from the drop-down menu and click **Connect**.


Click **Disconnect** to remove the selected mapped drive.

Once connected, your mapped drive(s) will appear in **My Computer**. From your desktop, double-click the **My Computer** icon and then double-click your mapped drive to access the files and folders.


Mapping a Drive (continued)

As an alternate method, you can access the DSM-G600's internal/USB drive(s) by mapping the shared folders as drives in Windows. Please see the following instructions for mapping a drive so that it is accessible from the My Computer screen.

Right-click **Start** and click **Explore**.

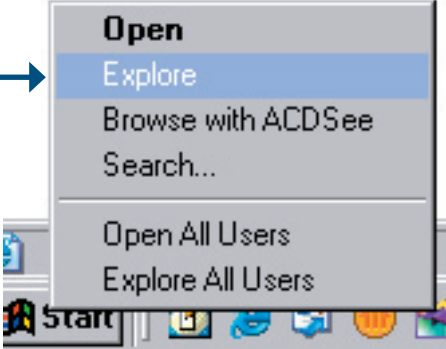


Click **Tools** and click **Map Network Drive**.

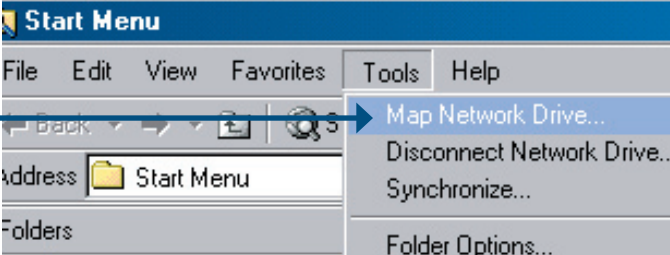

Select an available drive letter and click **Browse** to locate your shared DSM-G600 folder.

You will find the DSM-G600 shared folder under the **Workgroup Name** that you entered into the Setup Wizard or in the Home > LAN screen of the Configuration Utility.


Click **Finish**

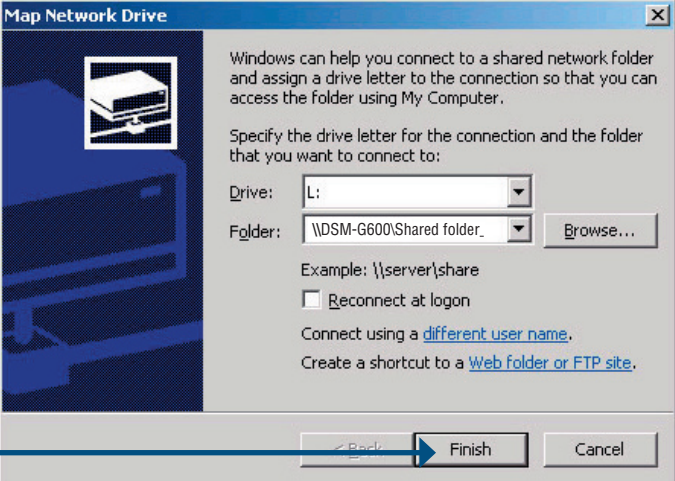


Mapping a Drive (continued)

Once connected, all shared folders will appear in My Computer.

Double-click the **My Computer** icon on your desktop.

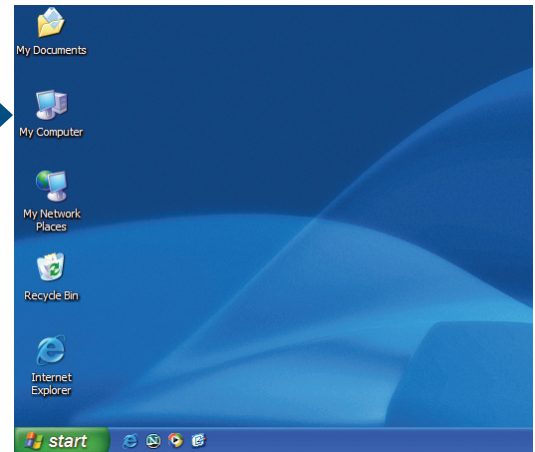

Double-click on the mapped drive to access the files and folders.

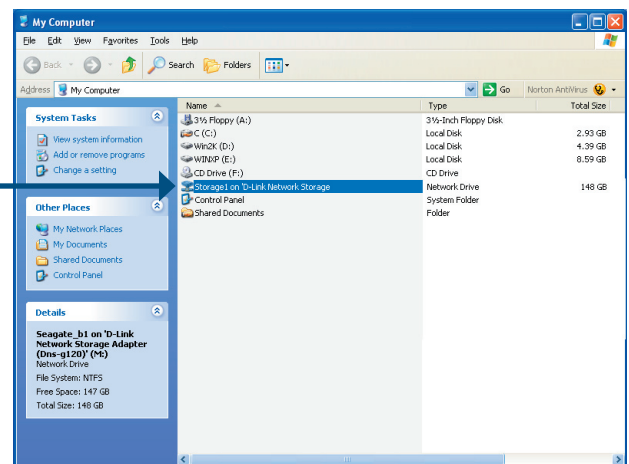


Using the Configuration Utility

Insert the DSM-G600 CD into your CD-ROM drive.

Click **Launch D-Link Easy Search Utility**.



Highlight an available DSM-G600 and click **Configuration** to access the web-based utility.

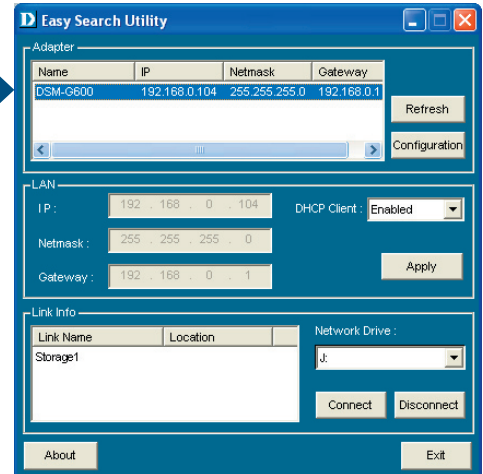

The logon screen will appear.

Type **admin** for the username and leave the password field blank.



Click **Config**

Once you have logged in, the **Home** screen, shown on the next page, will appear.

Home > Wizard

The Home > Wizard screen will appear. Click **Run Wizard** and the **Setup Wizard** will guide you through the basic configuration. For a tour of the **Wizard**, please see the following pages in this section.



These buttons appear on most of the configuration screens in this section. Please click on the appropriate button at the bottom of each screen after you have made a configuration change.



Apply

Clicking **Apply** will save changes made to the page



Cancel

Clicking **Cancel** will clear changes made to the page



Help


Clicking **Help** will bring up helpful information regarding the page

Using the Setup Wizard

The Wizard will guide you through five steps:


- Password
- Time Zone
- LAN Connection Settings
- Additional Settings
- Wireless Connection Settings

Click **Next**

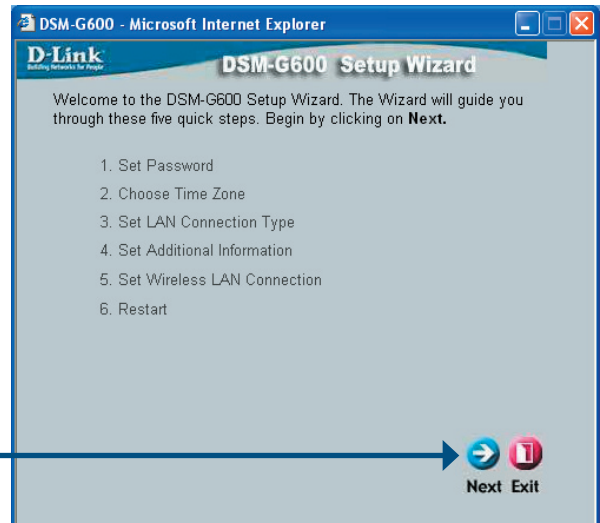


Create a new password for your DSM-G600.

Click **Next**

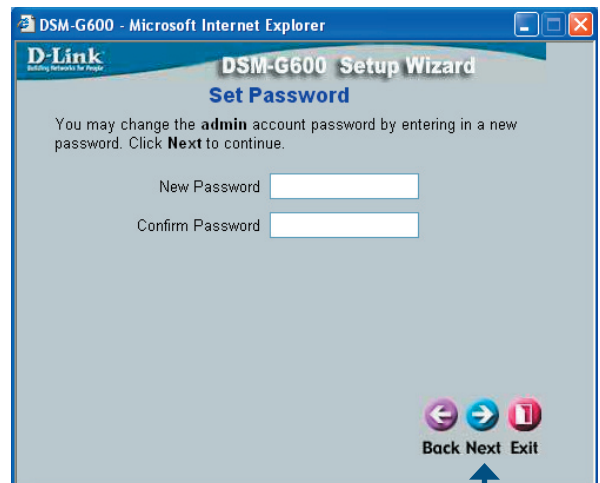

Select your Time Zone from the drop-down menu.

Click **Next**

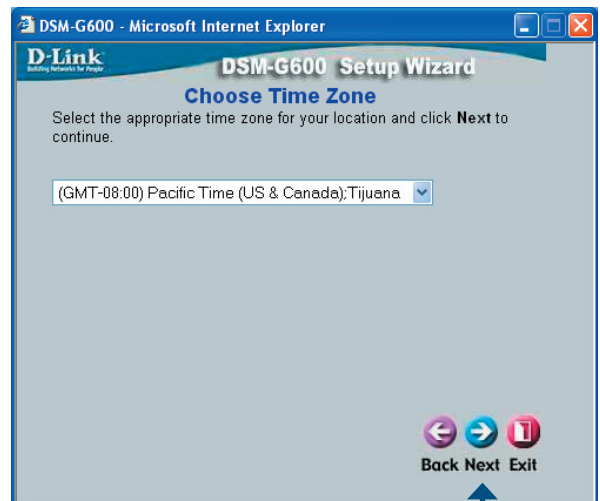


Using the Setup Wizard (continued)

Select either Static or Dynamic IP address. When Static is selected, you will fill in these fields:


- Static IP Address**
- Subnet Mask**
- Gateway Address** - Usually the LAN address of your router.
- DNS Address** - A Domain Name Server translates Domain names into IP addresses.

Select **DHCP Client** when you have a DHCP server in your network. No other configuration is required on this screen when Dynamic IP address is selected.

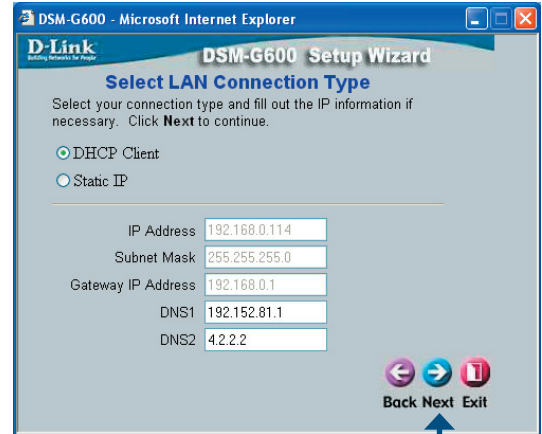

Click **Next**.


Enter the **Workgroup** name, a **Name** for the DSM-G600 (useful if you have multiple storage enclosures on your network), and a **Description**.

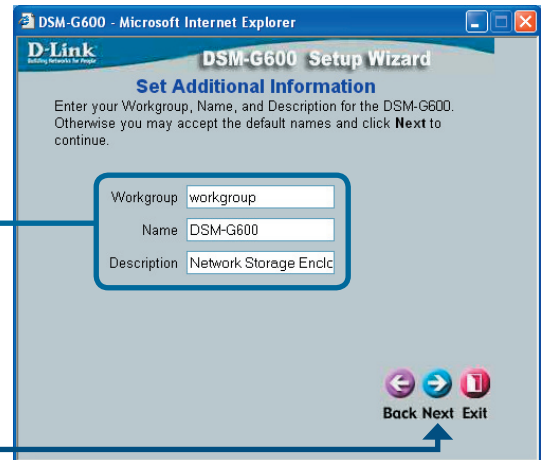

Click **Next**.

In **Wireless Mode**, select **Client** or **Access Point** mode. Select **Enable** to use the wireless function or **Disable** to turn wireless off.

Select **Client** if you will be connecting to an existing wireless router or access point. Select **Access Point** if wireless clients will be connecting directly to the DSM-G600.

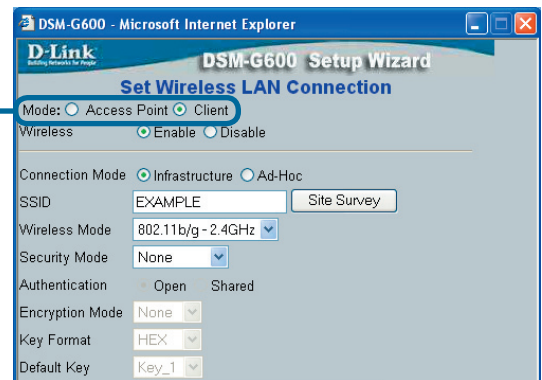

Using the Setup Wizard (continued)

If you have already configured the wireless settings using Windows® Connect Now (WCN), click Next on the following screen without any configuration changes. Refer to page 13 for WCN setup instructions.

Note: The DSM-G600 cannot bridge two existing wireless networks via wireless. Plugging the unit into a router, switch, or hub using an Ethernet cable will allow you to create a wireless network or segment.

When selecting **Client mode**, you will need to choose the connection mode:
Infrastructure - Connect to an access point or wireless router.
Ad-Hoc - Connect to a wireless client directly such as a laptop with a wireless adapter.

Skip to page 26 for **Access Point** mode.


Click **Site Survey** to select a network from a list of available wireless networks or you may enter the wireless settings manually. The SSID must be the same for all devices in the network.

Click **Next**.



Click the radio button next to the wireless network you want to connect to.

Click **Connect**.

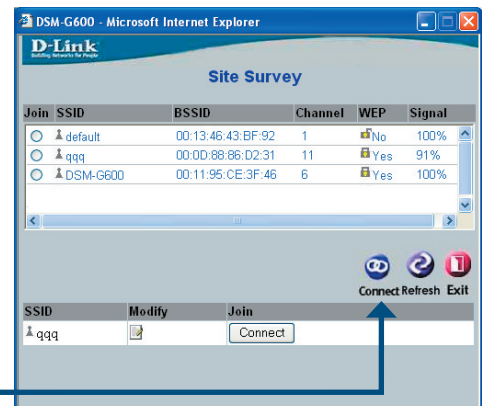

Using the Setup Wizard (continued)


When selecting **Access Point** mode, you will need to enter the following network settings:

SSID - Enter the SSID or network name.
Channel - Select the channel of your wireless network (1-11).

802.11g Only Mode - Select Enabled if all your wireless devices are 802.11g, otherwise select Disabled.

SSID Broadcast - Select Enabled to allow your SSID to be seen by any wireless device.

Security - Select to enable WEP, WPA, or WPA-PSK security.

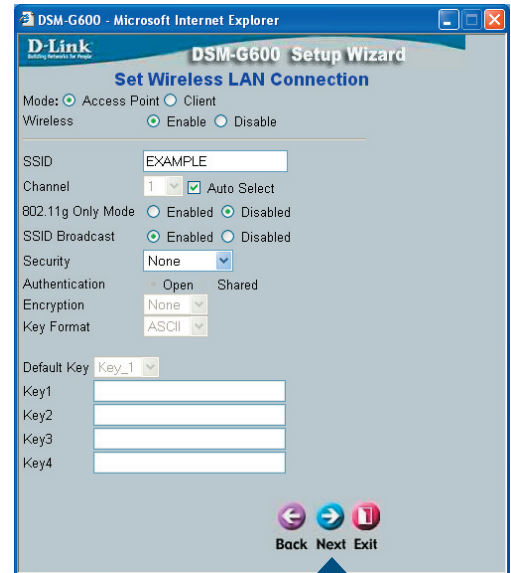

Click **Next**.

For more information on WEP, WPA-PSK, and WPA security, please refer to page 29.

If you select WPA, enter the following information:

Encryption - Select TKIP or AES.

RADIUS Server IP - Enter the IP address of your RADIUS server.

Port - Enter the port used.

Shared Secret - Enter the key used. This key will need to be exactly the same as on your clients.



Click **Next**.

Using the Setup Wizard (continued)

If your wireless network is using WEP security, click **WEP** and enter the encryption settings.




Click **Next**.

If your wireless network is using WPA-PSK security, click **WPA-PSK** and enter the encryption settings.



Click **Next**.

Click **Restart**.

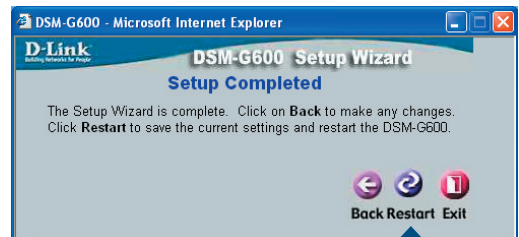

You have completed the basic configuration using the setup wizard!

Home > LAN

The screenshot shows the D-Link DSM-G600 configuration utility interface. The title bar reads 'D-Link Building Networks for People' and 'DSM-G600 802.11G Network Storage Enclosure'. The navigation tabs are 'Home', 'Advanced', 'Tools', 'Status', and 'Help'. The 'LAN Settings' section is active, showing a sidebar with buttons for 'Logout', 'Wizard', 'LAN' (highlighted), 'Wireless', and 'Device'. The main content area includes a 'Jumbo frame(3MB)' checkbox, radio buttons for 'DHCP Client' and 'Static IP', and input fields for 'IP Address' (192.168.0.114), 'Subnet Mask' (255.255.255.0), 'Gateway IP Address' (192.168.0.1), 'DNS1' (192.152.81.1), and 'DNS2' (42.2.2). At the bottom right, there are 'Apply', 'Cancel', and 'Help' buttons.

- Jumbo Frames:** Check to allow support for jumbo frames.
- DHCP Client/Static IP:** Select either **DHCP Client** (default) if you have a DHCP server or router on your network, or **Static IP** if you want to assign the network settings manually.
- IP Address:** Enter the IP address of the DSM-G600 here, when Static IP is selected.
- Subnet Mask:** Enter the subnet mask here, when Static IP is selected.
- Gateway Address:** Enter the gateway address here, when Static IP is selected. This is normally the LAN address of your router.
- DNS1/DNS2:** DNS (Domain Name System) is an Internet service that translates domain names into IP addresses. Enter a DNS address here. If you are using a router in your network, you can usually enter the router's LAN IP address as the DNS address.
- Apply:** Click **Apply** to save the changes.

You may also change the LAN IP address using the D-Link Easy Search Utility. Please refer to the appendix at the end of this manual.

Wireless Security

The DSM-G600 offers 3 types of wireless security - WEP, WPA-PSK, and WPA.

- WEP (Wired Equivalent Privacy) is a method of encrypting data for wireless communication intended to provide the same level of privacy as a wired network. To gain access to a WEP network, you must know the key. The key is a string of characters that you create. When using WEP, you must determine the level of encryption. The type of encryption determines the key length. 128-bit encryption requires a longer key than 64-bit encryption. Keys are defined by entering in a string in HEX (hexadecimal - using characters 0-9, A-F) or ASCII (American Standard Code for Information Interchange – alphanumeric characters) format. ASCII format is provided so you can enter a string that is easier to remember. The ASCII string is converted to HEX for use over the network. Four keys can be defined so that you can change keys easily.

Example:

64-bit hexadecimal keys are exactly 10 characters in length.

(12345678FA is a valid string of 10 characters for 64-bit encryption)

128-bit hexadecimal keys are exactly 26 characters in length.

(456FBCDF12340012225271730 is a valid string of 26 characters for 128-bit encryption)

64-bit ASCII keys are exactly 5 characters in length

(DMODE is a valid string of 5 characters for 64-bit encryption)

128-bit ASCII keys are exactly 13 characters in length

(2002HALOSWIN1 is a valid string of 13 characters for 128-bit encryption)

- WPA-PSK (Wi-Fi Protected Access - Pre-Shared Key) is a Wi-Fi standard that was designed to improve upon the security features of WEP (Wired Equivalent Privacy).

WPA has improved data encryption through the Temporal Key Integrity Protocol (TKIP). TKIP scrambles the keys using a hashing algorithm and, by adding an integrity checking feature, ensures that the keys haven't been tampered with.

The key or passphrase is an alpha-numeric password between 8 and 63 characters long. The passphrase can include symbols (!?*&_) and spaces. Make sure you enter this key exactly the same as on your access point or wireless router. You may also enter a hexadecimal key (using characters 0-9, A-F).


- WPA incorporates user authentication, which is generally missing in WEP, through the extensible authentication protocol (EAP). EAP is built on a more secure public key encryption system to ensure that only authorized network users can access the network.

Home > Wireless



Mode: | Select **Client** or **Access Point**.

Select **Client** if you want to connect to an access point or wireless router. Select **Access Point** if you want to connect wireless clients directly to the DSM-G600. Below are examples of typical network setups.

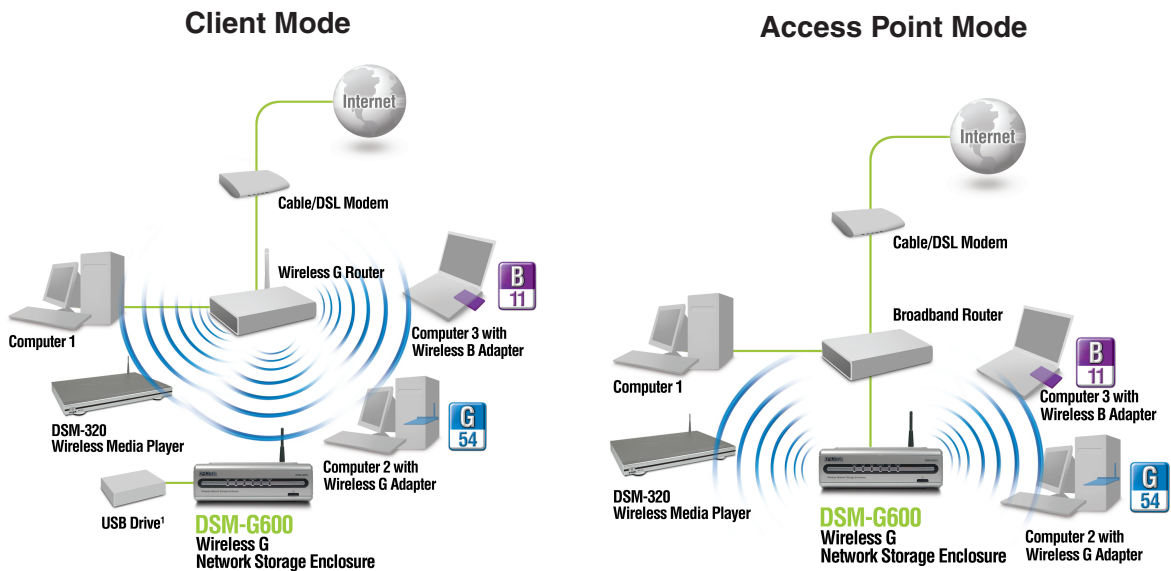

Home > Wireless (Client Mode)




Mode: Select **Client**.

Wireless: Select **Enabled** or **Disabled**.

Connection Mode: Select the network type:
Infrastructure - Connect to an access point or router.
Ad-Hoc - Connect to another wireless client (peer-to-peer).

SSID: Enter the SSID of your network. You may click **Site Survey** to select an available wireless AP or router.

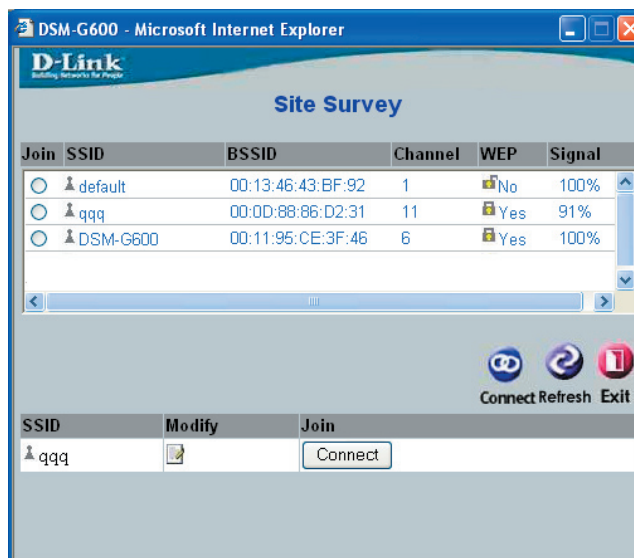

The **Site Survey** window will allow you to view and connect to any existing wireless network in your area. Click the radio button next to the network and click **Connect**.

Please refer to page 13 if you wish to use Windows® Connect Now to configure the wireless settings.

Home > Wireless > WEP (Client Mode)

D-Link
Building Networks for People

DSM-G600
802.11G Network Storage Enclosure

Home Advanced Tools Status Help

Wireless Settings
Mode: Access Point Client

Wireless Enable Disable

Connection Mode Infrastructure Ad-Hoc

SSID:

Wireless Mode:

Security Mode:

Authentication: Open Shared

Encryption Mode:

Key Format:

Default Key:

Key1:

Key2:

Key3:

Key4:

Pre-Shared Key:

Input 10 HEX characters (0-9,a-f,A-F).

Security Mode: Select **WEP**.

Authentication: WEP can use different methods of Authentication. Select either Open or Shared.

Open: to allow any wireless station to associate with the access point.

Shared: to only allow stations using a shared key encryption to associate with it.

Encryption Mode: Select the level of WEP encryption (64 or 128-bit).

Key Format: Select the WEP key format (Hexadecimal or ASCII)
Hexadecimal - only A-F and 0-9 are valid characters.
ASCII - All numbers and letters are valid characters.

Default Key: Select which WEP key to activate.

Key (1-4): Enter a WEP key. This key must be exactly the same as on your wireless router or access point.

Home > Wireless > WPA-PSK (Client Mode)

D-Link
Building Networks for People

DSM-G600
802.11G Network Storage Enclosure

DSM-G600

Logout

Wizard

LAN

Wireless

Device

Home Advanced Tools Status Help

Wireless Settings

Mode: Access Point Client

Wireless Enable Disable

Connection Mode Infrastructure Ad-Hoc

SSID: EXAMPLE Site Survey

Wireless Mode: 802.11b/g-2.4GHz

Security Mode: WPA_PSK

Authentication: Open Shared

Encryption Mode: TKIP

Key Format: ASCII

Default Key: Key_1

Key1: _____

Key2: _____

Key3: _____

Key4: _____

Pre-Shared Key: EXAMPLEPSK

Input 8-63 printable ASCII characters.

Apply Cancel Help

Security Mode: Select **WPA-PSK**.

Pre-Shared Key: Enter the WPA-PSK key that is on your wireless router or access point. You must enter the exact same key to connect.

Home > Wireless (Access Point Mode)

The screenshot shows the configuration utility for the DSM-G600 802.11G Network Storage Enclosure. The interface is in the 'Home' tab, with sub-tabs for 'Advanced', 'Tools', 'Status', and 'Help'. The 'Wireless Settings' section is active, showing 'Mode' set to 'Access Point' and 'Wireless' set to 'Enable'. The SSID is 'EXAMPLE', Channel is '1' with 'Auto Select' checked. '802.11g Only Mode' is 'Disabled', and 'SSID Broadcast' is 'Enabled'. Security is set to 'None', Authentication is 'Open', Encryption is 'None', and Key Format is 'ASCII'. There are four key input fields labeled Key1 through Key4. At the bottom right, there are 'Apply', 'Cancel', and 'Help' buttons.

Mode: Select **Access Point**.

Wireless: Select **Enable** or **Disable**.

SSID: Enter the SSID of your network. You may click **Site Survey** to select an available wireless AP or router.

Channel: Select the channel you want to use (1-11).

802.11g Only Mode: Select **Enabled** if you are using all 802.11g devices on your wireless network. If not, select **Disabled**.

SSID Broadcast: Select **Enabled** to allow your SSID to be “seen” on your wireless network. Select **Disabled** to hide it from the network for added security.

Home > Wireless > WEP (Access Point Mode)

Security Mode: Select **WEP**.

Authentication: WEP can use different methods of Authentication. Select either Open or Shared.

Open: to allow any wireless station to associate with the access point.

Shared: to only allow stations using a shared key encryption to associate with it.

Encryption Mode: Select the level of WEP encryption (64 or 128-bit).

Key Format: Select the WEP key format (Hexadecimal or ASCII)
Hexadecimal - only A-F and 0-9 are valid characters.
ASCII - All numbers and letters are valid characters.

Default Key: Select which WEP key to activate.

Key (1-4): Enter a WEP key. This key must be exactly the same as on your wireless clients.

Home > Wireless > WPA-PSK (Access Point Mode)

The screenshot shows the D-Link DSM-G600 configuration utility interface. The title bar reads "D-Link Building Networks for People" and "DSM-G600 802.11G Network Storage Enclosure". The navigation tabs are "Home", "Advanced", "Tools", "Status", and "Help". The "Home" tab is selected, and the "Wireless" sub-tab is active. The "Wireless Settings" section shows "Mode" set to "Access Point" (radio button selected) and "Wireless" set to "Enable" (radio button selected). The "SSID" field contains "EXAMPLE". The "Channel" is set to "1" with "Auto Select" checked. The "802.11g Only Mode" is set to "Disabled" (radio button selected). The "SSID Broadcast" is set to "Enabled" (radio button selected). The "Security" dropdown is set to "WPA_PSK". The "Encryption" dropdown is set to "TKIP". The "Key Format" dropdown is set to "ASCII". The "Pre-Shared Key" field contains "EXAMPLEPSK" and the "Confirmed Pre-Shared Key" field also contains "EXAMPLEPSK". A red text warning below the key fields reads "Input 8-63 printable ASCII characters." At the bottom right, there are three buttons: "Apply" (with a green checkmark icon), "Cancel" (with a red X icon), and "Help" (with a red plus icon).

Security Mode: Select **WPA-PSK**.

Encryption: Select **TKIP** or **AES**.

Key Type: Select the WPA-PSK key format (Hexadecimal or ASCII)
Hexadecimal - only A-F and 0-9 are valid characters.
ASCII - All numbers and letters are valid characters.

Pre-Shared Key: Enter a key (passphrase). Make sure you enter this passphrase exactly the same on all wireless clients.

Home > Wireless > WPA (Access Point Mode)

The screenshot shows the configuration utility for the DSM-G600 802.11G Network Storage Enclosure. The interface is in the 'Wireless' section, specifically for WPA (Access Point Mode). The 'Wireless' checkbox is checked, and the 'Mode' is set to 'Access Point'. The SSID is 'EXAMPLE', Channel is '1', and 'Auto Select' is checked. '802.11g Only Mode' is disabled, and 'SSID Broadcast' is enabled. The 'Security' dropdown is set to 'WPA', 'Encryption' is 'TKIP', and 'Key Format' is 'ASCII'. Under the '802.1X' section, there are input fields for 'RADIUS Server IP', 'Port', 'Shared', and 'Secret'. A red note below the 'Secret' field says 'Input 8 printable ASCII characters.' At the bottom right, there are 'Apply', 'Cancel', and 'Help' buttons.

Security Mode: Select **WPA**.

Encryption: Select **TKIP** or **AES**.

RADIUS Server IP: Enter the IP address of your RADIUS server.

Port: Enter the port used on your RADIUS server.

Shared Secret: Enter the “shared secret”.

Home > Device

D-Link
Building Networks for People

DSM-G600
802.11G Network Storage Enclosure

DSM-G600

Logout

Wizard

LAN

Wireless

Device

Home Advanced Tools Status Help

Device Settings

Workgroup

Name

Description


Apply Cancel Help

Workgroup: Enter the name of the workgroup of your network.

Name: Enter a name for the DSM-G600 device. This is useful if you have more than one DSM-G600 devices on the network.

Description: Enter a description of the DSM-G600.

Advanced > User

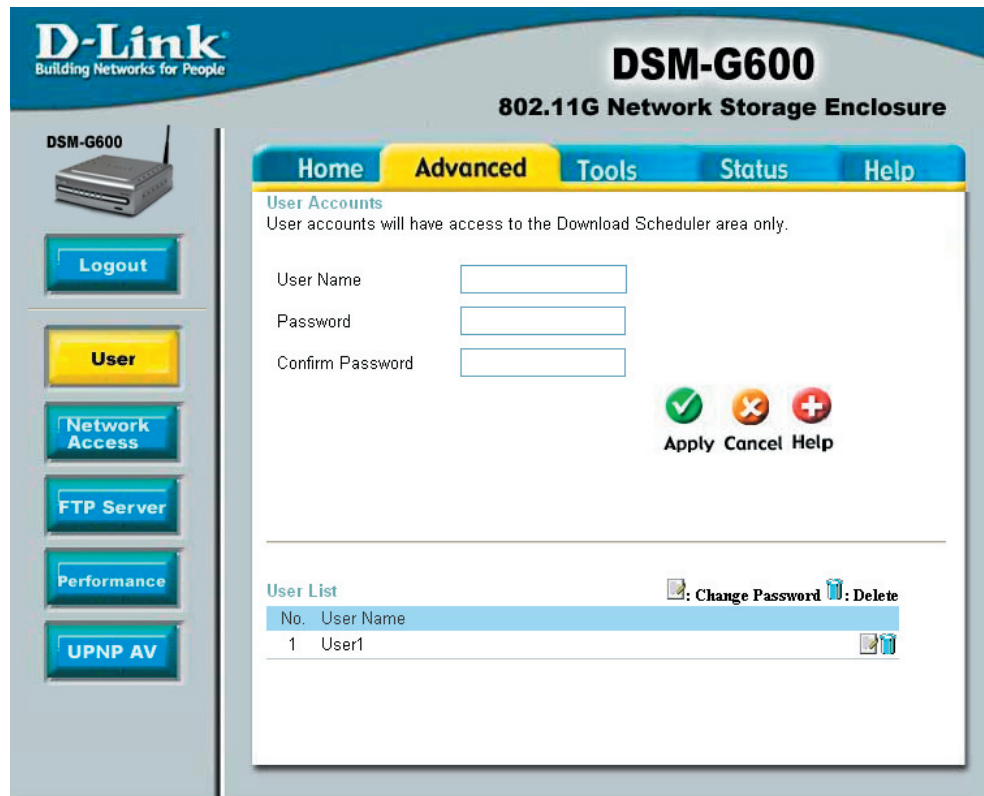


User Name: Enter a user name.


Password: Enter a password for the user.

Confirm Password: Enter the password again for confirmation.

Apply: Click Apply to save your settings.

Users you create will be listed under **User List**.

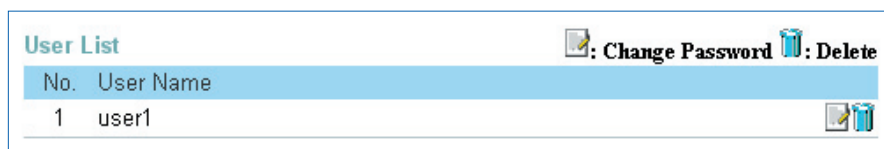

To change a current user's password, click the  icon next to a user listed under **User List**. Click **Apply** to save any changes.

To delete a user, click the  icon next to a user listed under **User List**. Click **Apply** to save any changes.

You will need to create users for assigning permissions, using FTP, and using the downloading feature.

Advanced > Network Access

D-Link
Building Networks for People

DSM-G600
802.11G Network Storage Enclosure

DSM-G600

Logout

User

Network Access

FTP Server

Performance

UPNP AV

Home Advanced Tools Status Help

Network Access Settings

User: Please Select user... All accounts

Path: Open

Authority: Read Only

Comment:

Apply Cancel Help

: Read/Write : Read Only : Modify Setting : Delete

Share	Path	User	Comment	R/W
ST325082_a2	ST325082_a2		Hard Drive / Flash Drive / Single Function CardReader	<input checked="" type="checkbox"/>

User: Select a user from the drop-down menu or check **All Accounts**.

Path: Click **Open** and select the folder from the internal/USB drive that you would like to create the rule for.

Authority: Select Read Only or Read/Write from the drop-down menu.

Comment: Enter a comment regarding the rule.

By default, all users on your local network will have read/write permissions to all files and folders on the internal/USB drive(s) that are connected to the DSM-G600. This “rule” will be displayed in the list similar to the picture above.

- **Note:** Currently, you may only assign Read Only permissions to the USB drive(s) if formatted with NTFS. To assign read/write permissions, USB drive(s) must be formatted with FAT, FAT32, EXT2, or EXT3.

Advanced > Network Access (continued)

To create a network access rule, you must first delete the default rule by clicking on the trash can icon. Once the rule is deleted, users will not be able to access the internal/USB drive(s) until new rules have been created.

Click the trash can icon to delete the rule.


Share	Path	User	Comment	R/W
Storage1	Storage1			<input checked="" type="checkbox"/> Read/Write <input type="checkbox"/> Read Only <input type="checkbox"/> Modify Setting <input type="checkbox"/> Delete

Example

In the example below, permissions are set for the folder “**Drivers**” on the internal/USB drive named “**Storage1**”. Two users (user1 and user2) were created (refer to page 39 on creating users).

User1 has been assigned read/write permissions for the Drivers folder (as seen in the network access list).

User2 will be assigned read only permissions for the Drivers folder. Once the settings are applied, User2 will appear in the network access list.

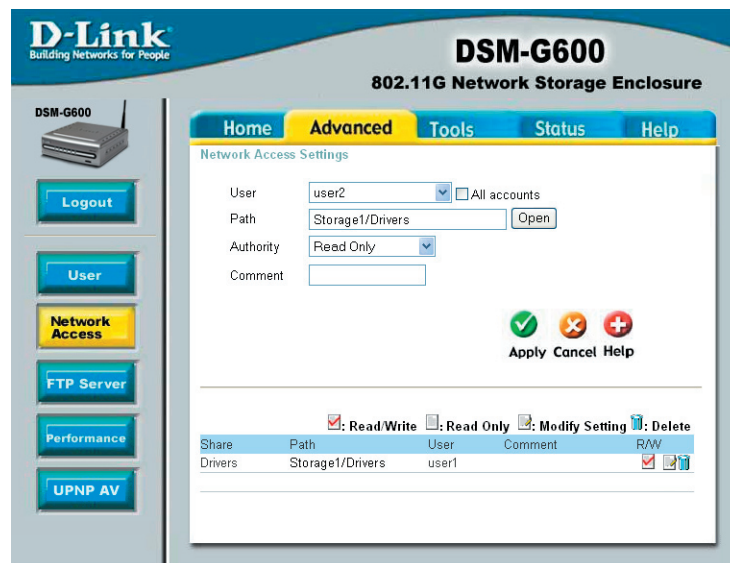

You may edit a rule from the list by clicking on the icon.

To delete a rule from the list, click on the icon.

Advanced > FTP Server

You can use the built-in FTP server to allow users from the Internet or Intranet FTP access to the drive(s) or folder(s) that you want to share.

D-Link
Building Networks for People

DSM-G600
802.11G Network Storage Enclosure

Home Advanced Tools Status Help

FTP Server Settings

User: Please Select user... All accounts

Path: root

Authority: Read Only

Max User: 05

Idle Time: 2 (1~10 Minutes)

Port: 21 (1~65535,Default:21)

Flow Control: Unlimited x 10 KBs

Path: Read/Write Read Only

User Name	Path
Anonymous	DSM-G600_SHARE
User1	ST325082_a2

FTP Server Status

Status	Started
Port	21
Max user	5
Flow	Unlimited
Idle time	2 minutes
Anonymous	No
Write	No

User: Select a user from the drop-down menu or check **All Accounts**.

Path: Click **Open** and select the folder from the internal/USB drive that you would like to create the rule for.

Root: Check the **Root** box to select the root level of all the drives at once.

Authority: Select **Read Only** or **Read/Write** from the drop-down menu.

Add: Click **Add** to save your share/permissions.

Advanced > FTP Server (continued)

D-Link
Building Networks for People

DSM-G600
802.11G Network Storage Enclosure

Home **Advanced** Tools Status Help

FTP Server Settings

User: All accounts

Path:

Authority:

Max User:

Idle Time: (1~10 Minutes)

Port: (1~65535, Default: 21)

Flow Control: Unlimited x 10 KBs

Path: Read/Write Read Only

User Name	Path		
Anonymous	DSM-G600_SHARE	<input checked="" type="checkbox"/>	<input type="checkbox"/>
User1	ST325082_a2	<input checked="" type="checkbox"/>	<input type="checkbox"/>

FTP Server Status

Status	Started
Port	21
Max user	5
Flow	Unlimited
Idle time	2 minutes
Anonymous	No
Write	No

Max User: Select the maximum number of users allowed to connect via FTP at one time from the drop-down menu.

Idle Time: Select the idle time (1-10 minutes). Users will be disconnected when idle for the specified amount of time.

Port: You may change the port used for FTP. The default port is 21.

Flow Control: Select **Unlimited** or enter a data rate (x10 KB) for restricted data flow. This setting is only necessary where network traffic is significant and can be affected by FTP server activity.

Path: Displays current FTP users, paths, and permissions.

FTP Server Status: Displays the current information regarding the FTP server.

You may edit a rule from the list by clicking on the icon.

To delete a rule from the list, click on the icon.

Advanced > FTP Server (continued)

Example:


Log into the web-based configuration by launching the Easy Search Utility or by opening a web browser and entering **http://dsm-g600**.

Click **Advanced** and then click **FTP Server**.




Select a user from the drop-down menu or check **All Accounts**.


Click **Open** to select the folder you want to allow FTP access to. Check **Root** to assign access to all the drives at once.

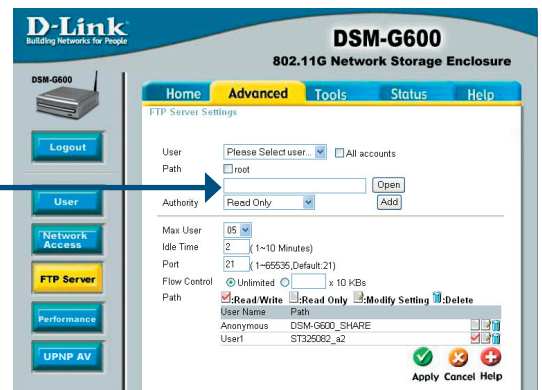

If Root is not checked, select the folder and click **OK**. Click the + sign to expand the folder tree.

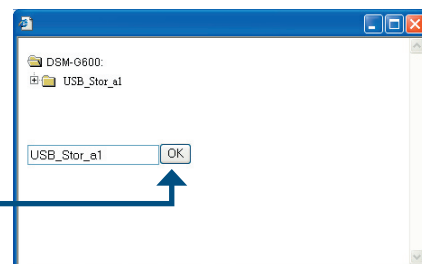


Select **Read Only** or **Read/Write**.

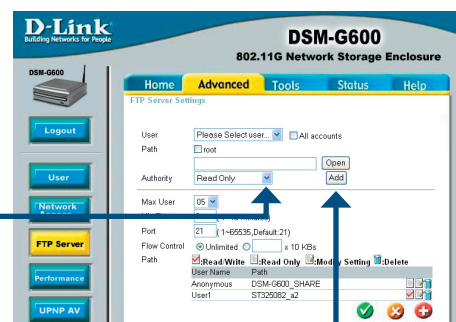


Click **Add**.

Advanced > FTP Server (continued)

The rule will be listed under Path. The rule shown will allow an Anonymous user access to the root folder on the drive with Read-Only permissions.

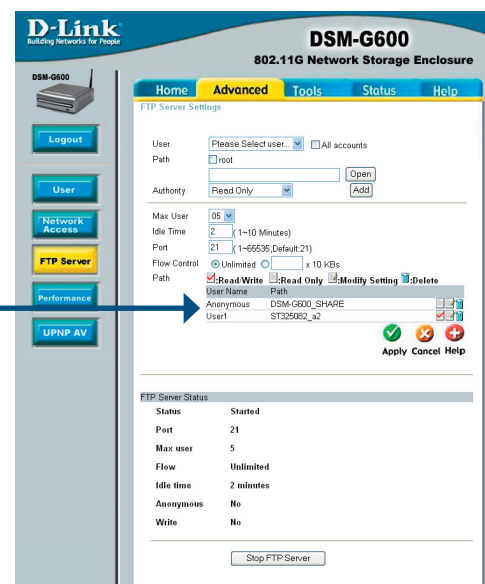

You may edit a rule from the list by clicking on the  icon.

To delete a rule from the list, click on the  icon.

To access the FTP server from your local network, open a web browser and enter **ftp://dsm-g600** and press enter.

If you are behind a router, you will need to forward the FTP port to the DSM-G600. Additional filtering and firewall settings may need to be modified on your router to allow FTP access to the DSM-G600 from the Internet. Once the port is forwarded to the DSM-G600, users from the Internet will enter ftp:// followed by the WAN IP address of the router (e.g. ftp://64.56.23.111).

If you are using a port other than 21, you must enter a colon (:) followed by the new port number in the URL to connect (e.g. ftp://ftp.mysite.com:**3000**).

Please consult your router's user manual for more information on port forwarding.

Advanced > Performance

D-Link
Building Networks for People

DSM-G600
802.11G Network Storage Enclosure

Home Advanced Tools Status Help

Wireless Performance
These are the Wireless Performance features for the AP(Access Point) Portion.

TX Rate: Auto (Mbps)

Transmit Power: 100%

Beacon Interval: 100 (msec, range:20~1000, default:100)

RTS Threshold: 2346 (range: 1~2346, default:2346)

Fragmentation: 2346 (range: 256~2346, default:2346, even number only)

DTIM Interval: 1 (range: 1~255, default:1)

Preamble Type: Short Preamble Long Preamble Auto

CTS Mode: None Always Auto

Apply Cancel Help

TX Rate: Select the transfer rate. It is strongly recommended this be set to **Auto**.

Transmit Power: Choose the percentage of power being transmitted.

Beacon Interval: Beacons are packets sent by an access point to synchronize a network. Specify a beacon interval value. The default (100) is recommended.

RTS Threshold: This value should remain at its default setting of 2,346. If you encounter inconsistent data flow, only minor modifications to the value range between 256 and 2,346 are recommended.


Fragmentation: The fragmentation threshold, which is specified in bytes, determines whether packets will be fragmented. Packets exceeding the 2346 byte setting will be fragmented before transmission. 2346 is the default setting.

DTIM Interval: **Delivery Traffic Indication Message** - 3 is the default setting. DTIM is a countdown informing clients of the next window for listening to broadcast and multicast messages.

Preamble Type: Select **Long** for normal use, **Short** for large data transfers, or **Auto**.

CTS Mode: Select **None**, **Always**, or **Auto (recommended)**. CTS (Clear To Send) is a function used to minimize collisions among wireless devices on a wireless local area network (LAN). CTS will make sure the wireless network is clear before a wireless client attempts to send wireless data. Enabling CTS will add overhead and may lower wireless throughput.

Advanced > UPnP AV

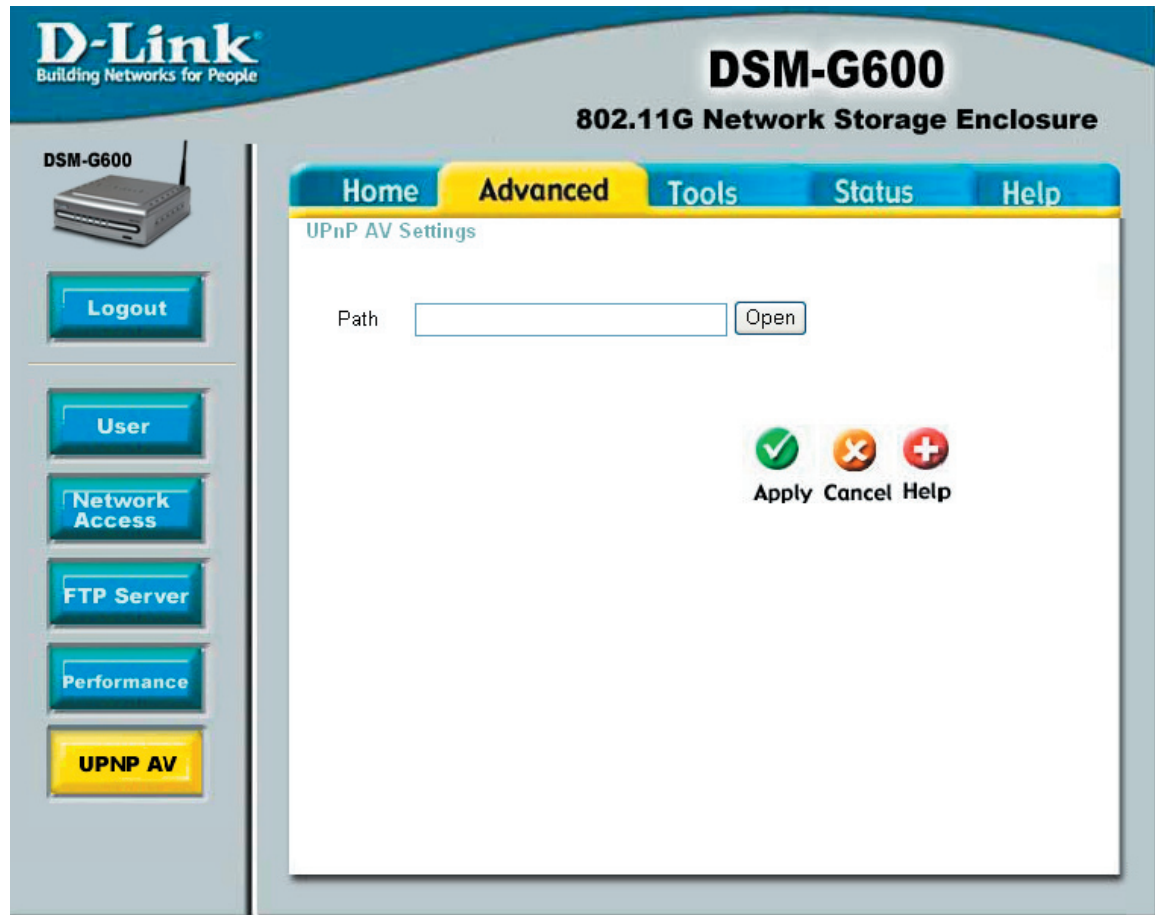

The DSM-G600 has a built-in media server that can be used with media streaming devices. Click **Browse** to locate the root folder of your media files (video, music, and pictures).

Tools > Admin

The Admin screen will allow you to change the Admin password.

The screenshot shows the D-Link DSM-G600 web interface. The top navigation bar includes 'Home', 'Advanced', 'Tools' (highlighted), 'Status', and 'Help'. The main content area is titled 'Administrator's Password' and contains the instruction 'Set the administrator password here.' Below this are four input fields: 'User Name' (pre-filled with 'admin'), 'Password', 'New Password', and 'Confirm Password'. At the bottom right of the form are three buttons: 'Apply' (with a green checkmark icon), 'Cancel' (with a red 'X' icon), and 'Help' (with a red plus icon). A left sidebar contains a 'Logout' button and a vertical stack of menu items: 'Admin' (highlighted), 'Time', 'System', 'Firmware', 'Disk Utility', and 'E-Mail Alerts'.

User Name: The user name is set to **admin**. You cannot change the user name.

Password: Enter the old password.

New Password: Enter your new password.

Confirm Password: Enter your new password again.

Apply: Click Apply to save your new password.

Tools > Time

This section will set the DSM-G600 internal clock. It is important that accurate time is set for scheduled downloading and backup of files and folders.

Current Time is displayed in 24-hour format (e.g. 14:00 is 2:00pm). Current Date is displayed in Month/Day/Year format.

The screenshot shows the 'Time' configuration page for a D-Link DSM-G600. The page title is 'DSM-G600 802.11G Network Storage Enclosure'. The navigation tabs are 'Home', 'Advanced', 'Tools', 'Status', and 'Help'. The 'Tools' tab is selected. The page content includes:

- Time**: Set the DSM-G600 system time.
 - Time: 10 : 35 : 24 Date: 07 / 07 / 05
 - Default NTP Server: (optional)
 - Set time from my computer.
 - Set the time: Year: 2005, Month: 07, Day: 07, Hour: 10, Minute: 35, Second: 19.
 - Time Zone: (GMT-08:00) Pacific Time (US & Canada);Tijuana
 - Daylight Saving Time: None
- Buttons:

Default NTP Server: Network Time Protocol (NTP) synchronizes clocks on devices in the network, using Internet time servers. This field is optional.

Set time from my computer: Synchronize the time from the computer you are currently using. Click the **Set Time** button to set the DSM-G600 internal clock to the local PC time.

Set the Time: Select the appropriate date and time from the drop-down boxes provided. Click the Set Time button to set the DSM-G600 internal clock to the changes made.

Time Zone: Select the time zone.

Daylight Saving Time: Select to enable daylight savings.

Apply: Click Apply to save your settings.

Tools > System




System Restart: Click **Restart** to reboot your DSM-G600.

Restore to Factory Defaults: Click **Restore** to reset the DSM-G600 back to the factory default settings - erasing all changes you have made.

Idle Time: Enter the time (in minutes) for the idle time in both the Scheduling and Config sections. Users will be logged off if the idle time is exceeded.

Apply: Click **Apply** to save your settings.

Tools > Firmware

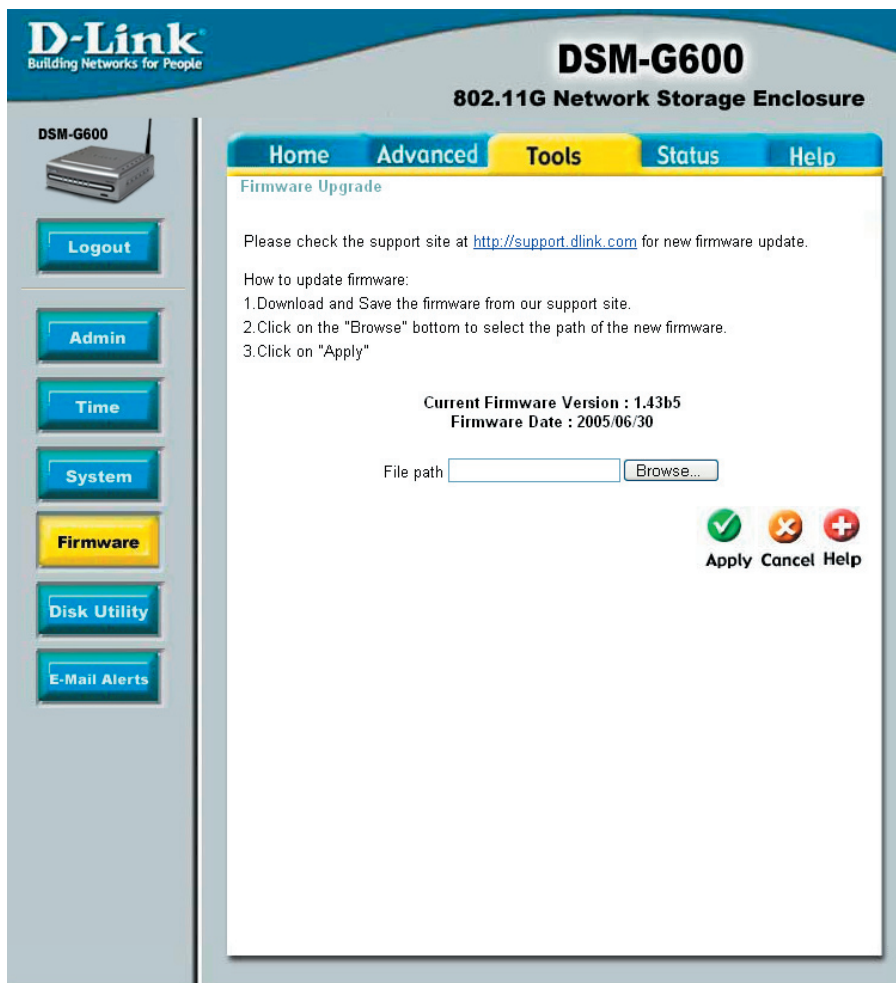

Browse: After you have downloaded the firmware upgrade file to your hard drive, click **Browse** to find the upgrade. When you have found it, click **Open** in the browser window and click **Apply** in this screen to begin the firmware upgrade.

When the "upgrade is complete" message appears, click **Restart**. After the login screen appears, wait until the power LED stops blinking before logging into the DSM-G600.

Tools > Disk Utility

The screenshot shows the D-Link DSM-G600 web interface. The top navigation bar includes 'Home', 'Advanced', 'Tools' (highlighted), 'Status', and 'Help'. The left sidebar contains buttons for 'Logout', 'Admin', 'Time', 'System', 'Firmware', 'Disk Utility' (highlighted), and 'E-Mail Alerts'. The main content area is titled 'Disk Utility' and contains two sections:

- Format:** A section for formatting a hard disk drive. It includes a 'Disk' dropdown menu (currently showing 'Please select a disk'), a 'File System' dropdown menu (showing 'EXT3' with a list of options: EXT3, EXT2, FAT, FAT32), and a 'Format' button.
- Scan Disk:** A section for scanning a hard disk. It includes a 'Disk' dropdown menu (showing 'Please select a disk'), two checkboxes labeled 'All disk' and 'Fix', and a 'Scan Disk' button.

Format Disk: Select the hard drive you would like to format from the drop-down menu. Formatting the drive will erase all data on the drive.

File System: Select the file type you want to format your drive to: **EXT3**, **EXT2**, **FAT**, or **FAT32**.

Format Button: Click the **Format** button to start the formatting process.

Scan Disk: Select the hard drive you want to scan for errors from the drop-down menu.

All Disk: Check to select all drives.

Fix: The DSM-G600 will automatically fix any errors found. You cannot uncheck this option.

Scan Disk Button: Click the **Scan Disk** button to start the scanning process.

Tools > E-Mail Alerts

The screenshot shows the 'E-Mail' configuration page for the DSM-G600. The page is titled 'E-Mail' and contains the following sections:

- Email Notification Settings:**
 - Login Method: Account Anonymous
 - User Name:
 - Password:
 - SMTP Server:
 - Sender Email:
 - Receiver Email:
- Send Notification:**
 - Space Status Interval: (Hours) (Minutes)
 - Disk Full
 - Critical Error
 - Administrator Password Changed
 - Firmware Upgraded

At the bottom right, there is a 'Test E-Mail' button and three icons: a green checkmark (Apply), a red X (Cancel), and a red plus sign (Help).

Login Method: Select either **Account** or **Anonymous**.

User Name: Enter your user name used to connect to your email account (only when Account is selected).

Password: Enter your password (only when Account is selected).

SMTP Server: Enter the IP address or DNS name (e.g. mail.myisp.net).

Sender Email: Enter the “from” email address (e.g. log@dsmg600.com). This address does not have to be a valid address. If your email client software is filtering spam, make sure you “allow” this email address to be received.

Receiver Email: Enter the email address you want to send the notifications to.

Space Status: Check to send information on the amount of space available. You may select a time interval of when to send the email.

Disk Full: Check to send an email when the disk is full.

Critical Error: Check to send an email when there are errors.

Administrator Password Changed: Check to send an email when the admin password has been changed. This option is only available when Account is selected.

Firmware Upgrade: Check to send an email when the firmware has been updated.

Test Email Button: Click to send a test email to verify your login settings.

Status > Device Info

The screenshot shows the D-Link DSM-G600 configuration utility interface. At the top, it says "D-Link Building Networks for People" and "DSM-G600 802.11G Network Storage Enclosure". The navigation tabs are Home, Advanced, Tools, Status (selected), and Help. On the left sidebar, there is a "Logout" button and a "Device Info" button (highlighted in yellow). The main content area is titled "Device Information" and contains the following sections:

- LAN Info:** IP Address: 192.168.0.114, Subnet Mask: 255.255.255.0, Gateway IP Address: 192.168.0.1
- Device Info:** Workgroup: workgroup, Name: DSM-G600, Description: Network Storage Enclosure
- Wireless Info:** Mode: AP, SSID: /, Wireless IP Address: 192.168.0.114, Channel: 1
- User List:** A table with columns: No, MAC Address, Time.
- Internal HD Info:** Total Disk Size: 268943376 KB, Used Space: 5 KB, Disk Size Remaining: 1 KB
- Network Access List:** A table with columns: Path, Permissions, Access Control.

Path	Permissions	Access Control
ST325008_a2	Read Only	Account mode
ST255082_b1	Read/Write	Account mode

At the bottom right, there is a red plus icon labeled "Help".

LAN Info: The LAN Info section will display the network settings of the DSM-G600.


Device Info: The workgroup, name, and description of the DSM-G600 will be displayed in this section.

Wireless Info: The Wireless Info section will display the current wireless settings including the SSID, IP address, channel, and user list.

Internal HD Info: Displays information about your internal hard drive such as total size, space used, and space available.

Network Access List: Current shares and permissions will be displayed in this section.

Help

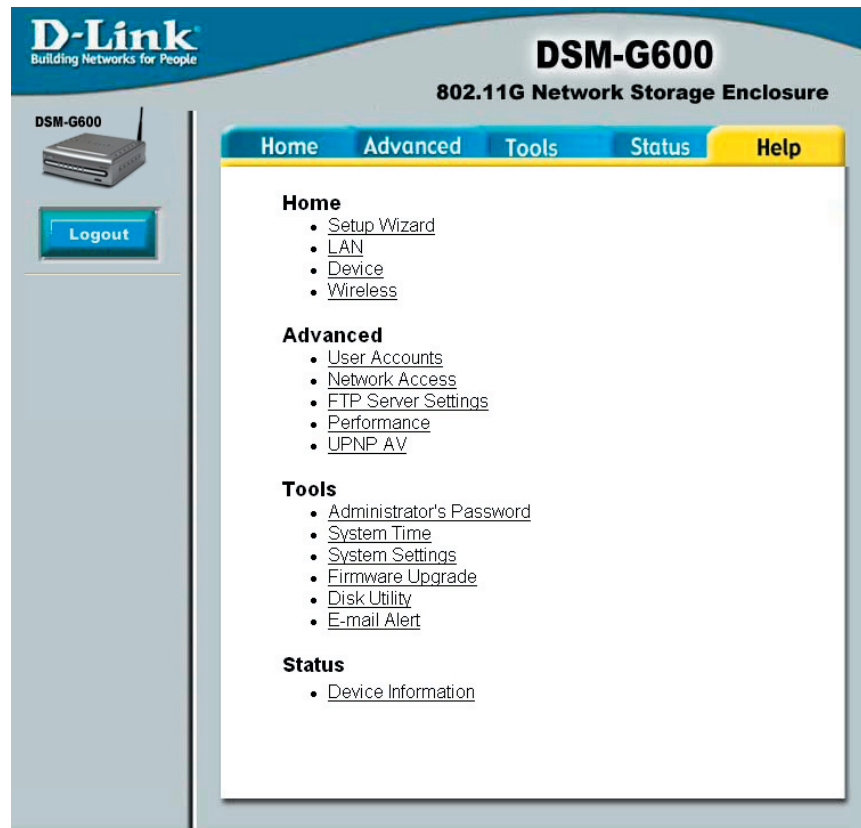

This section lists all of the available help topics for reference. Click on a topic to view the online help information.

Download Scheduling

This function will allow the user to set up scheduled folder or file downloads and backup jobs.


To log into the web-based configuration of the DSM-G600, you may run the Easy Search Utility included on your CD or type in **http://dsm-g600** into a web browser.

Open your Web browser and type **http://dsm-g600** into the URL address box and then press the **Enter** or **Return** key.



The logon screen will appear.

Type **admin** for the username and leave the password field blank.

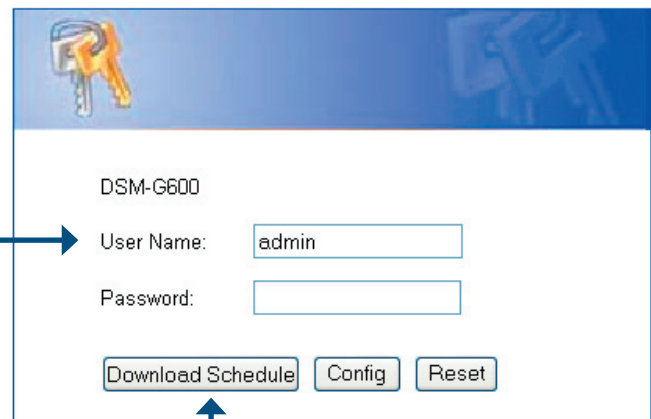

Click **Download Schedule**.

Download Scheduling (continued)

Login Method: Select the appropriate login method to access files for download:

- **Account** – If the download site employs restricted access, check this button and enter in the User Name and Password in the appropriate fields provided below this button.
- **Anonymous** – Click this button if this job is a local (drive/PC to drive) backup or the download site does not require any login information.

Type: Select the appropriate type of content for download or backup.

URL: Enter a valid URL to the remote location from which you wish to initiate a file or folder transfer.

To initiate a remote FTP or HTTP file or folder transfer, refer to the following examples of valid URL formats:

- **ftp://123.45.67.89/Test** (for a folder transfer)
- **ftp://123.45.67.89/Test/hello.txt** (for a single file transfer)
- **http://www.abc123.org/test.txt** (transfer a file from an HTTP site)

To initiate a transfer of a shared file or folder from a networked PC, refer to the following example of the valid URL format.

- **\\192.168.0.100\Test.txt**

The PC's internal IP address must be known and be accessible to the DSM-G600 on the network.

Download Scheduling (continued)

Test: This button is provided to test the given URL to make sure it is valid as well as the user name/password authentication set in **login method**.

Local: This button will let you set the source file or folder from any internal/USB drive connected to the DSM-G600. When you click on the button, a window will appear with a graphical representation of the folder structure on the internal/USB drive(s).

To select a folder, click on the plus sign next to the internal/USB drive name to reveal all sub-folders available. When the folder you want is displayed, click on the folder name, scroll to the bottom of the folder structure, and verify the correct folder path is listed.

If the folder path is correct, click on the OK button to accept. If you wish to specify a single file to transfer, follow the above process to select the desired folder and then manually type in the file name at the end of the folder path displayed in the URL field.

Save To: Enter a valid destination folder path to an attached internal/USB drive on DSM-G600. Click on the **Open** button to begin the browsing process.

When: Enter the date and time you wish the file or folder transfer to commence. The current date and time according the DSM-G600 internal clock will be displayed in the various drop-down boxes that appear as a reference point. The format of the date is Year/Month/Day. The time is set and displayed in 24 hour format.


Recurring Backup: If you wish to make unattended backups at regular intervals, then designate the appropriate interval (e.g. daily, weekly, or monthly) and specific time for the backup to occur.

Incremental Backup: By default all backups and file/folder downloads are in Overwrite mode. This means that files at the destination drive/folder with identical names will be written over by the source files (also known as "Full Backup"). If the Incremental Backup option is checked, then DSM-G600 will compare identical file names at source and destination by Last Modified Date/Time and overwrite the destination if the source is more recent.





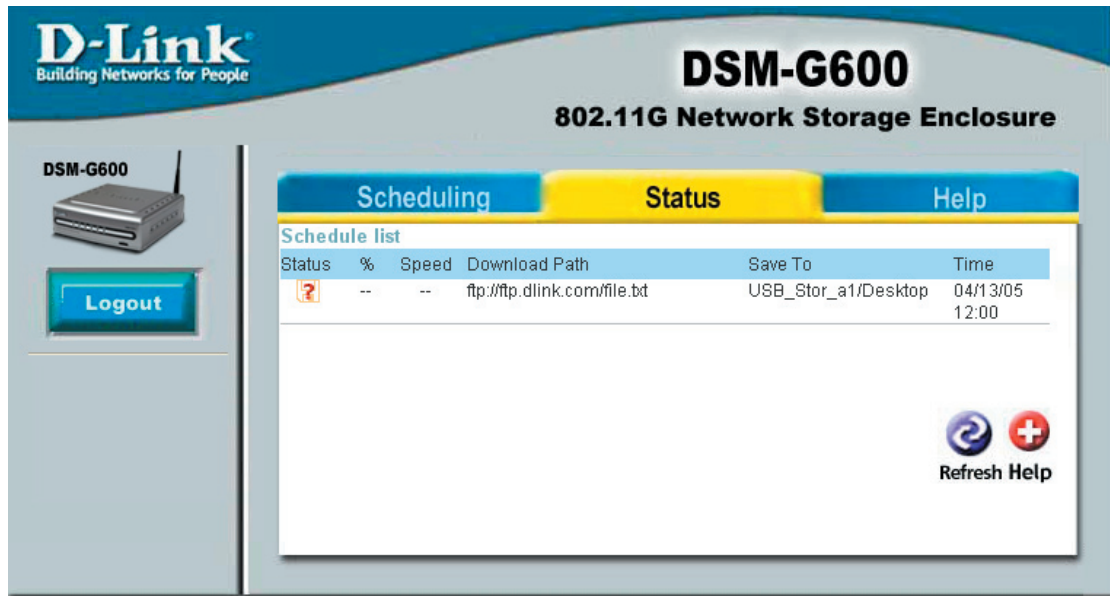

Note: Incremental Backup is not available for HTTP or FTP downloads as the Last Modified Date/Time is not accessible at the remote location.

Schedule List: The Schedule List will display all completed, active, and pending scheduled transfer or backup jobs. Additional options are available to initiate or cancel an active or pending backup job immediately.

Scheduling > Status



The Status Schedule List will show pending or completed download events. Current download statistics, such as % completed and download speed are displayed for each event. The icons below represent the current status of each event.

-  Download Successful
-  Download Failed
-  Download Pending
-  Waiting
-  Link File
-  Download in Progress


Appendix A

Using the Easy Search Utility


The D-Link Easy Search utility will allow you to connect to the web-based configuration utility, assign IP address settings to the DSM-G600, and map drives to your computer.

Insert the DSM-G600 CD into your CD-ROM drive.

Click **Launch D-Link Easy Search Utility**.

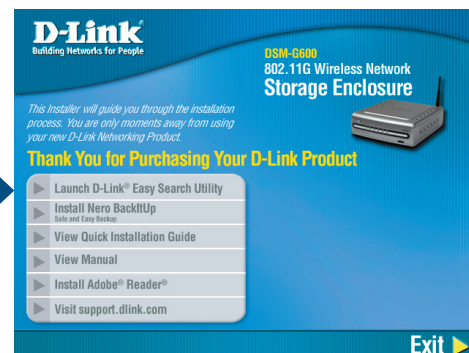

Highlight an available DSM-G600 and click **Configuration** to access the web-based utility.

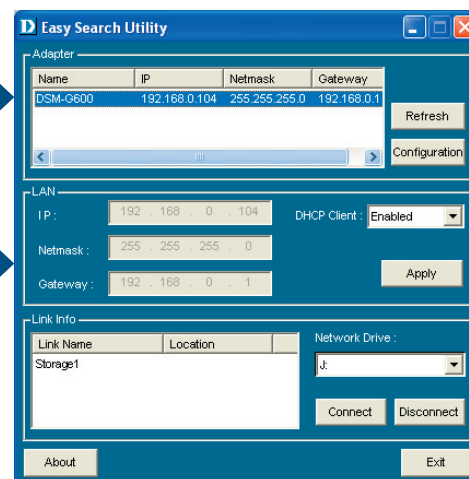

To assign a static IP, highlight the DSM-G600 and select **Disabled** from the DHCP Client drop-down menu. Enter the new IP address and network settings. Click **Apply** to save the settings.

Refer to page 18 for Mapping a Drive instructions.


Networking Basics

To name your computer in **Windows XP**, please follow these directions.


- Click **Start** (in the lower left corner of the screen).
- **Right-click** on **My Computer**.
- Select **Properties** and click.



- Select the **Computer Name Tab** in the System Properties window.
- You may enter a **Computer Description** if you wish; this field is optional.
- To rename the computer and join a domain, Click **Change**.

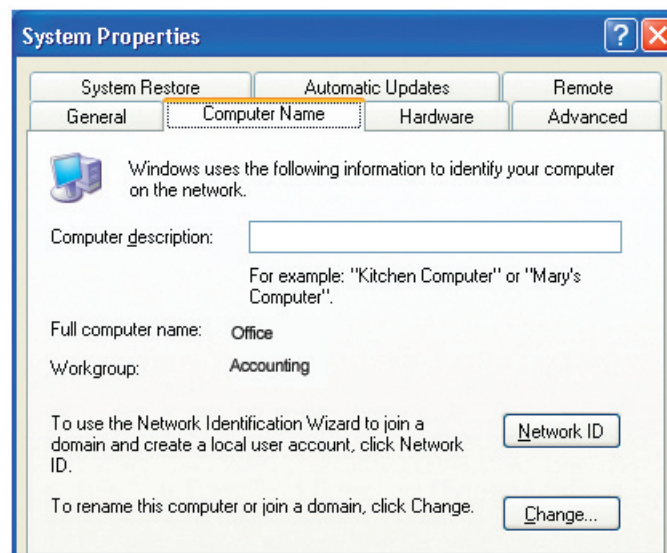

- In this window, enter the **Computer name**.
- Select **Workgroup** and enter the name of the **Workgroup**.
- All computers on your network must have the same **Workgroup** name.
- Click **OK**.

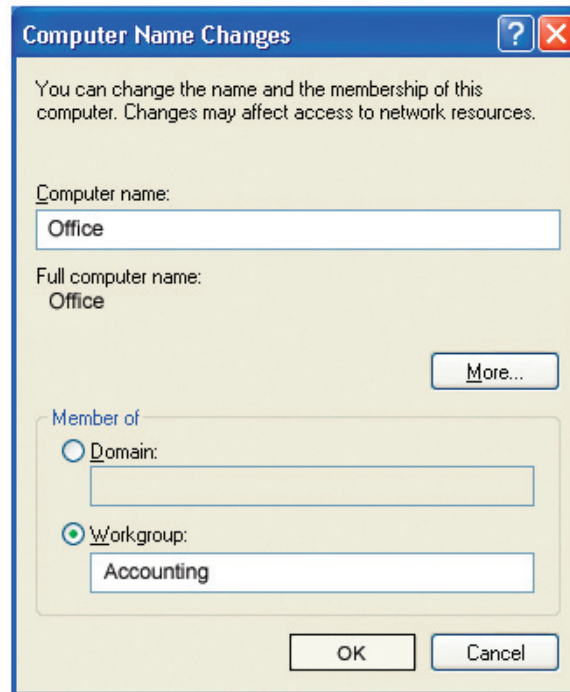

Checking the IP Address in Windows XP


The wireless adapter-equipped computers in your network must be in the same IP Address range (see Getting Started in this manual for a definition of IP Address Range). To check the IP Address of the adapter, please do the following:

- Right-click on the **Local Area Connection icon** in the task bar.
- Click on **Status**.



This window will appear:

- Click the **Support** tab. This screen will list your IP address, subnet mask, and the default gateway.
- Click **Close**.

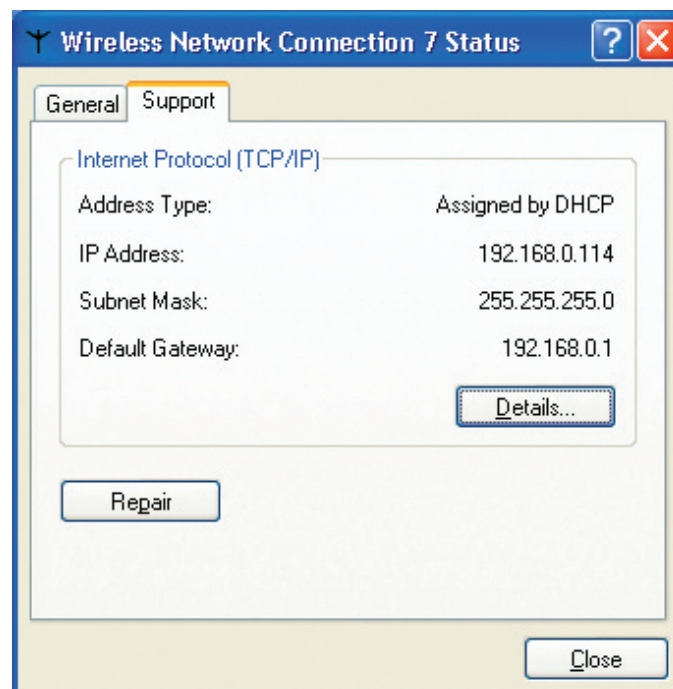


Assigning a Static IP Address in Windows XP/2000


Note: DHCP-enabled routers will automatically assign IP addresses to the computers on the network, using DHCP (Dynamic Host Configuration Protocol) technology. If you are using a DHCP-capable router you will not need to assign static IP addresses.

If you are not using a DHCP capable router, or you need to assign a static IP address, please follow these instructions:


- Go to **Start**.
- Double-click on **Control Panel**.

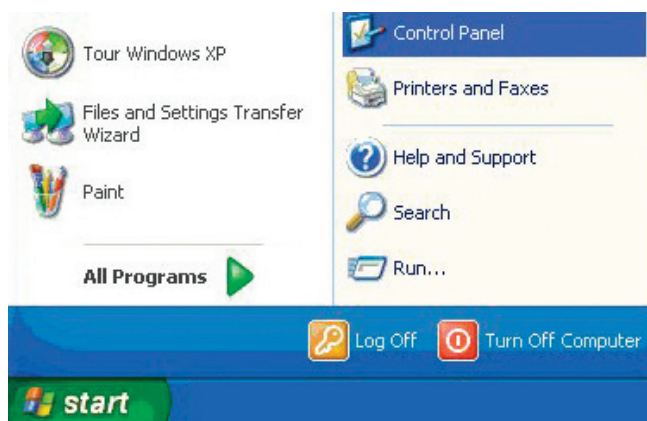


- Double-click on **Network Connections**.

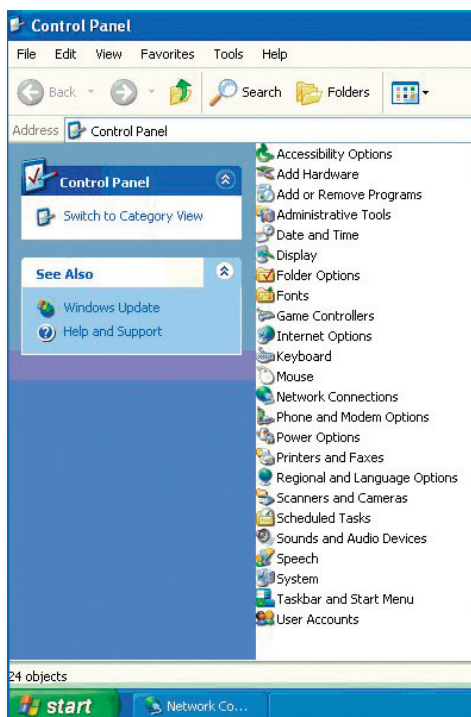

- Right-click on **Local Area Connections**.
- Double-click on **Properties**.

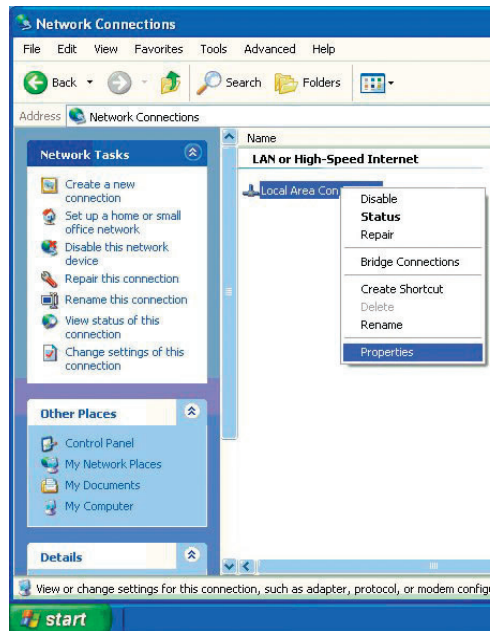


- Click on **Internet Protocol (TCP/IP)**.
- Click **Properties**.
- Input your **IP address and subnet mask**. (The IP addresses on your network must be within the same range. For example, if one computer has an IP address of 192.168.0.2, the other computers should have IP addresses that are sequential, like 192.168.0.3 and 192.168.0.4. The subnet mask must be the same for all the computers on the network.)

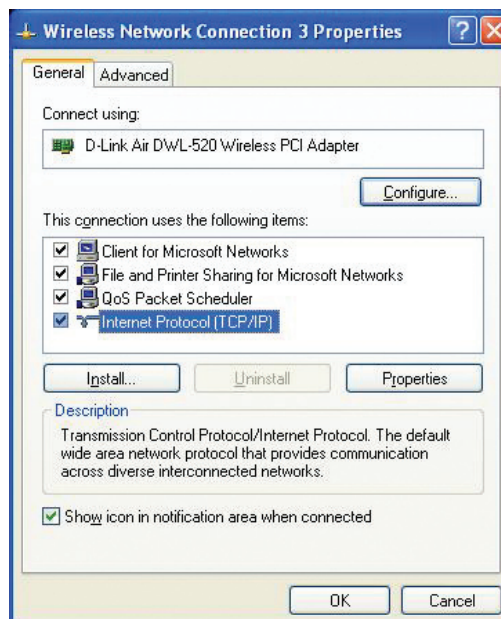

- Input your **DNS server addresses**. (Note: If you are entering a DNS server, you must enter the IP address of the default gateway.)

The DNS server information will be supplied by your ISP (Internet Service Provider.)

- Click **OK**.

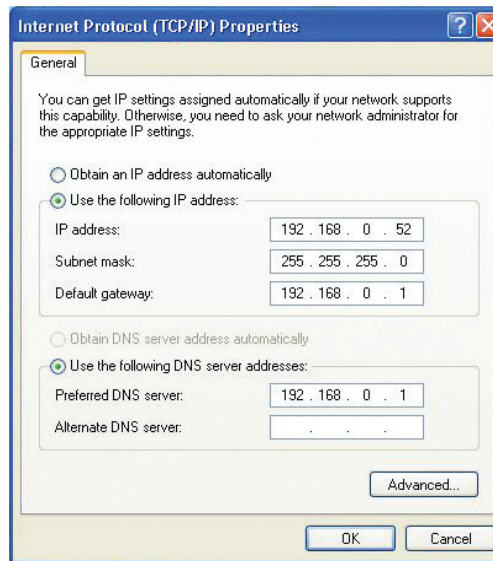

Checking the Wireless Connection by Pinging in Windows XP and 2000

Go to **Start > Run > type cmd**. A window similar to this one will appear. Type **ping xxx.xxx.xxx.xxx**, where **xxx** is the **IP address** of the wireless router or access point. A good wireless connection will show four replies from the wireless router or access point, as shown.

```

F:\WINDOWS\System32\cmd.exe
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

F:\Documents and Settings\lab4>ping 192.168.0.50

Pinging 192.168.0.50 with 32 bytes of data:

Reply from 192.168.0.50: bytes=32 time=5ms TTL=30
Reply from 192.168.0.50: bytes=32 time=64ms TTL=30
Reply from 192.168.0.50: bytes=32 time=3ms TTL=30
Reply from 192.168.0.50: bytes=32 time=17ms TTL=30

Ping statistics for 192.168.0.50:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 3ms, Maximum = 64ms, Average = 22ms

F:\Documents and Settings\lab4>_

```

Troubleshooting

1. Why does my wireless connection keep dropping?

- Antenna Orientation- Try different antenna orientations for the DSM-G600. Try to keep the antenna at least 6 inches away from the wall or other objects.
- If you are using 2.4GHz cordless phones, X-10 equipment or other home security systems, ceiling fans, and lights, your wireless connection will degrade dramatically or drop altogether. Try changing the channel on your wireless router or access point to a different channel to avoid interference.
- Keep your product away (at least 3-6 feet) from electrical devices that generate RF noise, like microwaves, monitors, electric motors, etc.

2. Why can't I get a wireless connection?

If you have enabled encryption on the DSM-G600, you must enter the same security settings as your wireless router or access point in order to establish a wireless connection.

- Make sure that the SSID on the access point or router is exactly the same as on the DSM-G600. If they are not, wireless connection will not be established.
- Move the DSM-G600 and the wireless access point or router into the same room and then test the wireless connection.
- Disable all security settings.
- Turn off the DSM-G600 and the wireless router or access point. Turn the wireless router or access point back on first. Wait about 30 seconds and then turn the DSM-G600 back on.
- Check that the LED indicators are indicating normal activity. If not, check that the AC power and Ethernet cables are firmly connected.
- Check that the IP address, subnet mask, gateway and DNS settings are correctly entered for the network.

Technical Specifications

Standards

- IEEE 802.11
- IEEE 802.11b
- IEEE 802.11g
- IEEE 802.3
- IEEE 802.3u
- IEEE 802.3ab

Device Management

- Web-Based – Internet Explorer v6 or later; Netscape Navigator v7 or later; or other Java-enabled browsers.

Data Rates¹

Data rates with automatic fallback:

- 54Mbps, 48Mbps, 36Mbps, 24Mbps, 18Mbps, 12Mbps, 11Mbps, 9Mbps, 6Mbps, 5.5Mbps, 2Mbps, 1Mbps

Security

- WEP (64 and 128-bit)
- WPA-PSK (TKIP and AES)
- WPA (TKIP and AES) with RADIUS server

Wireless Frequency Range

- 2.4GHz to 2.4835GHz

Wireless Operating Range²

- Indoors: Up to 328 feet (100 meters)
- Outdoors: Up to 1,312 feet (400 meters)

Ports

- 1 10/100/1000 Gigabit Ethernet Port
- 2 USB 2.0 Ports
- Power

Power

- Output: 12V, 3A
- Max Power 36W, 100-110V

Modulation Technology

- Orthogonal Frequency Division Multiplexing (OFDM)
- Complementary Code Keying (CCK)

Weight

- 1.7 lbs.

¹ Maximum wireless signal rate based on IEEE Standard 802.11g specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead lower actual data throughput rate.

² Environmental factors may adversely affect wireless signal range.

Technical Specifications (continued)

Wireless Transmit Power

- 15 dBm (32 mW) 2dBi gain

Receiver Sensitivity

- 54 Mbps OFDM, 10% PER, -68 dBm
- 48 Mbps OFDM, 10% PER, -68 dBm
- 36 Mbps OFDM, 10% PER, -75 dBm
- 24 Mbps OFDM, 10% PER, -79 dBm
- 18 Mbps OFDM, 10% PER, -82 dBm
- 12 Mbps OFDM, 10% PER, -84 dBm
- 11 Mbps CCK, 8% PER, -82 dBm
- 9 Mbps OFDM, 10% PER, -87 dBm
- 6 Mbps OFDM, 10% PER, -88 dBm
- 5.5 Mbps CCK, 8% PER, -85 dBm
- 2 Mbps QPSK, 8% PER, -86 dBm
- 1 Mbps BPSK, 8% PER, -89 dBm

External Antenna Type

- One external 2.0dB gain with reverse SMA connector.

LEDs

- Power
- LAN
- WLAN
- HDD
- HDD Full
- USB

Temperature

- Operating: 32°F to 131°F (0°C to 55°C)
- Storing: -4°F to 158°F (-20°C to 70°C)

Humidity

- 5%~90% (non-condensing)

Certifications

- FCC Part 15 Class B

Dimensions

- L = 7.69 inches
- W = 6.96 inches
- H = 2.41 inches

Warranty

- 1 Year

Contacting Technical Support

You can find software updates and user documentation on the D-Link website.

D-Link provides free technical support for customers within the United States and within Canada for the duration of the warranty period on this product.

U.S. and Canadian customers can contact D-Link technical support through our Web site, or by phone.

Tech Support for customers within the United States:

D-Link Technical Support over the Telephone:

(877) 453-5465

Twenty four hours a day, seven days a week

D-Link Technical Support over the Internet:

<http://support.dlink.com>

email: support@dlink.com

Tech Support for customers within Canada:

D-Link Technical Support over the Telephone:

(800) 361-5265

Monday to Friday 7:30am to 12:00am EST

D-Link Technical Support over the Internet:

<http://support.dlink.ca>

email: support@dlink.ca

When contacting technical support, please provide the following information:

- *Serial number of the unit*
- *Model number or product name*
- *Software type and version number*

©2005 D-Link Corporation/D-Link Systems, Inc. All rights reserved. D-Link, the D-Link logo are registered trademarks of D-Link Corporation or its subsidiaries in the United States and other countries. Other trademarks are the property of their respective owners. Maximum wireless signal rate based on IEEE Standard 802.11g specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead lower actual data throughput rate. Product specifications, size and shape are subject to change without notice, and actual product appearance may differ from that depicted on the packaging. Visit www.dlink.com for more details.

Warranty

Subject to the terms and conditions set forth herein, D-Link Systems, Inc. ("D-Link") provides this Limited Warranty:

- Only to the person or entity that originally purchased the product from D-Link or its authorized reseller or distributor, and
- Only for products purchased and delivered within the fifty states of the United States, the District of Columbia, U.S. Possessions or Protectorates, U.S. Military Installations, or addresses with an APO or FPO.

Limited Warranty: D-Link warrants that the hardware portion of the D-Link product described below ("Hardware") will be free from material defects in workmanship and materials under normal use from the date of original retail purchase of the product, for the period set forth below ("Warranty Period"), except as otherwise stated herein.

- Hardware (excluding power supplies and fans): One (1) year
- Power supplies and fans: One (1) year
- Spare parts and spare kits: Ninety (90) days

The customer's sole and exclusive remedy and the entire liability of D-Link and its suppliers under this Limited Warranty will be, at D-Link's option, to repair or replace the defective Hardware during the Warranty Period at no charge to the original owner or to refund the actual purchase price paid. Any repair or replacement will be rendered by D-Link at an Authorized D-Link Service Office. The replacement hardware need not be new or have an identical make, model or part. D-Link may, at its option, replace the defective Hardware or any part thereof with any reconditioned product that D-Link reasonably determines is substantially equivalent (or superior) in all material respects to the defective Hardware. Repaired or replacement hardware will be warranted for the remainder of the original Warranty Period or ninety (90) days, whichever is longer, and is subject to the same limitations and exclusions. If a material defect is incapable of correction, or if D-Link determines that it is not practical to repair or replace the defective Hardware, the actual price paid by the original purchaser for the defective Hardware will be refunded by D-Link upon return to D-Link of the defective Hardware. All Hardware or part thereof that is replaced by D-Link, or for which the purchase price is refunded, shall become the property of D-Link upon replacement or refund.

Limited Software Warranty: D-Link warrants that the software portion of the product ("Software") will substantially conform to D-Link's then current functional specifications for the Software, as set forth in the applicable documentation, from the date of original retail purchase of the Software for a period of ninety (90) days ("Software Warranty Period"), provided that the Software is properly installed on approved hardware and operated as contemplated in its documentation. D-Link further warrants that, during the Software Warranty Period, the magnetic media on which D-Link delivers the Software will be free of physical defects. The customer's sole and exclusive remedy and the entire liability of D-Link and its suppliers under this Limited Warranty will be, at D-Link's option, to replace the non-conforming Software (or defective media) with software that substantially conforms to D-Link's functional specifications for the Software or to refund the portion of the actual purchase price paid that is attributable to the Software. Except as otherwise agreed by D-Link in writing, the replacement Software is provided only to the original licensee, and is subject to the terms and conditions of the license granted by D-Link for the Software. Replacement Software will be warranted for the remainder of the original Warranty Period and is subject to the same limitations and exclusions. If a material non-conformance is incapable of correction, or if D-Link determines in its sole discretion that it is not practical to replace the non-conforming Software, the price paid by the original licensee for the non-conforming Software will be refunded by D-Link; provided that the non-conforming Software (and all copies thereof) is first returned to D-Link. The license granted respecting any Software for which a refund is given automatically terminates.

Non-Applicability of Warranty: The Limited Warranty provided hereunder for Hardware and Software portions of D-Link's products will not be applied to and does not cover any refurbished product and any product purchased through the inventory clearance or liquidation sale or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product and in that case, the product is being sold "As-Is" without any warranty whatsoever including, without limitation, the Limited Warranty as described herein, notwithstanding anything stated herein to the contrary.

Submitting A Claim: The customer shall return the product to the original purchase point based on its return policy. In case the return policy period has expired and the product is within warranty, the customer shall submit a claim to D-Link as outlined below:

- The customer must submit with the product as part of the claim a written description of the Hardware defect or Software nonconformance in sufficient detail to allow D-Link to confirm the same, along with proof of purchase of the product (such as a copy of the dated purchase invoice for the product) if the product is not registered.
- The customer must obtain a Case ID Number from D-Link Technical Support at 1-877-453-5465, who will attempt to assist the customer in resolving any suspected defects with the product. If the product is considered defective, the customer must obtain a Return Material Authorization ("RMA") number by completing the RMA form and entering the assigned Case ID Number at <https://rma.dlink.com/>.

- After an RMA number is issued, the defective product must be packaged securely in the original or other suitable shipping package to ensure that it will not be damaged in transit, and the RMA number must be prominently marked on the outside of the package. Do not include any manuals or accessories in the shipping package. D-Link will only replace the defective portion of the product and will not ship back any accessories.
- The customer is responsible for all in-bound shipping charges to D-Link. No Cash on Delivery ("COD") is allowed. Products sent COD will either be rejected by D-Link or become the property of D-Link. Products shall be fully insured by the customer and shipped to **D-Link Systems, Inc., 17595 Mt. Herrmann, Fountain Valley, CA 92708**. D-Link will not be held responsible for any packages that are lost in transit to D-Link. The repaired or replaced packages will be shipped to the customer via UPS Ground or any common carrier selected by D-Link. Return shipping charges shall be prepaid by D-Link if you use an address in the United States, otherwise we will ship the product to you freight collect. Expedited shipping is available upon request and provided shipping charges are prepaid by the customer.

D-Link may reject or return any product that is not packaged and shipped in strict compliance with the foregoing requirements, or for which an RMA number is not visible from the outside of the package. The product owner agrees to pay D-Link's reasonable handling and return shipping charges for any product that is not packaged and shipped in accordance with the foregoing requirements, or that is determined by D-Link not to be defective or non-conforming.

What Is Not Covered: The Limited Warranty provided herein by D-Link does not cover: Products that, in D-Link's judgment, have been subjected to abuse, accident, alteration, modification, tampering, negligence, misuse, faulty installation, lack of reasonable care, repair or service in any way that is not contemplated in the documentation for the product, or if the model or serial number has been altered, tampered with, defaced or removed; Initial installation, installation and removal of the product for repair, and shipping costs; Operational adjustments covered in the operating manual for the product, and normal maintenance; Damage that occurs in shipment, due to act of God, failures due to power surge, and cosmetic damage; Any hardware, software, firmware or other products or services provided by anyone other than D-Link; and Products that have been purchased from inventory clearance or liquidation sales or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product. While necessary maintenance or repairs on your Product can be performed by any company, we recommend that you use only an Authorized D-Link Service Office. Improper or incorrectly performed maintenance or repair voids this Limited Warranty.

Disclaimer of Other Warranties: EXCEPT FOR THE LIMITED WARRANTY SPECIFIED HEREIN, THE PRODUCT IS PROVIDED "AS-IS" WITHOUT ANY WARRANTY OF ANY KIND WHATSOEVER INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT. IF ANY IMPLIED WARRANTY CANNOT BE DISCLAIMED IN ANY TERRITORY WHERE A PRODUCT IS SOLD, THE DURATION OF SUCH IMPLIED WARRANTY SHALL BE LIMITED TO THE DURATION OF THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE. EXCEPT AS EXPRESSLY COVERED UNDER THE LIMITED WARRANTY PROVIDED HEREIN, THE ENTIRE RISK AS TO THE QUALITY, SELECTION AND PERFORMANCE OF THE PRODUCT IS WITH THE PURCHASER OF THE PRODUCT.

Limitation of Liability: TO THE MAXIMUM EXTENT PERMITTED BY LAW, D-LINK IS NOT LIABLE UNDER ANY CONTRACT, NEGLIGENCE, STRICT LIABILITY OR OTHER LEGAL OR EQUITABLE THEORY FOR ANY LOSS OF USE OF THE PRODUCT, INCONVENIENCE OR DAMAGES OF ANY CHARACTER, WHETHER DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF GOODWILL, LOSS OF REVENUE OR PROFIT, WORK STOPPAGE, COMPUTER FAILURE OR MALFUNCTION, FAILURE OF OTHER EQUIPMENT OR COMPUTER PROGRAMS TO WHICH D-LINK'S PRODUCT IS CONNECTED WITH, LOSS OF INFORMATION OR DATA CONTAINED IN, STORED ON, OR INTEGRATED WITH ANY PRODUCT RETURNED TO D-LINK FOR WARRANTY SERVICE) RESULTING FROM THE USE OF THE PRODUCT, RELATING TO WARRANTY SERVICE, OR ARISING OUT OF ANY BREACH OF THIS LIMITED WARRANTY, EVEN IF D-LINK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE SOLE REMEDY FOR A BREACH OF THE FOREGOING LIMITED WARRANTY IS REPAIR, REPLACEMENT OR REFUND OF THE DEFECTIVE OR NON-CONFORMING PRODUCT. THE MAXIMUM LIABILITY OF D-LINK UNDER THIS WARRANTY IS LIMITED TO THE PURCHASE PRICE OF THE PRODUCT COVERED BY THE WARRANTY. THE FOREGOING EXPRESS WRITTEN WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ANY OTHER WARRANTIES OR REMEDIES, EXPRESS, IMPLIED OR STATUTORY.

Governing Law: This Limited Warranty shall be governed by the laws of the State of California. Some states do not allow exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the foregoing limitations and exclusions may not apply. This Limited Warranty provides specific legal rights and you may also have other rights which vary from state to state.

Trademarks: D-Link is a registered trademark of D-Link Systems, Inc. Other trademarks or registered trademarks are the property of their respective owners.

Copyright Statement: No part of this publication or documentation accompanying this product may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from D-Link Corporation/D-Link Systems, Inc., as stipulated by the United States Copyright Act of 1976 and any amendments thereto. Contents are subject to change without prior notice. Copyright 2005 by D-Link Corporation/D-Link Systems, Inc. All rights reserved.

CE Mark Warning: This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

FCC Statement: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For detailed warranty information applicable to products purchased outside the United States, please contact the corresponding local D-Link office.



FCC Caution:

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment; such modifications could void the user's authority to operate the equipment.

(1) The devices are restricted to indoor operations within the 5.15 to 5.25GHz range. (2) For this device to operate in the 5.15 to 5.25GHz range, the devices must use integral antennas.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The antenna(s) used for this equipment must be installed to provide a separation distance of at least eight inches (20 cm) from all persons.

This equipment must not be operated in conjunction with any other antenna.

D-Link is not responsible for damage to device and/or hard disk drive due to improper installation or usage.

Registration



Product registration is entirely voluntary and failure to complete or return this form will not diminish your warranty rights.

Revised:08/02/2005
Version 2.0