



DP-300+
Multiprotocol
Ethernet/Fast Ethernet
Print Server
Web Configuration User' s Manual

Rev.01 (Nov, 2001)

Made In Taiwan



RECYCLABLE

TABLE OF CONTENTS

WEB CONFIGURATION	3
CONFIGURING THE PRINT SERVER	4
MANAGEMENT	5
SYSTEM STATUS	5
PRINTER STATUS	6
CONFIGURATION	7
SERVER DEVICE	7
TCP/IP PROTOCOL	8
NETBEUI PROTOCOL	9
APPLETALK PROTOCOL	10
TOOLS	11
PRINT TEST	11
RESET	12
FACTORY RESET	13
HELP	14
ABOUT	14

Web Configuration

This manual describes the use of the Web Configuration for controlling and configuring print servers.

Configuring the Print Server

Open web browser and type <http://192.168.0.10> in the address box. The number is the default IP address of your print server. Press Enter.


Note:-

The PC' s IP address must correspond with the print server' s IP address in the same segment for the two devices to communicate.



The print server' s welcome screen will appear. There will be four options on the systems tool bar to choose from to set your print server and they are as follows:

- ◆ Management
- ◆ Configuration
- ◆ Tools
- ◆ Help

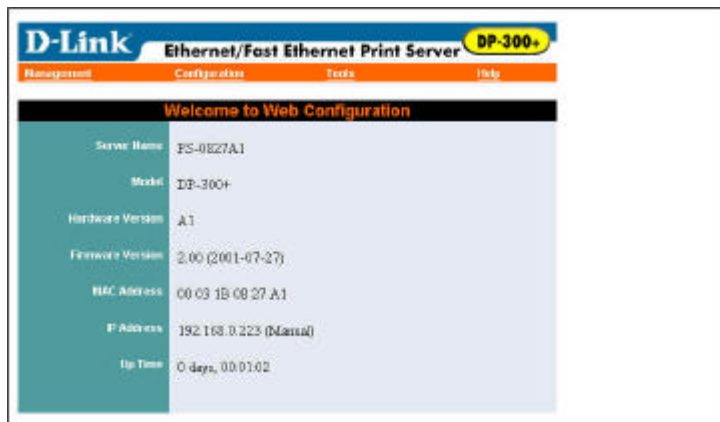


Management

Click on “Management” in the systems tool bar and in the Management Table it provides information on the print server’s Systems Status and Printer Status.

System Status

Click on “System Status” in the Management Table. The page will appear as below providing general information regarding the print server. For most updated information click on the “**Refresh**” button.

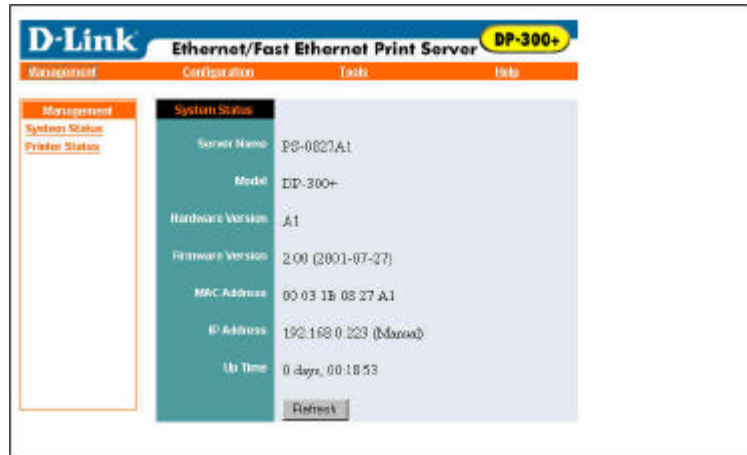

Printer Status

Click on “Printer Status” in the Management Table. The page will appear as below providing general information regarding the printer status. For most updated information click on the “**Refresh**” button. Once the print server is connected to a printer the Printer Status will show Online.



The screenshot displays the web interface for a D-Link DP-300+ Ethernet/Fast Ethernet Print Server. The interface has a blue header with the D-Link logo and the product name. Below the header is a navigation bar with tabs for Management, Configuration, Tools, and Help. The Management tab is active, and the Printer Status page is selected. The page shows a table of printer status information for three ports: LPT1, LPT2, and COM. Each port entry includes the printer name and its status, which is currently Offline. A Refresh button is located at the bottom of the table.


Port	Printer Name	Printer Status
LPT1	PS-0827A1-P1	Offline
LPT2	PS-0827A1-P2	Offline
COM	PS-0827A1-S3	Offline

Configuration

Click on “Configuration” in the systems tool bar and in the Configuration Table it provides settings to configure the print server for the Server Device, TCP/IP Protocol, NetBEUI Protocol and AppleTalk Protocol.

Server Device

Click on “Server Device” in the Configuration Table. The page will appear as below providing the settings required to configure the print server. Click the “Save” button to ensure the settings are updated and saved.

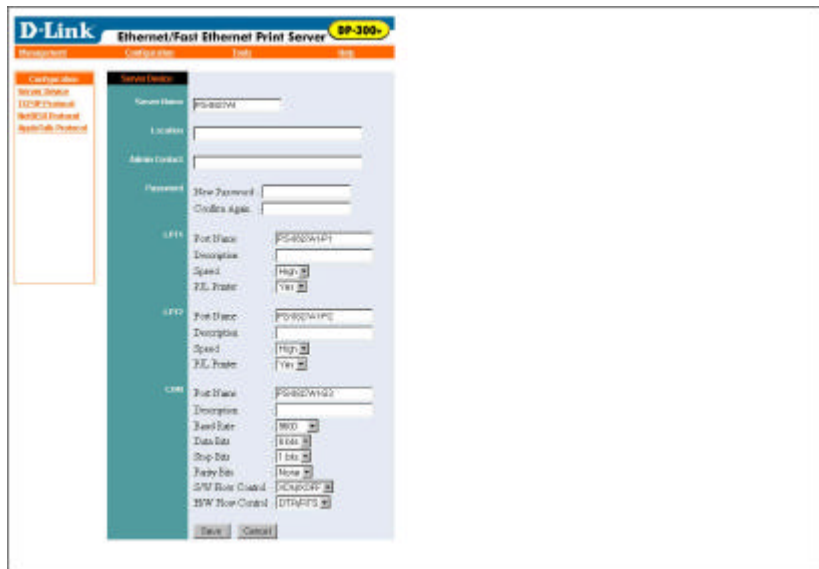

TCP/IP Protocol

Click on “TCP/IP Protocol” in the Configuration Table. The page will appear as below providing the settings required to configure the print server. Click the “**Save**” button to ensure the settings are saved and updated.

The screenshot shows the configuration interface for a D-Link Ethernet/Fast Ethernet Print Server (DP-300+). The page is titled "D-Link Ethernet/Fast Ethernet Print Server DP-300+" and has a navigation bar with "Management", "Configuration", "Tools", and "Help". The "Configuration" tab is active, and the "TCP/IP Protocol" sub-tab is selected. On the left, a sidebar lists configuration options: "Server Settings", "TCP/IP Protocol" (highlighted), "WebUI Settings", and "Security Settings". The main content area is divided into sections: "IP Address" with fields for IP Address (192.168.1.223) and Subnet Mask (255.255.255.0); "Default Gateway" with a field for IP Address (0.0.0.0); "DHCP Settings" with a "Manually Assign" section containing checkboxes for "Assign Automatically Using" (E-ATP, E-ODP, DHCP); and "Share Settings" with three share entries (Share 1, Share 2, Share 3), each with "Name" and "Access Right" fields. The "Access Right" dropdowns are set to "Read/Write", "Read Only", and "Read Only" respectively. "Save" and "Cancel" buttons are at the bottom.

NetBEUI Protocol

Click on “NetBEUI Protocol” in the Configuration Table. The page will appear as below providing the settings required to configure the print server. Click the “**Save**” button to ensure the settings are saved and updated.

The screenshot shows the configuration interface for a D-Link DP-300+ Ethernet/Fast Ethernet Print Server. The page is titled "D-Link Ethernet/Fast Ethernet Print Server DP-300+" and has a navigation bar with "Management", "Configuration", "Tools", and "Help". The "Configuration" tab is active, and the "NetBEUI Protocol" sub-tab is selected. On the left, a sidebar lists configuration options: "Server Device", "TCP/IP Protocol", "NetBEUI Protocol", and "AppleTalk Protocol". The main content area is titled "NetBEUI Protocol" and contains the following settings:

- Workgroup: WORKGROUP
- Maximum Connected Stations: 32
- Maximum Number of Sessions: 32

At the bottom of the configuration area are "Save" and "Cancel" buttons.

AppleTalk Protocol

Click on “AppleTalk Protocol” in the Configuration Table. The page will appear as below providing the settings required to configure the print server. Click the “**Save**” button to ensure the settings are saved and updated.

The screenshot shows the configuration interface for a D-Link BP-300+ Ethernet/Fast Ethernet Print Server. The page title is "D-Link Ethernet/Fast Ethernet Print Server BP-300+". The navigation menu includes "Management", "Configuration", "Tools", and "Help". The "Configuration" menu is expanded, showing options for "Configuration Table", "Server Device", "TCP/IP Protocol", "NetWare Protocol", and "AppleTalk Protocol". The "AppleTalk Protocol" configuration page is displayed, featuring a table with three printer entries (LPT1, LPT2, and LPT3). Each entry has fields for "Chooser Name", "Printer Type", "PostScript Level", and "Font Group". At the bottom of the page are "Save" and "Cancel" buttons.


Printer	Chooser Name	Printer Type	PostScript Level	Font Group
LPT1	PS-0327A1-F1	LaserWriter	Level 2	Standard 35
LPT2	PS-0327A1-F2	LaserWriter	Level 2	Standard 35
LPT3	PS-0327A1-F3	LaserWriter	Level 2	Standard 35

Tools

Click on “Tools” in the systems tool bar and in the Tools Table it provides information for Print Test, Reset, and Factory Reset.


Print Test

Click on “Print Test” in the Tools Table. The page will appear as below and click the “**Test**” button to begin printer printing test.

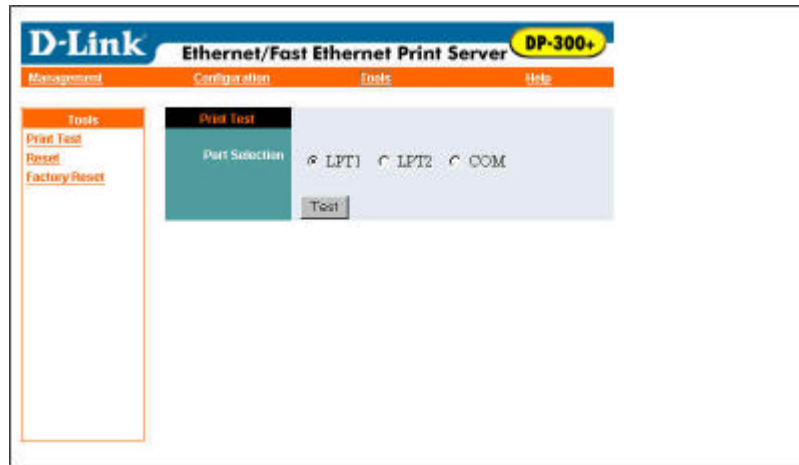


Reset

Click on “Reset” in the Tools Table. The page will appear as below and click the “Yes” button to activate the reset procedure.

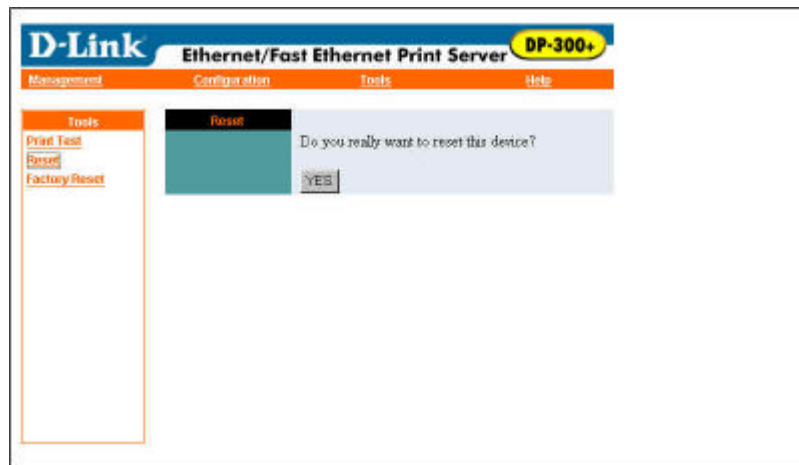

Factory Reset

Click on “Factory Reset” in the Tools Table. The page will appear as below and click the “Yes” button to activate the factory reset procedure.

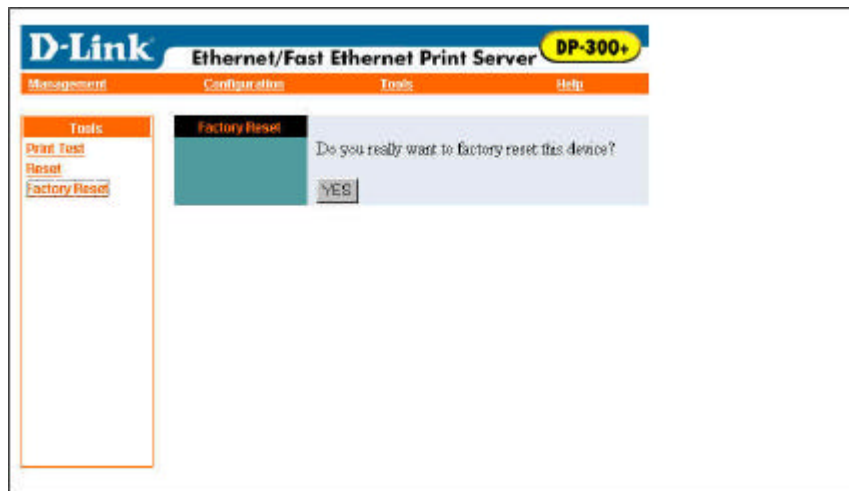

Help

Click on “Help” in the systems tool bar and in the Help Table it provides general information about the print server.

About

Click on “About” in the Help Table. The page will appear as below providing general information about the print server.

