



*Маршрутизаторы.
Интерфейс командной строки.*

модели DI-1750/DI-2630/DI-3660

Версия. 1 (Янв 2004)



Оглавление

1. Начальные сведения.....	3
1.1 Описание.....	3
1.2 Нумерация портов	3
1.3 Конфигурация консольного порта.....	3
1.4 Справка.....	5
1.5 Режимы.....	6
1.6 Отмена команды.....	6
1.7 Сохранение конфигурации.....	6
1.8 Обновление IOS(Firmware):.....	7
1.9 Назначение пароля привилегированного режима.....	8
2. Примеры конфигураций.....	9
2.1 SLIP на асинхронном интерфейсе, маршрутизация по RIP :.....	9
2.2 SLIP на асинхронном интерфейсе, маршрутизация статическая:.....	10
2.3 PPP на асинхронном интерфейсе, маршрутизация по RIP :.....	11
2.4 PPP на синхронном интерфейсе, маршрутизация по RIP :.....	12
2.5 PPP на синхронном интерфейсе, маршрутизация статическая:.....	13
2.6 PPP на синхронном интерфейсе без назначения IP, маршрутизация по RIP:.....	14
2.7 PPP на синхронном интерфейсе без назначения IP, маршрутизация статическая:.....	15
2.8 HDLC на синхронном интерфейсе, маршрутизация по RIP:.....	16
2.9 HDLC на синхронном интерфейсе, маршрутизация статическая:.....	17
2.10 Frame Relay на синхронном интерфейсе, маршрутизация по RIP:.....	18
2.11 Frame Relay на синхронном интерфейсе, маршрутизация статическая:.....	20
2.12 X.25 на синхронном интерфейсе, маршрутизация по RIP:.....	22
2.13 X.25 на синхронном интерфейсе, маршрутизация статическая:.....	24
2.14 HDLC на синхронном интерфейсе, маршрутизация по RIP с модулем 1DTU:.....	26
2.15 PPP на синхронном интерфейсе, маршрутизация статическая, с модулем 1DTU:.....	27
2.16 HDLC на синхронном интерфейсе, маршрутизация статическая, с модулем Channelized E1 в режиме Framed:.....	28
2.17 HDLC на синхронном интерфейсе, маршрутизация статическая, с модулем Channelized E1 в режиме UnFramed:.....	29
2.18 Доступ к интернет по ISDN, скорость 64 Кбит через модуль DRW-1BST, NAT:.....	30
2.19 Доступ к интернет по ISDN, скорость 128 Кбит через модуль DRW-1BST, NAT:.....	31
2.20 Доступ к интернет по ISDN через внешний TA на интерфейсе Serial, NAT:.....	33
2.21 Доступ к интернет по ISDN через внешний TA на интерфейсе Aux, NAT:.....	34
2.22 Доступ к интернет через внешний Dialup модем на интерфейсе Serial, NAT:.....	35
2.23 PPP по ISDN, маршрутизация статическая, модуль DRW-1BST:.....	36
2.24 Удаленный доступ к сети по DIALUP, модуль DRW-8A/S.....	37
2.25 Backup выделенной линии с использованием Dialup модема:.....	39
2.26 VOIP : конфигурация FXS-FXS:.....	40
2.27 VOIP: конфигурация FXS-FXO:.....	42
2.28 PPP на синхронном интерфейсе, маршрутизация по OSPF :.....	44

1. Начальные сведения

1.1 Описание

В этом разделе описываются необходимые сведения для начального конфигурирования маршрутизатора, такие как принципы нумерации портов и начальные сведения об интерфейсе командной строки.

1.2 Нумерация портов

- * Номер порта маршрутизатора формируется из типа интерфейса, номера слота и номера порта на слоте по форме <тип><слот>/<порт>. Следующая таблица иллюстрирует соответствие типов интерфейсов и их названий:

Тип интерфейса	Полное название	Краткое название
Serial Port	Serial	s
Synchronous Port	Serial	s
Asynchronous Port/Aux	Async	a
10M Ethernet	Ethernet	e
100M Fast Ethernet	Fast Ethernet	f
ISDN BRI	BRI	b
E1 (ISDN PRI)	Serial	s

- * Номер слота расширения формируется по принципу справа-налево снизу-вверх начиная с 1. Номер слота для фиксированных портов -- 0. Слоты нумеруются вне зависимости от типа устанавливаемого модуля расширения.
- * Порты нумеруются справа налево, начиная с 0 для каждого слота. Если на модуле расширения присутствует всего один порт, то он имеет номер 0.


Модель	Порт	Номер порта
DI-1750	Фиксированный порт 10/100M Ethernet	FastEthernet0/0
	Фиксированный порт Aux	Async0/0
	Слоты расширения	Справа налево слот 1-2
DI-2630	Слоты расширения	Нижний ряд: справа налево слот 1-2 Верхний ряд: справа налево слот 3-4
	Фиксированный порт 10/100M Ethernet	FastEthernet0/0
	Фиксированный порт Aux	Async0/0
DI-3660	Фиксированный порт Aux	Async0/0
	Слоты расширения	Нижний ряд: справа налево слоты 1-2 Средний ряд: справа налево слоты 3-4 Верхний ряд: справа налево слоты 5-6

1.3 Конфигурация консольного порта

Первоначальная конфигурация маршрутизатора возможна только с порта консоли. Маршрутизаторы D-Link DI-1750, DI-2630 & DI-3660 поставляются с консольным портом со скоростью передачи от 1200 бод до 115200 бод и стандартным разъемом RJ45. Поставляемый в

комплекте с маршрутизатором кабель DRC-0001 может быть использован для подключения к терминалу типа VT-100 или COM-порту компьютера. Используйте программу эмуляции терминала (такую, как Windows Hyper terminal) для подключения к устройству.

Перед тем как включить Ваш маршрутизатор, подключите кабель между консольным портом маршрутизатора D-Link и терминалом или COM-портом компьютера.

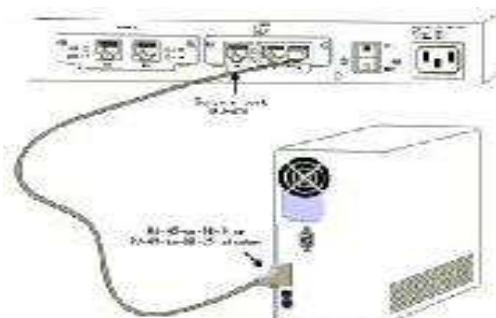


Запустите программу эмуляции терминала (Windows HyperTerminal)




Выберите COM-порт, к которому подключен консольный кабель DCR-0001:




Установите параметры соединения следующим образом: скорость передачи 9600 бод, 8 бит, 1 стоп-бит, без контроля четности, без контроля потока:

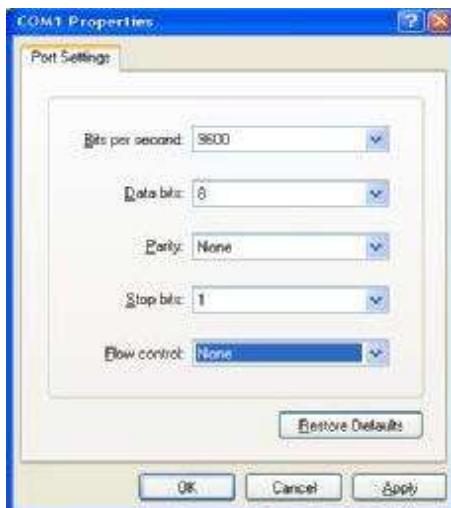

Включите маршрутизатор. Вы увидите сообщение об инициализации:

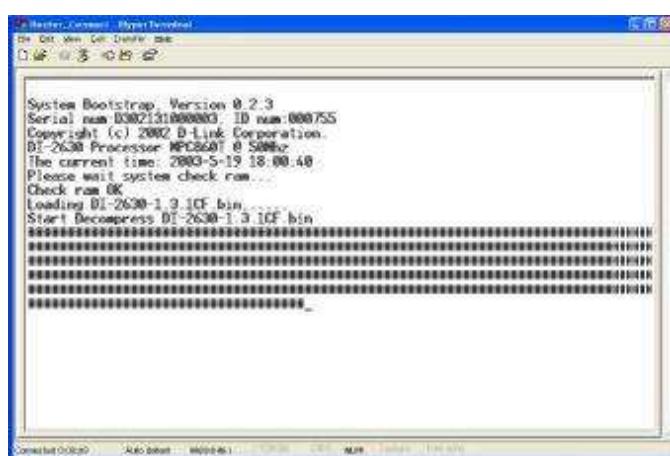

После того, как маршрутизатор загрузит D-Link IOS, на консоли появится приветствие и приглашение:

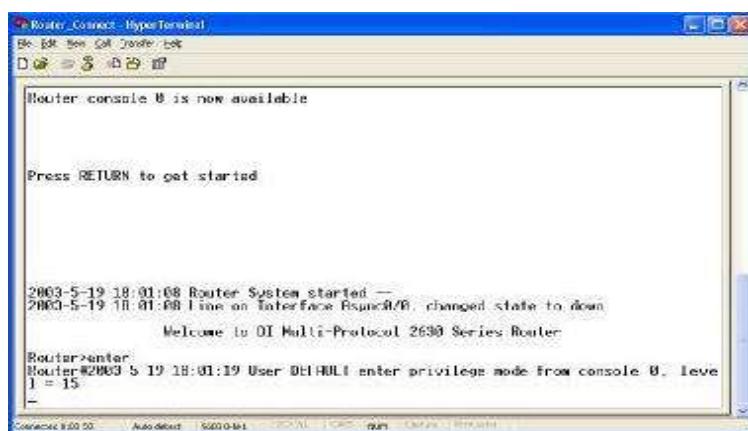

1.4 Справка

Для получения оперативной справки по командам введите ?

- Введите ? для вывода списка доступных команд

Router>?

- Нажмите пробел для продолжения списка, любую клавишу для выхода из справки.

1.5 Режимы

Пользовательский интерфейс маршрутизатора включает несколько режимов, позволяющих выполнять определенные действия и имеющие соответствующий набор команд. Нижеследующая таблица иллюстрирует основные режимы:

Режим	Метод входа	Приглашение	Метод выхода
Системный монитор	Включите маршрутизатор и нажмите Ctrl+Break на консоли	monitor#	командой <i>quit</i>
Режим пользователя	Регистрация	Router>	команда <i>exit</i> или <i>quit</i>
Привилегированный режим	Команда “enter” в режиме пользователя	Router#	команда <i>exit</i> или <i>quit</i>
Режим конфигурирования	Команда “config” в привилегированном режиме	Router_config#	команда <i>exit</i> или <i>quit</i> или Ctrl-Z

Каждый режим имеет специфическое подмножество команд. Если у Вас не получается ввести команду проверьте приглашение или введите ? для получения списка доступных команд.

Пример (обратите внимание на приглашение):

```
Router> enter
Password: <enter password>
Router# config
Router_config# config_interface f0/0
Router_config_f0/0# config-ip address 192.168.1.1 255.255.255.0
Router_config_f0/0# exit
Router_config# exit
Router# exit
Router>
```

1.6 Отмена команды

Для отмены произведимого командой действия добавьте по перед командой. Например:

```
Router_config# no config-ip route
```

1.7 Сохранение конфигурации

Сделанные конфигурационные изменения хранятся в оперативной памяти устройства. Чтобы сохранить их в постоянной памяти введите команду *write* в привилегированном или конфигурационном режиме.

```
Router#write
Saving current configuration...
OK!
Router#
```

Примечание: несохраненные изменения теряются при выключении питания или перезагрузке маршрутизатора.

Во избежание повреждения устройства не выключайте маршрутизатор во время записи конфигурации!

1.8 Обновление IOS(Firmware):

Обновление IOS может быть загружено с сервера TFTP.

Для обновления подключите консольный кабель к маршрутизатору и включите маршрутизатор.

Вы увидите следующее сообщение:

```
System Bootstrap, Version 0.2.3
Serial num:D302131000003, ID num:000755
Copyright (c) 2002 D-Link Corporation. DI-2630 Processor MPC860T @ 50Mhz The
current time: 2003-5-21 11:46:48
Please wait system check ram... Check ram OK
```

Нажмите Ctrl+Break чтобы войти в режим монитора.

Welcome to DI Multi-Protocol 2630 Series Router

DI-2630 Processor MPC860T @ 50Mhz
The current time: 2003-5-21 11:41:42
Loading DI-2630-1.3.1CF.bin.....

В этих сообщениях выводится имя файла с обновленным программным обеспечением

```
#####
##### Decompress 4864154 byte, Please wait system up..
```

D-Link Internetwork Operating System Software
DI-2630 Series Software , Version 1.3.1L, RELEASE SOFTWARE System start up OK

Router console 0 is now available

Press RETURN to get started

```
2003-5-21 11:45:51 Router System started --
2003-5-21 11:45:51 Line on Interface Serial1/0, changed state to down
2003-5-21 11:45:51 Line on Interface Async0/0, changed state to down
2003-5-21 11:45:51 Line on Interface Serial1/0, changed state to down
2003-5-21 11:45:51 Line protocol on Interface FastEthernet0/0, changed state to up
```


```
Welcome to DI Multi-Protocol 2630 Series Router  
Router>enter  
Password:  
Router#
```

1.9 Назначение пароля привилегированного режима

```
Welcome to DI Multi-Protocol 2630 Series Router
Router>enter
Router#config
Router_config#enable password dlink
Router_config#wr
Saving current configuration...
OK!
Router_config#exit
Router#
```

2. Примеры конфигураций

2.1 SLIP на асинхронном интерфейсе, маршрутизация по RIP :

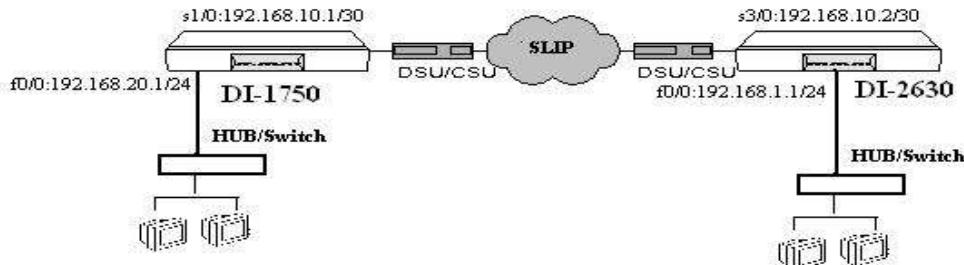

Примечание: использование протокола SLIP возможно только в асинхронном режиме работы порта!


Конфигурация DI-1750:

```
Welcome to DI Multi-Protocol 1750 Series Router
DI1750>enter
DI1750#disp run
Building configuration...
Current configuration:
!version 1.3.1D
service timestamps log date
service timestamps debug date
no service password-encryption
!
hostname DI1750
!
config-interface FastEthernet0/0
  config-ip address 192.168.20.1 255.255.255.0
  no config-ip directed-broadcast
!
config-interface Serial1/0
  set-phy-layer mode async
  config-ip address 192.168.10.1 255.255.255.252
  no config-ip directed-broadcast
  config-encap slip
  set-phy-layer speed 38400
!
config-interface Async0/0
  no config-ip address
  no config-ip directed-broadcast
!
config-router rip
  config-network 192.168.10.0 255.255.255.252
  config-network 192.168.20.0 255.255.255.0
  config-neighbor 192.168.10.2
! DI1750#
```

Конфигурация DI-2630:

```
Welcome to DI Multi-Protocol 2630 Series Router
DI2630>enter
DI2630#disp run
Building configuration...
Current configuration:
!version 1.3.1D
service timestamps log date
service timestamps debug date no
service password-encryption
!
hostname DI2630
!
config-interface FastEthernet0/0
  config-ip address 192.168.1.1 255.255.255.0
  no config-ip directed-broadcast
!
config-interface Serial3/0
  set-phy-layer mode async
  config-ip address 192.168.10.2 255.255.255.252
  no config-ip directed-broadcast
  config-encap slip
  set-phy-layer speed 38400
!
config-interface Async0/0
  no config-ip address
  no config-ip directed-broadcast
!
config-router rip
  config-network 192.168.1.0 255.255.255.0
  config-network 192.168.10.0 255.255.255.252
  config-neighbor 192.168.10.2
! DI2630#
```

2.2 SLIP на асинхронном интерфейсе, маршрутизация статическая:

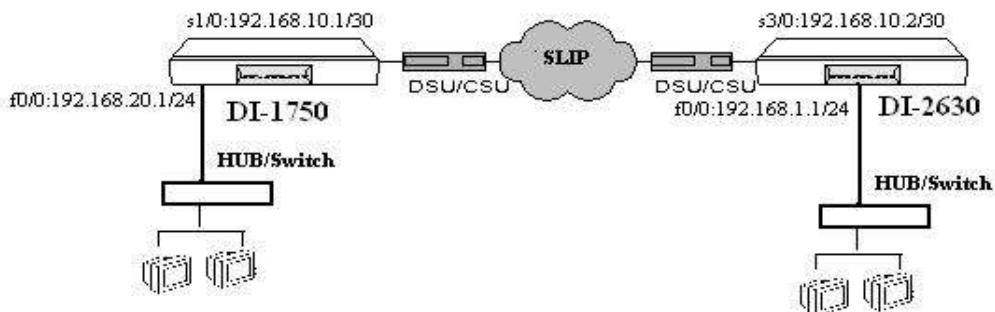

Примечание: использование протокола SLIP возможно только в асинхронном режиме работы порта!


Конфигурация DI-1750:

```
Welcome to DI Multi-Protocol 1750 Series Router
DI1750>enter DI1750#disp run
Building configuration...
Current configuration:
!
!version 1.3.1D
service timestamps log date
service timestamps debug date
no service password-encryption
!
hostname DI1750
!
config-interface FastEthernet0/0
  config-ip address 192.168.20.1 255.255.255.0
  no config-ip directed-broadcast
!
config-interface Serial1/0
  set-phy-layer mode async
  config-ip address 192.168.10.1 255.255.255.252
  no config-ip directed-broadcast
  config-encap slip
  set-phy-layer speed 38400
!
config-interface Async0/0
  no config-ip address
  no config-ip directed-broadcast
!
config-ip route 192.168.1.0 255.255.255.0 192.168.10.2
DI1750#
```

Конфигурация DI-2630:

```
Welcome to DI Multi-Protocol 2630 Series Router
DI2630>enter DI2630#disp run
Building configuration...
Current configuration:
!
!version 1.3.1D
service timestamps log date
service timestamps debug date no
service password-encryption
!
hostname DI2630
!
config-interface FastEthernet0/0
  config-ip address 192.168.1.1 255.255.255.0
  no config-ip directed-broadcast
!
config-interface Serial3/0
  set-phy-layer mode async
  config-ip address 192.168.10.2 255.255.255.252
  no config-ip directed-broadcast
  config-encap slip
  set-phy-layer speed 38400
!
config-interface Async0/0
  no config-ip address
  no config-ip directed-broadcast
!
config-ip route 192.168.20.0 255.255.255.0
192.168.10.1
DI2630#
```

2.3 PPP на асинхронном интерфейсе, маршрутизация по RIP :

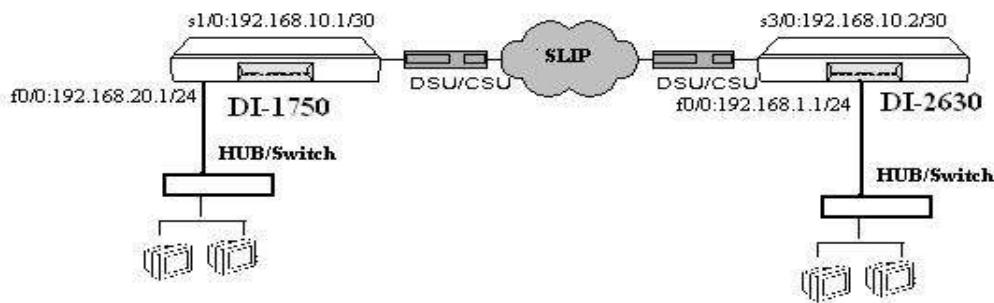


Конфигурация DI-1750:

```
Welcome to DI Multi-Protocol 1750 Series Router
DI1750>enter
DI1750#disp run
Building configuration...
Current configuration:
!
!version 1.3.1D
service timestamps log date
service timestamps debug date
no service password-encryption
!
hostname DI1750
!
config-interface FastEthernet0/0
  config-ip address 192.168.20.1 255.255.255.0
  no config-ip directed-broadcast
!
config-interface Serial1/0
  set-phy-layer mode async
  config-ip address 192.168.10.1 255.255.255.252
  no config-ip directed-broadcast
  config-encap ppp
  set-phy-layer speed 38400
!
config-interface Async0/0
  no config-ip address
  no config-ip directed-broadcast
!
config-router rip
  config-network 192.168.10.0 255.255.255.252
  config-network 192.168.20.0 255.255.255.0
  config-neighbor 192.168.10.2
!
DI1750#
```

Конфигурация DI-2630:

```
Welcome to DI Multi-Protocol 2630 Series Router
DI2630>enter
DI2630#disp run
Building configuration...
Current configuration:
!
!version 1.3.1D
service timestamps log date
service timestamps debug date
no service password-encryption
!
hostname DI2630
!
config-interface FastEthernet0/0
  config-ip address 192.168.1.1 255.255.255.0
  no config-ip directed-broadcast
!
config-interface Serial3/0
  set-phy-layer mode async
  config-ip address 192.168.10.2 255.255.255.252
  no config-ip directed-broadcast
  config-encap ppp
  set-phy-layer speed 38400
!
config-interface Async0/0
  no config-ip address
  no config-ip directed-broadcast
!
config-router rip
  config-network 192.168.1.0 255.255.255.0
  config-network 192.168.10.0 255.255.255.252
  config-neighbor 192.168.10.1
!
DI2630#
```

2.4 PPP на синхронном интерфейсе, маршрутизация по RIP :

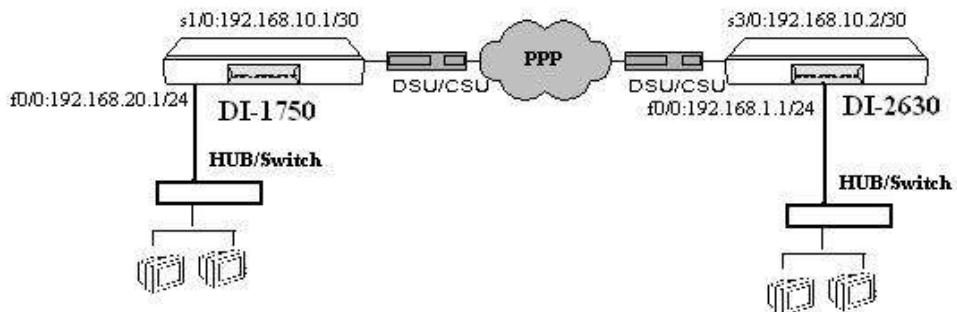


Конфигурация DI-1750:

```
Welcome to DI Multi-Protocol 1750 Series Router
DI1750>enter
DI1750#display run
Building configuration...
Current configuration:
!
!version 1.3.1D
service timestamps log date
service timestamps debug date
no service password-encryption
!
hostname DI1750
!
config-interface FastEthernet0/0
config-ip address 192.168.20.1 255.255.255.0
no config-ip directed-broadcast
!
config-interface Serial1/0
config-ip address 192.168.10.1 255.255.255.252
no config-ip directed-broadcast
config-encap ppp
!
config-interface Async0/0
no config-ip address
no config-ip directed-broadcast
!
config-router rip
config-network 192.168.20.0 255.255.255.0
config-network 192.168.10.0 255.255.255.252
config-neighbor 192.168.10.2
!
DI1750#
```

Конфигурация DI-2630:

```
Welcome to DI Multi-Protocol 2630 Series Router
DI2630>enter
DI2630#display run
Building configuration...
Current configuration:
!
!version 1.3.1D
service timestamps log date
service timestamps debug date
no service password-encryption
!
hostname DI2630
!
config-interface FastEthernet0/0
config-ip address 192.168.1.1 255.255.255.0
no config-ip directed-broadcast
!
config-interface Serial3/0
config-ip address 192.168.10.2 255.255.255.252
no config-ip directed-broadcast
config-encap ppp
!
config-interface Async0/0
no config-ip address
no config-ip directed-broadcast
!
config-router rip
config-network 192.168.1.0 255.255.255.0
config-network 192.168.10.0 255.255.255.252
config-neighbor 192.168.10.1
!
DI2630#
```

2.5 PPP на синхронном интерфейсе, маршрутизация статическая:

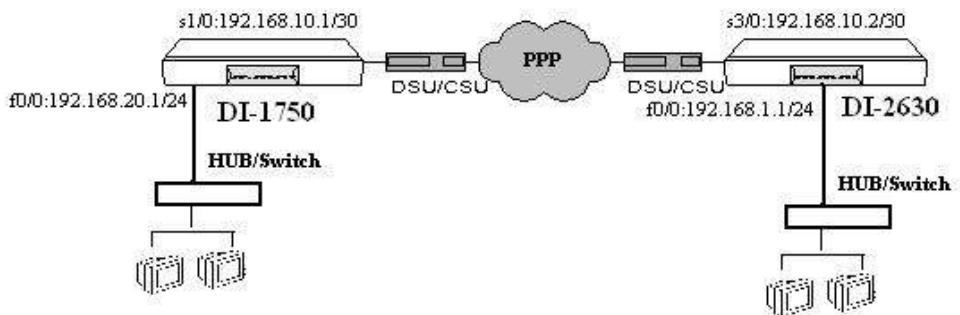


Конфигурация DI-1750:

```
Welcome to DI Multi-Protocol 1750 Series Router
DI1750>enter
DI1750#display run
Building configuration...
Current configuration:
!
!version 1.3.1D
service timestamps log date
service timestamps debug date
no service password-encryption
!
hostname DI1750
!
config-interface FastEthernet0/0
  config-ip address 192.168.20.1 255.255.255.0
  no config-ip directed-broadcast
!
config-interface Serial1/0
  config-ip address 192.168.10.1 255.255.255.252
  no config-ip directed-broadcast
  config-encap ppp
!
config-interface Async0/0
  no config-ip address
  no config-ip directed-broadcast
!
config-ip route 192.168.1.0 255.255.255.0 192.168.10.2 config-ip route 192.168.20.0 255.255.255.0
  192.168.10.2
!
```

Конфигурация DI-2630:

```
Welcome to DI Multi-Protocol 2630 Series Router
DI2630>enter
DI2630#display run
Building configuration...
Current configuration:
!
!version 1.3.1D
service timestamps log date
service timestamps debug date
no service password-encryption
!
hostname DI2630
!
config-interface FastEthernet0/0
  config-ip address 192.168.1.1 255.255.255.0
  no config-ip directed-broadcast
!
config-interface Serial3/0
  config-ip address 192.168.10.2 255.255.255.252
  no config-ip directed-broadcast
  config-encap ppp
!
config-interface Async0/0
  no config-ip address
  no config-ip directed-broadcast
!
```


2.6 PPP на синхронном интерфейсе без назначения IP, маршрутизация по RIP:

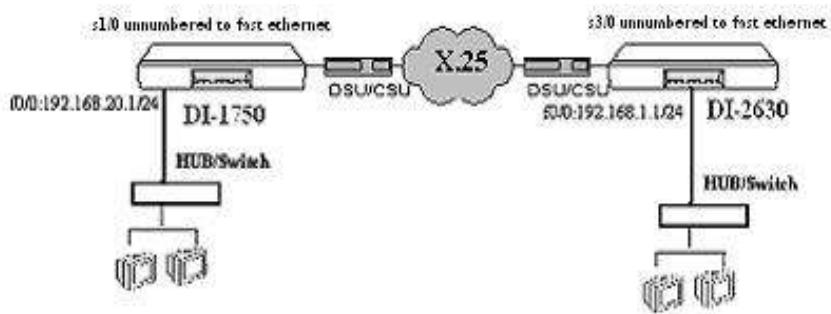


Конфигурация DI-1750:

```
Welcome to DI Multi-Protocol 1750 Series Router
Router>ent
Router#disp run
Building configuration...
Current configuration:
!
!version 1.3.1D
service timestamps log date
service timestamps debug date
no service password-encryption
!
config-isdn switch-type basic-5ess
!
config-interface FastEthernet0/0
  config-ip address 192.168.20.1 255.255.255.0
  no config-ip directed-broadcast
!
config-interface Serial1/0
  config-ip unnumbered FastEthernet0/0
  no config-ip directed-broadcast
  config-encap ppp
!
config-interface Async0/0
  no config-ip address
  no config-ip directed-broadcast
!
config-router rip
  config-network 192.168.20.0 255.255.255.0
!
Router#
```

Конфигурация DI-2630:

```
Welcome to DI Multi-Protocol 2630 Series Router
Router>enter
Router#disp run
Building configuration...
Current configuration:
!
!version 1.3.1C
service timestamps log date
service timestamps debug date
no service password-encryption
!
config-isdn switch-type basic-5ess
!
config-interface FastEthernet0/0
  config-ip address 192.168.1.1 255.255.255.0
  no config-ip directed-broadcast
!
config-interface Serial3/0
  config-ip unnumbered FastEthernet0/0
  no config-ip directed-broadcast
  config-encap ppp
!
config-interface Async0/0
  no config-ip address
  no config-ip directed-broadcast
!
config-router rip
  config-network 192.168.1.0
!
Router#
```

2.7 PPP на синхронном интерфейсе без назначения IP, маршрутизация статическая:

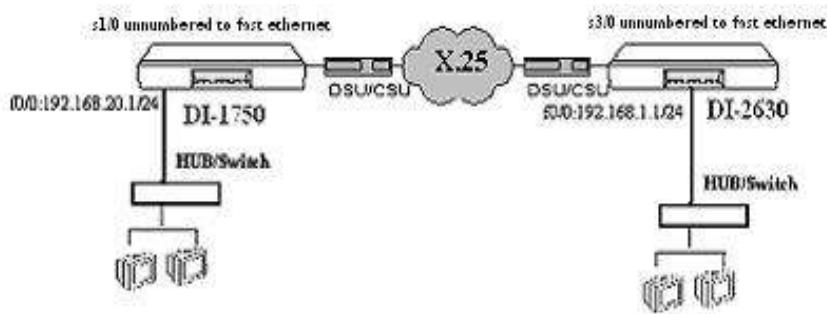

Конфигурация DI-1750:

```
Welcome to DI Multi-Protocol 1750 Series Router
Router>ent
Router#disp run
Building configuration...
Current configuration:
!
!version 1.3.1D
service timestamps log date
service timestamps debug date
no service password-encryption
!
config-isdn switch-type basic-5ess
!
config-interface FastEthernet0/0
 config-ip address 192.168.20.1 255.255.255.0
 no config-ip directed-broadcast
!
config-interface Serial1/0
 config-ip unnumbered FastEthernet0/0
 no config-ip directed-broadcast
 config-encap ppp
!
config-interface Async0/0
 no config-ip address
 no config-ip directed-broadcast
!
config-ip route 192.168.1.0 255.255.255.0 s1/0
!
Router#
```

Конфигурация DI-2630:

```
Welcome to DI Multi-Protocol 2630 Series Router
Router>enter
Router#disp run
Building configuration...
Current configuration:
!
!version 1.3.1C
service timestamps log date
service timestamps debug date
no service password-encryption
!
config-isdn switch-type basic-5ess
!
config-interface FastEthernet0/0
 config-ip address 192.168.1.1 255.255.255.0
 no config-ip directed-broadcast
!
config-interface Serial3/0
 config-ip unnumbered FastEthernet0/0
 no config-ip directed-broadcast
 config-encap ppp
!
config-interface Async0/0
 no config-ip address
 no config-ip directed-broadcast
!
config-ip route 192.168.20.0 255.255.255.0 s3/0
! Router#
```

2.8 HDLC на синхронном интерфейсе, маршрутизация по RIP:


Конфигурация DI-1750:

```
Welcome to DI Multi-Protocol 1750 Series Router
DI1750>enter
DI1750#display run
Building configuration...
Current configuration:
!
!version 1.3.1D
service timestamps log date
service timestamps debug date
no service password-encryption
!
hostname DI1750
!
config-interface FastEthernet0/0
config-ip address 192.168.20.1 255.255.255.0
no config-ip directed-broadcast
!
config-interface Serial1/0
config-ip address 192.168.10.1 255.255.255.252
no config-ip directed-broadcast
config-encap HDLC
!
config-interface Async0/0
no config-ip address
no config-ip directed-broadcast
!
config-router rip
config-network 192.168.20.0 255.255.255.0
config-network 192.168.10.0 255.255.255.252
config-neighbor 192.168.10.2
!
DI1750#
```

Конфигурация DI-2630:

```
Welcome to DI Multi-Protocol 2630 Series Router
DI2630>enter
DI2630#display run
Building configuration...
Current configuration:
!
!version 1.3.1D
service timestamps log date
service timestamps debug date
no service password-encryption
!
hostname DI2630
!
config-interface FastEthernet0/0
config-ip address 192.168.1.1 255.255.255.0
no config-ip directed-broadcast
!
config-interface Serial3/0
config-ip address 192.168.10.2 255.255.255.252
no config-ip directed-broadcast
config-encap HDLC
!
config-interface Async0/0
no config-ip address
no config-ip directed-broadcast
!
config-router rip
config-network 192.168.1.0 255.255.255.0
config-network 192.168.10.0 255.255.255.252
config-neighbor 192.168.10.1
!
DI2630#
```

2.9 HDLC на синхронном интерфейсе, маршрутизация статическая:

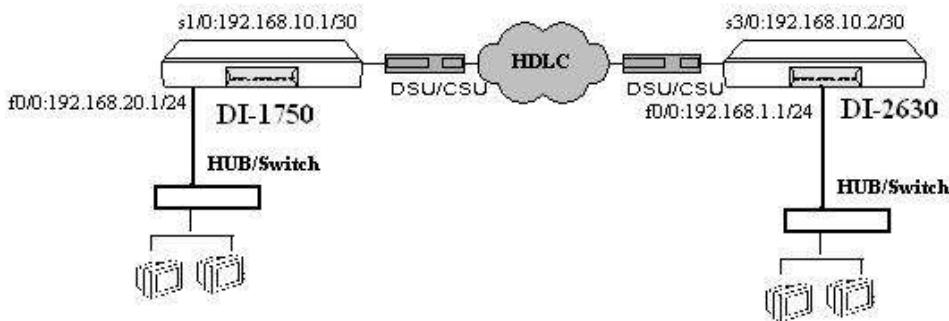


Конфигурация DI-1750:

```
Welcome to DI Multi-Protocol 1750 Series Router
DI1750>enter
DI1750#display run
Building configuration...
Current configuration:
!
!version 1.3.1D
service timestamps log date
service timestamps debug date
no service password-encryption
!
hostname DI1750
!
config-interface FastEthernet0/0
  config-ip address 192.168.20.1 255.255.255.0
  no config-ip directed-broadcast
!
config-interface Serial1/0
  config-ip address 192.168.10.1 255.255.255.252
  no config-ip directed-broadcast
  config-encap HDLC
!
config-interface Async0/0
  no config-ip address
  no config-ip directed-broadcast
!
config-ip route 192.168.1.0 255.255.255.0 192.168.10.2 config-ip route 192.168.20.0 255.255.255.0
  192.168.10.1
!
DI1750#
```

Конфигурация DI-2630:

```
Welcome to DI Multi-Protocol 2630 Series Router
DI2630>enter
DI2630#display run
Building configuration...
Current configuration:
!
!version 1.3.1D
service timestamps log date
service timestamps debug date
no service password-encryption
!
hostname DI2630
!
config-interface FastEthernet0/0
  config-ip address 192.168.1.1 255.255.255.0
  no config-ip directed-broadcast
!
config-interface Serial3/0
  config-ip address 192.168.10.2 255.255.255.252
  no config-ip directed-broadcast
  config-encap HDLC
!
config-interface Async0/0
  no config-ip address
  no config-ip directed-broadcast
!
DI2630#
```

2.10 Frame Relay на синхронном интерфейсе, маршрутизация по RIP:

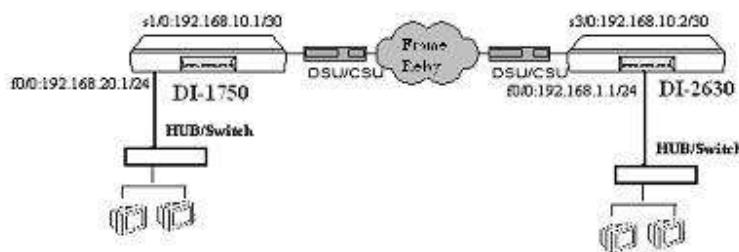

Конфигурация DI-1750:

```
Welcome to DI Multi-Protocol 1750 Series Router
Router>enter
Router#display run
Building configuration...
Current configuration:
!
version 1.3.1D
service timestamps log date
service timestamps debug date
no service password-encryption
!
config-interface FastEthernet0/0
 config-ip address 192.168.20.1 255.255.255.0
 no config-ip directed-broadcast
!
config-interface Serial1/0
 config-ip address 192.168.10.1 255.255.255.252
 no config-ip directed-broadcast
 config-encap frame-relay
 config-fr local-dlci 16
 config-fr map 192.168.10.2 pvc 16
 config-fr lmi-type ansi
!
config-interface Async0/0
 no config-ip address
 no config-ip directed-broadcast
!
config-router rip
 config-network 192.168.20.0 255.255.255.0
 config-network 192.168.10.0 255.255.255.0
 config-neighbor 192.168.10.2
!
Router#
```

Конфигурация DI-2630:

```
Welcome to DI Multi-Protocol 2630 Series Router
Router>ent
Router#disp run
Building configuration...
Current configuration:
!
version 1.3.1D
service timestamps log date
service timestamps debug date
no service password-encryption
!
config-interface FastEthernet0/0
 config-ip address 192.168.1.1 255.255.255.0
 no config-ip directed-broadcast
!
config-interface Serial3/0
 config-ip address 192.168.10.2 255.255.255.252
 no config-ip directed-broadcast
 config-encap frame-relay
 config-fr local-dlci 16
 config-fr map 192.168.1.0.1 pvc 16
 config-fr intf-type dce
 config-fr lmi-type ansi
 set-phy-layer speed 64000
!
config-interface Async0/0
 no config-ip address
 no config-ip directed-broadcast
!
config-router rip
 config-network 192.168.1.0
 config-network 192.168.10.0
 config-neighbor 192.168.10.1
!
Router#
```

DI-1750 Interface Information

```

Router#display int s1/0
Serial1/0 is up, line protocol is up
Mode=Sync DTE
DTR=UP,DSR=UP,RTS=UP,CTS=UP,DCD=UP
Interface address is 192.168.10.1/30
MTU 1500 bytes, BW 64 kbit, DLY 2000 usec
Encapsulation Frame-relay, loopback not set
Keepalive set(10 sec)
FrameRelay DTE, LMI type is ANSI, LMI DLCI 0
LMI DTE Link Errors 2, Protocol Errors 0, Inactives
0
T391 10, N391 6, N392 3, N393 4
Recv Octets 6237, Recvd Frames 103, Recvd Discards
0
Sent Octets 5080, Sent Frames 88, Sent Discards 1
Recv Errors 0, Sent Errors 0, Recvd Unknowns 0
60 second input rate 674 bits/sec, 1 packets/sec!
60 second output rate 528 bits/sec, 1 packets/sec!
103 packets input, 6443 bytes, 7 unused_rx, 0 no
buffer
0 input errors, 0 CRC, 0 frame, 0 overrun, 0
ignored, 0 abort
88 packets output, 5414 bytes, 8 unused_tx, 0
underruns
error:
0 clock, 0 grace
PowerQUICC SCC specific errors:
0 recv allocb mblk fail      0 recv no buffer
0 transmitter queue full     0 transmitter
hwqueue_full
Router#display fra
          Frame Relay/IP state
Serial1/0      UP
=====
Port          DLCI    State     remote IP
local IP       Type
=====
Serial1/0      16      ACTIVE   192.168.10.2
192.168.10.1      M

```


DI-2630 Interface Information

```

Router#disp int s3/0
Serial3/0 is up, line protocol is up
Mode=Sync DCE Speed=64000
DTR=UP,DSR=UP,RTS=UP,CTS=UP,DCD=UP
Interface address is 192.168.10.2/30
MTU 1500 bytes, BW 64 kbit, DLY 2000 usec
Encapsulation Frame-relay, loopback not set
Keepalive set(10 sec)
FrameRelay DCE, LMI type is ANSI, LMI DLCI 0
LMI DCE Link Errors 0, Protocol Errors 0, Inactives
0
T392 15, N392 3, N393 4
Recv Octets 227451, Recvd Frames 3707, Recvd
Discards 0
Sent Octets 220801, Sent Frames 3691, Sent Discards
0
Recv Errors 0, Sent Errors 0, Recvd Unknowns 0
60 second input rate 1126 bits/sec, 2 packets/sec!
60 second output rate 1127 bits/sec, 2 packets/sec!
3708 packets input, 234881 bytes, 8 unused_rx, 0
no buffer
0 input errors, 0 CRC, 0 frame, 0 overrun, 0
ignored, 0 abort
3691 packets output, 235211 bytes, 8 unused_tx, 0
underruns
error:
0 clock, 0 grace
PowerQUICC SCC specific errors:
0 recv allocb mblk fail      0 recv no buffer
0 transmitter queue full     0 transmitter
hwqueue_full
Router#disp frame
          Frame Relay/IP state
Serial3/0      UP
=====
Port          DLCI    State     remote IP
local IP       Type
=====
Serial3/0      16      ACTIVE   192.168.10.1
192.168.10.2      M

```

2.11 Frame Relay на синхронном интерфейсе, маршрутизация статическая:

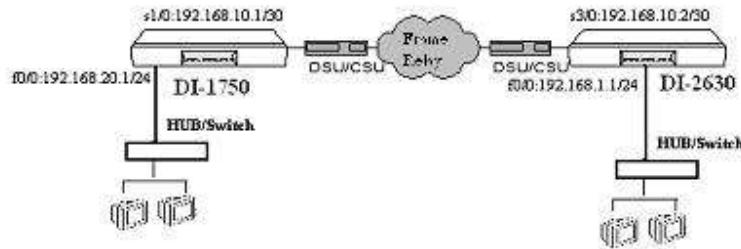

Конфигурация DI-1750:

```
Welcome to DI-Mutil-Protocol 1750 Series Router
Router>enter
Router#disp run
Building configuration...
Current configuration:
!
!version 1.3.1D
service timestamps log date
service timestamps debug date
no service password-encryption
!
config-interface FastEthernet0/0
config-ip address 192.168.20.1 255.255.255.0
no config-ip directed-broadcast
!
config-interface Serial1/0
config-ip address 192.168.10.1 255.255.255.252
no config-ip directed-broadcast
config-encap frame-relay
config-fr local-dlci 16
config-fr map 192.168.10.2 pvc 16
config-fr lmi-type ansi
!
config-interface Async0/0
no config-ip address
no config-ip directed-broadcast
!
config-ip route 192.168.1.0 255.255.255.0 192.168.10.2
!
Router#
```

Конфигурация DI-2630:

```
Welcome to DI Multi-Protocol 2630 Series Router
Router>ent
Router#disp run
Building configuration...
Current configuration:
!
!version 1.3.1D
service timestamps log date
service timestamps debug date no
service password-encryption
!
config-interface FastEthernet0/0
config-ip address 192.168.1.1 255.255.255.0
no config-ip directed-broadcast
!
config-interface Serial3/0
config-ip address 192.168.10.2 255.255.255.252
no config-ip directed-broadcast
config-encap frame-relay
config-fr local-dlci 16
config-fr map 192.168.10.1 pvc 16
config-fr intf-type dce
config-fr lmi-type ansi
set-phy-layer speed 64000
!
config-interface Async0/0
no config-ip address
no config-ip directed-broadcast
!
config-ip route 192.168.20.0 255.255.255.0
192.168.10.1
!
Router#
```

DI-1750 Interface Information

```

Router#display int s1/0
Serial1/0 is up, line protocol is up
Mode=Sync DTE
DTR=UP,DSR=UP,RTS=UP,CTS=UP,DCD=UP
Interface address is 192.168.10.1/30
MTU 1500 bytes, BW 64 kbit, DLY 2000 usec
Encapsulation Frame-relay, loopback not set
Keepalive set(10 sec)
FrameRelay DTE, LMI type is ANSI, LMI DLCI 0
LMI DTE Link Errors 2, Protocol Errors 0, Inactives
0
T391 10, N391 6, N392 3, N393 4
Recv Octets 6237, Recvd Frames 103, Recvd Discards
0
Sent Octets 5080, Sent Frames 88, Sent Discards 1
Recv Errors 0, Sent Errors 0, Recvd Unknowns 0
60 second input rate 674 bits/sec, 1 packets/sec!
60 second output rate 528 bits/sec, 1 packets/sec!
103 packets input, 6443 bytes, 7 unused_rx, 0 no
buffer
0 input errors, 0 CRC, 0 frame, 0 overrun, 0
ignored, 0 abort
88 packets output, 5414 bytes, 8 unused_tx, 0
underruns
error:
0 clock, 0 grace
PowerQUICC SCC specific errors:
0 recv allocb mblk fail      0 recv no buffer
0 transmitter queue full    0 transmitter
hwqueue_full
Router#display fra
          Frame Relay/IP state
Serial1/0      UP
=====
Port          DLCI   State     remote IP
local IP       Type
=====
Serial1/0      16     ACTIVE    192.168.10.2
192.168.0.1    M

```


DI-2630 Interface Information

```

Router#disp int s3/0
Serial3/0 is up, line protocol is up
Mode=Sync DCE Speed=64000
DTR=UP,DSR=UP,RTS=UP,CTS=UP,DCD=UP
Interface address is 192.168.10.2/30
MTU 1500 bytes, BW 64 kbit, DLY 2000 usec
Encapsulation Frame-relay, loopback not set
Keepalive set(10 sec)
FrameRelay DCE, LMI type is ANSI, LMI DLCI 0
LMI DCE Link Errors 0, Protocol Errors 0, Inactives
0
T392 15, N392 3, N393 4
Recv Octets 227451, Recvd Frames 3707, Recvd
Discards 0
Sent Octets 220801, Sent Frames 3691, Sent Discards
0
Recv Errors 0, Sent Errors 0, Recvd Unknowns 0
60 second input rate 1126 bits/sec, 2 packets/sec!
60 second output rate 1127 bits/sec, 2 packets/sec!
3708 packets input, 234881 bytes, 8 unused_rx, 0
no buffer
0 input errors, 0 CRC, 0 frame, 0 overrun, 0
ignored, 0 abort
3691 packets output, 235211 bytes, 8 unused_tx, 0
underruns
error:
0 clock, 0 grace
PowerQUICC SCC specific errors:
0 recv allocb mblk fail      0 recv no buffer
0 transmitter queue full    0 transmitter
hwqueue_full
Router#disp frame
          Frame Relay/IP state
Serial3/0      UP
=====
Port          DLCI   State     remote IP
local IP       Type
=====
Serial3/0      16     ACTIVE    192.168.10.1
192.168.10.2   M

```

2.12 X.25 на синхронном интерфейсе, маршрутизация по RIP:

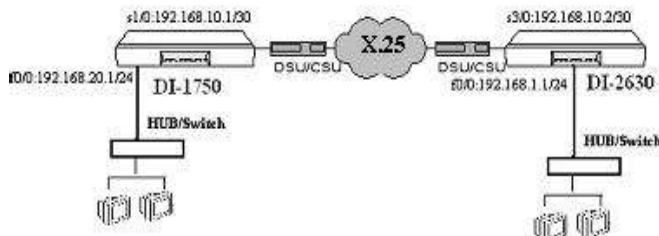

Конфигурация DI-1750:

```
Welcome to DI-Mutil-Protocol 1750 Series Router
Router>enter
Router#display run
Building configuration...
Current configuration:
!version 1.3.1D
service timestamps log date
service timestamps debug date
no service password-encryption
!
config-interface FastEthernet0/0
config-ip address 192.168.20.1 255.255.255.0
no config-ip directed-broadcast
!
config-interface Serial1/0
config-ip address 192.168.10.1 255.255.255.252
no config-ip directed-broadcast
config-encap x25
config-x25 address 1111
config-x25 map 192.168.10.2 svc 2222 broadcast
!
config-interface Async0/0
no config-ip address
no config-ip directed-broadcast
!
config-router rip
config-network 192.168.20.0 255.255.255.0
config-network 192.168.10.0 255.255.255.252
config-neighbor 192.168.10.2
!
x25switch destination default Serial1/0
!
Router#
```

Конфигурация DI-2630:

```
Welcome to DI Multi-Protocol 2630 Series Router
Router>enter
Router#display run
Building configuration...
Current configuration:
!version 1.3.1D
service timestamps log date
service timestamps debug date
no service password-encryption
!
config-interface FastEthernet0/0
config-ip address 192.168.1.1 255.255.255.0
no config-ip directed-broadcast
!
config-interface Serial3/0
config-ip address 192.168.10.2 255.255.255.252
no config-ip directed-broadcast
config-encap x25
config-x25 address 2222
config-x25 interface dce
config-x25 map 192.168.10.1 svc 1111 broadcast
set-phy-layer speed 64000
!
config-interface Async0/0
no config-ip address
no config-ip directed-broadcast
!
config-router rip
config-network 192.168.20.0 255.255.255.0
config-network 192.168.10.0 255.255.255.252
config-neighbor 192.168.10.1
!
x25switch destination default Serial3/0
!
Router#
```

DI-1750 Interface Information

```

Router#display int s1/0
Serial1/0 is up, line protocol is up
Mode=Sync DTE
  DTR=UP,DSR=UP,RTS=UP,CTS=UP,DCD=UP
  Interface address is 192.168.10.1/30
  MTU 1500 bytes, BW 64 kbit, DLY 2000 usec
  Encapsulation X25, loopback not set
  LAPB DTE, module 8, k 7, N1 1500, N2 16, T1 3
    state EST, VS 7, VR 4, Remote VR 7
    IFRAMES 9276/9287, RRs 9133/9210, RNRs 0/0, REJs
0/0
  FRMRs 0/0, SABMs 1/1, SABMES 0/0
  UAs 0/1, DMs 0/0, DISCs 0/0
  X25 DCE, address 1111, modulo 8, I/O window size 2
2, packet size
128 128
  Virtual Circuits: One-way 0, Two-way 16, PVC 0,
SVC 16
  Timers: T20 180s, T21 200s, T22 180s, T23 180s, idle
VC timeout
100s
  RESTARTs 1/1, RESTART CONFIRMs 0/0, DIAGs 0/0
  CALLS 0/1, CALL CONFIRMs 1/0, CLEARS 0/0,
CLEAR CONFIRMs 0/0
  DATAAs 6123/6135, RRs 3151/3150, RNRs 0/0
  RESETs 0/0, RESET CONFIRMs 0/0, INTERRUPTS
0/0, INTERRUPT CONFIRMs 0/0
  60 second input rate 1704 bits/sec, 8 packets/sec!
  60 second output rate 1667 bits/sec, 8 packets/sec!
    18410 packets input, 472462 bytes, 6 unused_rx, 0
no buffer
  0 input errors, 0 CRC, 0 frame, 0 overrun, 0
ignored, 0 abort
  18499 packets output, 471408 bytes, 8 unused_tx, 0
underruns
  error:
    0 clock, 0 grace
PowerQUICC SCC specific errors:
  0 recv allocb mblk fail      0 recv no buffer
  0 transmitter queue full    0 transmitter
hwqueue_full
!
Router#display x25 vc
          X.25/IP state
  Serial1/0      UP
=====
  No. Port      VC   I/O     State    X.121 Address
IP Address      Flag
=====
  1  Serial1/0   16   out     work    2222
  192.168.10.2

```


DI-2630 Interface Information

```

Router#display int s3/0
Serial3/0 is up, line protocol is up
Mode=Sync DCE Speed=64000
  DTR=UP,DSR=UP,RTS=UP,CTS=UP,DCD=UP
  Interface address is 192.168.10.2/2
  MTU 1500 bytes, BW 64 kbit, DLY 2000 usec
  Encapsulation X25, loopback not set
  LAPB DCE, module 8, k 7, N1 1500, N2 16, T1 3
    state EST, VS 4, VR 6, Remote VR 4
    IFRAMES 10214/10196, RRs 10129/10054, RNRs 0/0,
REJs 0/0
  FRMRs 0/0, SABMs 0/1, SABMES 0/0
  UAs 1/0, DMs 0/0, DISCs 0/0
  X25 DCE, address 2222, modulo 8, I/O window size 2
2, packet size
128 128
  Virtual Circuits: One-way 0, Two-way 16, PVC 0,
SVC 16
  Timers: T10 60s, T11 180s, T12 60s, T13 60s, idle VC
timeout
100s
  RESTARTs 1/1, RESTART CONFIRMs 0/0, DIAGs 0/0
  CALLS 1/0, CALL CONFIRMs 0/1, CLEARS 0/0,
CLEAR CONFIRMs 0/0
  DATAAs 6740/6710, RRs 3472/3485, RNRs 0/0
  RESETs 0/0, RESET CONFIRMs 0/0, INTERRUPTS
0/0, INTERRUPT CONFIRMs 0/0
  60 second input rate 1800 bits/sec, 9 packets/sec!
  60 second output rate 1848 bits/sec, 9 packets/sec!
    20345 packets input, 516875 bytes, 3 unused_rx, 0
no buffer
  0 input errors, 0 CRC, 0 frame, 0 overrun, 0
ignored, 0 abort
  20251 packets output, 517982 bytes, 8 unused_tx, 0
underruns
  error:
    0 clock, 0 grace
PowerQUICC SCC specific errors:
  0 recv allocb mblk fail      0 recv no buffer
  0 transmitter queue full    0 transmitter
hwqueue_full
!
Router#display x25 vc
          X.25/IP state
  Serial3/0      UP
=====
  No. Port      VC   I/O     State    X.121 Address
IP Address      Flag
=====
  1  Serial3/0   16   in      work    1111
  192.168.10.1

```

2.13 X.25 на синхронном интерфейсе, маршрутизация статическая:

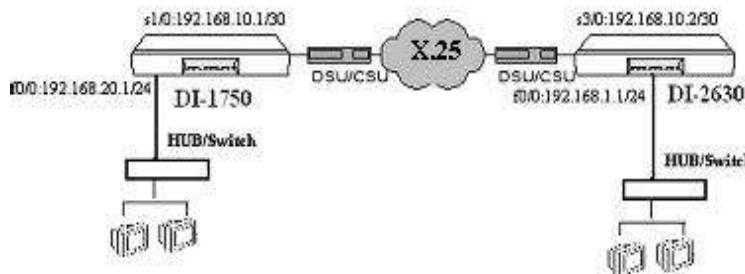

Конфигурация DI-1750:

```
Welcome to DI-Mutil-Protocol 1750 Series Router
Router>enter
Router#display run
Building configuration...
Current configuration:
!
!version 1.3.1D
service timestamps log date
service timestamps debug date
no service password-encryption
!
config-interface FastEthernet0/0
config-ip address 192.168.20.1 255.255.255.0
no config-ip directed-broadcast
!
config-interface Serial1/0
config-ip address 192.168.10.1 255.255.255.252
no config-ip directed-broadcast
config-encap x25
config-x25 address 1111
config-x25 map 192.168.10.2 svc 2222 broadcast
!
config-interface Async0/0
no config-ip address
no config-ip directed-broadcast
!
config-ip route 192.168.1.0 255.255.255.0 192.168.10.2
!
x25switch destination default Serial1/0
!
Router#
```

Конфигурация DI-2630:

```
Welcome to DI Multi-Protocol 2630 Series Router
Router>enter
Router#display run
Building configuration...
Current configuration:
!
!version 1.3.1D
service timestamps log date
service timestamps debug date
no service password-encryption
!
config-interface FastEthernet0/0
config-ip address 192.168.1.1 255.255.255.0
no config-ip directed-broadcast
!
config-interface Serial3/0
config-ip address 192.168.10.2 255.255.255.252
no config-ip directed-broadcast
config-encap x25
config-x25 address 2222
config-x25 interface dce
config-x25 map 192.168.10.1 svc 1111 broadcast
set-phy-layer speed 64000
!
config-interface Async0/0
no config-ip address
no config-ip directed-broadcast
!
config-ip route 192.168.2.0 255.255.255.0
192.168.10.1
!
x25switch destination default Serial3/0
!
Router#
```

DI-1750 Interface Information

```

Router#display int s1/0
Serial1/0 is up, line protocol is up
Mode=Sync DTE
  DTR=UP,DSR=UP,RTS=UP,CTS=UP,DCD=UP
  Interface address is 192.168.10.1/30
  MTU 1500 bytes, BW 64 kbit, DLY 2000 usec
  Encapsulation X25, loopback not set
  LAPB DTE, module 8, k 7, N1 1500, N2 16, T1 3
    state EST, VS 7, VR 4, Remote VR 7
    IFRAMES 9276/9287, RRs 9133/9210, RNRs 0/0, REJs
0/0
  FRMRs 0/0, SABMs 1/1, SABMES 0/0
  UAs 0/1, DMs 0/0, DISCs 0/0
  X25 DTE, address 1111, modulo 8, I/O window size 2
2, packet size
128 128
  Virtual Circuits: One-way 0, Two-way 16, PVC 0,
SVC 16
  Timers: T20 180s, T21 200s, T22 180s, T23 180s, idle
  VC timeout
100s
  RESTARTs 1/1, RESTART CONFIRMs 0/0, DIAGs 0/0
  CALLS 0/1, CALL CONFIRMs 1/0, CLEARS 0/0,
CLEAR CONFIRMs 0/0
  DATAAs 6123/6135, RRs 3151/3150, RNRs 0/0
  RESETs 0/0, RESET CONFIRMs 0/0, INTERRUPTS
0/0, INTERRUPT CONFIRMs 0/0
  60 second input rate 1704 bits/sec, 8 packets/sec!
  60 second output rate 1667 bits/sec, 8 packets/sec!
    18410 packets input, 472462 bytes, 6 unused_rx, 0
no buffer
  0 input errors, 0 CRC, 0 frame, 0 overrun, 0
ignored, 0 abort
  18499 packets output, 471408 bytes, 8 unused_tx, 0
underruns
  error:
    0 clock, 0 grace
PowerQUICC SCC specific errors:
  0 recv allocb mblk fail      0 recv no buffer
  0 transmitter queue full    0 transmitter
hwqueue_full
!
Router#display x25 vc
          X.25/IP state
  Serial1/0      UP
=====
  No. Port      VC   I/O     State    X.121 Address
  IP Address    Flag
=====
  1   Serial1/0  16   out     work    2222
  192.168.10.2

```


DI-2630 Interface Information

```

Router#display int s3/0
Serial3/0 is up, line protocol is up
Mode=Sync DCE Speed=64000
  DTR=UP,DSR=UP,RTS=UP,CTS=UP,DCD=UP
  Interface address is 192.168.10.2/2
  MTU 1500 bytes, BW 64 kbit, DLY 2000 usec
  Encapsulation X25, loopback not set
  LAPB DCE, module 8, k 7, N1 1500, N2 16, T1 3
    state EST, VS 4, VR 6, Remote VR 4
    IFRAMES 10214/10196, RRs 10129/10054, RNRs 0/0,
REJs 0/0
  FRMRs 0/0, SABMs 0/1, SABMES 0/0
  UAs 1/0, DMs 0/0, DISCs 0/0
  X25 DCE, address 2222, modulo 8, I/O window size 2
2, packet size
128 128
  Virtual Circuits: One-way 0, Two-way 16, PVC 0,
SVC 16
  Timers: T10 60s, T11 180s, T12 60s, T13 60s, idle VC
timeout
100s
  RESTARTs 1/1, RESTART CONFIRMs 0/0, DIAGs 0/0
  CALLS 1/0, CALL CONFIRMs 0/1, CLEARS 0/0,
CLEAR CONFIRMs 0/0
  DATAAs 6740/6710, RRs 3472/3485, RNRs 0/0
  RESETs 0/0, RESET CONFIRMs 0/0, INTERRUPTS
0/0, INTERRUPT CONFIRMs 0/0
  60 second input rate 1800 bits/sec, 9 packets/sec!
  60 second output rate 1848 bits/sec, 9 packets/sec!
    20345 packets input, 516875 bytes, 3 unused_rx, 0
no buffer
  0 input errors, 0 CRC, 0 frame, 0 overrun, 0
ignored, 0 abort
  20251 packets output, 517982 bytes, 8 unused_tx, 0
underruns
  error:
    0 clock, 0 grace
PowerQUICC SCC specific errors:
  0 recv allocb mblk fail      0 recv no buffer
  0 transmitter queue full    0 transmitter
hwqueue_full
!
Router#display x25 vc
          X.25/IP state
  Serial3/0      UP
=====
  No. Port      VC   I/O     State    X.121 Address
  IP Address    Flag
=====
  1   Serial3/0  16   in      work    1111
  192.168.10.1

```

2.14 HDLC на синхронном интерфейсе, маршрутизация по RIP с модулем 1DTU:

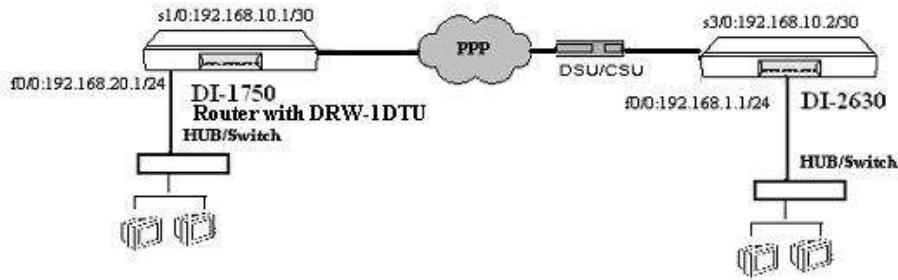


Конфигурация DI-1750:

```
Welcome to DI-Mutil-Protocol 1750 Series Router
Router>ent
Router#disp run
Building configuration...
Current configuration:
!
!version 1.3.1D
service timestamps log date
service timestamps debug date
no service password-encryption
!
config-interface FastEthernet0/0
config-ip address 192.168.20.1 255.255.255.0
no config-ip directed-broadcast
!
config-interface Serial1/0
no config-ip address
no config-ip directed-broadcast
!
config-interface Async0/0
no config-ip address
no config-ip directed-broadcast
!
config-interface BM2/0
config-ip address 192.168.10.1 255.255.255.252
no config-ip directed-broadcast
set-phy-layer speed 128000
linemode lt
!
config-router rip
config-network 192.168.10.0 255.255.255.252
config-network 192.168.20.0 255.255.255.0
config-neighbor 192.168.10.1
Router#
```

Конфигурация DI-2630:

```
Welcome to DI Multi-Protocol 2630 Series Router
Router>ent
Router#disp run
Building configuration...
Current configuration:
!
!version 1.3.1D
service timestamps log date
service timestamps debug date
no service password-encryption
!
config-interface FastEthernet0/0
config-ip address 192.168.1.1 255.255.255.0
no config-ip directed-broadcast
!
config-interface Ethernet3/1
no config-ip address
no config-ip directed-broadcast
duplex half
!
config-interface Serial3/0
config-ip address 192.168.10.2 255.255.255.252
no config-ip directed-broadcast
!
config-interface Async0/0
no config-ip address
no config-ip directed-broadcast
!
config-router rip
config-network 192.168.10.0 255.255.255.252
config-network 192.168.1.0 255.255.255.0
config-neighbor 192.168.10.2
!
Router#
```

2.15 PPP на синхронном интерфейсе, маршрутизация статическая, с модулем 1DTU:

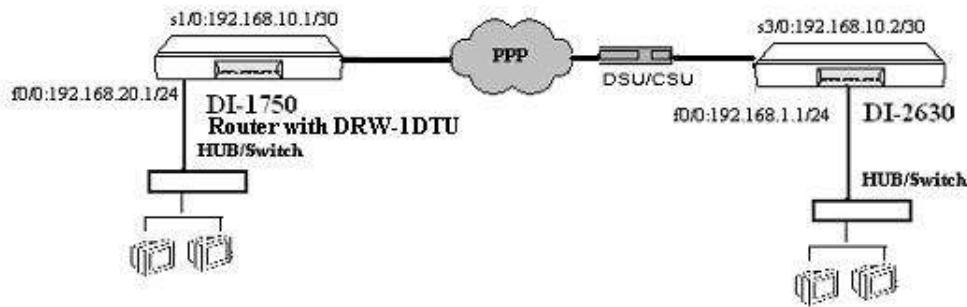


Конфигурация DI-1750:

```
Welcome to DI-Multi-Protocol 1750 Series Router
Router>ent
Router#disp run
Building configuration...
Current configuration:
!
!version 1.3.1D
service timestamps log date
service timestamps debug date
no service password-encryption
!
config-interface FastEthernet0/0
 config-ip address 192.168.20.1 255.255.255.0
 no config-ip directed-broadcast
!
config-interface Serial1/0
 no config-ip address
 no config-ip directed-broadcast
!
config-interface Async0/0
 no config-ip address
 no config-ip directed-broadcast
!
config-interface BM2/0
 config-ip address 192.168.10.1 255.255.255.252
 no config-ip directed-broadcast
 set-phy-layer speed 128000
 linemode lt
!
config-ip route 192.168.1.0 255.255.255.0 192.168.10.2 !
!
Router#
```

Конфигурация DI-2630:

```
Welcome to DI Multi-Protocol 2630 Series Router
Router>ent
Router#disp run
Building configuration...
Current configuration:
!
!version 1.3.1D
service timestamps log date
service timestamps debug date
no service password-encryption
!
config-interface FastEthernet0/0
 config-ip address 192.168.1.1 255.255.255.0
 no config-ip directed-broadcast
!
config-interface Ethernet3/1
 no config-ip address
 no config-ip directed-broadcast
 duplex half
!
config-interface Serial3/0
 config-ip address 192.168.10.2 255.255.255.252
 no config-ip directed-broadcast
!
config-interface Async0/0
 no config-ip address
 no config-ip directed-broadcast
!
config-ip route 192.168..0 255.255.255.0 192.168.10.1
Router#
```

2.16 HDLC на синхронном интерфейсе, маршрутизация статическая, с модулем Channelized E1 в режиме Framed:

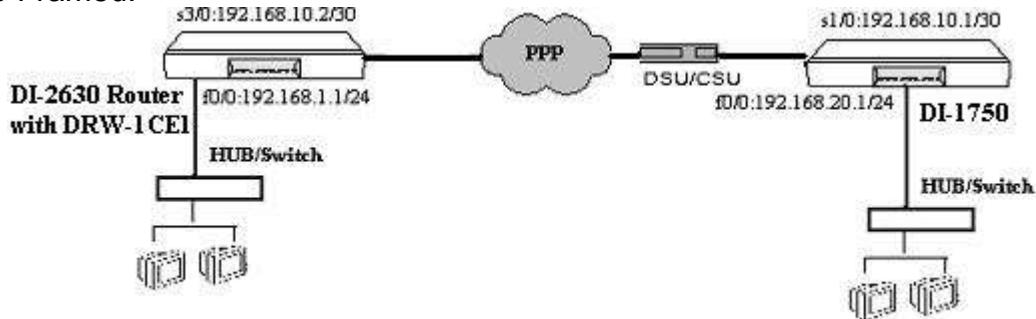


Конфигурация DI-2630:

```
Welcome to DI Multi-Protocol 2630 Series Router
Router>ent
Router#disp run
Building configuration...
Current configuration:
!version 1.3.1D
service timestamps log date
service timestamps debug date
no service password-encryption
!
config-controller E1 2/0
  config-framing NO-CRC4
  set-linecode hdb3
  channel 0
  timeslots 1-15
!
config-isdn switch-type basic-net3
!
config-interface FastEthernet0/0
  config-ip address 192.168.1.1 255.255.255.252
  no config-ip directed-broadcast
!
config-interface Serial2/0:0
  config-ip address 192.168.10.2 255.255.255.0
  no config-ip directed-broadcast
  config-bw 960
!
config-interface Async0/0
  no config-ip address
  no config-ip directed-broadcast
!
config-ip route 192.168.2.0 255.255.255.0 192.168.10.1
!
Router#
```

Конфигурация DI-1750:

```
Welcome to DI-Multi-Protocol 1750 Series Router
Router>enter
Router#display run
Building configuration...
Current configuration:
!
!version 1.3.1D
service timestamps log date
service timestamps debug date
no service password-encryption
!
config-interface FastEthernet0/0
  config-ip address 192.168.20.1 255.255.255.0
  no config-ip directed-broadcast
!
config-interface Serial1/0
  config-ip address 192.168.10.1 255.255.255.252
  no config-ip directed-broadcast
  config-bw 960
!
config-interface Async0/0
  no config-ip address
  no config-ip directed-broadcast
!
config-ip route 192.168.1.0 255.255.255.0 192.168.10.2
!
Router#
```

2.17 HDLC на синхронном интерфейсе, маршрутизация статическая, с модулем Channelized E1 в режиме UnFramed:

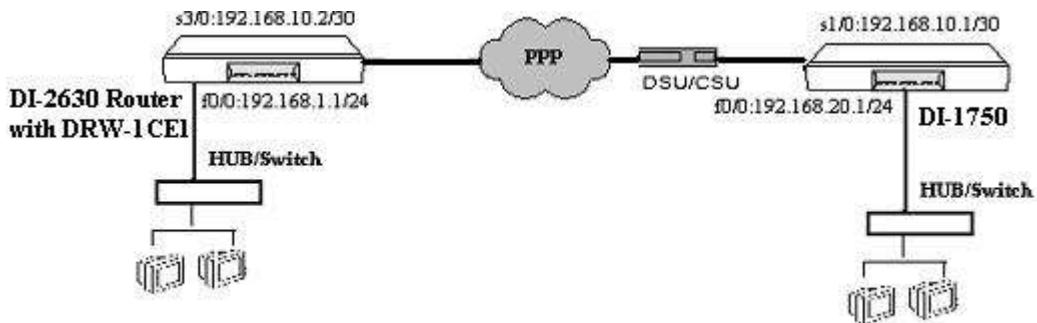


Конфигурация DI-2630:

```
Welcome to DI Multi-Protocol 2630 Series Router
Router>enter
Router#disp run
Building configuration...
Current configuration:
!
!version 1.3.1D
service timestamps log date
service timestamps debug date
no service password-encryption
!
config-controller E1 2/0
    unframed
    set-linecode hdb3
!
config-isdn switch-type basic-net3
!
config-interface FastEthernet0/0
    config-ip address 192.168.1.1 255.255.255.0
    no config-ip directed-broadcast
!
config-interface Serial2/0:0
    config-ip address 192.168.10.2 255.255.255.252
    no config-ip directed-broadcast
    config-bw 2048
!
config-interface Async0/0
    no config-ip address
    no config-ip directed-broadcast
!
config-ip route 192.168.20.0 255.255.255.0 192.168.10.1
192.168.10.1
Router#
```

Конфигурация DI-1750:

```
Welcome to DI-Mutil-Protocol 1750 Series Router
Router>enter
Router#disp run
Building configuration...
Current configuration:
!
!version 1.3.1D
service timestamps log date
service timestamps debug date
no service password-encryption
!
config-interface FastEthernet0/0
    config-ip address 192.168.20.1 255.255.255.0
    no config-ip directed-broadcast
!
config-interface Serial1/0
    config-ip address 192.168.10.1 255.255.255.252
    no config-ip directed-broadcast
    config-bw 2048
!
config-interface Async0/0
    no config-ip address
    no config-ip directed-broadcast
!
config-ip route 192.168.1.0 255.255.255.0 192.168.10.2
!
Router#
```

2.18 Доступ к интернет по ISDN, скорость 64 Кбит через модуль DRW-1BST, NAT:

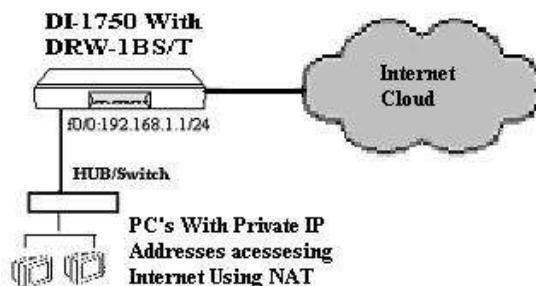

Конфигурация DI-1750:


```

Welcome to DI Multi-Protocol 1750 Series Router
Router>ent
Router#disp run
Building configuration...
Current configuration:
!
!version 1.3.1D
service timestamps log date
service timestamps debug date
no service password-encryption
!
config-isdn switch-type basic-net3
!
config-interface FastEthernet0/0
  config-ip address 192.168.1.1 255.255.255.0
  no config-ip directed-broadcast
  config-ip nat inside
!
config-interface Serial1/0
  no config-ip address
  no config-ip directed-broadcast
!
config-interface Async0/0
  no config-ip address
  no config-ip directed-broadcast
!
config-interface BRI2/0
  config-ip address negotiated
  no config-ip directed-broadcast
  config-ppp pap sent-username dlinkind xxxxx--à ( ISP
password)
  config-bw 128
  set-dialer string 24339696
  set-dialer load-threshold 5 4
  config-ip nat outside
!
config-ip route default BRI2/0
!
config-ip access-list standard 1
  config-permit any
!
config-ip nat inside source list 1 interface BRI2/0
!
Router#
  
```

```

Router#disp isdn stat
Global ISDN Switchtype = basic-net3
ISDN b2/0 interface :
  Layer 1 Status:
    ACTIVE
  Layer 2 Status:
    TEI = 78, State =
    MULTIPLE_FRAME_ESTABLISHED
  Layer 3 Status:
    1 Active Layer 3 Call(s)
    Activated dsl 0 CCBs = 1
    CCB:callid=3, sapi=0, ces=1, B-chan=1
    Total Allocated ISDN CCBs = 1
Router#disp dialer int b2/0
BRI2/0 statistics
Idle timer (120 secs), Fast idle timer (20
secs) Wait for carrier (30 secs), Re-enable
(5 secs) Number of active calls = 1
Dial String      Successes      Failures      Last called
Last status
24339696          3            0            never
Load threshold for dialing additional calls is 5
Load threshold for disconnecting redundant calls is 4
BRI2/0:1 - dialer type = ISDN Current
call connected 00:00:01:53
Connected to 24339696
Time until disconnect 119 second
Dialer state is Connected BRI2/0:2 -
dialer type = ISDN
  
```

2.19 Доступ к интернет по ISDN, скорость 128 Кбит через модуль DRW-1BST, NAT:

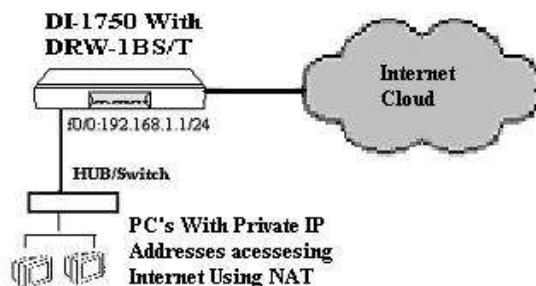

Конфигурация DI-1750:


```

Router>enter
Router#disp run
Building configuration...
Current configuration:
!version 1.3.1D
service timestamps log date
service timestamps debug date
no service password-ncryption
!
config-isdn switch-type basic-net3
!
config-interface FastEthernet0/0
  config-ip address 192.168.1.1 255.255.255.0
  no config-ip directed-broadcast
  config-ip nat inside
!
config-interface Serial1/0
  no config-ip address
  no config-ip directed-broadcast
!
config-interface Async0/0
  no config-ip address
  no config-ip directed-broadcast
!
config-interface BRI2/0
  config-ip address negotiated
  no config-ip directed-broadcast
  config-ppp multilink
  config-ppp pap sent-username dlinkind xxxxx---( ISP Password)
  config-bw 128
  set-dialer string 24339696
  set-dialer load-threshold 5 4
  config-ip nat outside
!
config-ip route default BRI2/0
config-ip access-list standard 1
  config-permit any
config-ip nat inside source list 1 interface BRI2/0
Router#

```

```
Router#disp dialer int b2/0
BRI2/0 statistics
Idle timer (120 secs), Fast idle timer (20 secs) Wait for carrier (30 secs), Re-enable (5 secs)
Number of active calls = 2
Dial String      Successes    Failures    Last called    Last status
24339696          2            83           never
Load threshold for dialing additional calls is 5
Load threshold for disconnecting redundant calls is 4
BRI2/0:1 - dialer type = ISDN Current call connected 00:00:04:03
Connected to 24339696
Dialer state is Connected
BRI2/0:2 - dialer type = ISDN Current call connected 00:00:03:33
Connected to 24339696
Dialer state is Connected
Router#disp isdn stat
Global ISDN Switchtype = basic-net3
ISDN b2/0 interface :
    Layer 1 Status:
        ACTIVE
    Layer 2 Status:
        TEI = 74, State = MULTIPLE_FRAME_ESTABLISHED
        TEI = 75, State = MULTIPLE_FRAME_ESTABLISHED
    Layer 3 Status:
        No Active Layer 3 Call(s)
        Activated dsl 0 CCBs = 0
Total Allocated ISDN CCBs = 0
```

2.20 Доступ к интернет по ISDN через внешний ТА на интерфейсе Serial, NAT:

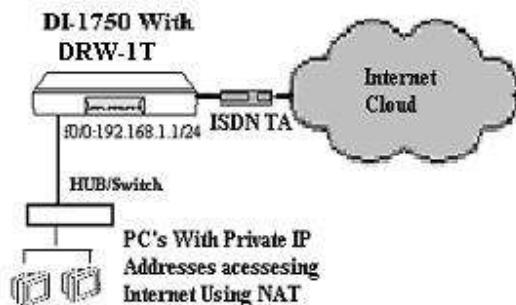


```

Router>enter
Router#display run
Building configuration...
Current configuration:
!
!version 1.3.1D
service timestamps log date
service timestamps debug date
no service password-encryption
!
config-interface FastEthernet0/0
  config-ip address 192.168.1.1 255.255.255.0 no config-ip directed-broadcast
  config-ip nat inside
!
config-interface s1/0
  config-ip address negotiated
  no config-ip directed-broadcast
  config-ppp pap sent-username dlinkind xxxxx--à(IP Password)
  set-phy-layer speed 115200
  set-line dial
  set-dialer string 24339696
  config-async mode dedicated
  config-ip nat outside
!
config-interface Async0/0
  no config-ip address
  no config-ip directed-broadcast
  config-ip route default Serial1/0
!
config-ip access-list standard 1
  config-permit any
!
config-ip nat inside source list 1 interface Serial1/0
Router#

```

2.21 Доступ к интернет по ISDN через внешний TA на интерфейсе Aux, NAT:

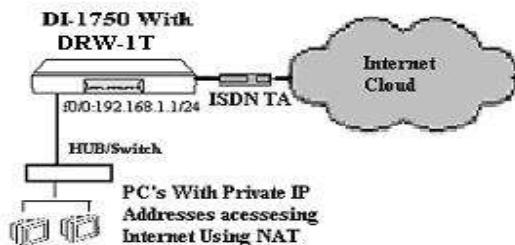


```

Router>enter
Router#display run
Building configuration...
Current configuration:
!
!version 1.3.1D
service timestamps log date
service timestamps debug date
no service password-encryption
!
config-interface FastEthernet0/0
config-ip address 192.168.1.1 255.255.255.0
no config-ip directed-broadcast
config-ip nat inside
!
config-interface Serial1/0
no config-ip address
no config-ip directed-broadcast
!
config-interface Async0/0
config-ip address negotiated
no config-ip directed-broadcast
config-ppp pap sent-username dlinkind  xxxxxx --à (ISP Password)
set-phy-layer speed 115200
set-line dial
set-dialer string 24339696
config-async mode dedicated
config-ip nat outside
!
config-ip route default Async0/0
!
config-ip access-list standard 1
config-permit any
!
config-ip nat inside source list 1 interface Serial1/0
Router#

```

2.22 Доступ к интернет через внешний Dialup модем на интерфейсе Serial, NAT:

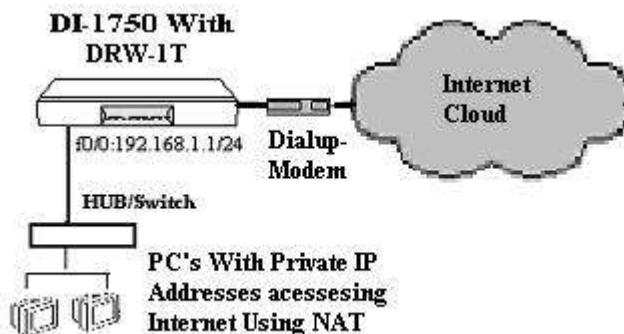


```

Router>enter
Router#display run
Building configuration...
Current configuration:
!version 1.3.1C
service timestamps log date
service timestamps debug date
no service password-encryption
!
config-interface FastEthernet0/0
config-ip address 192.168.1.1 255.255.255.0
no config-ip directed-broadcast
config-ip nat inside
!
config-interface Serial1/0
set-phy-layer mode async
config-ip address negotiated
no config-ip directed-broadcast
config-ppp pap sent-username dlink inteld850
set-line dial
set-dialer string 24404444
config-ip nat outside
!
config-interface Async0/0
no config-ip address
no config-ip directed-broadcast
!
config-ip route default Serial1/0
!
config-ip access-list standard 1
config-permit any
!
config-ip nat inside source list 1 interface Serial1/0
Router#

```

2.23 PPP по ISDN, маршрутизация статическая, модуль DRW-1BST:

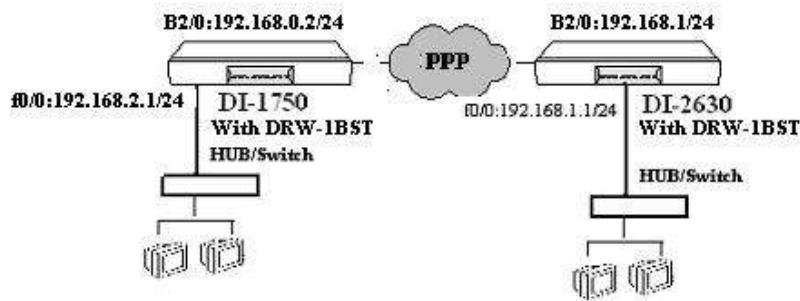

Конфигурация DI-2630:


```
Welcome to DI Multi-Protocol 2630 Series Router
Router>ent
Router#disp run
Building configuration...
Current configuration:
!
!version 1.3.1D
service timestamps log date
service timestamps debug date
no service password-encryption
!
config-isdn switch-type basic-net3
username dlink password 0 dlink
!
config-interface FastEthernet0/0
config-ip address 192.168.1.1 255.255.255.0
no config-ip directed-broadcast
!
config-interface Async0/0
no config-ip address
no config-ip directed-broadcast
!
config-interface BRI1/0
config-ip address 192.168.0.1 255.255.255.0
no config-ip directed-broadcast
config-ppp authentication pap
config-ppp pap sent-username dlink dlink
set-dialer string 26529060
!
config-ip route 192.168.2.0 255.255.255.0 192.168.0.2 config-ip route 192.168.1.0 255.255.255.0 192.168.0.1
dialer-list 1 protocol ip permit
Router#
```

For 128Kbps Connection --> Go to ISDN Interface configuration :- config-interface BRI2/0 and config-ppp multilink.

Конфигурация DI-1750:

```
Welcome to DI-Multi-Protocol 1750 Series Router
Router>ent
Router#disp run
Building configuration...
Current configuration:
!
!version 1.3.1D
service timestamps log date
service timestamps debug date
no service password-encryption
!
config-isdn switch-type basic-net3
username dlink password 0 dlink
!
config-interface FastEthernet0/0
config-ip address 192.168.2.1 255.255.255.0
no config-ip directed-broadcast
!
config-interface Async0/0
no config-ip address
no config-ip directed-broadcast
!
config-interface BRI2/0
config-ip address 192.168.0.2 255.255.255.0
no config-ip directed-broadcast
config-ppp authentication pap
config-ppp pap sent-username dlink dlink
set-dialer string 26529930
!
config-ip route 192.168.1.0 255.255.255.0 192.168.0.1 config-ip route 192.168.0.0 255.255.255.0 192.168.0.1
dialer-list 1 protocol ip permit
Router#
```

2.24 Удаленный доступ к сети по DIALUP, модуль DRW-8A/S

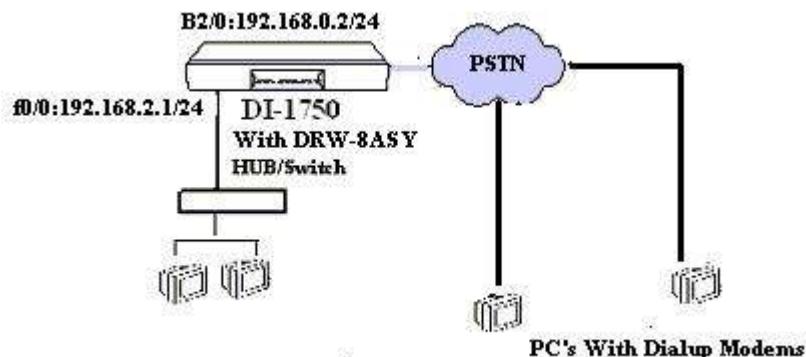


```

Router>enter
Router#display run
Building configuration...
Current configuration:
!
!version 1.3.1D
service timestamps log date
service timestamps debug date
no service password-encryption
!
config-ip local pool dlink 192.168.2.193 2
!
username dlink password 0 dlink
!
config-interface FastEthernet0/0
config-ip address 192.168.2.196 255.255.255.0
no config-ip directed-broadcast
!
config-interface Serial4/0
set-phy-layer mode async
config-ip unnumbered FastEthernet0/0
no config-ip directed-broadcast
config-ppp authentication chap
config-peer default ip address pool dlink
set-phy-layer speed 115200
set-line dial
!
config-interface Serial4/1
set-phy-layer mode async
config-ip unnumbered FastEthernet0/0
no config-ip directed-broadcast
config-ppp authentication chap
config-peer default ip address pool dlink
set-phy-layer speed 115200
set-line dial
!
config-interface Serial4/2
no config-ip address
no config-ip directed-broadcast

```

```
!
config-interface Serial4/3
no config-ip address
no config-ip directed-broadcast
!
config-interface Serial4/4
no config-ip address
no config-ip directed-broadcast
!
config-interface Serial4/5
no config-ip address
no config-ip directed-broadcast
!
config-interface Serial4/6
no config-ip address
no config-ip directed-broadcast
!
config-interface Serial4/7
no config-ip address
no config-ip directed-broadcast
!
config-interface Async0/0
no config-ip address
no config-ip directed-broadcast
!
Router#
```

2.25 Backup выделенной линии с использованием Dialup модема:

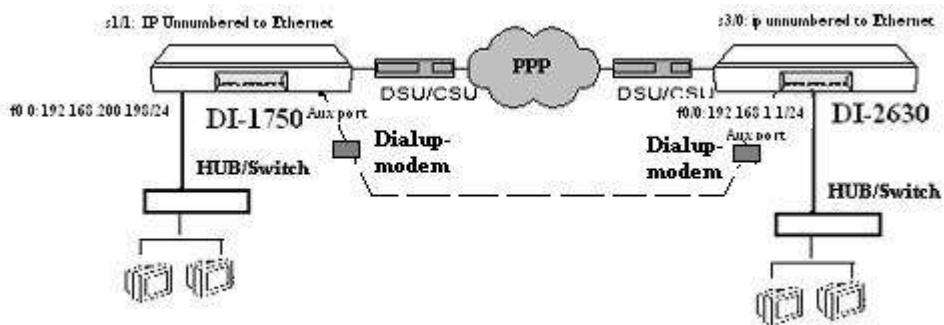


Конфигурация DI-1750:

```
Welcome to DI Multi-Protocol 1750 Series Router
Router>enter
Router#sh run
Building configuration...
Current configuration:
!version 1.3.00
service timestamps log date
service timestamps debug date
no service password-encryption
!
username dlink password 0 dlink
config-interface FastEthernet0/0
config-ip address 192.168.200.198 255.255.255.0
no config-ip directed-broadcast
!
config-interface Serial1/0
config-ip unnumbered FastEthernet0/0
no config-ip directed-broadcast
config-encap ppp
!
config-interface Async0/0
config-ip unnumbered FastEthernet0/0
no config-ip directed-broadcast
config-ppp authentication pap
set-phy-layer speed 115200
set-line dial
!
config-ip route 192.168.1.0 255.255.255.0 Serial1/1
config-ip route 192.168.1.0 255.255.255.0 Async0/0 10
Router#
```

Конфигурация DI-2630:

```
Router#display run
Building configuration...
Current configuration:
!version 1.3.1C
service timestamps log date
service timestamps debug date
no service password-encryption
!
username dlink password 0 dlink
!
config-interface FastEthernet0/0
config-ip address 192.168.1.1 255.255.255.0
no config-ip directed-broadcast
!
config-interface Serial3/0
set-backup interface Async0/0
set-backup delay 10 10
config-ip unnumbered FastEthernet0/0
no config-ip directed-broadcast
config-encap ppp
!
config-interface Async0/0
config-ip unnumbered FastEthernet0/0
no config-ip directed-broadcast
config-ppp pap sent-username dlink dlink
set-line dial
set-dialer string 26526161
!
config-ip route 192.168.200.0 255.255.255.0 Serial3/0
config-ip route 192.168.200.0 255.255.255.0 Async0/0
10
!
dialer-list 1 protocol ip permit
Router#
```

2.26 VOIP : конфигурация FXS-FXS:

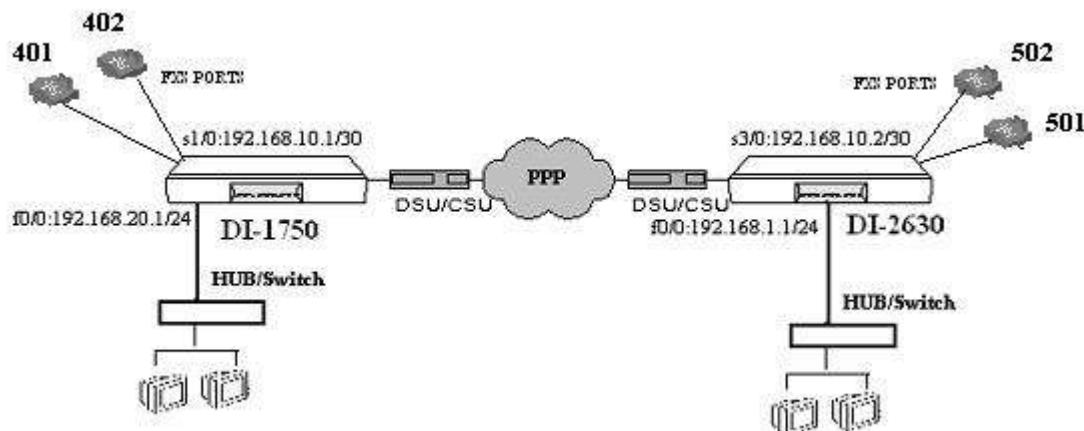


Конфигурация DI-1750:

```
Welcome to DI Multi-Protocol 1750 Series Router
Router>enter
Router#display run
Building configuration... Current configuration:
!version 1.3.1D
service timestamps log date
service timestamps debug date
no service password-encryption
!
config-interface FastEthernet0/0
 config-ip address 192.168.20.1 255.255.255.0
 no config-ip directed-broadcast
!
config-interface Serial1/0
 config-ip address 192.168.10.1 255.255.255.252
 no config-ip directed-broadcast
 config-encap ppp
!
config-interface Async0/0
 no config-ip address
 no config-ip directed-broadcast
!
config-ip route 192.168.1.0 255.255.255.0 192.168.10.2
!
match-dialpeer destination
!
set-dial-peer 1 pots
 config-destination-pattern 401
 config-port 2/0
!
set-dial-peer 2 pots
 config-destination-pattern 402
 config-port 2/1
!
set-dial-peer 3 voip
 config-destination-pattern 501
 set-session 192.168.1.1
 config-codec g729r8
!
set-dial-peer 4 voip
config-destination-pattern 502
 set-session 192.168.1.1
 config-codec g729r8
!
config-voice-port 2/0
!
config-voice-port 2/1
!
Router#
```

Конфигурация DI-2630:

```
Welcome to DI Multi-Protocol 2630 Series Router
Router>enter
Router#display run
Building configuration...
Current configuration:
!
!version 1.3.1C
service timestamps log date
service timestamps debug date
no service password-encryption
!
config-interface FastEthernet0/0
 config-ip address 192.168.1.1 255.255.255.0
 no config-ip directed-broadcast
!
config-interface Ethernet1/1
 no config-ip address
 no config-ip directed-broadcast
 duplex half
!
config-interface Serial1/0
 config-ip address 192.168.10.2 255.255.255.252
 no config-ip directed-broadcast
 config-encap ppp
!
config-interface Async0/0
 no config-ip address
 no config-ip directed-broadcast
!
config-ip route 192.168.20.0 255.255.255.0 192.168.10.1
!
!
match-dialpeer destination
!
set-dial-peer 1 pots
 config-destination-pattern 501
 config-port 3/0
!
set-dial-peer 2 pots
 config-destination-pattern 502
 config-port 3/1
!
set-dial-peer 3 voip
 config-destination-pattern 401
 set-session 192.168.20.1
 config-codec g729r8
!
set-dial-peer 4 voip
 config-destination-pattern 402
 set-session 192.168.20.1
 config-codec g729r8
!
config-voice-port 3/0
!
config-voice-port 3/1
!
Router#
```

2.27 VOIP: конфигурация FXS-FXO:

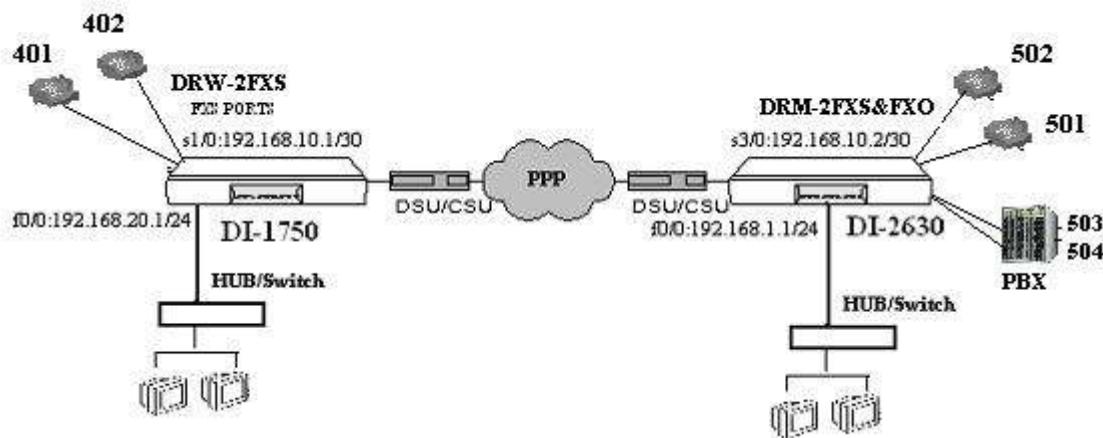


Конфигурация DI-1750:

```
Welcome to DI Multi-Protocol 1750 Series Router
Router>enter Router#display run Building configuration... Current configuration:
!version 1.3.1D
service timestamps log date service timestamps debug date no service password-
encryption
!
config-interface FastEthernet0/0
config-ip address 192.168.20.1 255.255.255.0
no config-ip directed-broadcast
!
config-interface Serial1/0
config-ip address 192.168.10.1 255.255.255.252
no config-ip directed-broadcast
config-encap ppp
!
config-interface Async0/0
no config-ip address
no config-ip directed-broadcast
!
config-ip route 192.168.1.0 255.255.255.0 192.168.10.2
!
match-dialpeer destination
!
set-dial-peer 1 pots
config-destination-pattern 401
config-port 2/0
!
set-dial-peer 2 pots
config-destination-pattern 402
config-port 2/1
!
set-dial-peer 3 voip
config-destination-pattern 501
set-session 192.168.1.1
config-codec g729r8
!
set-dial-peer 4 voip
config-destination-pattern 502
set-session 192.168.1.1
config-codec g729r8
!
set-dial-peer 5 voip
config-destination-pattern 503
set-session 192.168.1.1
config-codec g729r8
!
set-dial-peer 6 voip
config-destination-pattern 504
set-session 192.168.1.1
config-codec g729r8
!
config-voice-port 2/0
config-voice-port 2/1
Router#
```

Конфигурация DI-2630:

```
Welcome to DI Multi-Protocol 2630 Series Router
Router>enter
Router#display run
Building configuration...
Current configuration:
!
!version 1.3.1C
service timestamps log date
service timestamps debug date
no service password-encryption
!
config-interface FastEthernet0/0
 config-ip address 192.168.1.1 255.255.255.0
 no config-ip directed-broadcast
!
config-interface Ethernet1/1
 no config-ip address
 no config-ip directed-broadcast
 duplex half
!
config-interface Serial1/0
 config-ip address 192.168.10.2 255.255.255.252
 no config-ip directed-broadcast
```

2.28 PPP на синхронном интерфейсе, маршрутизация по OSPF :

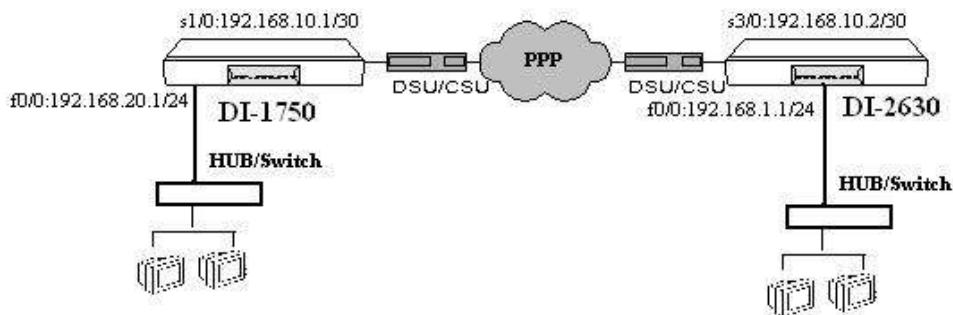

Конфигурация DI-1750:

```
Welcome to DI Multi-Protocol 1750 Series Router
Router>enter
Router#display run
Building configuration...
Current configuration:
!
!version 1.3.1D
service timestamps log date
service timestamps debug date
no service password-encryption
!
config-interface FastEthernet0/0
config-ip address 192.168.20.1 255.255.255.0
no config-ip directed-broadcast
!
config-interface Serial1/0
config-ip address 192.168.10.1 255.255.255.252
no config-ip directed-broadcast
config-encap ppp
!
config-interface Async0/0
no config-ip address
no config-ip directed-broadcast
!
config-router ospf 1
config-network 192.168.10.0 255.255.255.252 area 1
config-network 192.168.20.0 255.255.255.0 area 1
!
Router#
```

Конфигурация DI-2630:

```
Welcome to DI Multi-Protocol 2630 Series Router
Router>enter
Router#display run
Building configuration...
Current configuration:
!
!version 1.3.1D
service timestamps log date
service timestamps debug date
no service password-encryption
!
config-interface FastEthernet0/0
config-ip address 192.168.1.1 255.255.255.0
no config-ip directed-broadcast
!
config-interface Serial1/0
config-ip address 192.168.10.2 255.255.255.252
no config-ip directed-broadcast
config-ip mask-reply
config-encap ppp
!
config-interface Async0/0
no config-ip address
no config-ip directed-broadcast
!
config-router ospf 1
config-network 192.168.10.0 255.255.255.252 area 1
config-network 192.168.1.0 255.255.255.0 area 1
!
Router#
```