

# D-Link Quick Installation Guide

*This product can be set up using a current web browser.*



**DIR-100**  
Triple Play Router

## Before You Begin

Make sure you have all the necessary information and equipment on hand before beginning the installation. This device requires an existing broadband connection using a cable modem, ADSL modem or similar broadband Internet device.

## Check Your Package Contents



DIR-100 Triple Play



Installation CD-ROM (containing Manual)



Ethernet (CAT5 UTP) Cable



Power Adapter

 


Using a power supply with a different voltage rating will damage and void the warranty for this product.

# 1

## Internet Connection Setup Wizard

- A. Connect the power adapter to the receptor at the back panel of the DIR-100 and plug the other end of the power adapter to a wall outlet, power strip or other suitable power source. The Power LED on the front panel will light green to indicate the device is on.
- B. Insert one end of the Ethernet cable into a **NAT** port (port 3 or 4) on the back panel of the device and the other end of the cable to an Ethernet Adapter or available Ethernet port on your computer. The Ethernet Link LED for the port will light green indicating a connection.
- C. Insert another Ethernet cable into the **INTERNET** port on the back panel and the other end into the Ethernet port on a broadband modem such as a cable or ADSL modem. Normally the broadband device is configured as a simple bridge type connection.


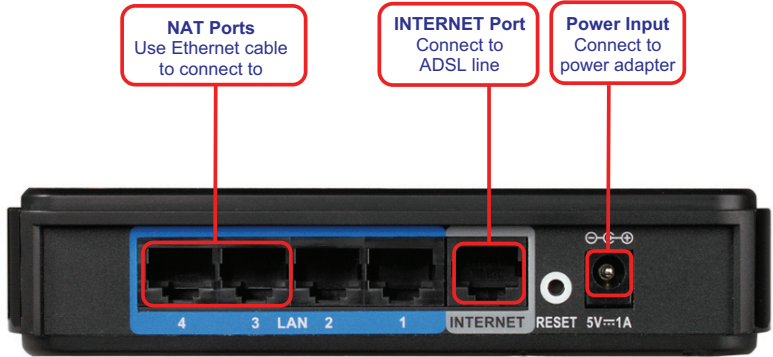


# 2

## Configure the Router


To use your Web browser to access the web pages used to set up the Router, your computer must be configured to **“Obtain an IP address automatically,”** that is, you must change the IP network settings of your computer so that it is a **DHCP Client**. If you are using **Windows XP** and do not know how to change your network settings, read the User Manual for instructions on changing IP settings for computers running Windows operating systems.

  Open your Web browser and type **“http://192.168.0.1”** into the URL address box. Then press the **Enter** or **Return** key.

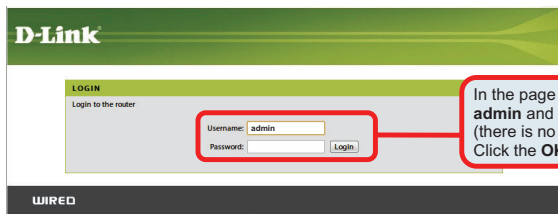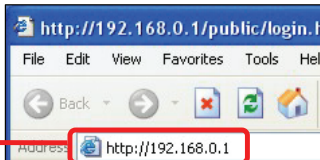

In the page that opens, enter the User Name **admin** and leave the Password field empty (there is no default password). Click the **OK** button.

 The first page to appear lists basic information about the router. Click the **Internet Connection Setup Wizard** directory link to go to the first page of the Setup Wizard.

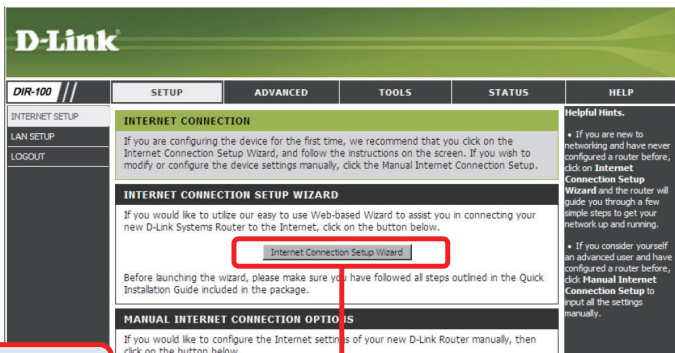

Click **Internet Connection Setup Wizard** to go to the Setup Wizard launch menu.

# 2

## Configure the Router (continued)

### Using the Setup Wizard

The first page of the set wizard appears. Enter information as required and click **Next** to go to the Internet connection configuration page.

**WELCOME TO THE D-LINK SETUP WIZARD**

This wizard will guide you through a step-by-step process to configure your new D-Link router and connect to the Internet.

- Step 1: Set your Password
- Step 2: Select your Time Zone
- Step 3: Configure your Internet Connection
- Step 4: Save Settings and Connect

Enter a **Host Name** and **Domain Name** for the Router, or accept the default names. Choose the **Time Zone** and configure and enable **Daylight Saving** dates where appropriate. Click the **Next** button to go the **WAN Settings** configuration menu.

**STEP 1: SET YOUR PASSWORD**

By default, your new D-Link Router does not have a password configured for administrator access to the Web-based configuration pages. To secure your new networking device, please set and verify a password below:

Password:

Verify Password:

**STEP 2: SELECT YOUR TIME ZONE**

Select the appropriate time zone for your location. This information is required to configure the time-based options for the router.

Time Zone:

NTP Server Used:

**STEP 3: CONFIGURE YOUR INTERNET CONNECTION**

Please select the internet connection type below:

**DHCP Connection (Dynamic IP Address)**  
Choose this if your Internet connection automatically provides you with an IP Address type of connection.

**Username / Password Connection (PPPoE)**  
Choose this option if your Internet connection requires a username and password to get online. Most DSL modems use this connection type of connection.

**Username / Password Connection (PPTP)**  
Choose this option if you use Dial-Up Networking connection type of connection.

**Username / Password Connection (L2TP)**  
Choose this option if you use Dial-Up Networking connection type of connection.

**Static IP Address Connection**  
Choose this option if your Internet Setup Provider provided you with IP Address information that has to be manually configured.

**Russia PPPoE (Dual Access)**  
Choose this option if your Internet connection requires a username and password to get online as well as static route to access Internet service provider's internal network. Certain ISPs in Russia use this type of connection.

**Russia PPTP (Dual Access)**  
Choose this option if your Internet connection requires a username and password to get online as well as static route to access Internet service provider's internal network. Certain ISPs in Russia use this type of connection.

Click on the connection type used for the broadband Internet

Configure your Internet connection using information provided by the ISP. You will need to know what Internet connection type is used (Dynamic IP Address, Static IP Address or PPPoE) and the information required for the type of connection used. You will also need to enter DNS settings. Follow the instructions provided by your ISP to configure the Internet connection. For more detailed information please see the User Manual.

## TECHNICAL SUPPORT

You can find software updates and user documentation on the D-Link website.

### Tech Support for customers in

#### Australia:

Tel: 1300-766-868  
24/7 Technical Support  
Web: <http://www.dlink.com.au>  
E-mail: [support@dlink.com.au](mailto:support@dlink.com.au)

#### India:

Tel: +91-22-27626600  
Toll Free 1800-22-8998  
Web: [www.dlink.co.in](http://www.dlink.co.in)  
E-Mail: [helpdesk@dlink.co.in](mailto:helpdesk@dlink.co.in)

#### Singapore, Thailand, Indonesia, Malaysia, Philippines, Vietnam:

Singapore - [www.dlink.com.sg](http://www.dlink.com.sg)  
Thailand - [www.dlink.co.th](http://www.dlink.co.th)  
Indonesia - [www.dlink.co.id](http://www.dlink.co.id)  
Malaysia - [www.dlink.com.my](http://www.dlink.com.my)  
Philippines - [www.dlink.com.ph](http://www.dlink.com.ph)  
Vietnam - [www.dlink.com.vn](http://www.dlink.com.vn)

#### Korea:

Tel : +82-2-2028-1810  
Monday to Friday 9:00am to 6:00pm  
Web : <http://d-link.co.kr>  
E-mail : [g2b@d-link.co.kr](mailto:g2b@d-link.co.kr)

#### New Zealand:

Tel: 0800-900-900  
24/7 Technical Support  
Web: <http://www.dlink.co.nz>  
E-mail: [support@dlink.co.nz](mailto:support@dlink.co.nz)

#### South Africa and Sub Sahara Region:

Tel: +27-12-665-2165  
08600 DLINK (for South Africa only)  
Monday to Friday 8:30am to 9:00pm South Africa Time  
Web: <http://www.d-link.co.za>  
E-mail: [support@d-link.co.za](mailto:support@d-link.co.za)

#### Saudi Arabia (KSA):

Tel: +966 01 217 0008  
Fax: +966 01 217 0009  
Saturday to Wednesday 9.30AM to 6.30PM  
Thursdays 9.30AM to 2.00 PM  
E-mail: [Support.sa@dlink-me.com](mailto:Support.sa@dlink-me.com)

#### D-Link Middle East - Dubai, U.A.E.

Plot No. S31102,  
Jebel Ali Free Zone South,  
P.O.Box 18224, Dubai, U.A.E.  
Tel: +971-4-8809022  
Fax: +971-4-8809066 / 8809069  
Technical Support: +971-4-8809033  
General Inquiries: [info.me@dlink-me.com](mailto:info.me@dlink-me.com)  
Tech Support: [support.me@dlink-me.com](mailto:support.me@dlink-me.com)

#### Egypt

1, Makram Ebeid Street - City Lights Building  
Nasrcity - Cairo, Egypt  
Floor 6, office C2  
Tel: +2 02 26718375 - +2 02 26717280  
Technical Support: +2 02 26738470  
General Inquiries: [info.eg@dlink-me.com](mailto:info.eg@dlink-me.com)  
Tech Support: [support.eg@dlink-me.com](mailto:support.eg@dlink-me.com)

#### Kingdom of Saudi Arabia

Office # 84 ,  
Al Khaleej Building ( Mujamathu Al-Khaleej)  
Opp. King Fahd Road, Olaya  
Riyadh - Saudi Arabia  
Tel: +966 1 217 0008  
Technical Support:  
+966 1 2170009 / +966 2 6522951  
General Inquiries: [info.sa@dlink-me.com](mailto:info.sa@dlink-me.com)  
Tech Support: [support.sa@dlink-me.com](mailto:support.sa@dlink-me.com)

#### Pakistan

Islamabad Office:  
61-A, Jinnah Avenue, Blue Area,  
Suite # 11, EBC, Saudi Pak Tower,  
Islamabad - Pakistan  
Tel: +92-51-2800397, 2800398  
Fax: +92-51-2800399

#### Karachi Office:

D-147/1, KDA Scheme # 1,  
Opposite Mudassir Park, Karsaz Road,  
Karachi – Pakistan  
Phone: +92-21-34548158, 34326649  
Fax: +92-21-4375727  
Technical Support: +92-21-34548310, 34305069  
General Inquiries: [info.pk@dlink-me.com](mailto:info.pk@dlink-me.com)  
Tech Support: [support.pk@dlink-me.com](mailto:support.pk@dlink-me.com)

## TECHNICAL SUPPORT

### Iran

Unit 5, 5th Floor, No. 20, 17th Alley , Bokharest  
St. , Argentine Sq. ,  
Tehran IRAN  
Postal Code : 1513833817  
Tel: +98-21-88880918,19  
+98-21-88706653,54  
General Inquiries: info.ir@dlink-me.com  
Tech Support: support.ir@dlink-me.com

### Morocco

M.I.T.C  
Route de Nouaceur angle RS et CT 1029  
Bureau N° 312 ET 337  
Casablanca , Maroc  
Phone : +212 663 72 73 24  
Email: support.na@dlink-me.com

### Lebanon RMA center

Dbayeh/Lebanon  
PO Box:901589  
Tel: +961 4 54 49 71 Ext:14  
Fax: +961 4 54 49 71 Ext:12  
Email: taoun@dlink-me.com

### Bahrain

Technical Support: +973 1 3332904

### Kuwait:

Technical Support: + 965 22453939 / +965  
22453949

### Türkiye Merkez İrtibat Ofisi

Ayazağa Maslak yolu  
Erdebil Cevahir İş Merkezi No: 5/A Ayazağa /  
Maslak İstanbul  
Tel: +90 212 2895659  
Ücretsiz Müşteri Destek Hattı: 0 800 211 00 65  
Web:www.dlink.com.tr  
Teknik Destek: support.tr@dlink.com.tr

### ISRAEL

מטלון סנטר  
רח' המגשימים 20  
קרית מטלון, פ"ת 49348  
ת.ד. 7060  
טלפון: 073-277-11-77  
אי-מאייל כללי: info@dlink.co.il  
אי-מאייל תמיכה: support@dlink.co.il

# D-Link®

## Руководство по быстрой установке

Этот продукт может быть настроен с помощью стандартного Web-браузера.



**DIR-100**  
Широкополосный маршрутизатор

### Перед началом работы

Перед началом работы убедитесь в наличии всей необходимой информации и оборудования. Для подключения этого устройства необходимо существующее широкополосное подключение через кабельный / ADSL модем или аналогичное широкополосное Интернет-устройство.

### Проверьте содержимое упаковки



Широкополосный маршрутизатор DIR-100



Диск CD-ROM с Руководством пользователя



Кабель Ethernet (Кат. 5 UTP)



Адаптер питания

 
 


Использование адаптера с неподходящими характеристиками питания может привести к повреждению устройства и отмене гарантии на него.

# 1

## Подключение маршрутизатора

- A. Подключите один конец адаптера питания к разъему на задней панели DIR-100, а другой конец - к розетке питания. Светодиодный индикатор Power(питание) на передней панели загорится зеленым цветом, указывая на включение устройства.
- B. Вставьте один конец кабеля Ethernet в порт **NAT**(порт 3 или 4) на задней панели устройства, а другой конец кабеля подключите к адаптеру Ethernet или свободному порту Ethernet на компьютере. Индикатор канала Ethernet для данного порта загорится зеленым светом, указывая на наличие соединения.
- C. Подключите один конец кабеля Ethernet к порту **INTERNET** на задней панели, а другой конец к порту Ethernet широкополосного кабельного / ADSL модема. Как правило, широкополосное устройство подключается как простой мост (simple bridge).

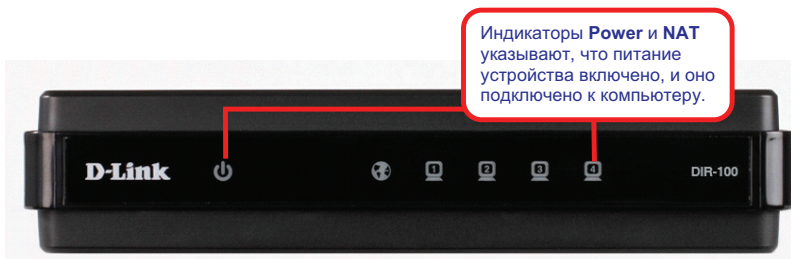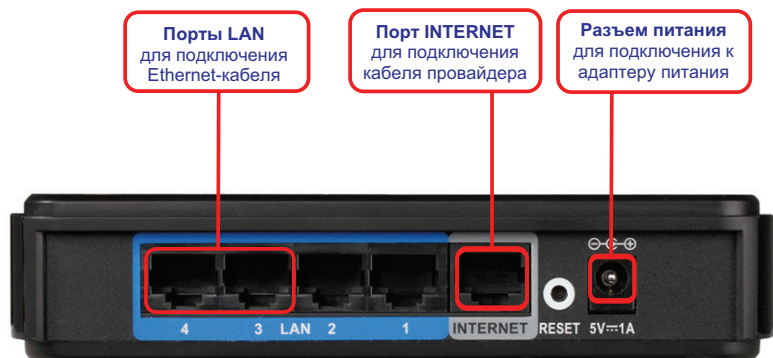





# 2

## Настройка маршрутизатора


Для настройки маршрутизатора с помощью Web-браузера, компьютер должен быть настроен для автоматического получения IP-адреса ("**Obtain an IP address automatically**"), т.е. как **DHCP Client**. При работе с ОС **Windows XP** если возникают затруднения при смене сетевых настроек, обратитесь к Инструкции по изменению IP-настроек для компьютеров с ОС Windows в Руководстве пользователя.

  Запустите Web-браузер и введите "http://192.168.0.1" в поле для URL-адреса. Затем нажмите на **Enter** или **Return**

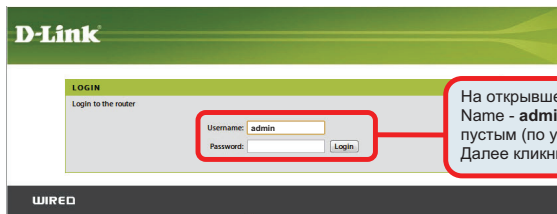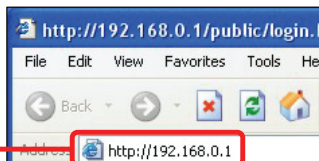

На открывшейся странице введите User Name - **admin** и оставьте поле Password пустым (по умолчанию пароль отсутствует). Далее кликните по кнопке **OK**.

 На первой появившейся странице будет содержаться основная информация о маршрутизаторе. Кликните по ссылке директории Wizard для перехода на стартовую страницу Setup Wizard.

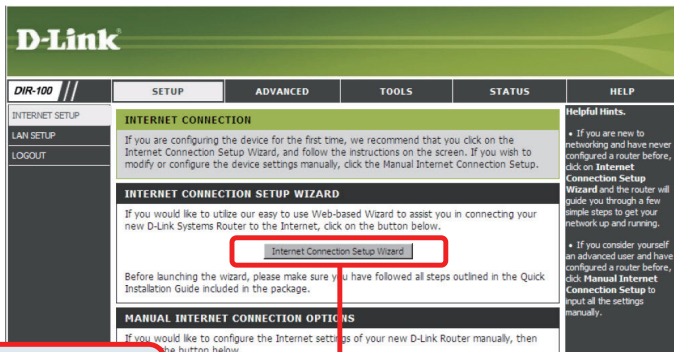

Кликните по **Internet Connection Setup Wizard** для перехода к меню запуска Setup Wizard.

## 2

## Настройка маршрутизатора

### Использование Мастера установки (Setup Wizard)

Появится стартовая страница Мастера установки (Setup Wizard). После ввода нужной информации кликните по **Next** для перехода к странице настройки Интернет-соединения.

**WELCOME TO THE D-LINK SETUP WIZARD**

This wizard will guide you through a step-by-step process to configure your new D-Link router and connect to the Internet.

- Step 1: Set your Password
- Step 2: Select your Time Zone
- Step 3: Configure your Internet Connection
- Step 4: Save Settings and Connect

Введите **Host Name** и **Domain Name** маршрутизатора или согласитесь с предложенными именами по умолчанию. Выберите часовой пояс (**Time Zone**), а также при необходимости задайте даты перехода на летнее время (**Daylight Saving**). Кликните по кнопке **Next** для перехода к меню настройки **WAN Settings**.

**STEP 1: SET YOUR PASSWORD**

By default, your new D-Link Router does not have a password configured for administrator access to the Web-based configuration pages. To secure your new networking device, please set and verify a password below:

Password:

Verify Password:

**STEP 2: SELECT YOUR TIME ZONE**

Select the appropriate time zone for your location. This information is required to configure the time-based options for the router.

Time Zone:

NTP Server Used:

**STEP 3: CONFIGURE YOUR INTERNET CONNECTION**

Please select the internet connection type below:

**DHCP Connection (Dynamic IP Address)**  
Choose this option if your Internet connection automatically provides you with an IP Address type of connection.

**Username / Password Connection (PPPoE)**  
Choose this option if your Internet connection requires a username and password to use this connection type of connection.

**Username / Password Connection (PPTP)**  
Choose this option if you use Dial-Up Networking connection type of connection.

**Username / Password Connection (L2TP)**  
Choose this option if you use Dial-Up Networking connection type of connection.

**Static IP Address Connection**  
Choose this option if your Internet Setup Provider provided you with IP Address information that has to be manually configured.

**Russia PPPoE (Dual Access)**  
Choose this option if your Internet connection requires a username and password to get online as well as static route to access Internet service provider's internal network. Certain ISPs in Russia use this type of connection.

**Russia PPTP (Dual Access)**  
Choose this option if your Internet connection requires a username and password to get online as well as static route to access Internet service provider's internal network. Certain ISPs in Russia use this type of connection.

Выберите тип подключения широкополосного Интернет.

Настройте Интернет-соединение с учетом информации, предоставленной провайдером. Необходимо владеть информацией о типе используемого Интернет-соединения (динамический IP-адрес, статический IP-адрес или PPPoE), а также о параметрах данного соединения. Также необходимо ввести настройки DNS. Настройте Интернет-соединение, следуя инструкциям провайдера. Для получения более подробной информации, пожалуйста, обратитесь к Руководству пользователя.

## ТЕХНИЧЕСКАЯ ПОДДЕРЖКА

Обновления программного обеспечения и документация доступны на Интернет-сайте D-Link. D-Link предоставляет бесплатную поддержку для клиентов в течение гарантийного срока.

Клиенты могут обратиться в группу технической поддержки D-Link по телефону или через Интернет.

### Техническая поддержка D-Link:

+7(495) 744-00-99

### Техническая поддержка через Интернет

<http://www.dlink.ru>

e-mail: [support@dlink.ru](mailto:support@dlink.ru)

## ОФИСЫ

### Украина,

04080 г. Киев , ул. Межигорская, 87-А, офис 18

Тел.: +38 (044) 545-64-40

E-mail: [kiev@dlink.ru](mailto:kiev@dlink.ru)

### Беларусь

220114, г. Минск, проспект Независимости, 169, БЦ "XXI Век"

Тел.: +375(17) 218-13-65

E-mail: [minsk@dlink.ru](mailto:minsk@dlink.ru)

### Казахстан,

050008, г. Алматы, ул. Курмангазы, дом 143

(уг. Муканова)

Тел./факс: +7 727 378-55-90

E-mail: [almaty@dlink.ru](mailto:almaty@dlink.ru)

### Узбекистан

100015, г.Ташкент, ул. Нукусская, 89

Тел./Факс: +998 (71) 120-3770, 150-2646

E-mail: [tashkent@dlink.ru](mailto:tashkent@dlink.ru)

### Армения

0038, г. Ереван, ул. Абеяна, 6/1, 4 этаж

Тел./Факс: + 374 (10) 398-667

E-mail: [erevan@dlink.ru](mailto:erevan@dlink.ru)

### Грузия

0162, г. Тбилиси,

проспект Чавчавадзе 74, 10 этаж

Тел./Факс: + 995 (32) 244-563

### Lietuva

09120, Vilnius, Žirmūnų 139-303

Tel./faks. +370 (5) 236-3629

E-mail: [info@dlink.lt](mailto:info@dlink.lt)

### Eesti

Peterburi tee 46-205

11415, Tallinn, Eesti , Susi Bürookeskus

tel +372 613 9771

e-mail: [info@dlink.ee](mailto:info@dlink.ee)

### Latvija

Mazā nometņu 45/53 (ieeja no Nāras ielas)

LV-1002, Rīga

tel.: +371 6 7618703 +371 6 7618703

e-pasts: [info@dlink.lv](mailto:info@dlink.lv)









**D-Link®**



Ver.4.00 (RU)  
2011/03/22