

D-Link™ DGS-3212SR

12-Port Gigabit Layer 2 Stackable Switch

Release III

Manual

Third Edition (February 2005)

Printed In Taiwan



RECYCLABLE

Information in this document is subject to change without notice.

© 2005 D-Link Computer Corporation. All rights reserved.

Reproduction in any manner whatsoever without the written permission of D-Link Computer Corporation is strictly forbidden.

Trademarks used in this text: D-Link and the D-LINK logo are trademarks of D-Link Computer Corporation; Microsoft and Windows are registered trademarks of Microsoft Corporation.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. D-Link Computer Corporation disclaims any proprietary interest in trademarks and trade names other than its own.

February 2005 P/N 651SR3212035

Table of Contents

About This Manual	vii
Intended Readers	vii
Typographical Conventions	vii
Notes, Notices, and Cautions	viii
Safety Instructions	viii
Safety Cautions	viii
General Precautions for Rack-Mountable Products	ix
Protecting Against Electrostatic Discharge	xi
Introduction	1
Switch Description	1
Features	1
Front-Panel Components	3
LED Indicators	3
Rear Panel Description	5
RPS Connector	5
Plug-in Modules	6
Switch Stacking	7
Management Options	9
Installation	10
Package Contents	10
Before You Connect to the Network	10
Installing the Switch without the Rack	11
Installing the Switch in a Rack	11
Mounting the Switch in a Standard 19" Rack	12
Connecting Stacked Switch Groups	13
Configuring a Switch Group for Stacking	14
External Redundant Power System	16
Connecting the Console Port	17
Password Protection	17
SNMP Settings	19
IP Address Assignment	20
Connecting Devices to the Switch	21
Basic Switch Management	22
Before You Start	22
Web-based User Interface	23

Areas of the User Interface	23
Login to Web Manager	24
Web Pages and Folders	24
Basic Setup	25
Switch Information	25
Switch IP Settings	25
Security IP Management Stations Configuration	28
User Account Management	28
Admin and User Privileges	29
Save Changes	30
Factory Reset	30
Restart System	31
Advanced Settings	32
Switch Stack Management	34
Configure Stacking	34
Basic Configuration	37
Switch Information	38
IP Address	38
Advanced Settings	41
Port Configuration	43
Port Description	45
Port Mirroring	46
Traffic Control	47
Link Aggregation	48
LACP Port Settings	50
Port Access Entity (802.1X)	52
Authentication Server	52
Authenticator	53
Client	54
Authentication Process	54
802.1X Authenticator Settings	57
PAE System Control	59
Initializing Ports for MAC Based 802.1x	61
Reauthenticate Port(s) for Port Based 802.1x	62
Reauthenticate Port(s) for MAC-based 802.1x	63
RADIUS Server	64
IGMP Snooping	65
IGMP Snooping Configuration	65
Static Router Ports Entry	67

Spanning Tree	69
STP Bridge Global Settings	71
MST Configuration Table	74
MSTI Settings	77
STP Instance Settings	78
STP Port Settings	80
Forwarding & Filtering	82
Unicast Forwarding	82
Multicast Forwarding	83
VLANs	84
802.1Q Static VLANs	88
GVRP Settings	91
QoS	93
Understanding QoS	94
802.1p Default Priority	95
802.1p User Priority	95
QoS Output Scheduling Configuration	96
Traffic Segmentation	97
Port Bandwidth	98
MAC Notification	99
MAC Notification Global Settings	99
MAC Notification Port Settings	100
Port Security Configuration	101
Port Security	101
Port Lock Entry Delete	102
Port Security Clear	102
System Log Server	103
SNTP Settings	105
Time Setting	105
Time Zone and DST Settings	106
Access Profile Table	108
Security	119
Trusted Host	119
Secure Socket Layer (SSL)	120
Download Certificate	120
Configuration	121
Secure Shell (SSH)	123
SSH Configuration	123
SSH Algorithm	125

SSH User Authentication.....	127
Access Authentication Control.....	129
Policy & Parameters.....	130
Application Authentication Settings.....	131
Authentication Server Group.....	132
Authentication Server Host.....	134
Login Method Lists.....	136
Enable Method Lists.....	138
Local Enable Password.....	140
Enable Admin.....	141
Management.....	142
User Accounts.....	142
SNMP.....	143
SNMP Settings.....	143
SNMP User Table.....	144
SNMP View Table.....	147
SNMP Group Table.....	148
SNMP Community Table.....	150
SNMP Host Table.....	151
SNMP Engine ID.....	152
Monitoring.....	153
Stack Information.....	154
Port Utilization.....	157
CPU Utilization.....	158
Packets.....	159
Received Packets.....	159
Received Unicast/Multicast/Broadcast Packets.....	161
Transmitted Packets.....	163
Errors.....	165
Received Errors.....	165
Transmitted Errors.....	167
Size.....	169
Packet Size.....	169
MAC Address.....	171
Switch History Log.....	173
IGMP Snooping Table.....	174
IGMP Snooping Forwarding.....	175
VLAN Status.....	176

Router Port	177
Session Table.....	178
Maintenance	179
TFTP Services	179
Download Firmware	179
Download Configuration File	180
Upload Configuration	180
Upload Log	180
Ping Test.....	181
Save Changes	181
Factory Reset.....	182
Restart System.....	183
Logout	183
Single IP Management	184
SIM Settings	186
Topology	187
Tool Tips	190
Right-click	192
Member Switch Icon	194
Candidate Switch Icon.....	195
Menu Bar	196
Group.....	196
Device.....	196
View	196
Firmware Upgrade.....	197
Configuration File Backup/Restore	197
Technical Specifications	198
Cables and Connectors	200
Cable Lengths	201

About This Manual

This manual is divided into nine general sections:

Section 1, Introduction - Describes the Switch's hardware and its features.

Section 2, Installation - Helps you get started with the basic installation of the Switch and also describes the front panel, rear panel, side panels, and LED indicators of the Switch.

Section 3, Basic Management - Tells how you can connect the Switch to your Ethernet network.

Section 4, Configuration - A detailed discussion about configuring some of the basic functions of the Switch, including accessing the Switch information, using the Switch's utilities and setting up network configurations, such as Quality of Service, the Access Profile Table, port mirroring and configuring the Spanning Tree.

Section 5, Security - A discussion of the security features of the Switch, including Security IP, User Accounts, Access Authentication Control, SSH and SSL.

Section 6, Management – A detailed discussion regarding User Accounts and the Simple Network Monitoring Protocol including description of features and a brief introduction to SNMP.

Section 7, Monitoring - Features graphs and screens used in monitoring features and packets on the Switch.

Section 8, Maintenance - Features information on Switch utility functions, including TFTP Services, Switch History, Ping Test, Save Changes, and Rebooting Services.

Section 9, Single IP Management - Discussion on the Single IP Management function of the Switch, including functions and features of the Java based user interface and the utilities of the SIM function.

Intended Readers

The DGS-3212SR Manual contains information useful for setup and management and of the DGS-3212SR Switch. This manual is intended for network managers familiar with network management concepts and terminology.

Typographical Conventions

Convention	Description
[]	In a command line, square brackets indicate an optional entry. For example: [copy filename] means that optionally you can type copy followed by the name of the file. Do not type the brackets.
Bold font	Indicates a button, a toolbar icon, menu, or menu item. For example: Open the File menu and choose Cancel . Used for emphasis. May also indicate system messages or prompts appearing on your screen. For example: You have mail . Bold font is also used to represent filenames, program names and commands. For example: use the copy command.
Boldface Typewriter Font	Indicates commands and responses to prompts that must be typed exactly as printed in the manual.
Initial capital letter	Indicates a window name. Names of keys on the keyboard have initial capitals. For example: Click Enter.
<i>Italics</i>	Indicates a window name or a field. Also can indicate a variables or parameter that is replaced with an appropriate word or string. For example: type <i>filename</i> means that you should type the actual filename instead of the word shown in italic.
Menu Name > Menu Option	Menu Name > Menu Option indicates the menu structure. Device > Port > Port Properties means the Port Properties menu option under the Port menu option that is located under the Device menu.

Notes, Notices, and Cautions



A **NOTE** indicates important information that helps you make better use of your device.




A **NOTICE** indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



A **CAUTION** indicates a potential for property damage, personal injury, or death.

Safety Instructions

Use the following safety guidelines to ensure your own personal safety and to help protect your system from potential damage. Throughout this safety section, the caution icon is () used to indicate cautions and precautions that you need to review and follow.



Safety Cautions

To reduce the risk of bodily injury, electrical shock, fire, and damage to the equipment, observe the following precautions.

- Observe and follow service markings.
 - Do not service any product except as explained in your system documentation.
 - Opening or removing covers that are marked with the triangular symbol with a lightning bolt may expose you to electrical shock.
 - Only a trained service technician should service components inside these compartments.
- If any of the following conditions occur, unplug the product from the electrical outlet and replace the part or contact your trained service provider:
 - The power cable, extension cable, or plug is damaged.
 - An object has fallen into the product.
 - The product has been exposed to water.
 - The product has been dropped or damaged.
 - The product does not operate correctly when you follow the operating instructions.
- Keep your system away from radiators and heat sources. Also, do not block cooling vents.
- Do not spill food or liquids on your system components, and never operate the product in a wet environment. If the system gets wet, see the appropriate section in your troubleshooting guide or contact your trained service provider.

- Do not push any objects into the openings of your system. Doing so can cause fire or electric shock by shorting out interior components.
- Use the product only with approved equipment.
- Allow the product to cool before removing covers or touching internal components.
- Operate the product only from the type of external power source indicated on the electrical ratings label. If you are not sure of the type of power source required, consult your service provider or local power company.
- To help avoid damaging your system, be sure the voltage selection switch (if provided) on the power supply is set to match the power available at your location:
 - 115 volts (V)/60 hertz (Hz) in most of North and South America and some Far Eastern countries such as South Korea and Taiwan
 - 100 V/50 Hz in eastern Japan and 100 V/60 Hz in western Japan
 - 230 V/50 Hz in most of Europe, the Middle East, and the Far East
- Also, be sure that attached devices are electrically rated to operate with the power available in your location.
- Use only approved power cable(s). If you have not been provided with a power cable for your system or for any AC-powered option intended for your system, purchase a power cable that is approved for use in your country. The power cable must be rated for the product and for the voltage and current marked on the product's electrical ratings label. The voltage and current rating of the cable should be greater than the ratings marked on the product.
- To help prevent electric shock, plug the system and peripheral power cables into properly grounded electrical outlets. These cables are equipped with three-prong plugs to help ensure proper grounding. Do not use adapter plugs or remove the grounding prong from a cable. If you must use an extension cable, use a 3-wire cable with properly grounded plugs.
- Observe extension cable and power strip ratings. Make sure that the total ampere rating of all products plugged into the extension cable or power strip does not exceed 80 percent of the ampere ratings limit for the extension cable or power strip.
- To help protect your system from sudden, transient increases and decreases in electrical power, use a surge suppressor, line conditioner, or uninterruptible power supply (UPS).
- Position system cables and power cables carefully; route cables so that they cannot be stepped on or tripped over. Be sure that nothing rests on any cables.
- Do not modify power cables or plugs. Consult a licensed electrician or your power company for site modifications. Always follow your local/national wiring rules.
- When connecting or disconnecting power to hot-pluggable power supplies, if offered with your system, observe the following guidelines:
 - Install the power supply before connecting the power cable to the power supply.
 - Unplug the power cable before removing the power supply.
 - If the system has multiple sources of power, disconnect power from the system by unplugging all power cables from the power supplies.
- Move products with care; ensure that all casters and/or stabilizers are firmly connected to the system. Avoid sudden stops and uneven surfaces.



General Precautions for Rack-Mountable Products

Observe the following precautions for rack stability and safety. Also, refer to the rack installation documentation accompanying the system and the rack for specific caution statements and procedures.

- Systems are considered to be components in a rack. Thus, "component" refers to any system as well as to various peripherals or supporting hardware.



CAUTION: Installing systems in a rack without the front and side stabilizers installed could cause the rack to tip over, potentially resulting in bodily injury under certain circumstances. Therefore, always install the stabilizers before installing components in the rack. After installing system/components in a rack, never pull more than one component out of the rack on its slide assemblies at one time. The weight of more than one extended component could cause the rack to tip over and may result in serious injury.

- Before working on the rack, make sure that the stabilizers are secured to the rack, extended to the floor, and that the full weight of the rack rests on the floor. Install front and side stabilizers on a single rack or front stabilizers for joined multiple racks before working on the rack.
- Always load the rack from the bottom up, and load the heaviest item in the rack first.
- Make sure that the rack is level and stable before extending a component from the rack.
- Use caution when pressing the component rail release latches and sliding a component into or out of a rack; the slide rails can pinch your fingers.
- After a component is inserted into the rack, carefully extend the rail into a locking position, and then slide the component into the rack.
- Do not overload the AC supply branch circuit that provides power to the rack. The total rack load should not exceed 80 percent of the branch circuit rating.
- Ensure that proper airflow is provided to components in the rack.
- Do not step on or stand on any component when servicing other components in a rack.



NOTE: A qualified electrician must perform all connections to DC power and to safety grounds. All electrical wiring must comply with applicable local or national codes and practices.



CAUTION: Never defeat the ground conductor or operate the equipment in the absence of a suitably installed ground conductor. Contact the appropriate electrical inspection authority or an electrician if you are uncertain that suitable grounding is available.



CAUTION: The system chassis must be positively grounded to the rack cabinet frame. Do not attempt to connect power to the system until grounding cables are connected. Completed power and safety ground wiring must be inspected by a qualified electrical inspector. An energy hazard will exist if the safety ground cable is omitted or disconnected.

Protecting Against Electrostatic Discharge

Static electricity can harm delicate components inside your system. To prevent static damage, discharge static electricity from your body before you touch any of the electronic components, such as the microprocessor. You can do so by periodically touching an unpainted metal surface on the chassis.

You can also take the following steps to prevent damage from electrostatic discharge (ESD):

1. When unpacking a static-sensitive component from its shipping carton, do not remove the component from the antistatic packing material until you are ready to install the component in your system. Just before unwrapping the antistatic packaging, be sure to discharge static electricity from your body.
2. When transporting a sensitive component, first place it in an antistatic container or packaging.
3. Handle all sensitive components in a static-safe area. If possible, use antistatic floor pads, workbench pads and an antistatic grounding strap.

<h1>Section 1</h1>

Introduction

Switch Description

Features

Front Panel Components

LED Indicators

Stacking LED Indicators

Rear Panel Description

Plug-in Modules

Switch Stacking

Management Options

Switch Description

The DGS-3212SR is a modular Gigabit Ethernet backbone Switch designed for adaptability and scalability. The Switch provides a management platform and uplink to backbone for a stacked group of up to twelve DES-3226S switches in a star topology arrangement. Alternatively, the Switch can utilize up to twelve Gigabit Ethernet ports to function as a central distribution hub for other Switches or Switch groups, or routers. The four built-in combination Gigabit ports have the option of being used as either 1000BASE-T or SFP Gigabit connections.

Features

- Four built-in combination 10/100/1000BASE-T/SFP ports
- Two additional 4-port modules can be added to stack up to eight additional Switches (IEEE 1394) or up to eight additional Gigabit Ethernet ports (1000BASE-T or SFP) or use combination of stacking and Gigabit Ethernet ports.
- Star topology Switch stacking configuration for up to 12 additional DES-3226S Switches.
- 24 Gbps Switching fabric capacity
- Supports 802.1D STP, 802.1w Rapid Spanning Tree and 802.1s MSTP for redundant back up bridge paths
- Supports 802.1Q VLAN
- Supports IGMP snooping
- Supports 802.1p Priority Queues
- Supports 802.3ad LACP Link Aggregation
- Supports port mirroring
- Access Control Profile (ACL)
- Quality of Service (QoS) customized control
- Port Security (MAC address table lock)
- 802.1x (port-based and MAC-based) access control and RADIUS Client support
- Administrator-definable port security
- Per-port bandwidth control

- Broadcast, Multicast and DLF storm control
- IEEE 802.3z and IEEE 802.3x compliant Flow Control for all Gigabit ports
- SNMP v.1, v.2, v.3 network management, RMON support
- Supports optional external Redundant Power Supply
- Supports Web-based management.
- Supports CLI management.
- Supports BOOTP/DHCP/DNS Relay
- Supports TFTP upgrade
- Supports System Log
- Fully configurable either in-band or out-of-band control via RS-232 console serial connection.
- Telnet remote control console
- Traffic Segmentation
- Simple Network Time Protocol
- MAC address update notification
- Web GUI Traffic Monitoring
- Supports IGMP
- Supports SSL
- Supports SSH
- Supports Single IP Management v.1.0
- Supports RADIUS Authentication
- Supports TACACS, TACACS+, and XTACACS

Front-Panel Components

The front panel of the Switch consists of LED indicators, an RS-232 communication port, two slide-in module slots, and four 1000BASE-T/SFP combo ports.

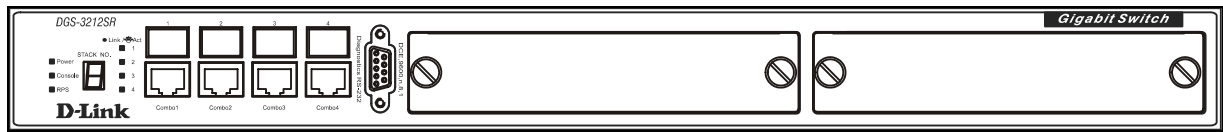


Figure 1- 1. Front Panel View of the Switch as shipped (no modules are installed)

Comprehensive LED indicators display the status of the Switch and the network.

An RS-232 DCE console port for setting up and managing the Switch via a connection to a console terminal or PC using a terminal emulation program.

A front-panel slide-in module slot for Gigabit Ethernet ports can accommodate a 4-port 1000BASE-T Gigabit Ethernet module, a 4-port Gigabit Ethernet SFP module, or a stacking module to connect to four DES-3226S Switches.

LED Indicators

The LED indicators of the Switch include Power, Console, and Link/Act. The following shows the LED indicators for the Switch along with an explanation of each indicator.

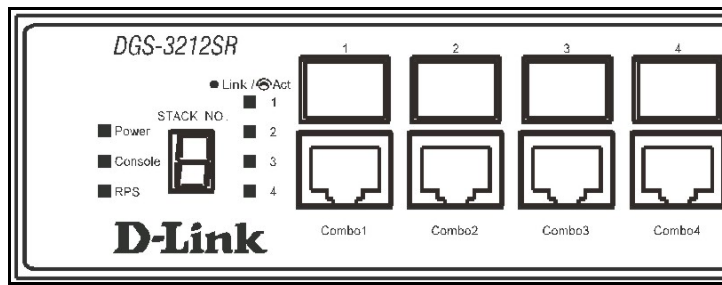


Figure 1- 2. LED Indicators

Power	This indicator on the front panel should be lit during the Power-On Self Test (POST). It will light green approximately two seconds after the Switch is powered on to indicate the ready state of the device.
Console	This indicator is lit green when the Switch is being managed via out-of-band/local console management through the RS-232 console port using a straight-through serial cable.
RPS	This indicator will light steady amber when an external power supply is supplying power. This indicates the internal power supply has failed.
Link/Act	Each on-board Gigabit Ethernet port has a corresponding indicator. This will light steady green for a valid link and blink whenever there is reception or transmission (i.e. Activity--Act) of data occurring at a port.

See below for description of Stack ID LED indicator.



NOTICE: The **Stack ID** LED on the Switch's front panel will display an **F**, regardless of the Switch's stacking mode (Master Switch in a Switch stack, or Standalone mode).

Stacking LED Indicators

Stacking LED indicators include the Stack ID indicator on the front panel and the Link/Act indicators on the front of the DEM-540 stacking module.



NOTICE: The four build-in combination ports on the front panel of the DGS-3212SR can be configured as stacking ports using the CLI.

Each IEEE 1394 stacking module has a single **Link/Act** LED indicator on its front panel for each IEEE 1394 IN/OUT pair.

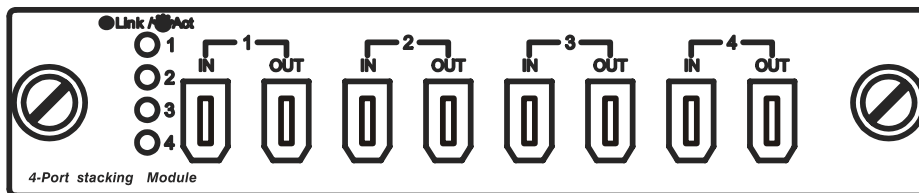


Figure 1- 3. Front panel of DEM-540 IEEE 1394 stacking module

Link/Act	The Link/Act LEDs have the same function as the corresponding LEDs for the Switch’s built-in Gigabit Ethernet ports. The Link LED lights to confirm a valid link, while the Act LED blinks to indicate activity on the link.
Stack ID	The Switch includes a digital indicator to indicate the Switch status in a stacked Switch group. An “F” indicates the Switch is acting in the capacity of a master Switch of a stacked group of DGS-3212SR/DES-3226S Switches. The remaining slave Switches in the group will display a corresponding stack number (1-C) to indicate the logical position of the slave Switch in the stacked group. See the discussion of Switch Stacking below for more information on stacking DGS-3212SR/DES-3226S Switches.



NOTICE: Do not connect the stacked Switch group to the network until you have properly configured all Switches for stacking. An improperly configured Switch stack can cause a broadcast storm.

Rear Panel Description

The rear panel of the Switch contains an AC power connector.



Figure 1- 4. Rear panel view of the Switch

The AC power connector is a standard three-pronged connector that supports the power cord. Plug-in the female connector of the provided power cord into this socket, and the male side of the cord into a power outlet. The Switch automatically adjusts its power setting to any supply voltage in the range from 100 ~ 240 VAC at 50 ~ 60 Hz.

RPS Connector

Connect the optional external redundant power supply to the RPS connector. If the Switch's internal power unit fails, the redundant power system automatically supplies power to the Switch for uninterrupted operation. The Switch supports the D-Link RPS-200 or RPS-500 redundant power supply units.

Plug-in Modules

The DGS-3212SR Switch is able to accommodate optional plug-in modules in order to increase functionality and performance. Two modules may be installed and used in combination with any of the three available modules. Plug-in modules must be purchased separately.

DEM-340T 1000BASE-T Module

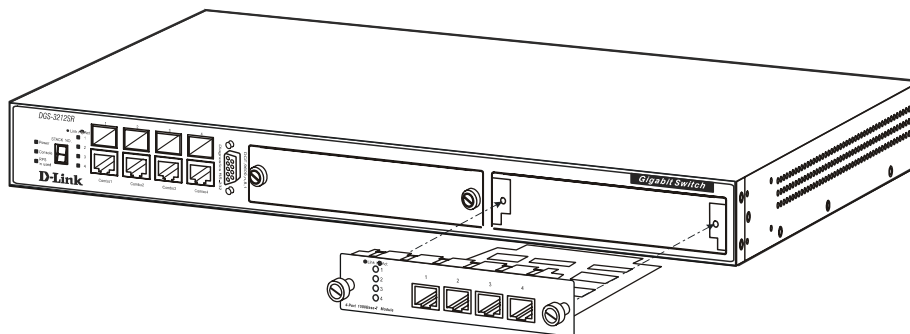


Figure 1- 5. 1000BASE-T Four-port module

- Front-panel module
- Connects to 1000BASE-T devices
- LED indicators for Link/Activity

DEM-340MG SFP (Mini GBIC) Module

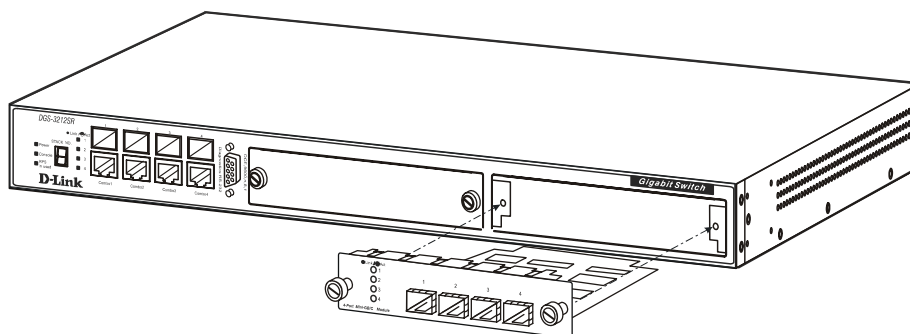


Figure 1- 6. Four-port Gigabit SFP module

- Front-panel module
- Connects to Gigabit Ethernet devices
- LED indicators for Link/Activity and Status

DEM-540 IEEE 1394 Stacking Module

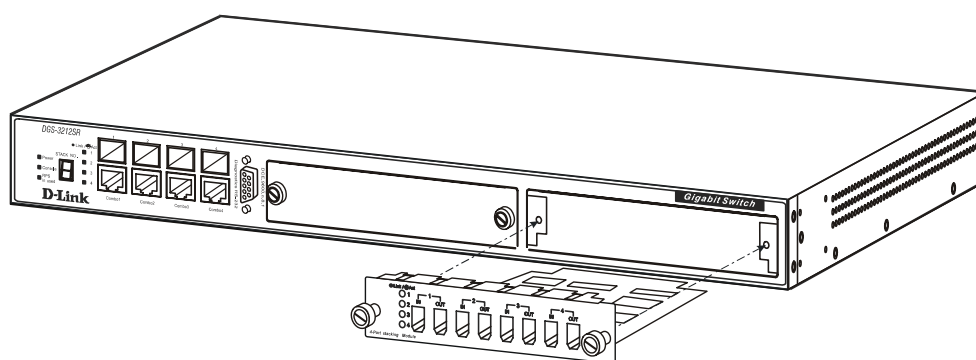


Figure 1- 7. DEM-540 IEEE 1394 Stacking module

- Front-panel module
- Connect to four DES-3226S Switches (up to eight additional slave units may be stacked)
- Four transmitting ports and Four receiving port
- Use the connector of IEEE 1394b
- Data rate up to 1000 Mbps
- 8-segment LED display to indicate Switch ID number within the Switch stack

Switch Stacking

The DGS-3212SR can be stacked with a DES-3226S, functioning as the Master of the stack. There are three connection options available to for stacking.

1. Utilizing a gigabit Ethernet port with either the built-in combination mini-GBIC ports or using the DEM-340T 1000BASE-T stacking module.
2. Using a fiber-optic transceiver cabling with either the built-in combination mini-GBIC ports or using the DEM-340MG SFP (Mini GBIC) stacking module.
3. Using IEEE 1394 fire wire cabling with the DEM-540 IEEE 1394 Stacking Module.

Each optional stacking module allows up to four DES-3226S Switches to be interconnected in a stack with the DGS-3212SR for up to twelve gigabit ports that may be used to stack up to 12 slave units to provide up to 576 10/100 Mbps ports and 12 Gigabit ports in a star architecture. For stacking, the DGS-3212SR will be the master switch of a stack of DES-3226S switches. The entire Switch stack is managed and monitored through the network or alternatively, through the serial port on the DGS-3212SR.

The IEEE 1394 fire wire stacking ports are marked **IN** and **OUT**. The IEEE 1394 compliant cable must be connected from an **IN** port on one Switch to an **OUT** port on the next Switch in the stack.

Restrictions and Cautions for Stacking

The DGS-3212SR may serve as the Master of up to twelve additional Switches. The slave switch units must meet the following criteria:

- All additional slave Switches must be DES-3226S Switches. The slave unit types can be mixed within a single stacked group.
- DES-3226S slave Switches must have firmware Release IV or later loaded to operate properly with the DGS-3212SR Master.
- The DGS-3212SR is automatically started as the Master Switch in a Switch stack.
- It is necessary to enable stacking for each slave Switch in a stacked group before interconnecting them and before connecting the group to the network. Stacking can be enabled by connecting to each slave through the console

port and using the CLI stacking configuration command. Before stacking has been enabled on the slaves, the IEEE 1394 port is treated logically as an individual 1000BASE port in full-duplex mode. Since the Spanning Tree Protocol is disabled by default, a broadcast storm will result if the stacking link is completed between Switches that have not been properly configured.



NOTICE: The CLI stacking command set for the DGS-3212SR is slightly different from the CLI stacking command set for the DES-3226S. Please refer to the CLI Reference Manual for each Switch for details or read the instructions starting with the next section.

Management Options

The system may be managed out-of-band through the console port on the front panel or in-band using Telnet, a web browser or SNMP-based management.

Web-based Management Interface

After you have successfully installed the Switch, you can configure the Switch, monitor the LED panel, and display statistics graphically using a web browser, such as Opera, Netscape Navigator (version 6.2 and higher) or Microsoft® Internet Explorer (version 5.0).



NOTE: To access the Switch through a web browser, the computer running the web browser must have IP-based network access to the Switch.

Command Line Console Interface through the Serial Port or Telnet

You can also connect a computer or terminal to the serial console port or use Telnet to access the Switch. The command-line-driven interface provides complete access to all Switch management features. For a full list of commands, see the Command Line Reference Manual, which is included on the documentation CD.

SNMP-Based Management

You can manage the Switch with an SNMP-compatible console program. The Switch supports SNMP version 1.0, version 2.0 and version 3.0. The SNMP agent decodes the incoming SNMP messages and responds to requests with MIB objects stored in the database. The SNMP agent updates the MIB objects to generate statistics and counters.

The Switch supports a comprehensive set of MIB extensions:

- RFC 1643 Ether-like MIB
- RFC 1724 RIPv2 MIB
- RFC 1757 RMON
- RFC 1850 OSPF MIB
- RFC 1907 SNMPv2 MIB
- RFC 2021 RMON II MIB
- RFC 2096 IP-FORWARD MIB
- RFC 2233 IF-MIB
- RFC 2358 Ethernet-Link MIB
- RFC 2573 SNMP Notification and Target MIB
- RFC 2574 SNMP User-based SM MIB
- RFC 2575 SNMP View-based ACM MIB
- RFC 2674 802.1p and 802.1q Bridge MIB
- RFC 2737 Entity MIB
- RFC 2932 IPMROUTE STD MIB
- RFC 2933 IGMP MIB
- RFC 2934 PIM MIB
- IEEE8021-PAE 802.1x PAE MIB
- D-Link Enterprise MIB

SECTION 2

Installation

Package Contents***Before You Connect to the Network******Installing the Switch without a Rack******Installing the Switch in a Rack******Connecting Stacked Switch Groups******Configuring a Switch Group for Stacking******External Redundant Power System******Connecting the Console Port******Password Protection******SNMP Settings******IP Address Assignment******Connecting Devices to the Switch***

Package Contents

Before you begin installing the Switch, confirm that your package contains the following items:

- One DGS-3212SR Layer 3 Switch
- One Mounting kit with two mounting brackets and screws
- Four rubber feet with adhesive backing
- One AC power cord
- CLI Reference Manual
- This Manual

Before You Connect to the Network

Before you connect to the network, you must install the Switch on a flat surface or in a rack, set up a terminal emulation program, plug in the power cord, and then set up a password and IP address.



NOTICE: Do not connect the Switch to the network until you have established the correct IP settings, user accounts and proper stacking configuration (if the Switch is stacked).

Installing the Switch without the Rack

The Switch is supplied with rubber feet for stationing it on a flat surface and mounting brackets and screws for mounting the Switch in a rack.

1. Install the Switch on a level surface that can safely support the weight of the Switch and its attached cables. The Switch must have adequate space for ventilation and for accessing cable connectors.
2. Set the Switch on a flat surface and check for proper ventilation. Allow at least 5 cm (2 inches) on each side of the Switch and 15 cm (6 inches) at the back for the power cable.
3. Attach the rubber feet on the marked locations on the bottom of the chassis.

The rubber feet, although optional, are recommended to keep the unit from slipping.

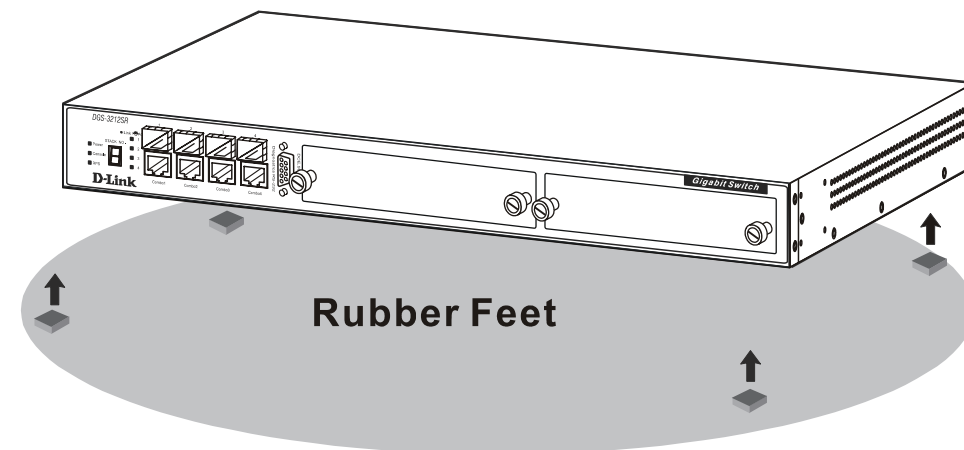


Figure 2- 1. Install rubber feet for installations with or without a rack

Installing the Switch in a Rack

You can install the Switch in most standard 19-inch (48.3-cm) racks. Refer to the illustrations below.

1. Use the supplied screws to attach a mounting bracket to each side of the Switch.
2. Align the holes in the mounting bracket with the holes in the rack.
3. Insert and tighten two screws through each of the mounting brackets.

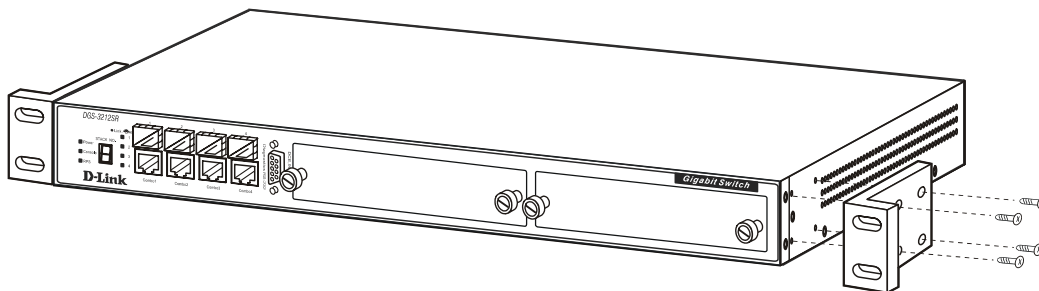


Figure 2- 2. Attach mounting brackets to Switch

Fasten the mounting brackets to the Switch using the screws provided. With the brackets attached securely, you can mount the Switch in a standard rack as shown in Figure 2-3 on the following page.

Mounting the Switch in a Standard 19" Rack

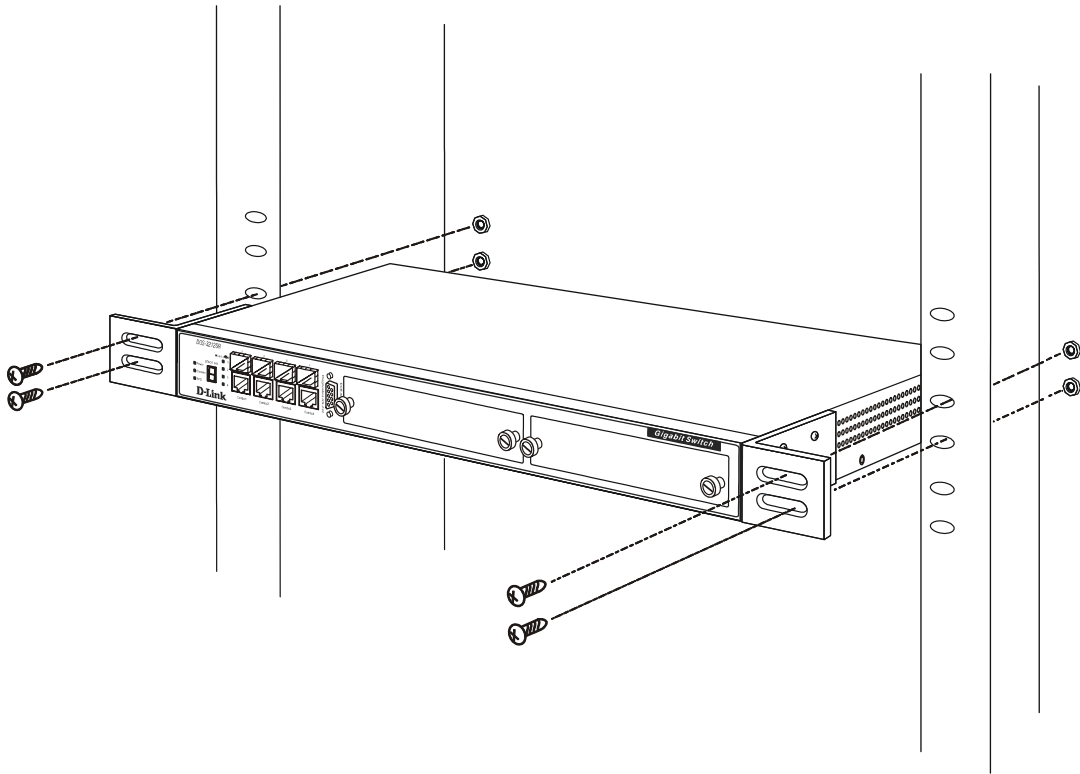


Figure 2-3. Install Switch in equipment rack

Connecting Stacked Switch Groups

The DGS-3212SR has the capability to hold twelve gigabit ports that may be used in standalone mode or can be used in a stacking configuration to provide up to 576 10/100 Mbps ports and 12 Gigabit ports in a star architecture. For stacking, the DGS-3212SR will be the master switch of a stack of DES-3226S switches. The instructions below, Configuring a Switch Group for Stacking, tell you how to configure the DGS-3212SR to function as a Master, as well as how to configure the DES-3226S to function as slave Switch units using the CLI interface.

Stacking Connections with IEEE 1394, Ethernet Cabling, and Fiber-Optic Transceiver Cabling

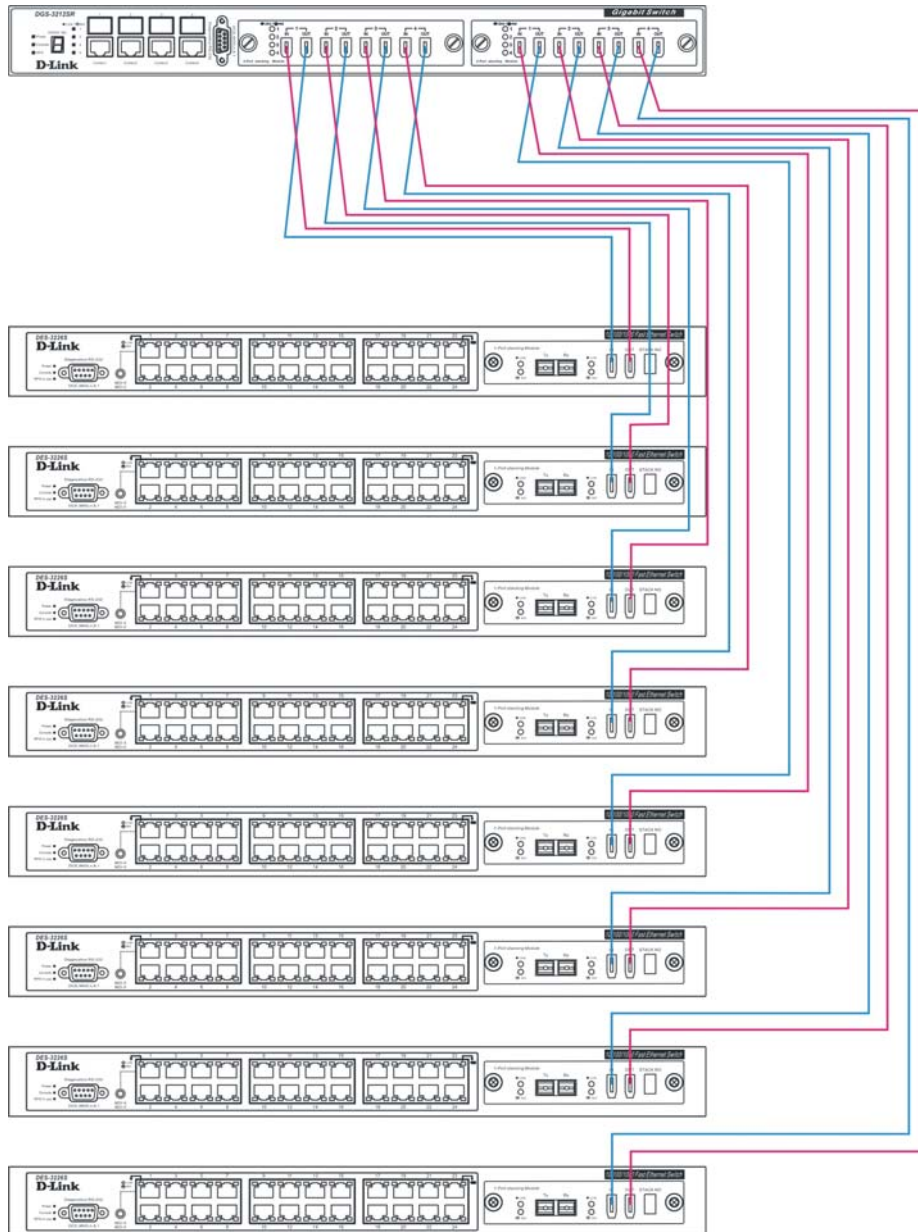


Figure 2-4. Star Topology Stacked Switch Group

The IEEE 1394 fire wire stacking ports are marked **IN** and **OUT**. The IEEE 1394 compliant cable must be connected from an **IN** port on one Switch to an **OUT** port on the next Switch in the stack.



NOTICE: Do not connect the stacked Switch group to the network until you have properly configured all Switches for stacking. An improperly configured Switch stack can cause a broadcast storm.

Configuring a Switch Group for Stacking

Follow the instructions below to first configure the slave units, and then to configure the DGS-3212SR as the designated Master.



NOTICE: The DGS-3212SR can be used to manage a Switch stack consisting of only DES-3226S Switches.

For the DES-3226S, the stacking configuration as a Master or Slave Switch is no longer necessary. The DGS-3212SR can communicate with these slave switches regardless of its stacking configuration. It is recommended that you configure all slave Switches in a Switch stack in the auto stacking mode to reduce the potential for problems. The default stacking mode configuration for the DES-3226S is *auto*.

To configure the DES-3226S to function in a stacked group as a slave, do the following:

1. At the CLI login prompt, enter **config stacking mode enable auto** and press the **Enter** key.
2. You will be prompted to save the stacking mode configuration. Press the Y key (yes) to save the stacking mode configuration.
3. Successful configuration will be verified by a **Success** message. It takes a few seconds for the change to take effect and be saved. See the example below for the DES-3226S.

```
DES-3226S:4#config stacking mode enable auto
Command: config stacking mode enable auto

Do you want to save the new system configuration to NV-RAM now?(y/n)
Saving all configurations to NV-RAM... Done.
Success.

DES-3226S:4#.....
```

The default settings for the DGS-3212SR has the stacking mode enabled. However if the stacking mode has been disabled it will be necessary to enable it. Follow the instructions below to change the stacking mode to enable. If you do not know what the stacking mode setting currently is, use the command **show stacking mode**.

To enable stacking in the DGS-3212SR, do the following:

1. At the CLI login prompt, enter **config stacking mode enable** and press the **Enter** key.
2. You will be prompted to save the stacking mode configuration. If you save the new stacking mode by pressing the Y key, the settings will be saved and the Switch will restart.
3. Press the Y key (yes) to save the stacking mode configuration and restart the Switch.

DGS-3212SR:4#config stacking mode enable

Command: config stacking mode enable

The new stacking mode configuration must be saved and the system restarted to put the new settings into effect.

If you do not save the changes now, they will be lost.

Saving all configurations to NV-RAM... 15%

Changing the stacking mode in the DGS-3212SR will automatically save the settings and restart the system. It will take a few minutes to complete the process.

Unit ID Display for Switches in a Switch Stack

The Stack ID 7-segment LED (as shown below) on the front panel of the DGS-3212SR will always display F (15 in hex). An F will also be displayed in the Stack ID LED even if the DGS-3212SR is in standalone mode.

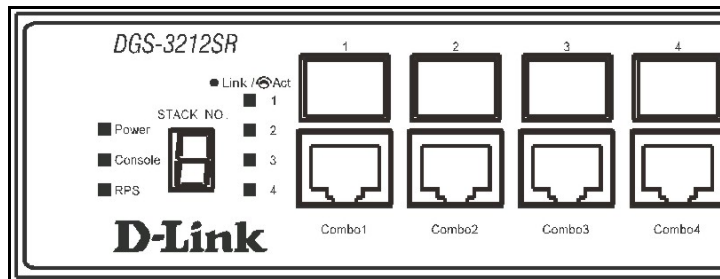


Figure 2-5. DGS-3212SR Front Panel

The Unit ID of individual DES-3226S Switches in a Switch stack is determined by the port number of the port on the DGS-3212SR to which the Switch is connected. The ports on the DGS-3212SR are numbered starting with port 1 from left to right along the front panel of the Switch. For example, the four combination ports next to the Stack NO. LED are numbered 1 through 4, so if a four port stacking module is installed in the first module slot, the stacking ports will be numbered 5 through 8. If two stacking modules are installed in the DGS-3212SR, then the stacking ports on the second module will be numbered 9 through 12.

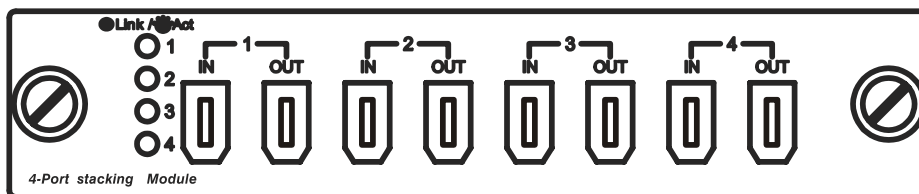


Figure 2-6. DEM-540 Stacking Module Front Panel

If the a stacking module is installed in the DGS-3212SR's first module slot, then the first IN/OUT pair in the figure above will be port 5. If a DES-3226S in a Switch stack is connected to the first stacking port (port number 5 on the DGS-3212SR), then the Unit ID of the DES-3226S will be 5.

The Unit ID of the DES-3226S will be displayed in the STACK NO. LED on the front panel of the DES-3226S's stacking module, as shown below.

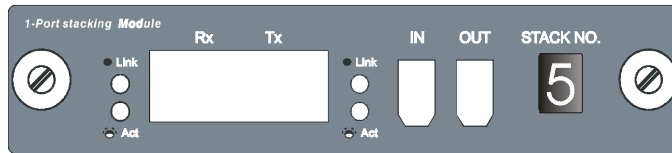


Figure 2-7. DES-3226S Stacking Module Front Panel

External Redundant Power System

The Switch supports an external redundant power system.

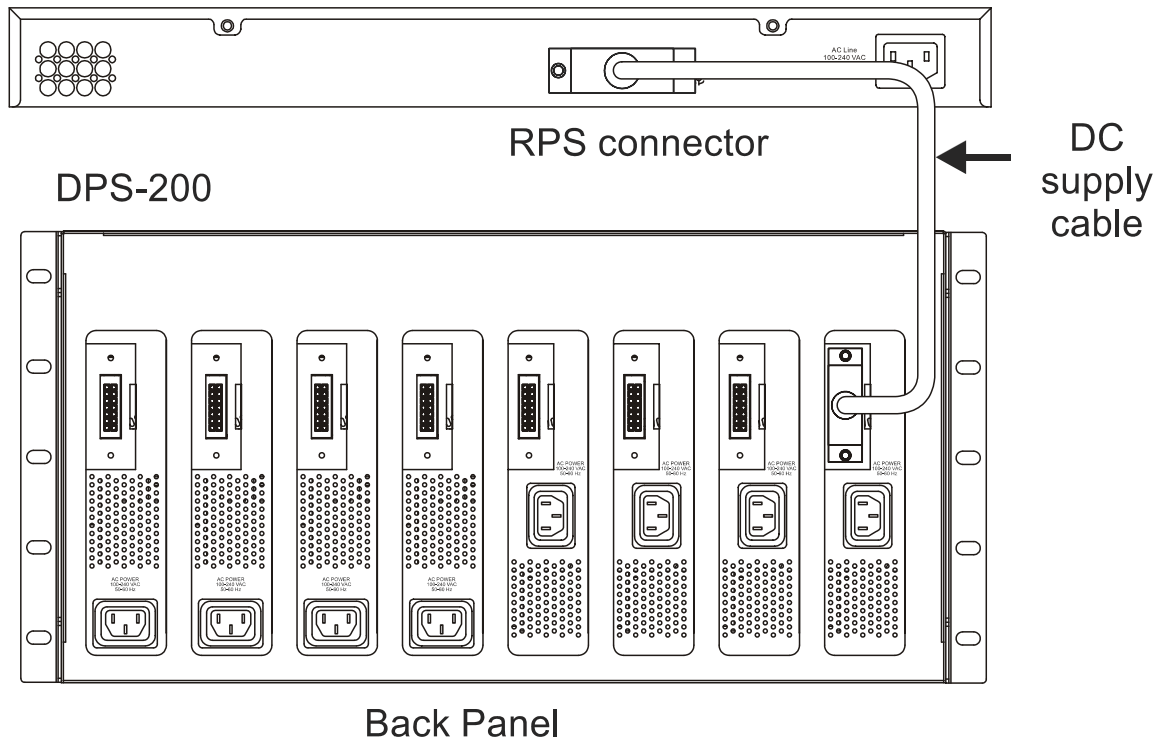


Figure 2-8. DPS-200 with DGS-3212SR



NOTE: See the DPS-200 documentation for more information.



CAUTION: Do not use the Switch with any redundant power system other than the DPS-200 or DPS-500.

Connecting the Console Port

The Switch provides an RS-232 serial port that enables a connection to a computer or terminal for monitoring and configuring the Switch. This port is a male DB-9 connector, implemented as a data terminal equipment (DTE) connection.

To use the console port, you need the following equipment:

- A terminal or a computer with both a serial port and the ability to emulate a terminal
- A null modem or crossover RS-232 cable with a female DB-9 connector for the console port on the Switch

To connect a terminal to the console port:

1. Connect the female connector of the RS-232 cable directly to the console port on the Switch, and tighten the captive retaining screws.
2. Connect the other end of the cable to a terminal or to the serial connector of a computer running terminal emulation software. Set the terminal emulation software as follows:
 - a. Select the appropriate serial port (COM port 1 or COM port 2).
 - b. Set the data rate to 9600 baud.
 - c. Set the data format to 8 data bits, 1 stop bit, and no parity.
 - d. Set flow control to `none`.
 - e. Under **Properties**, select **VT100** for **Emulation** mode.
 - f. Select **Terminal keys** for **Function, Arrow, and Ctrl keys**. Ensure that you select **Terminal keys** (*not Windows keys*).



NOTICE: When you use HyperTerminal with the Microsoft® Windows® 2000 operating system, ensure that you have Windows 2000 Service Pack 2 or later installed. Windows 2000 Service Pack 2 allows you to use arrow keys in HyperTerminal's VT100 emulation. See www.microsoft.com for information on Windows 2000 service packs.

- g. After you have correctly set up the terminal, plug the power cable into the power receptacle on the back of the Switch. The boot sequence appears in the terminal.
- h. After the boot sequence completes, the console login screen displays.
- i. If you have not logged into the command line interface (CLI) program, press the Enter key at the User name and password prompts. There is no default user name and password for the Switch, user names and passwords must first be created by the administrator. If you have previously set up user accounts, log in and continue to configure the Switch.
- j. Enter the commands to complete your desired tasks. Many commands require administrator-level access privileges. Read the next section for more information on setting up user accounts. See the *Command Line Reference Manual* on the documentation CD for a list of all commands and additional information on using the CLI.
- k. When you have completed your tasks, exit the session with the **logout** command or close the emulator program.

Password Protection

The DGS-3212SR does not have a default user name and password. One of the first tasks when settings up the Switch is to create user accounts. If you log in using a predefined administrator-level user name, you have privileged access to the Switch's management software.

After your initial login, define new passwords for both default user names to prevent unauthorized access to the Switch, and record the passwords for future reference.

To create an administrator-level account for the Switch, do the following:

1. At the CLI login prompt, enter **create account admin** followed by the <user name> and press the **Enter** key.
2. You will be asked to provide a password. Type the <password> used for the administrator account being created and press the **Enter** key.
3. You will be prompted to enter the same password again to verify it. Type the same password and press the **Enter** key.
4. Successful creation of the new administrator account will be verified by a **Success** message.

User names and passwords can be up to 15 characters in length.



NOTE: Passwords are case sensitive.

The sample below illustrates a successful creation of a new administrator-level account with the user name “newmanager”.

```
DGS-3212SR:4#create account admin newmanager
Command: create account admin newmanager

Enter a case-sensitive new password:*****
Enter the new password again for confirmation:*****
Success.

DGS-3212SR:4#
```



NOTICE: CLI configuration commands only modify the running configuration file and are not saved when the Switch is rebooted. To save all your configuration changes in nonvolatile storage, you must use the **save** command to copy the running configuration file to the startup configuration.

SNMP Settings

Simple Network Management Protocol (SNMP) is an OSI Layer 7 (Application Layer) designed specifically for managing and monitoring network devices. SNMP enables network management stations to read and modify the settings of gateways, routers, Switches, and other network devices. Use SNMP to configure system features for proper operation, monitor performance and detect potential problems in the Switch, Switch group or network.

Managed devices that support SNMP include software (referred to as an agent), which runs locally on the device. A defined set of variables (managed objects) is maintained by the SNMP agent and used to manage the device. These objects are defined in a Management Information Base (MIB), which provides a standard presentation of the information controlled by the on-board SNMP agent. SNMP defines both the format of the MIB specifications and the protocol used to access this information over the network.

The DGS-3212SR supports the SNMP versions 1, 2c, and 3. You can specify which version of the SNMP you want to use to monitor and control the Switch. The three versions of SNMP vary in the level of security provided between the management station and the network device.

In SNMP v.1 and v.2, user authentication is accomplished using 'community strings', which function like passwords. The remote user SNMP application and the Switch SNMP must use the same community string. SNMP packets from any station that has not been authenticated are ignored (dropped).

The default community strings for the Switch used for SNMP v.1 and v.2 management access are:

public - Allows authorized management stations to retrieve MIB objects.

private - Allows authorized management stations to retrieve and modify MIB objects.

SNMP v.3 uses a more sophisticated authentication process that is separated into two parts. The first part is to maintain a list of users and their attributes that are allowed to act as SNMP managers. The second part describes what each user on that list can do as an SNMP manager.

The Switch allows groups of users to be listed and configured with a shared set of privileges. The SNMP version may also be set for a listed group of SNMP managers. Thus, you may create a group of SNMP managers that are allowed to view read-only information or receive traps using SNMP v.1 while assigning a higher level of security to another group, granting read/write privileges using SNMP v.3.

Using SNMP v.3 individual users or groups of SNMP managers can be allowed to perform or be restricted from performing specific SNMP management functions. The functions allowed or restricted are defined using the Object Identifier (OID) associated with a specific MIB. An additional layer of security is available for SNMP v.3 in that SNMP messages may be encrypted. To read more about how to configure SNMP v.3 settings for the Switch read the next section, Management.

Traps

Traps are messages that alert network personnel of events that occur on the Switch. The events can be as serious as a reboot (someone accidentally turned OFF the Switch), or less serious like a port status change. The Switch generates traps and sends them to the trap recipient (or network manager). Typical traps include trap messages for Authentication Failure, Topology Change and Broadcast/Multicast Storm.

MIBs

Management and counter information are stored by the Switch in the Management Information Base (MIB). The Switch uses the standard MIB-II Management Information Base module. Consequently, values for MIB objects can be retrieved from any SNMP-based network management software. In addition to the standard MIB-II, the Switch also supports its own proprietary enterprise MIB as an extended Management Information Base. The proprietary MIB may also be retrieved by specifying the MIB Object Identifier. MIB values can be either read-only or read-write.

IP Address Assignment

Each Switch must be assigned its own IP Address, which is used for communication with an SNMP network manager or other TCP/IP application (for example BOOTP, TFTP). The Switch's default IP address is 10.90.90.90. You can change the default Switch IP address to meet the specification of your networking address scheme.

The Switch is also assigned a unique MAC address by the factory. This MAC address cannot be changed, and can be found from the initial boot console screen – shown below.

```

Boot Procedure 2.00.002
-----
Power On Self Test ..... 100 %
MAC Address   : 00-00-33-12-00-20
H/W Version   : 2A1
Please wait, loading Runtime image ..... 100 %

```

Figure 2-9. Boot screen

The Switch's MAC address can also be found from the Web management program on the Switch Information (Basic Settings) window on the Configuration menu.

The IP address for the Switch must be set before it can be managed with the Web-based manager. The Switch IP address can be automatically set using BOOTP or DHCP protocols, in which case the actual address assigned to the Switch must be known.

The IP address may be set using the Command Line Interface (CLI) over the console serial port as follows:

1. Starting at the command line prompt, enter the commands **config ipif System ipaddress xxx.xxx.xxx.xxx/yyy.yyy.yyy.yyy**. Where the **x**'s represent the IP address to be assigned to the IP interface named **System** and the **y**'s represent the corresponding subnet mask.
2. Alternatively, you can enter **config ipif System ipaddress xxx.xxx.xxx.xxx/z**. Where the **x**'s represent the IP address to be assigned to the IP interface named **System** and the **z** represents the corresponding number of subnets in CIDR notation.

The IP interface named System on the Switch can be assigned an IP address and subnet mask that can then be used to connect a management station to the Switch's Telnet or Web-based management agent.

```
DGS-3212SR Gigabit Ethernet Switch Command Line Interface
                          Firmware: Build 3.00-B01
Copyright(C) 2000-2003 D-Link Corporation. All rights reserved.
UserName:
Password:
DGS-3212SR:4#config ipif System ipaddress 10.24.22.9/255.0.0.0
Command: config ipif System ipaddress 10.24.22.9/8
Success.
DGS-3212SR:4#_
```

Figure 2-10. Assigning the Switch an IP Address

In the above example, the Switch was assigned an IP address of 10.24.22.9 with a subnet mask of 255.0.0.0. The system message **Success** indicates that the command was executed successfully. The Switch can now be configured and managed via Telnet and the CLI or via the Web-based management.

Connecting Devices to the Switch

After you assign IP addresses to the Switch, you can connect devices to the Switch.

To connect a device to an SFP transceiver port:

1. Use your cabling requirements to select an appropriate SFP transceiver type.
2. Insert the SFP transceiver (sold separately) into the SFP transceiver slot.
3. Use the appropriate network cabling to connect a device to the connectors on the SFP transceiver.



NOTICE: When the SFP transceiver acquires a link, the associated integrated 10/100/1000BASE-T port is disabled.

<h2>Section 3</h2>

Basic Switch Management

Before You Start

Web-based User Interface

Basic Setup

Switch Information

Switch IP Settings

Security IP Management Stations

User Accounts Management

Saving Changes

Factory Reset

Restart System

Advanced Settings

Switch Stack Management

All software function of the DGS-3212SR can managed, configured and monitored via the embedded web-based (HTML) interface. The Switch can be managed from remote stations anywhere on the network through a standard browser such as Opera, Netscape Navigator/Communicator or Microsoft Internet Explorer. The browser acts as a universal access tool and can communicate directly with the Switch using the HTTP protocol.

The web-based management module and the Console program (and Telnet) are different ways to access the same internal Switching software and configure it. Thus, all settings encountered in web-based management are the same as those found in the console program.

Before You Start

The DGS-3212SR Layer 2 Switch supports a wide array of functions and gives great flexibility and increased network performance.

This flexibility and rich feature set requires a bit of thought to arrive at a deployment strategy that will maximize the potential of the DGS-3212SR Layer 2 Switch. Please read the portions of this manual pertaining to the functions you wish to perform with the Switch.

Web-based User Interface

The user interface provides access to various Switch configuration and management screens, allows you to view performance statistics, and permits you to graphically monitor the system status.

Areas of the User Interface

The figure below shows the user interface. The user interface is divided into three distinct areas as described in the table below.

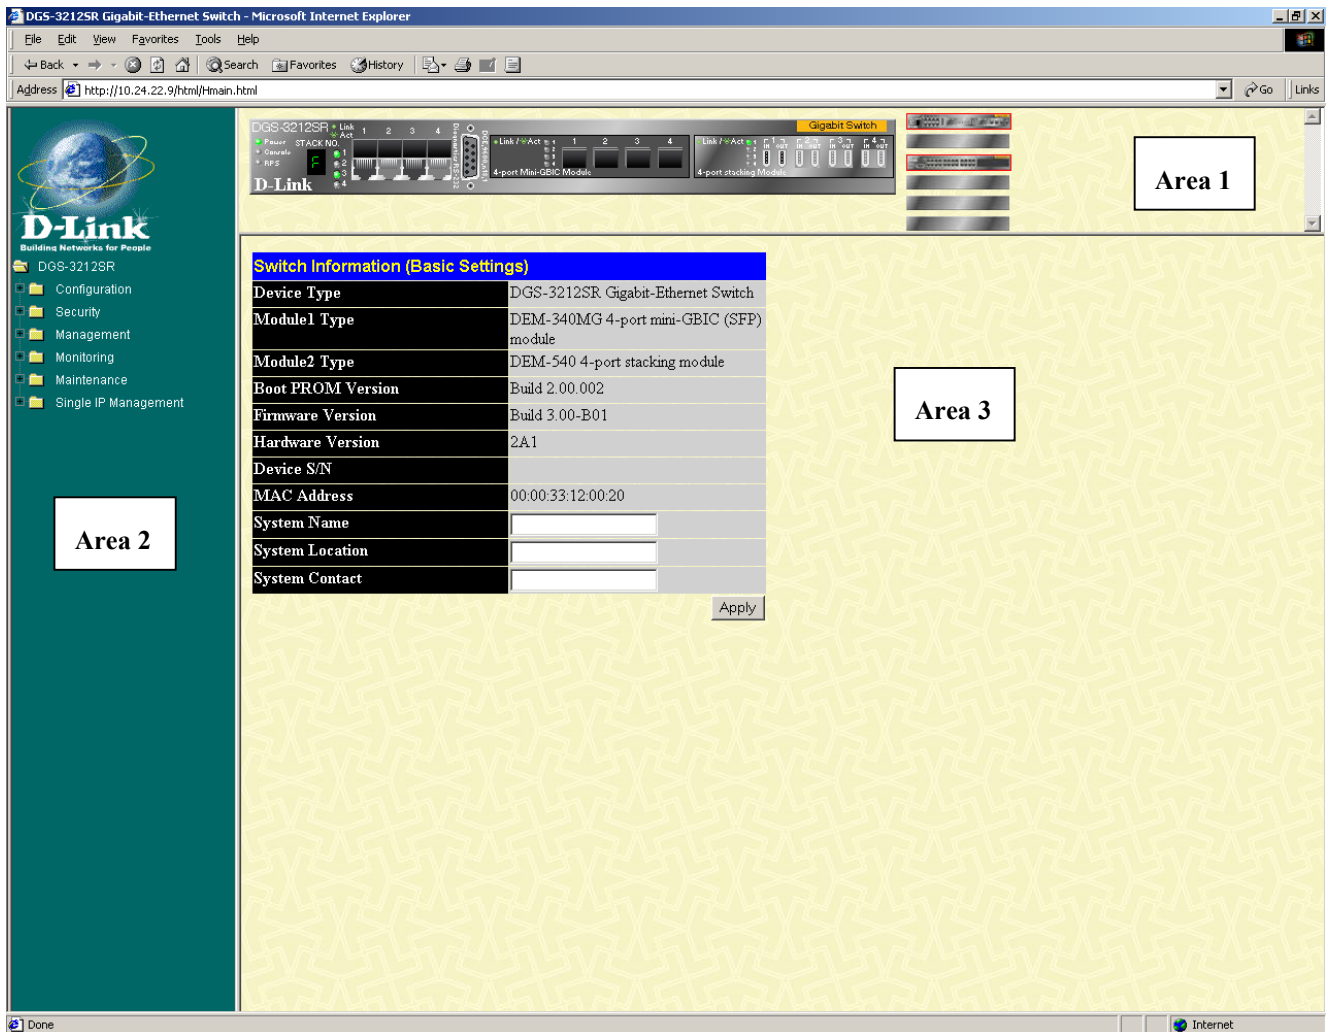


Figure 3-1. Main Web-Manager window

Area	Function
1	Presents a graphical near real-time image of the front panel of the Switch. This area displays the Switch's ports and expansion modules. When the Switch is stacked a virtual representation of the Switch stack appears in the right hand portion. Click on the ports in the front panel to manage the port's configuration or view data for the port.
2	Select the window to be displayed. The folder icons can be opened to display the hyperlinked window buttons and sub-folders contained within them.
3	Presents the information selected for configuration or display.

Login to Web Manager

To begin managing the Switch simply run the browser you have installed on your computer and point it to the IP address you have defined for the device. The URL in the address bar should read something like: `http://123.123.123.123`, where the numbers 123 represent the IP address of the Switch.



NOTE: The Factory default IP address for the Switch is 10.90.90.90.

In the Welcome page, click on the Login hyperlink; this opens a login dialog box. Enter a user name and password to access the Switch's management main page (pictured above). There is no user name or password configured for the Switch in the default settings, so if this is the first time logging in it is not necessary to enter these.



NOTICE: Any changes made to the Switch configuration during the current session must be saved in the **Save Configuration** window (explained below) or use the command line interface (CLI) command **save**.

Web Pages and Folders

Below is a list and description of the main folders and windows available in the web interface:

Configuration: This folder includes all the sub-folders and windows used to configure various performance functions of the Switch including Layer 3 functions.

Security: This folder contains SSL, SSH, and Access Authentication Control sub-folders are also located here. The Trusted Host window link is located here as well.

Management: The windows used to configure SNMP settings, management IP stations, and user accounts are located here.

Monitoring: This folder includes stack information and data tables for performance statistics, application, and protocol status, including Layer 3 functions.

Maintenance: Contains windows for upgrading firmware and saving configuration files (TFTP Services), saving configuration changes, resetting and rebooting the Switch, PING test, and logging out of the web manager.

Single IP Management: SIM settings, Topology, Firmware Update, and Configuration Backup/Restore windows are located here.



NOTE: Be sure to configure the user name and password in the User Accounts window before connecting the Switch to the greater network.

Basic Setup

The subsections below describe how to change some of the basic settings for the Switch such as changing IP settings and assigning user names and passwords for management access privileges, as well as how to save the changes and restart the Switch.

Switch Information

The first page displayed upon logging in is the **System Information (Basic Settings)** window. This window can be accessed at any time by clicking the **Switch Information** button in the **Configuration** folder.

Switch Information (Basic Settings)	
Device Type	DGS-3212SR Gigabit-Ethernet Switch
Module1 Type	DEM-340MG 4-port mini-GBIC (SFP) module
Module2 Type	DEM-540 4-port stacking module
Boot PROM Version	Build 2.00.002
Firmware Version	Build 3.00-B01
Hardware Version	2A1
Device S/N	
MAC Address	00:00:33:12:00:20
System Name	<input type="text"/>
System Location	<input type="text"/>
System Contact	<input type="text"/>
Apply	

Figure 3-2. Switch Information (Basic Settings) window

This window displays general information about the Switch including its MAC Address, Hardware Boot PROM and Firmware versions, and installed module information.

Switch IP Settings

Switch IP settings may initially be set using the console interface prior to connecting to it through the Ethernet. If the Switch IP address has not yet been changed, read the Introduction of the CLI Reference or skip ahead to the end of this section for a quick description of how to use the console port and CLI IP settings commands to establish IP settings for the Switch.

To change IP settings using the web manager you must access the **Switch IP Settings** window located in the **Configuration** folder.

To configure the Switch's IP address:

Open the **Configuration** folder and click the IP Address button. The web manager will display the **Switch IP Settings** window below.

Switch IP Settings	
Get IP From	Manual ▾
IP Address	10.24.22.9
Subnet Mask	255.0.0.0
Default Gateway	0.0.0.0
VID	1
Apply	

Figure 3-3. Switch IP Settings window



NOTE: The Switch's factory default IP address is 10.90.90.90 with a subnet mask of 255.0.0.0 and a default gateway of 0.0.0.0.

To manually assign the Switch's IP address, subnet mask, and default gateway address:

- Select *Manual* from the Get IP From drop-down menu.
- Enter the appropriate IP address and subnet mask.

If you want to access the Switch from a different subnet from the one it is installed on, enter the IP address of the gateway. If you will manage the Switch from the subnet on which it is installed, you can leave the default address (0.0.0.0) in this field.

If no VLANs have been previously configured on the Switch, you can use the default VLAN ID (VID) 1. The default VLAN contains all of the Switch ports as members. If VLANs have been previously configured on the Switch, you will need to enter the VLAN ID of the VLAN that contains the port connected to the management station that will access the Switch. The Switch will allow management access from stations with the same VID listed here.

To use the BOOTP or DHCP protocols to assign the Switch an IP address, subnet mask, and default gateway address:

Use the Get IP From pull-down menu to choose from *BOOTP* or *DHCP*. This selects how the Switch will be assigned an IP address on the next reboot.

The **Switch IP Settings** options are:

Parameter	Description
BOOTP	The Switch will send out a BOOTP broadcast request when it is powered up. The BOOTP protocol allows IP addresses, network masks, and default gateways to be assigned by a central BOOTP server. If this option is set, the Switch will first look for a BOOTP server to provide it with this information before using the default or previously entered settings.
DHCP	The Switch will send out a DHCP broadcast request when it is powered up. The DHCP protocol allows IP addresses, network masks, and default gateways to be assigned by a DHCP server. If this option is set, the Switch will first look for a DHCP server to provide it with this information before using the default or previously entered settings.
Manual	Allows the entry of an IP address, Subnet Mask, and a Default Gateway for the Switch. These fields should be of the form xxx.xxx.xxx.xxx, where each xxx is a number (represented in decimal form) between 0 and 255. This address should be a unique address on the network assigned for use by the network administrator. The fields which require entries under this option are as follows:

Subnet Mask	A Bitmask that determines the extent of the subnet that the Switch is on. Should be of the form xxx.xxx.xxx.xxx, where each xxx is a number (represented in decimal) between 0 and 255. The value should be 255.0.0.0 for a Class A network, 255.255.0.0 for a Class B network, and 255.255.255.0 for a Class C network, but custom subnet masks are allowed.
Default Gateway	IP address that determines where packets with a destination address outside the current subnet should be sent. This is usually the address of a router or a host acting as an IP gateway. If your network is not part of an intranet, or you do not want the Switch to be accessible outside your local network, you can leave this field unchanged.
VID	This allows the entry of a VLAN ID from which a management station will be allowed to manage the Switch using TCP/IP (in-band via web manager or Telnet). Management stations that are on VLANs other than the one entered in the VID field will not be able to manage the Switch in-band unless their IP addresses are entered in the Security IP Management menu. If VLANs have not yet been configured for the Switch, the default VID (1) contains all of the Switch's ports. There are no entries in the Security IP Management table, by default – so any management station that can connect to the Switch can access the Switch until either Management Station IP Addresses (see page 28) are assigned or SNMP settings are configured to control management.

Setting the Switch's IP Address using the Console Interface

Each Switch must be assigned its own IP Address, which is used for communication with an SNMP network manager or other TCP/IP application (for example BOOTP, TFTP). The Switch's default IP address is 10.90.90.90. You can change the default Switch IP address to meet the specification of your networking address scheme.

The IP address for the Switch must be set before it can be managed with the Web-based manager. The Switch IP address can be automatically set using BOOTP or DHCP protocols, in which case the actual address assigned to the Switch must be known.

The IP address may be set using the Command Line Interface (CLI) over the console serial port as follows:

Starting at the command line prompt, enter the commands **config ipif System ipaddress xxx.xxx.xxx.xxx/yyy.yyy.yyy.yyy**. Where the x's represent the IP address to be assigned to the IP interface named **System** and the y's represent the corresponding subnet mask.

Alternatively, you can enter **config ipif System ipaddress xxx.xxx.xxx.xxx/z**. Where the x's represent the IP address to be assigned to the IP interface named **System** and the z represents the corresponding number of subnets in CIDR notation.


The IP interface named **System** on the Switch can be assigned an IP address and subnet mask that can then be used to connect a management station to the Switch's Telnet or Web-based management agent.

The system message **Success** indicates that the command was executed successfully. The Switch can now be configured and managed via Telnet and the CLI or via the Web-based management agent using the above IP address to connect to the Switch.

Security IP Management Stations Configuration

Use the **Security IP Management** window to define up to four community strings. Community strings are used to verify who can receive SNMP information from the Switch.

To access the **Security IP Management** window, click **Trusted Host** in the **Security** folder.

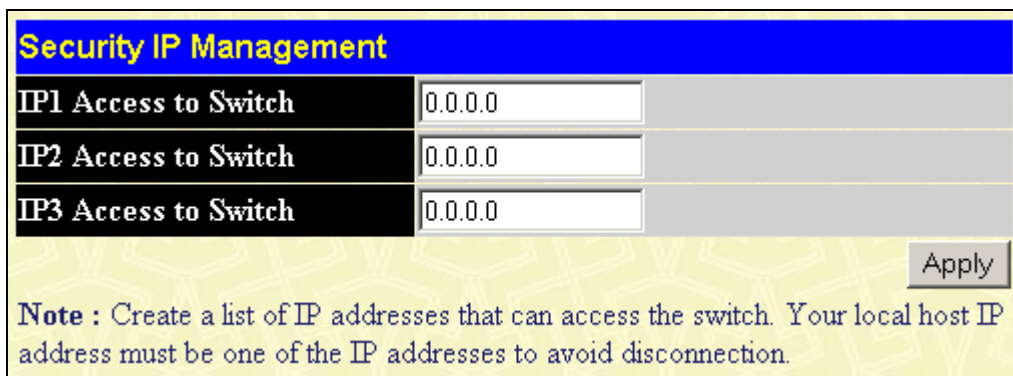

Security IP Management	
IP1 Access to Switch	0.0.0.0
IP2 Access to Switch	0.0.0.0
IP3 Access to Switch	0.0.0.0

Apply

Note : Create a list of IP addresses that can access the switch. Your local host IP address must be one of the IP addresses to avoid disconnection.

Figure 3-4. Security IP Management window

Use the **Security IP Management** window to select up to three management stations used to manage the Switch. If you choose to define one or more designated management stations, only the chosen stations, as defined by IP address, will be allowed management privilege through the web manager or Telnet session. To define a management station IP setting, type an IP address in the area provided and then click the **Apply** button.

User Account Management

Use the **User Account Management** to control user privileges. To view existing User Accounts, open the **Management** folder and click on the **User Accounts** link. This will open the **User Account Management** window, as shown below.




User Account Management	
User Name	Access Right
Darren	Admin

Add Modify

Figure 3-5. User Account Management window

To add a user account, click the **Add** button revealing the following window to configure.

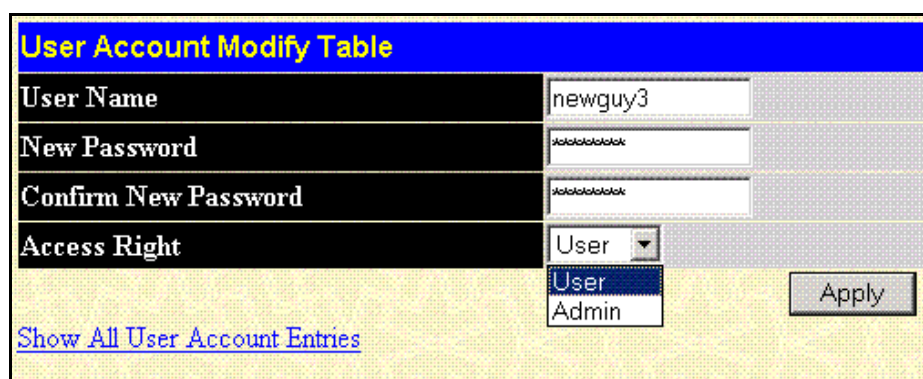

User Account Modify Table	
User Name	newguy3
New Password	*****
Confirm New Password	*****
Access Right	User

Show All User Account Entries Apply

Figure 3-6. User Account Management window

Add a new user by typing in a **User Name**, **New Password** and retype the same password in the **Confirm New Password**. Choose the level of privilege (*Admin* or *User*) from the **Access Right** drop-down menu.

To modify or delete an existing user, click on the **Modify** button for that user.

Figure 3- 7. User Account Modify Table window

Modify or delete an existing user account in the **User Account Modify Table** window. To delete the user account, click on the **Delete** button. To change the password, type in the Old Password, then enter the New Password and retype it in the Confirm New Password entry field. Click **Apply** to implement changes made. To delete the selected user account, click the **Delete** button.

Admin and User Privileges

There are two levels of user privileges: *Admin* and *User*. Some menu selections available to users with *Admin* privileges may not be available to those with *User* privileges.

The following table summarizes the *Admin* and *User* privileges:

Management	Admin	User
Configuration	Yes	Read Only
Network Monitoring	Yes	Read Only
Community Strings and Trap Stations	Yes	Read Only
Update Firmware and Configuration Files	Yes	No
System Utilities	Yes	No
Factory Reset	Yes	No
User Account Management		
Add/Update/Delete User Accounts	Yes	No
View User Accounts	Yes	No

Table 3- 1. Admin and User Privileges

After establishing a User Account with *Admin*-level privileges, be sure to save the changes (see below).

Save Changes

Changes made to the Switch's configuration must be saved in order to retain them. Access the **Save Configuration** window by clicking the **Save Changes** button located in the **Maintenance** folder.

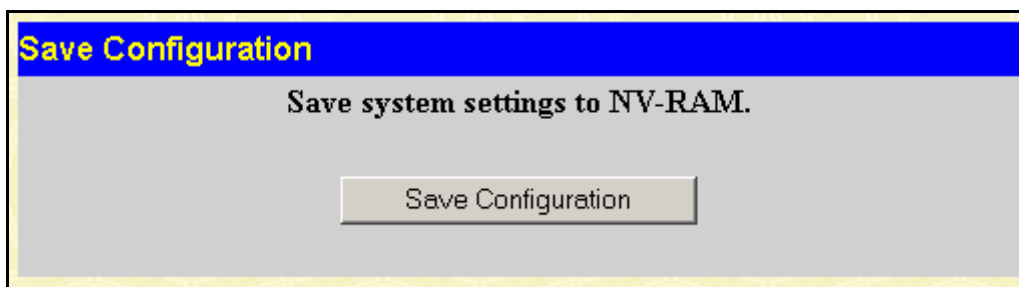


Figure 3- 8. Save Configuration window

The Switch has two levels of memory, normal RAM and non-volatile or NV-RAM. To save all the changes made in the current session to the Switch's flash memory, click the **Save Configuration** button. Click the **OK** button in the new dialog box that appears to continue. When this is done, the settings will be immediately applied to the Switching software in RAM, and will immediately take effect. Once the Switch configuration settings have been saved to NV-RAM, they become the default settings for the Switch. These settings will be used every time the Switch is rebooted.

Some settings, though, require you to restart the Switch before they will take effect. Restarting the Switch erases all settings in RAM and reloads the stored settings from the NV-RAM. Thus, it is necessary to save all setting changes to NV-RAM before rebooting the Switch.

Factory Reset

Click the **Factory Reset** link in the **Maintenance** folder to bring up the following window.

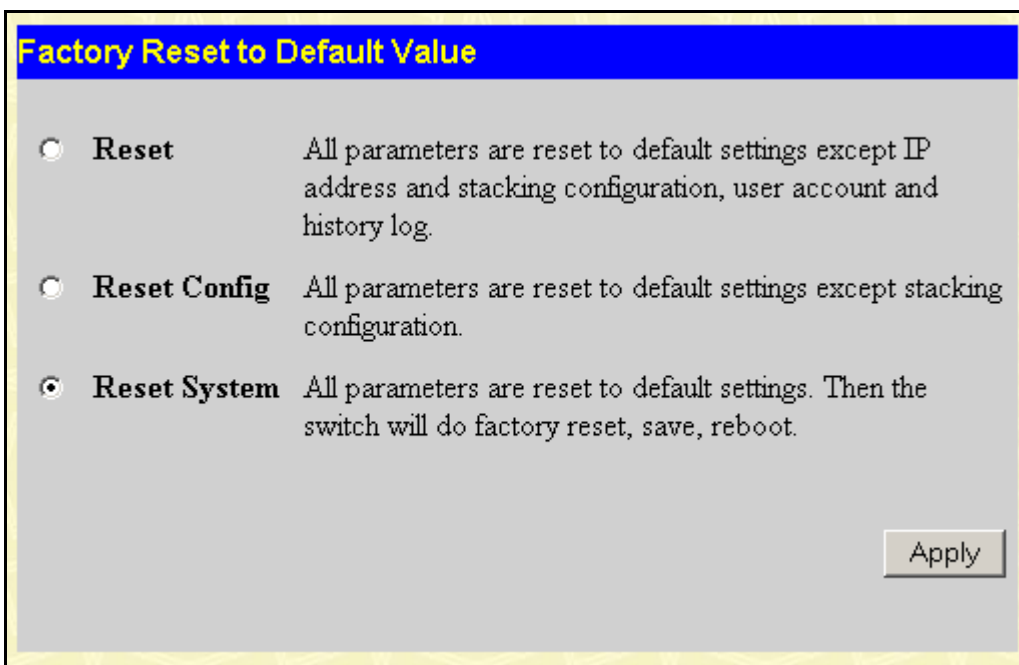


Figure 3- 9. Factory Reset to Default Value window

The following options are available to perform a factory reset:

- **Reset** – Returns all configuration settings to the factory default settings except the Switch's stacking mode, user account, IP address, subnet mask, and default gateway settings.

- **Reset Config** – Returns all configuration settings to the factory default settings except the stacking mode configuration, but does not save the settings or reboot the Switch. If you select this option the Switch configuration will be returned to the factory default settings for the current session only. When the Switch is rebooted, it will return to the last configuration saved to the Switch’s NV-RAM using the Save Changes option.
- **Reset System** – Returns all configuration settings to the factory default settings. If you select this option the Switch configuration will be returned to the factory default settings and then saves the factory default configuration to the Switch’s NV-RAM. The Switch will then reboot. When the Switch has rebooted, it will have the same configuration as when it was delivered from the factory.

Select the reset option you want to perform and click on the **Apply** button.

Restart System

The following window is used to restart the Switch. Access this window by clicking on the **Restart System** link in the **Maintenance** folder.

Click **Yes** after “Do you want to save the settings?” to instruct the Switch to save the current configuration to non-volatile RAM before restarting the Switch.

Clicking the No option instructs the Switch not to save the current configuration before restarting the Switch. All of the configuration information entered from the last time **Save Changes** was executed will be lost.

Click the **Restart** button to restart the Switch.

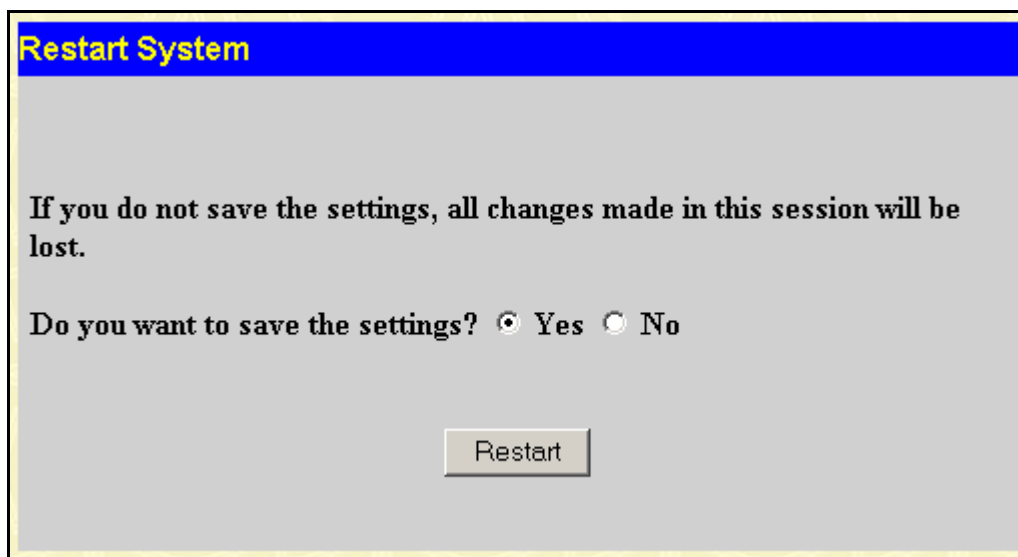


Figure 3- 10. Restart System window



NOTE: Clicking **Yes** is equivalent to executing Save Changes and then restarting the Switch.

Advanced Settings

To view the following window, click **Configuration > Advanced Settings**:

Switch Information (Advanced Settings)	
Serial Port Auto Logout	Never
Serial Port Baud Rate	9600
MAC Address Aging Time (10-1000000)	300
IGMP Snooping	Disabled
Multicast router Only	Disabled
Telnet Status	Enabled
Telnet TCP Port Number(1-65535)	23
Web Status	Enabled
Web TCP Port Number(1-65535)	80
RMON Status	Disabled
GVRP	Disabled
Link Aggregation Algorithm	IP Source
Switch 802.1x	Disabled
Syslog state	Disabled

Figure 3- 11. Switch Information (Advanced Settings) window

The **Advanced Settings** options are summarized in the table below:

Parameter	Description
Serial Port Auto Logout	Select the logout time used for the console interface. This automatically logs the user out after an idle period of time as defined. Choose from the following options: <i>2 Minutes, 5 Minutes, 10 Minutes, 15 Minutes</i> or <i>Never</i> .
Serial Port Baud Rate	Select the baud rate used for the console interface. This automatically logs the user out after an idle period of time as defined. Choose from the following options: <i>9600, 19200, 38400</i> or <i>115200</i> .
MAC Address Aging Time (10-1000000)	This field specifies the length of time a learned MAC Address will remain in the forwarding table without being accessed (that is, how long a learned MAC Address is allowed to remain idle). The default age-out time for the Switch is 300 seconds. To change this, type in a different value representing the MAC address age-out time in seconds. The Aging Time can be set to any value between <i>10</i> and <i>1,000,000</i> seconds.
IGMP Snooping	To enable system-wide IGMP Snooping capability select <i>Enabled</i> . IGMP snooping is <i>Disabled</i> by default. Enabling IGMP snooping allows you to specify use of a multicast router only (see below). To configure IGMP Snooping for individual VLANs, use the IGMP Snooping window in the IGMP folder.

Multicast Router Only	If this option is enabled and IGMP Snooping is also enabled, the Switch forwards all multicast traffic to a multicast-enabled router only. Otherwise, the Switch will forward all multicast traffic to any IP router.
Telnet Status	Telnet configuration is <i>Enabled</i> by default. If you do not want to allow configuration of the system through Telnet choose <i>Disabled</i> .
Telnet TCP Port Number (1-65535)	The Telnet TCP port number. TCP ports are numbered between 1 and 65535. The "well-known" TCP port for the Telnet protocol is 23.
Web Status	Web-based management is <i>Enabled</i> by default. If you choose to disable this by selecting <i>Disabled</i> , you will lose the ability to configure the system through the web interface as soon as these settings are applied.
Web TCP Port Number (1-65535)	The TCP port number currently being utilized by the Switch to connect to the web interface. The "well-known" TCP port for the Web interface is 80.
RMON Status	Remote monitoring (RMON) of the Switch is <i>Enabled</i> or <i>Disabled</i> here.
GVRP	Use this pull-down menu to enable or disable GVRP on the Switch.
Link Aggregation Algorithm	The algorithm that the Switch uses to balance the load across the ports that make up the port trunk group is defined by this definition. Choose <i>MAC Source</i> , <i>MAC Destination</i> , <i>MAC Src & Dest</i> , <i>IP Source</i> , <i>IP Destination</i> , and <i>IP Src & Dest</i> . (See Link Aggregation)
Switch 802.1x	<p>The Switch's 802.1x function may be enabled by port or by MAC Address; the default is <i>Disabled</i>. This field must be enabled to view and configure certain windows for 802.1x. More information regarding 802.1x, its functions and implementation can be found later in this section, under the Port Access Entity folder.</p> <p>Port-Based 802.1x specifies that ports configured for 802.1x are initialized based on the port number only and are subject to any authorization parameters configured.</p> <p>MAC-based 802.1x specifies that ports configured for 802.1x are initialized based on the port number and the MAC address of the computer being authorized and are then subject to any authorization parameters configured.</p>
Syslog State	Use this pull-down menu to enable or disable Syslog.

Click **Apply** to implement changes made.

Switch Stack Management

The DGS-3212SR has a possible twelve gigabit ports that may be used in standalone mode or can be used in a stacking configuration to provide up to 576 10/100 Mbps ports and 12 Gigabit ports in a star architecture. For stacking, the DGS-3212SR will be the master switch of a stack of DES-3226S switches. For more information on stacking see Sections 1 and 2 of this manual regarding stacking and the DGS-3212SR.

Configure Stacking

The web manager can be used to enable or disable the stacking mode and to enable stacking for any of the built-in combination ports.

The Switch stack displayed in the upper right-hand corner of your web-browser is a virtual representation of the actual stack (see example below). The icons appear in the same order as their respective Switches.

When the Switches are properly interconnected, information about the resulting Switch stack is displayed in the **Stack Mode Setup** window. To view stacking information or to enable/disable the stacking mode, click the **Stack Information** link in the **Monitoring** folder.

Stack Mode Setup												
Stack Topology	Disable											
Setting	STANDALONE											
Current	STANDALONE											
Stack Mode State	Disable ▾											
Stack Port	1	2	3	4	5	6	7	8	9	10	11	12
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Apply												
Total Entries : 1												
Stack Information Table												
ID	MAC Address	Port Range	Mode	Version	RPS Status	Model Name						
15	00-00-33-12-00-20	1-12	STANDALONE	3.00-B01	Not Present	DGS-3212SR						

Figure 3- 12. Stack Mode Setup (stacking disabled) window

To enable the stacking mode, follow the steps listed below.

1. Select *Enabled* from the Stack Mode State drop-down menu.
2. Click on the **Apply** button.

To enable stacking for one or more built-in combination ports, do the following:

1. Select *Enabled* from the Stack Mode State drop-down menu.
2. Select the Stack Port by clicking to check a corresponding selection box.

The **Stack Information Table** displays the read-only information listed in the table on the next page.

The current order in the Switch stack is also displayed on the front panel of each slave Switch, under the STACK NO. heading. The Stack ID LED display on the front panel of the DGS-3212SR will always display an F (15 in hex), regardless of whether the DGS-3212SR is the master Switch in a Switch stack or in standalone mode.

Below is an example of the **Stack Mode Setup** window with stacking mode enabled.

Stack Mode Setup												
Stack Topology	Auto Detect											
Setting	MASTER											
Current	MASTER											
Stack Mode State	Enable ▾											
Stack Port	1	2	3	4	5	6	7	8	9	10	11	12
	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Apply												
Total Entries : 2												
Stack Information Table												
ID	MAC Address	Port Range	Mode	Version	RPS Status	Model Name						
15	00-00-33-12-00-20	1-12	MASTER	3.00-B01	Not Present	DGS-3212SR						
9	00-05-5d-17-ff-60	451-476	AUTO	4.02-B26	Not Support	DES-3226S						

Figure 3- 13. Stack Mode Setup (stacking enabled) window

Variables in this window are described below:

Parameter	Description
ID	Displays the Switch's order in the stack. The Switch with a unit ID of 15 is the master Switch.
MAC Address	Displays the unique address of the Switch assigned by the factory.
Port Range	Displays the total number of ports on the Switch. Note that the stacking port is included in the total count.
Mode	Displays the method used to determine the stacking order of the Switches in the Switch stack.
Version	Displays the version number of the stacking firmware.
RPS Status	Displays the status of an optional Redundant Power Supply.
Model Name	Displays the model name of the corresponding Switch in a stack.

When the stacked group is connected and properly configured, the virtual stack appears in the upper right-hand corner of the web page.

Stack Mode Setup

Stack Topology	Auto Detect																								
Setting	MASTER																								
Current	MASTER																								
Stack Mode State	Enable																								
Stack Port	<table border="1"> <tr> <th>1</th><th>2</th><th>3</th><th>4</th><th>5</th><th>6</th><th>7</th><th>8</th><th>9</th><th>10</th><th>11</th><th>12</th> </tr> <tr> <td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input checked="" type="checkbox"/></td> </tr> </table>	1	2	3	4	5	6	7	8	9	10	11	12	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
1	2	3	4	5	6	7	8	9	10	11	12														
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>														

Apply

Total Entries : 2

Stack Information Table

ID	MAC Address	Port Range	Mode	Version	RPS Status	Model Name
15	00-00-33-12-00-20	1-12	MASTER	3.00-B01	Not Present	DGS-3212SR
9	00-05-5d-17-f6-60	451-476	AUTO	4.02-B26	Not Support	DES-3226S

Figure 3- 14. Stack Information web page with updated stack configuration

<h2>Section 4</h2>

Basic Configuration

Switch Information

IP Address

Advanced Settings

Port Configuration

Port Description

Port Mirroring

Traffic Control

Link Aggregation

Port Access Entity

IGMP Snooping

Spanning Tree

Forwarding & Filtering

VLANs

QoS

MAC Notification

Port Security Configuration

System Log Server

SNTP Settings

Access Profile Table

The DGS-3212SR's Web interface is divided into six main folders: **Configuration**, **Security**, **Management**, **Monitoring**, **Maintenance**, and **Single IP Management**. This chapter describes all of the **Configuration** sub-folders and windows

Switch Information

The first page displayed upon logging in is the **System Information (Basic Settings)** window. This window can be accessed at any time by clicking the **Switch Information** link in the **Configuration** folder.

Switch Information (Basic Settings)	
Device Type	DGS-3212SR Gigabit-Ethernet Switch
Module1 Type	DEM-340MG 4-port mini-GBIC (SFP) module
Module2 Type	DEM-540 4-port stacking module
Boot PROM Version	Build 2.00.002
Firmware Version	Build 3.00-B01
Hardware Version	2A1
Device S/N	
MAC Address	00:00:33:12:00:20
System Name	<input type="text"/>
System Location	<input type="text"/>
System Contact	<input type="text"/>
Apply	

Figure 4- 1. Switch Information (Basic Settings) window

This window displays general information about the Switch including its MAC Address, Hardware Boot PROM and Firmware versions, and installed module information.

IP Address

Switch IP settings may initially be set using the console interface prior to connecting to it through the Ethernet. If the Switch IP address has not yet been changed, read the Introduction of the CLI Reference or skip ahead to the end of this section for a quick description of how to use the console port and CLI IP settings commands to establish IP settings for the Switch.

To change IP settings using the web manager you must access the **Switch IP Settings** window located in the **Configuration** folder.

To configure the Switch's IP address:

Open the **Configuration** folder and click the **IP Address** link. The web manager will display the **Switch IP Settings** window below:

Switch IP Settings	
Get IP From	Manual ▾
IP Address	10.24.22.9
Subnet Mask	255.0.0.0
Default Gateway	0.0.0.0
VID	1
Apply	

Figure 4- 2. Switch IP Settings window



NOTE: The Switch's factory default IP address is 10.90.90.90 with a subnet mask of 255.0.0.0 and a default gateway of 0.0.0.0.

To manually assign the Switch's IP address, subnet mask, and default gateway address:

- Select *Manual* from the Get IP From drop-down menu.
- Enter the appropriate IP address and subnet mask.

If you want to access the Switch from a different subnet from the one it is installed on, enter the IP address of the gateway. If you will manage the Switch from the subnet on which it is installed, you can leave the default address (0.0.0.0) in this field.

If no VLANs have been previously configured on the Switch, you can use the default VLAN ID (VID) 1. The default VLAN contains all of the Switch ports as members. If VLANs have been previously configured on the Switch, you will need to enter the VLAN ID of the VLAN that contains the port connected to the management station that will access the Switch. The Switch will allow management access from stations with the same VID listed here.

To use the BOOTP or DHCP protocols to assign the Switch an IP address, subnet mask, and default gateway address:

Use the Get IP From pull-down menu to choose from *BOOTP* or *DHCP*. This selects how the Switch will be assigned an IP address on the next reboot.

The **Switch IP Settings** options are:

Parameter	Description
BOOTP	The Switch will send out a BOOTP broadcast request when it is powered up. The BOOTP protocol allows IP addresses, network masks, and default gateways to be assigned by a central BOOTP server. If this option is set, the Switch will first look for a BOOTP server to provide it with this information before using the default or previously entered settings.
DHCP	The Switch will send out a DHCP broadcast request when it is powered up. The DHCP protocol allows IP addresses, network masks, and default gateways to be assigned by a DHCP server. If this option is set, the Switch will first look for a DHCP server to provide it with this information before using the default or previously entered settings.
Manual	Allows the entry of an IP address, Subnet Mask, and a Default Gateway for the Switch. These fields should be of the form xxx.xxx.xxx.xxx, where each xxx is a number (represented in decimal form) between 0 and 255. This address should be a unique address on the network assigned for use by the network administrator.

	The fields which require entries under this option are as follows:
Subnet Mask	A Bitmask that determines the extent of the subnet that the Switch is on. Should be of the form xxx.xxx.xxx.xxx, where each xxx is a number (represented in decimal) between 0 and 255. The value should be 255.0.0.0 for a Class A network, 255.255.0.0 for a Class B network, and 255.255.255.0 for a Class C network, but custom subnet masks are allowed.
Default Gateway	IP address that determines where packets with a destination address outside the current subnet should be sent. This is usually the address of a router or a host acting as an IP gateway. If your network is not part of an intranet, or you do not want the Switch to be accessible outside your local network, you can leave this field unchanged.
VID	This allows the entry of a VLAN ID from which a management station will be allowed to manage the Switch using TCP/IP (in-band via web manager or Telnet). Management stations that are on VLANs other than the one entered in the VID field will not be able to manage the Switch in-band unless their IP addresses are entered in the Security IP Management window. If VLANs have not yet been configured for the Switch, The default VID (1) contains all of the Switch's ports. There are no entries in the Security IP Management table, by default – so any management station that can connect to the Switch can access the Switch until either Management Station IP Addresses are assigned or SNMP settings are configured to control management access.

Setting the Switch's IP Address using the Console Interface

Each Switch must be assigned its own IP Address, which is used for communication with an SNMP network manager or other TCP/IP application (for example BOOTP, TFTP). The Switch's default IP address is 10.90.90.90. You can change the default Switch IP address to meet the specification of your networking address scheme.

The IP address for the Switch must be set before it can be managed with the Web-based manager. The Switch IP address can be automatically set using BOOTP or DHCP protocols, in which case the actual address assigned to the Switch must be known.

The IP address may be set using the Command Line Interface (CLI) over the console serial port as follows:

Starting at the command line prompt, enter the commands **config ipif System ipaddress xxx.xxx.xxx.xxx/yyy.yyy.yyy.yyy**. Where the x's represent the IP address to be assigned to the IP interface named **System** and the y's represent the corresponding subnet mask.

Alternatively, you can enter **config ipif System ipaddress xxx.xxx.xxx.xxx/z**. Where the x's represent the IP address to be assigned to the IP interface named **System** and the z represents the corresponding number of subnets in CIDR notation.

The IP interface named **System** on the Switch can be assigned an IP address and subnet mask that can then be used to connect a management station to the Switch's Telnet or Web-based management agent.

The system message **Success** indicates that the command was executed successfully. The Switch can now be configured and managed via Telnet and the CLI or via the Web-based management agent using the above IP address to connect to the Switch.

Advanced Settings

To view the following window, click **Configuration > Advanced Settings**:

Switch Information (Advanced Settings)	
Serial Port Auto Logout	Never
Serial Port Baud Rate	9600
MAC Address Aging Time (10-1000000)	300
IGMP Snooping	Disabled
Multicast router Only	Disabled
Telnet Status	Enabled
Telnet TCP Port Number(1-65535)	23
Web Status	Enabled
Web TCP Port Number(1-65535)	80
RMON Status	Disabled
GVRP	Disabled
Link Aggregation Algorithm	IP Source
Switch 802.1x	Disabled
Syslog state	Disabled

Apply

Figure 4- 3. Switch Information (Advanced Settings) window

The Advanced Settings options are summarized in the table below:

Parameter	Description
Serial Port Auto Logout	Select the logout time used for the console interface. This automatically logs the user out after an idle period of time as defined. Choose from the following options: <i>2 Minutes, 5 Minutes, 10 Minutes, 15 Minutes</i> or <i>Never</i> .
Serial Port Baud Rate	Select the baud rate used for the console interface. This automatically logs the user out after an idle period of time as defined. Choose from the following options: <i>9600, 19200, 38400</i> or <i>115200</i> .
MAC Address Aging Time (10-1000000)	This field specifies the length of time a learned MAC Address will remain in the forwarding table without being accessed (that is, how long a learned MAC Address is allowed to remain idle). The default age-out time for the Switch is 300 seconds. To change this, type in a different value representing the MAC address age-out time in seconds. The Aging Time can be set to any value between <i>10</i> and <i>1,000,000</i> seconds.
IGMP Snooping	To enable system-wide IGMP Snooping capability select <i>Enabled</i> . IGMP snooping is <i>Disabled</i> by default. Enabling IGMP snooping allows you to specify use of a multicast router only (see below). To configure IGMP Snooping for individual VLANs, use the IGMP Snooping window in the IGMP folder.

Multicast Router Only	If this option is enabled and IGMP Snooping is also enabled, the Switch forwards all multicast traffic to a multicast-enabled router only. Otherwise, the Switch will forward all multicast traffic to any IP router.
Telnet Status	Telnet configuration is <i>Enabled</i> by default. If you do not want to allow configuration of the system through Telnet choose <i>Disabled</i> .
Telnet TCP Port Number (1-65535)	The Telnet TCP port number. TCP ports are numbered between 1 and 65535. The "well-known" TCP port for the Telnet protocol is 23.
Web Status	Web-based management is <i>Enabled</i> by default. If you choose to disable this by selecting <i>Disabled</i> , you will lose the ability to configure the system through the web interface as soon as these settings are applied.
Web TCP Port Number (1-65535)	The TCP port number currently being utilized by the Switch to connect to the web interface. The "well-known" TCP port for the Web interface is 80.
RMON Status	Remote monitoring (RMON) of the Switch is <i>Enabled</i> or <i>Disabled</i> here.
GVRP	Use this pull-down menu to enable or disable GVRP on the Switch.
Link Aggregation Algorithm	The algorithm that the Switch uses to balance the load across the ports that make up the port trunk group is defined by this definition. Choose <i>MAC Source</i> , <i>MAC Destination</i> , <i>MAC Src & Dest</i> , <i>IP Source</i> , <i>IP Destination</i> , and <i>IP Src & Dest</i> . (See Link Aggregation)
Switch 802.1x	<p>The Switch's 802.1x function may be enabled by port or by MAC Address; the default is <i>Disabled</i>. This field must be enabled to view and configure certain windows for 802.1x. More information regarding 802.1x, its functions and implementation can be found later in this section, under the Port Access Entity folder.</p> <p>Port-Based 802.1x specifies that ports configured for 802.1x are initialized based on the port number only and are subject to any authorization parameters configured.</p> <p>MAC-based 802.1x specifies that ports configured for 802.1x are initialized based on the port number and the MAC address of the computer being authorized and are then subject to any authorization parameters configured.</p>
Syslog State	Use this pull-down menu to enable or disable Syslog functions on the Switch.

Click **Apply** to implement changes made.

Port Configuration

To configure basic port settings such as port speed, duplex, and learning state, use the **Port Configuration** window.

Click the **Port Configuration** link in the **Configuration** folder:

Port Configuration							
Unit	From	To	State	Speed/Duplex	Flow Control	Learning	Apply
15	Port 1	Port 1	Disabled	Auto	Disabled	Disabled	Apply
The Port Information Table							
Port	State	Speed/Duplex	Flow Control	Connection	Learning		
1	Enabled	Auto	Disabled	Link Down	Enabled		
2	Enabled	Auto	Disabled	100M/Full/None	Enabled		
3	Enabled	Auto	Disabled	Link Down	Enabled		
4	Enabled	Auto	Disabled	Link Down	Enabled		
5	Enabled	Auto	Disabled	Link Down	Enabled		
6	Enabled	Auto	Disabled	Link Down	Enabled		
7	Enabled	Auto	Disabled	Link Down	Enabled		
8	Stacking Link Port, No device attached						
9	Stacking Link Port, No device attached						
10	Stacking Link Port, No device attached						
11	Stacking Link Port, No device attached						
12	Stacking Link Port, No device attached						

Figure 4- 4. Port Configuration window

To configure Switch ports:

- Choose the Unit from the pull-down menu.
- Choose the port or sequential range of ports using the From...To... port pull-down menus.
- Use the remaining pull-down menus to configure the parameters described in the table below.

The configurable parameters for ports include the following:

Parameter	Description
Unit	Select the Switch in the Switch stack to be configured using the pull-down menu. 15 a switch in standalone mode.
From and To	Select a port or range of ports to be configured
State <Enabled>	Toggle the State field to either enable or disable a given port.
Speed/Duplex <Auto>	Toggle the Speed/Duplex field to either select the speed and duplex/half-duplex state of the port. <i>Auto</i> denotes auto-negotiation between 10 and 100 Mbps devices, in full- or half-duplex. The <i>Auto</i> setting allows the port to automatically determine the fastest settings the device the port is connected to can handle, and then to use those settings. The other options are <i>Auto</i> , <i>10M/Half</i> , <i>10M/Full</i> , <i>100M/Half</i> and <i>100M/Full</i> , <i>1000M/Full_M</i> and <i>1000M/Full_S</i> . There is no automatic adjustment of

	<p>port settings with any option other than Auto.</p> <p>The Switch allows the user to configure two types of gigabit connections; <i>1000M/Full_M</i> and <i>1000M/Full_S</i>. Gigabit connections are only supported in full duplex connections and take on certain characteristics that are different from the other choices listed.</p> <p>The <i>1000M/Full_M</i> (master) and <i>1000M/Full_S</i> (slave) parameters refer to connections running a 1000BASE-T cable for connection between the Switch port and other device capable of a gigabit connection. The master setting (<i>1000M/Full_M</i>) will allow the port to advertise capabilities related to duplex, speed and physical layer type. The master setting will also determine the master and slave relationship between the two connected physical layers. This relationship is necessary for establishing the timing control between the two physical layers. The timing control is set on a master physical layer by a local source. The slave setting (<i>1000M/Full_S</i>) uses loop timing, where the timing comes from a data stream received from the master. If one connection is set for <i>1000M/Full_M</i>, the other side of the connection must be set for <i>1000M/Full_S</i>. Any other configuration will result in a link down status for both ports.</p>
Flow Control	<p>Displays the flow control scheme used for the various port configurations. Ports configured for full-duplex use 802.3x flow control, half-duplex ports use backpressure flow control, and Auto ports use an automatic selection of the two. The default is <i>Disabled</i>.</p>
Learning	<p>Enable or disable MAC address learning for the selected ports. When <i>Enabled</i>, destination and source MAC addresses are automatically listed in the forwarding table. When learning is <i>Disabled</i>, MAC addresses must be manually entered into the forwarding table. This is sometimes done for reasons of security or efficiency.</p>

Click **Apply** to implement changes made.

Port Description

The Switch supports a port description feature where the user may name various ports on the Switch. To assign names or descriptions to various ports, click **Port Description** on the **Configuration** folder:

Port Description Setting				
Unit	From	To	Description	Apply
15	Port 1	Port 1	<input type="text"/>	Apply

Port Description Table	
Port	Description
1	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	

Figure 4- 5. Port Description Setting window

The user may set the following parameters:

Parameter	Description
Unit	This is the Unit ID of a Switch in a Switch stack. The number 15 indicates a DGS-3212SR Switch in standalone mode.
From/To	A consecutive group of ports may be configured starting with the selected port.
Description	Enter a description of the port or ports.

Click **Apply** to implement changes made.

Port Mirroring

The Switch allows you to copy frames transmitted and received on a port and redirect the copies to another port. You can attach a monitoring device to the mirrored port, such as a sniffer or an RMON probe, to view details about the packets passing through the first port. Follow the steps below to set up port mirroring. To view this window, click **Configuration > Port Mirroring**.

Setup Port Mirroring												
Target Port	Unit: 15		Port: Port 2									
Status	Disabled											
Source Unit	15											
Source Port	1	2	3	4	5	6	7	8	9	10	11	12
None	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Ingress	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Egress	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Both	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Apply												
<p>Note(1): The "Source Port" and "Target Port" should be different, or the setup will be invalid.</p> <p>Note(2): The target port should be a non-trunked port.</p>												

Figure 4- 6. Setup Port Mirroring window

To configure a mirror port:

- Select the Source Unit containing the port that is being mirrored.
- Configure how the port is to be mirrored by selecting the direction that will be mirrored. Choose Ingress, Egress, or Both for the mirrored port by clicking the appropriate radio button for the port.
- Select the Target Port using the Unit and Port drop-down menus.
- Change the Status drop-down menu to *Enabled*.
- Click **Apply** to let the changes take effect.



NOTE: You cannot mirror a fast port onto a slower port. For example, if you try to mirror the traffic from a 100 Mbps port onto a 10 Mbps port, this can cause throughput problems. The port you are copying frames from should always support an equal or lower speed than the port to which you are sending the copies. In addition, the target port for the mirroring cannot be a member of a trunk group. Please note a target port and a source port cannot be the same port.

Traffic Control

Use the **Traffic Control Setting** window to enable or disable storm control and adjust the threshold for multicast and broadcast storms, as well as DLF (Destination Look Up Failure). Traffic control settings are applied to individual Switch modules. To view this window, click **Configuration > Traffic Control**.

Traffic Control Setting						
Unit	Group	Broadcast Storm	Multicast Storm	Destination Lookup Fail	Threshold	Apply
15	1	Disabled	Enabled	Enabled	128	Apply

Traffic Control Information Table				
Group[ports]	Broadcast Storm	Multicast Storm	Destination Lookup Fail	Threshold
1[1]	Disabled	Disabled	Disabled	128
2[2]	Disabled	Disabled	Disabled	128
3[3]	Disabled	Disabled	Disabled	128
4[4]	Disabled	Disabled	Disabled	128
5[5]	Disabled	Disabled	Disabled	128
6[6]	Disabled	Disabled	Disabled	128
7[7]	Disabled	Disabled	Disabled	128
8[8]	Disabled	Disabled	Disabled	128
9[9]	Disabled	Disabled	Disabled	128
10[10]	Disabled	Disabled	Disabled	128
11[11]	Disabled	Disabled	Disabled	128
12[12]	Disabled	Disabled	Disabled	128

Figure 4- 7. Traffic Control Setting window

Traffic or storm control is used to stop broadcast, multicast or ARP request storms that may result when a loop is created. The Destination Lookup Failure control is a method of shutting down a loop when a storm is formed because a MAC address cannot be located in the Switch's forwarding database and it must send a packet to all ports or all ports on a VLAN.

To configure Traffic Control, select the Unit (Unit ID of a Switch in a Switch stack – 15 for a Switch in standalone mode) you want to configure. Broadcast Storm, Multicast Storm and Destination Lookup Failure may be *Enabled* or *Disabled*. The Threshold value is the upper threshold at which the specified traffic control is switched on. This is the number of Broadcast, Multicast or DLF packets, in Kbps, received by the Switch that will trigger the storm traffic control measures. The Threshold value can be set from 0 to 255 packets. The default setting is 128.

Link Aggregation

Understanding Port Trunk Groups

Port trunk groups are used to combine a number of ports together to make a single high-bandwidth data pipeline.

The DGS-3212SR supports up to six port trunk groups with two to eight ports in each group. A potential bit rate of 8000 Mbps can be achieved.

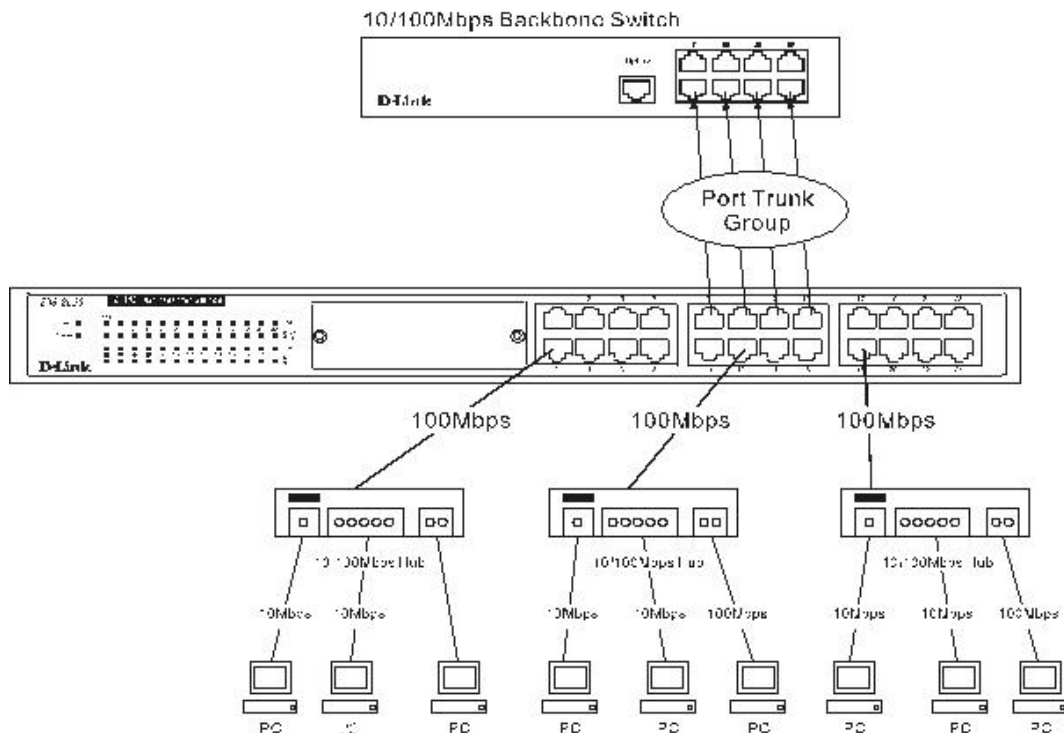


Figure 4- 8. Example of Port Trunk Group

The Switch treats all ports in a trunk group as a single port. Data transmitted to a specific host (destination address) will always be transmitted over the same port in a trunk group. This allows packets in a data stream to arrive in the same order they were sent.



NOTE: If any ports within the trunk group become disconnected, packets intended for the disconnected port will be load shared among the other uplinked ports of the link aggregation group.

Link aggregation allows several ports to be grouped together and to act as a single link. This gives a bandwidth that is a multiple of a single link's bandwidth.

Link aggregation is most commonly used to link a bandwidth intensive network device or devices, such as a server, to the backbone of a network.

The Switch allows the creation of up to six link aggregation groups, each group consisting of 2 to 8 links (ports). All of the ports in the group must be members of the same VLAN, and their STP status, static multicast, traffic control, traffic segmentation and 802.1p default priority configurations must be identical. Port locking, port mirroring and 802.1X must not be enabled on the trunk group. Further, the aggregated links must all be of the same speed and should be configured as full duplex.

The Master Port of the group is to be configured by the user, and all configuration options, including the VLAN configuration that can be applied to the Master Port, are applied to the entire link aggregation group.

Load balancing is automatically applied to the ports in the aggregated group, and a link failure within the group causes the network traffic to be directed to the remaining links in the group.

The Spanning Tree Protocol will treat a link aggregation group as a single link, on the Switch level. On the port level, the STP will use the port parameters of the Master Port in the calculation of port cost and in determining the state of the link aggregation group. If two redundant link aggregation groups are configured on the Switch, STP will block one entire group, in the same way STP will block a single port that has a redundant link.

To configure port trunking, click on the **Link Aggregation** hyperlink in the **Configuration** folder and then click **Link Aggregation**:

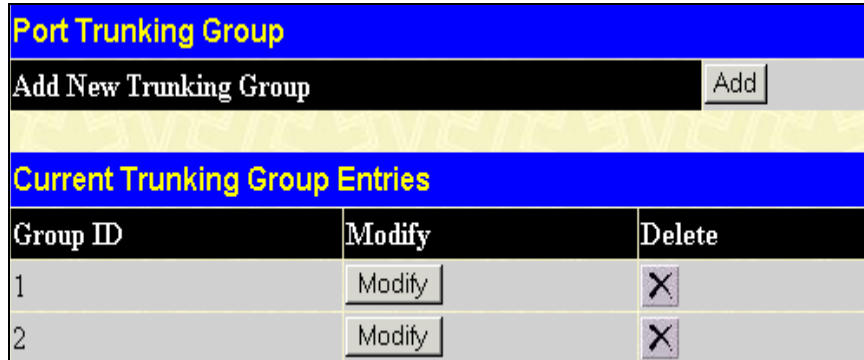


Figure 4- 9. Port Trunking Group window

To configure port trunk groups, click the **Add** button to add a new trunk group and then use the **Port Trunking Configuration** window below to set up trunk groups. To change or delete a port trunk group, click the **Modify** or **Delete** option in the Current Trunking Group Entries table pictured above.

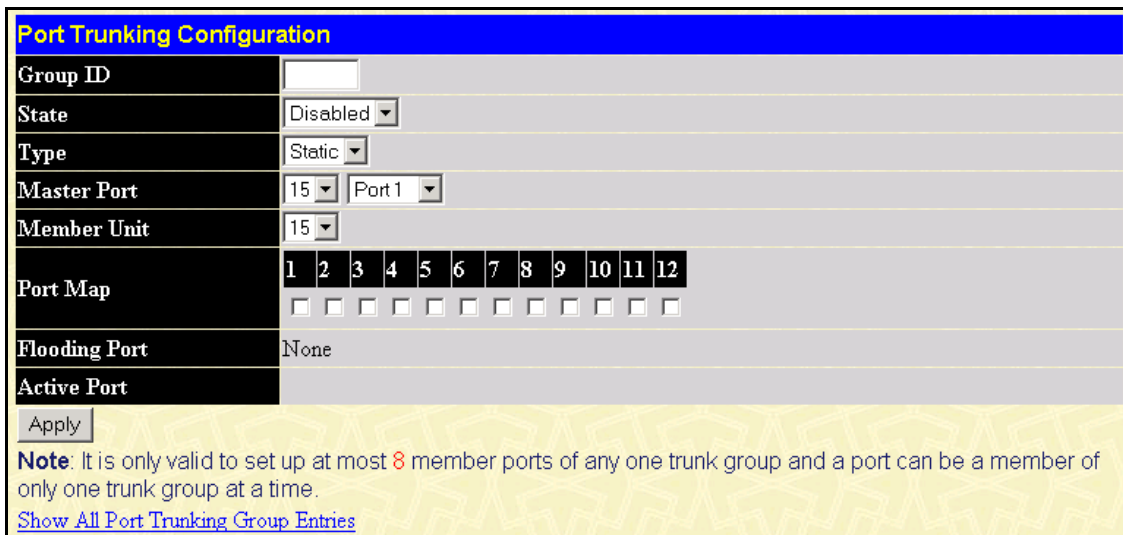


Figure 4- 10. Port Trunking Configuration window

The user-changeable parameters are as follows:

Parameter	Description
Group ID	Select an ID number for the group.
State	Trunk groups can be toggled between <i>Enabled</i> and <i>Disabled</i> . This is used to turn a port trunking group on or off. This is useful for diagnostics, to quickly isolate a bandwidth intensive network device or to have an absolute backup aggregation group that is not under automatic control.
Type	This pull-down menu allows you to select between <i>Static</i> and <i>LACP</i> (Link Aggregation Control Protocol.) LACP allows for the automatic detection of links in a Port Trunking Group.

Master Port	Choose the Master port for the trunk group.
Member Unit	Choose the Switch unit on which to set up a trunk group. Trunk groups must be confined to ports on a single Switch.
Port Map	Choose the members of the trunked group. Up to eight ports per group can be assigned to a group.
Flooding Port	A trunking group must designate one port to allow transmission of broadcasts and unknown unicasts.
Active Port	Shows the port that is currently forwarding packets.

Click **Apply** to implement changes made.

LACP Port Settings

The **LACP Port Mode Setup** window is used in conjunction with the **Link Aggregation** windows to create port trunking groups on the Switch. Using the following window, the user may set which ports will be active and passive in processing and sending LACP control frames. To view the following window, click **Configuration > Link Aggregation > LACP Port Setting**.

LACP Port Mode Setup

Unit	From	To	Mode	Apply
15 ▾	Port 1 ▾	Port 1 ▾	Active ▾	Apply

LACP Port Mode Table

Port	Mode
1	Stackig Link Port
2	Passive
3	Passive
4	Passive
5	Stackig Link Port
6	Stackig Link Port
7	Stackig Link Port
8	Stackig Link Port
9	Passive
10	Passive
11	Passive
12	Passive

Figure 4- 11. LACP Port Mode Setup window

The user may set the following parameters:

Parameter	Description
Unit	This is the Unit ID of a Switch in a Switch stack. The number 15 indicates a DGS-3212SR Switch in standalone mode.
From/To	A consecutive group of ports may be configured starting with the selected port.
Mode	<p><i>Active</i> – Active LACP ports are capable of processing and sending LACP control frames. This allows LACP compliant devices to negotiate the aggregated link so the group may be changed dynamically as needs require. In order to utilize the ability to change an aggregated port group, that is, to add or subtract ports from the group, at least one of the participating devices must designate LACP ports as active. Both devices must support LACP.</p> <p><i>Passive</i> – LACP ports that are designated as passive cannot initially send LACP control frames. In order to allow the linked port group to negotiate adjustments and make changes dynamically, at one end of the connection must have “active” LACP ports (see above).</p>

After setting the previous parameters, click **Apply** to allow your changes to be implemented. The LACP Port Mode Table shows which ports are active and/or passive.

Port Access Entity (802.1X)

802.1x Port-Based and MAC-Based Access Control

The IEEE 802.1x standard is a security measure for authorizing and authenticating users to gain access to various wired or wireless devices on a specified Local Area Network by using a Client and Server based access control model. This is accomplished by using a RADIUS server to authenticate users trying to access a network by relaying Extensible Authentication Protocol over LAN (EAPOL) packets between the Client and the Server. The following figure represents a basic EAPOL packet:

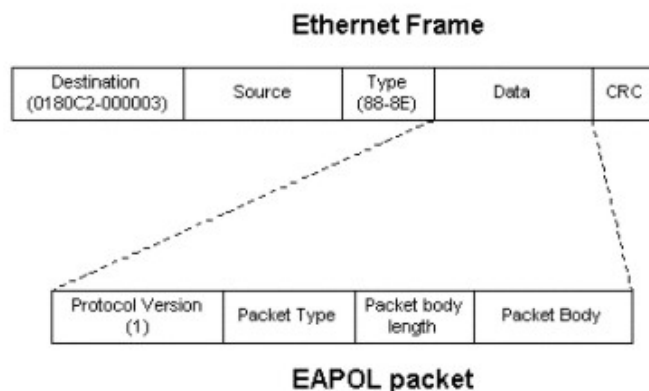


Figure 4- 12. The EAPOL Packet

Utilizing this method, unauthorized devices are restricted from connecting to a LAN through a port to which the user is connected. EAPOL packets are the only traffic that can be transmitted through the specific port until authorization is granted. The 802.1x Access Control method holds three roles, each of which are vital to creating and upkeeping a stable and working Access Control security method.

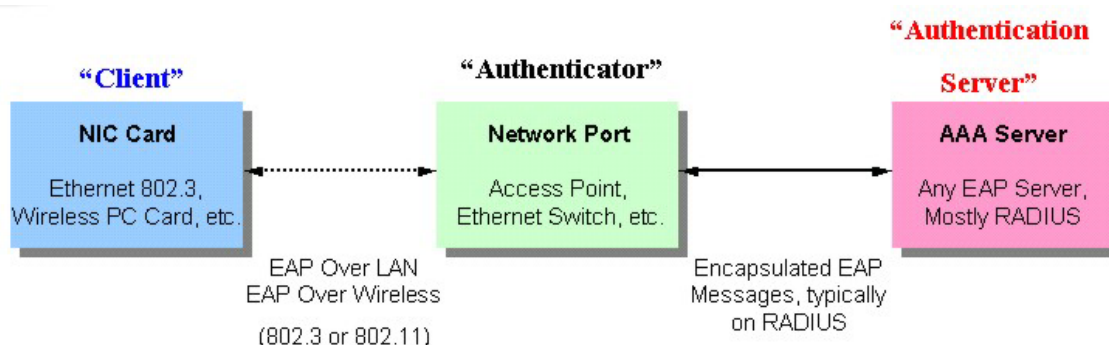


Figure 4- 13. The three roles of 802.1x

The following section will explain the three roles of Client, Authenticator and Authentication Server in greater detail.

Authentication Server

The Authentication Server is a remote device that must be running a RADIUS Server program and must be configured properly on the Authenticator (Switch). Clients connected to a port on the Switch must be authenticated by the Authentication Server (RADIUS) before attaining any services offered by the Switch on the LAN. The role of the Authentication Server is to certify the identity of the Client attempting to access the network by exchanging secure information between the RADIUS server and the Client through EAPOL packets and, in turn, informs the Switch whether or not the Client is granted access to the LAN and/or switches services.

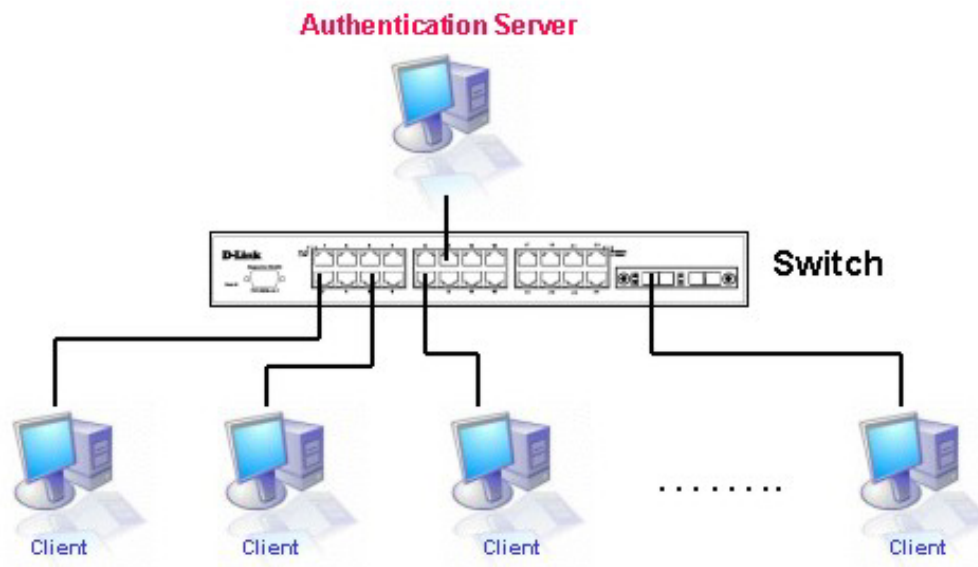


Figure 4- 14. The Authentication Server

Authenticator

The Authenticator (the Switch) is an intermediary between the Authentication Server and the Client. The Authenticator serves two purposes when utilizing 802.1x. The first purpose is to request certification information from the Client through EAPOL packets, which is the only information allowed to pass through the Authenticator before access is granted to the Client. The second purpose of the Authenticator is to verify the information gathered from the Client with the Authentication Server, and to then relay that information back to the Client.

Three steps must be implemented on the Switch to properly configure the Authenticator.

1. The 802.1x State must be *Enabled*. (**Configuration / Advanced Settings**)
2. The 802.1x settings must be implemented by port (**Configuration / Port Access Entity / Configure Authenticator**)
3. A RADIUS server must be configured on the Switch. (**Configuration / Port Access Entity / RADIUS Server**)

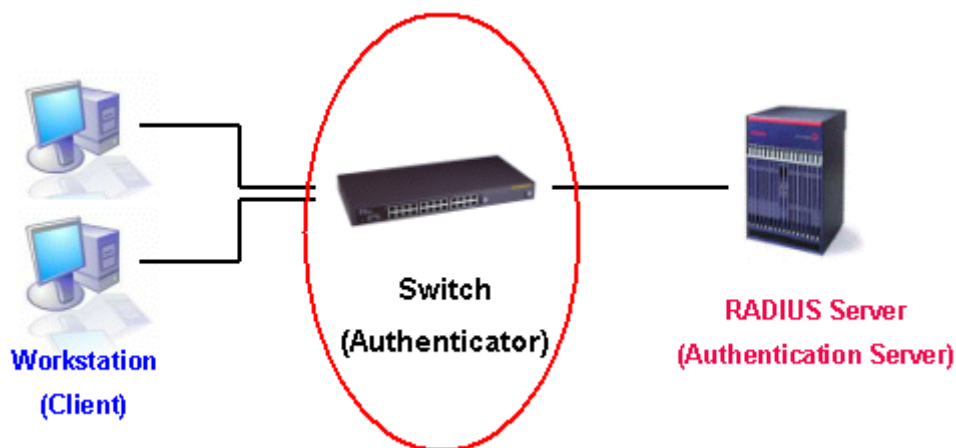


Figure 4- 15. The Authenticator

Client

The Client is simply the end station that wishes to gain access to the LAN or switch services. All end stations must be running software that is compliant with the 802.1x protocol. For users running Windows XP, that software is included within the operating system. All other users are required to attain 802.1x client software from an outside source. The Client will request access to the LAN and or Switch through EAPOL packets and, in turn will respond to requests from the Switch.

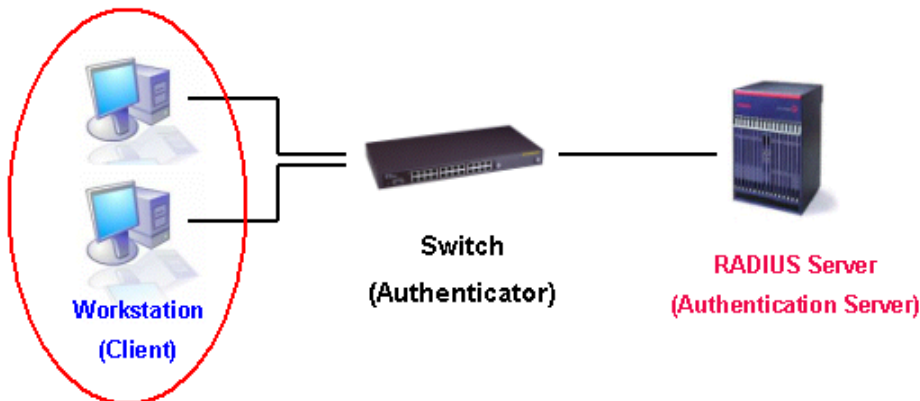


Figure 4- 16. The Client

Authentication Process

Utilizing the three roles stated above, the 802.1x protocol provides a stable and secure way of authorizing and authenticating users attempting to access the network. Only EAPOL traffic is allowed to pass through the specified port before a successful authentication is made. This port is “locked” until the point when a Client with the correct username and password (and MAC address if 802.1x is enabled by MAC address) is granted access and therefore successfully “unlocks” the port. Once unlocked, normal traffic is allowed to pass through the port. The following figure displays a more detailed explanation of how the authentication process is completed between the three roles stated above.

802.1X Authentication process

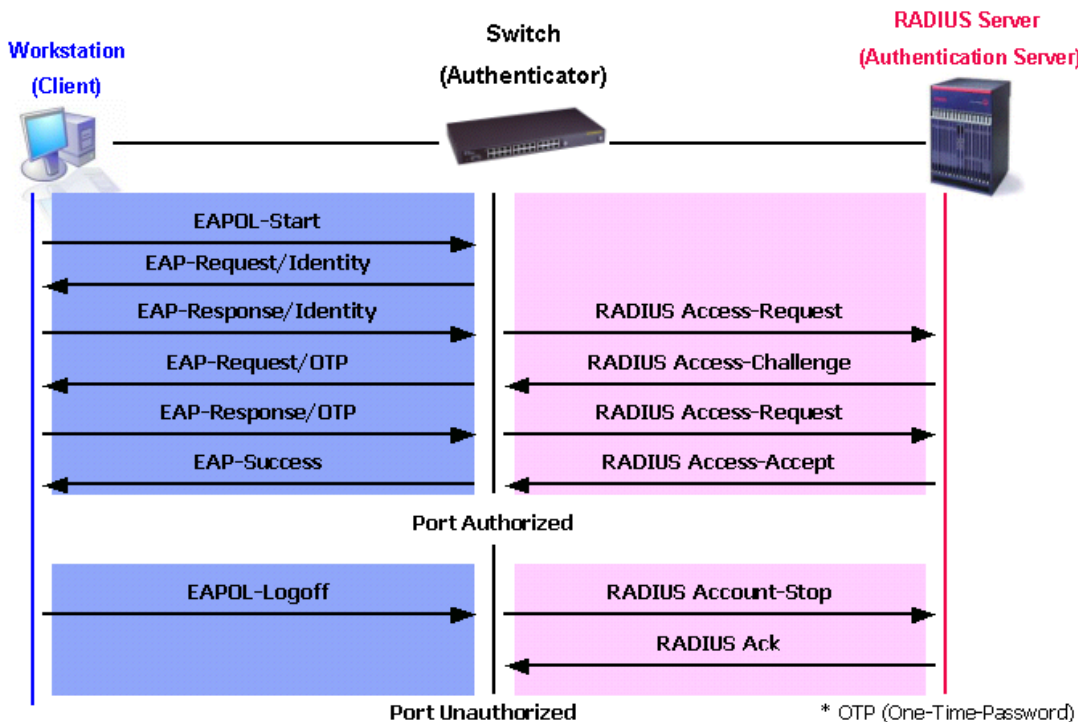


Figure 4- 17. The 802.1x Authentication Process

The D-Link implementation of 802.1x allows network administrators to choose between two types of Access Control used on the Switch, which are:

1. Port-Based Access Control – This method requires only one user to be authenticated per port by a remote RADIUS server to allow the remaining users on the same port access to the network.
2. MAC-Based Access Control – Using this method, the Switch will automatically learn up to three MAC addresses by port and set them in a list. Each MAC address must be authenticated by the Switch using a remote RADIUS server before being allowed access to the Network.

Understanding 802.1x Port-based and MAC-based Network Access Control

The original intent behind the development of 802.1X was to leverage the characteristics of point-to-point in LANs. As any single LAN segment in such infrastructures has no more than two devices attached to it, one of which is a Bridge Port. The Bridge Port detects events that indicate the attachment of an active device at the remote end of the link, or an active device becoming inactive. These events can be used to control the authorization state of the Port and initiate the process of authenticating the attached device if the Port is unauthorized. This is the Port-Based Network Access Control.

Port-Based Network Access Control

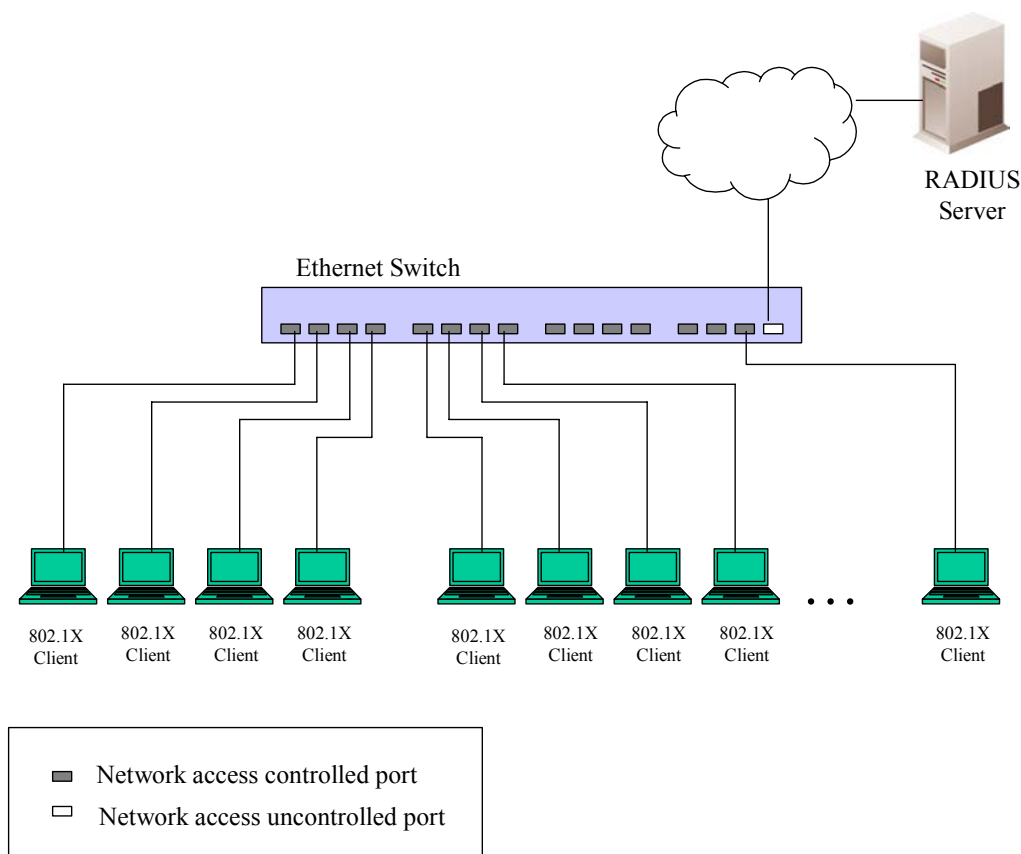


Figure 4- 18. Example of Typical Port-Based Configuration

Once the connected device has successfully been authenticated, the Port then becomes Authorized, and all subsequent traffic on the Port is not subject to access control restriction until an event occurs that causes the Port to become Unauthorized. Hence, if the Port is actually connected to a shared media LAN segment with more than one attached device, successfully authenticating one of the attached devices effectively provides access to the LAN for all devices on the shared segment. Clearly, the security offered in this situation is open to attack.

MAC-Based Network Access Control


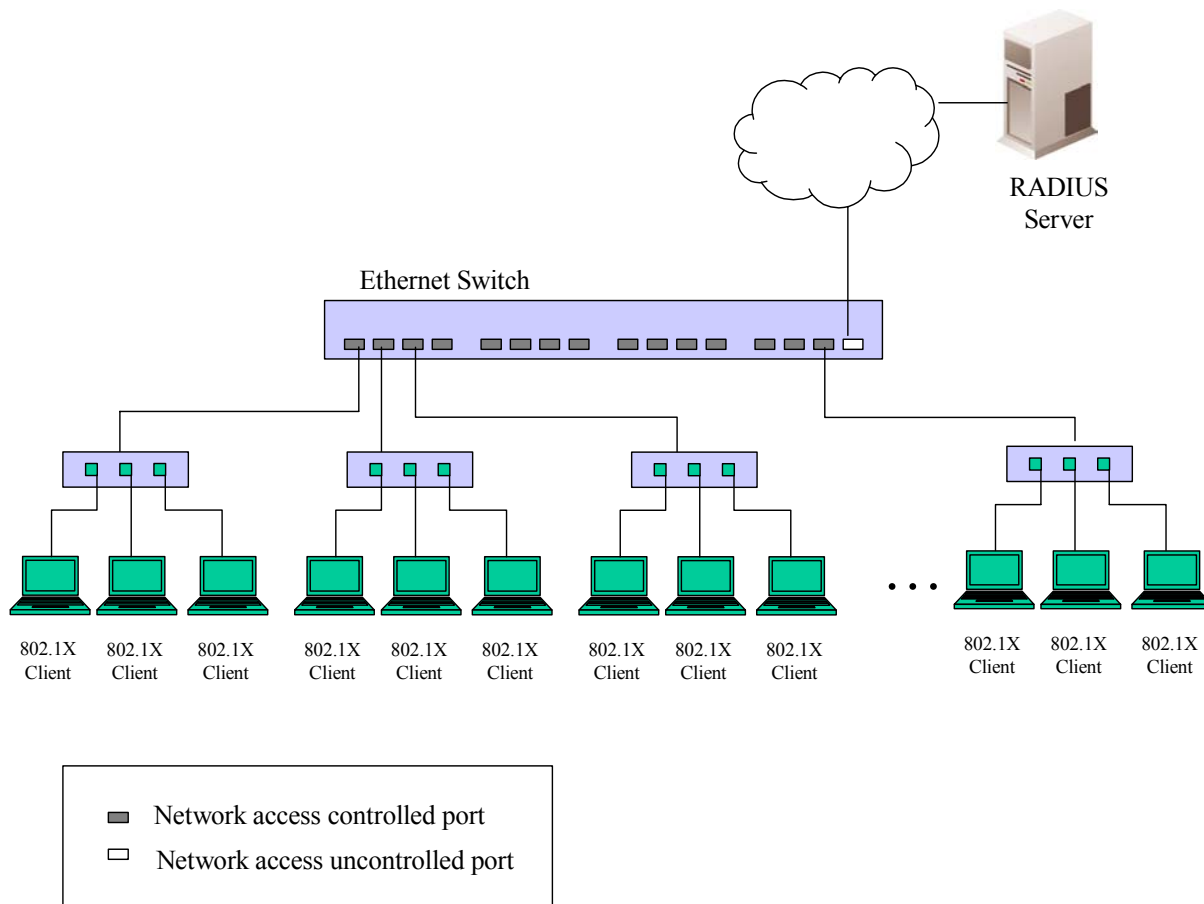


Figure 4- 19. Example of Typical MAC-Based Configuration

In order to successfully make use of 802.1X in a shared media LAN segment, it would be necessary to create “logical” Ports, one for each attached device that required access to the LAN. The Switch would regard the single physical Port connecting it to the shared media segment as consisting of a number of distinct logical Ports, each logical Port being independently controlled from the point of view of EAPOL exchanges and authorization state. The Switch learns each attached devices’ individual MAC addresses, and effectively creates a logical Port that the attached device can then use to communicate with the LAN via the Switch.

802.1X Authenticator Settings

To display the current 802.1X Authenticator Settings on the Switch, click **Configuration > Port Access Entity > 802.1x Authenticator Settings**, which will display the following window.

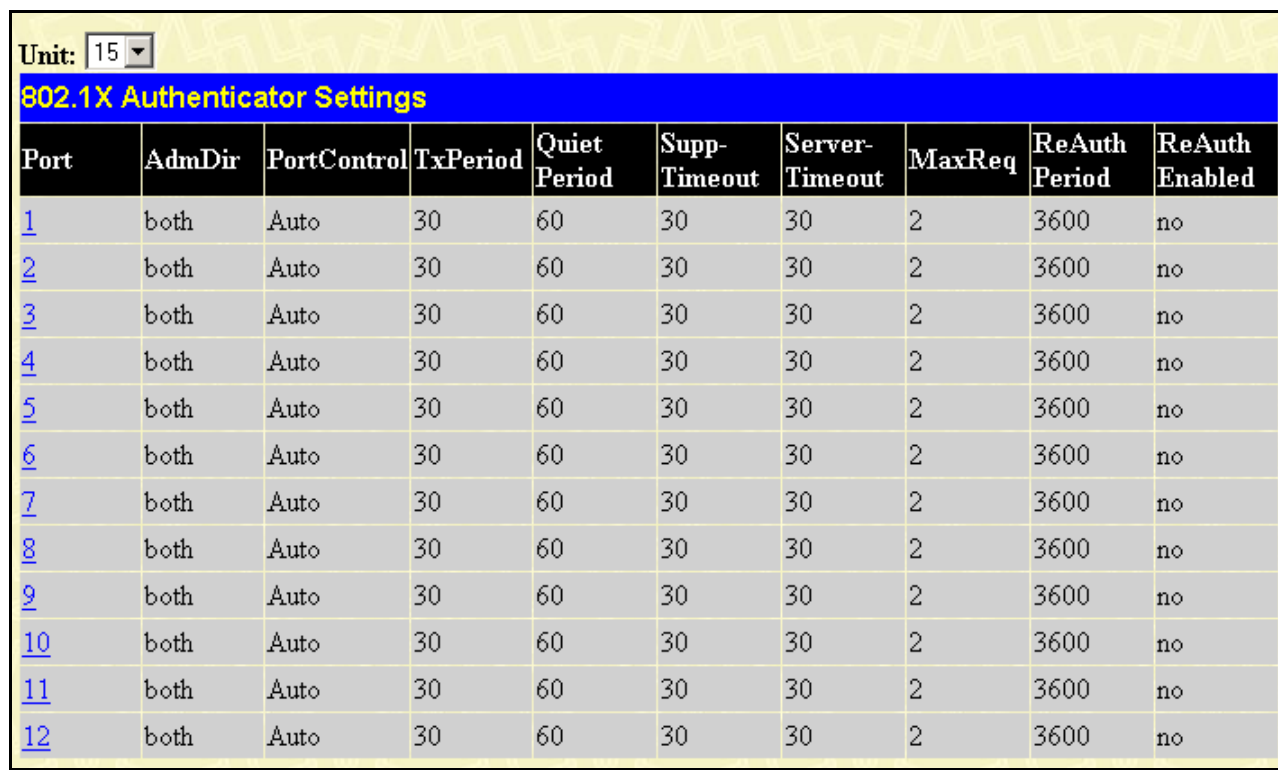


Unit: 15

802.1X Authenticator Settings

Port	AdmDir	PortControl	TxPeriod	Quiet Period	Supp-Timeout	Server-Timeout	MaxReq	ReAuth Period	ReAuth Enabled
1	both	Auto	30	60	30	30	2	3600	no
2	both	Auto	30	60	30	30	2	3600	no
3	both	Auto	30	60	30	30	2	3600	no
4	both	Auto	30	60	30	30	2	3600	no
5	both	Auto	30	60	30	30	2	3600	no
6	both	Auto	30	60	30	30	2	3600	no
7	both	Auto	30	60	30	30	2	3600	no
8	both	Auto	30	60	30	30	2	3600	no
9	both	Auto	30	60	30	30	2	3600	no
10	both	Auto	30	60	30	30	2	3600	no
11	both	Auto	30	60	30	30	2	3600	no
12	both	Auto	30	60	30	30	2	3600	no

Figure 4- 20. 1st 802.1X Authenticator Settings window

To configure the 802.1X Authenticator settings for a given port, click on the blue port number link under the **Port** heading. This will open the second **802.1X Authenticator Settings** window, as shown below.

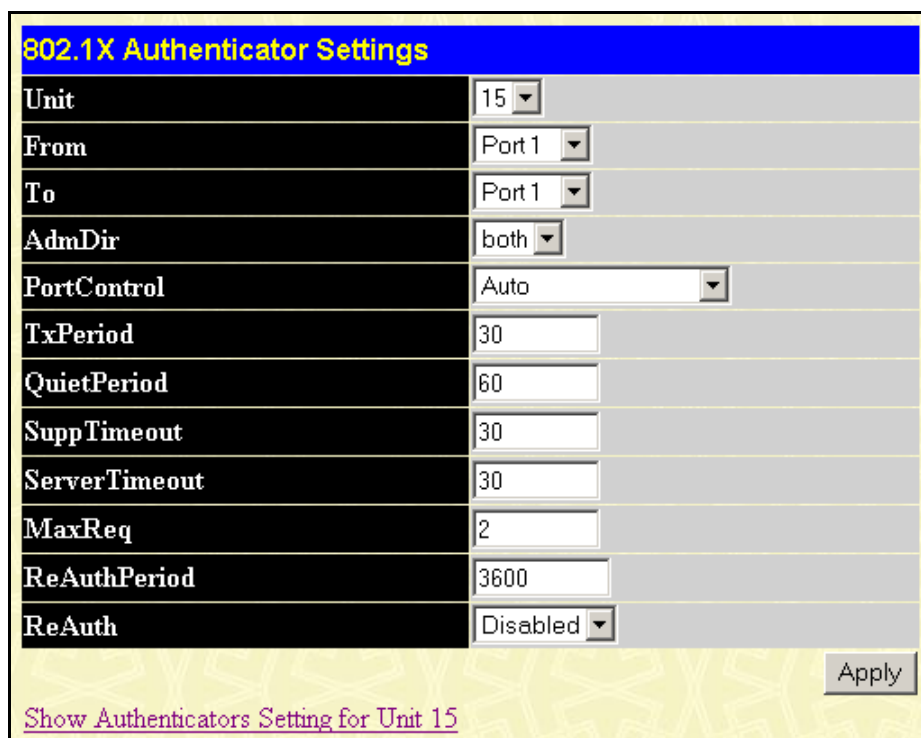

802.1X Authenticator Settings

Unit: 15

From: Port 1

To: Port 1

AdmDir: both

PortControl: Auto

TxPeriod: 30

QuietPeriod: 60

SuppTimeout: 30

ServerTimeout: 30

MaxReq: 2

ReAuthPeriod: 3600

ReAuth: Disabled

Apply

[Show Authenticators Setting for Unit 15](#)

Figure 4- 21. 2nd 802.1X Authenticator Settings window

The following Authenticator Settings parameters can be set:

Parameter	Description
Unit	Allows you to specify a Switch in a Switch stack using that Switch's Unit ID. The number 15 indicates a Switch in standalone mode.
From/To	A consecutive group of ports may be configured starting with the selected port.
AdmDir	From the pull-down menu, select whether a controlled Port that is unauthorized will exert control over communication in both receiving and transmitting directions, or just the receiving direction.
PortControl	<p>This allows you to control the port authorization state.</p> <p>Select <i>Force_authorized</i> to disable 802.1X and cause the port to transition to the authorized state without any authentication exchange required. This means the port transmits and receives normal traffic without 802.1X-based authentication of the client.</p> <p>If <i>Force_unauthorized</i> is selected, the port will remain in the unauthorized state, ignoring all attempts by the client to authenticate. The Switch cannot provide authentication services to the client through the interface.</p> <p>If <i>Auto</i> is selected, it will enable 802.1X and cause the port to begin in the unauthorized state, allowing only EAPOL frames to be sent and received through the port. The authentication process begins when the link state of the port transitions from down to up, or when an EAPOL-start frame is received. The Switch then requests the identity of the client and begins relaying authentication messages between the client and the authentication server.</p> <p>The default setting is <i>Auto</i>.</p>
TxPeriod	Select the time to wait for a response from a supplicant (user) to send EAP Request/Identity packets.
QuietPeriod	Select the time interval between authentication failure and the start of a new authentication attempt.
SuppTimeout	Select the time to wait for a response from a supplicant (user) for all EAP packets, except for the Request/Identity packets.
ServerTimeout	Select the length of time to wait for a response from a RADIUS server.
MaxReq	Select the maximum number of times to retry sending packets to the supplicant.
ReAuthPeriod	Select the time interval between successive re-authentications.
ReAuth	Enable or disable reauthentication.

Click **Apply** to implement changes made.

PAE System Control

To set the port authenticating settings, open the **Port Access Entity** folder, and then the **PAE System Control** folder. Finally, click on the **802.1X Capability Settings** link.

802.1X Capability Settings

The following window will allow the user to set the Capability settings for the Switch on a per port basis. This window can be viewed by clicking **Configuration > Port Access Entity > PAE System Control > 802.1x Capability Settings**.

802.1X Capability Settings				
Unit	From	To	Capability	Apply
15	Port 1	Port 1	None	Apply
802.1X Capability Table				
Port	Capability			
1	None			
2	None			
3	None			
4	None			
5	None			
6	None			
7	None			
8	None			
9	None			
10	None			
11	None			
12	None			

Figure 4- 22. 802.1X Capability Settings window

To set up the Switch's 802.1X port-based authentication, select which ports are to be configured in the From and To fields. Next, enable the ports by selecting *Authenticator* from the drop-down menu under Capability.

Click **Apply** to make your changes take effect.

Initializing Ports for Port-Based 802.1x

Existing 802.1x port and MAC settings are displayed and can be configured using the window below.

Click **Configuration > Port Access Entity > PAE System Control > Initialize Port(s)** to open the following window:

Initialize Port					
Unit	From	To	Apply		
15	Port 1	Port 1	Apply		
Initialize Port Table					
Port	MAC Address	Auth PAE State	Backend_State	Oper Dir	PortStatus
1	---	N/A	N/A	both	authorized
2	---	N/A	N/A	both	authorized
3	---	N/A	N/A	both	authorized
4	---	N/A	N/A	both	authorized
5	---	N/A	N/A	both	authorized
6	---	N/A	N/A	both	authorized
7	---	N/A	N/A	both	authorized
8	---	N/A	N/A	both	authorized
9	---	N/A	N/A	both	authorized
10	---	N/A	N/A	both	authorized
11	---	N/A	N/A	both	authorized
12	---	N/A	N/A	both	authorized

Figure 4- 23. Initialize Port window for Port-Based 802.1x


This window allows you to initialize a port or group of ports. The **Initialize Port Table** in the bottom half of the window displays the current status of the port(s).

This window displays the following information:

Parameter	Description
Unit	Choose the Switch ID number of the Switch in the Switch stack to be modified.
From and To	Select ports to be initialized.
Port	A read only field indicating a port on the Switch.
MAC Address	The MAC address of the Switch connected to the corresponding port, if any.
Auth PAE State	The Authenticator PAE State will display one of the following: <i>Initialize, Disconnected, Connecting, Authenticating, Authenticated, Aborting, Held, ForceAuth, ForceUnauth, and N/A.</i>
Backend State	The Backend Authentication State will display one of the following: <i>Request, Response, Success, Fail, Timeout, Idle, Initialize, and N/A.</i>
Port Status	The status of the controlled port can be <i>Authorized, Unauthorized, or N/A.</i>

Initializing Ports for MAC Based 802.1x

To initialize ports for the MAC side of 802.1x, the user must first enable 802.1x by MAC address in the **Advanced Settings** window. Click **Configuration > Port Access Entity > PAE System Control > Initialize Port(s)** to open the following window:

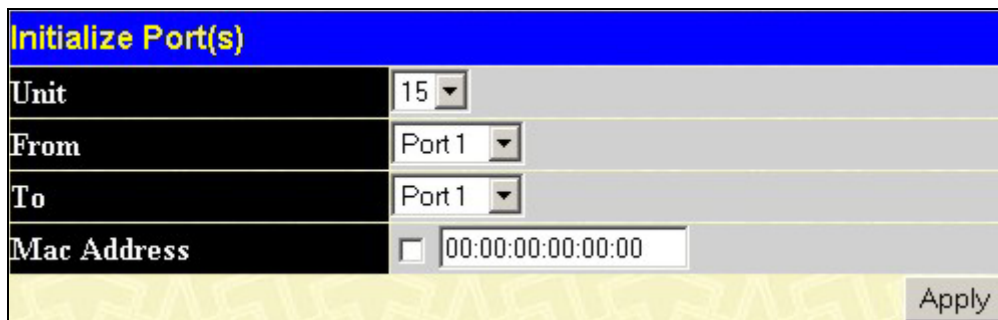

Initialize Port(s)	
Unit	15
From	Port 1
To	Port 1
Mac Address	<input type="checkbox"/> 00:00:00:00:00:00
Apply	

Figure 4- 24. Initialize Ports (MAC based 802.1x)

To initialize ports, first choose the Switch in the Switch stack by using the Unit pull-down menu, then the range of ports in the From and To field. Then the user must specify the MAC address to be initialized by entering it into the MAC Address field and checking the corresponding check box. To begin the initialization, click **Apply**.



NOTE: The user must first globally enable 802.1X in the **Switch Information (Advanced Settings)** window in the **Configuration** folder before initializing ports. Information in the Initialize Ports Table cannot be viewed before enabling 802.1X.

Reauthenticate Port(s) for Port Based 802.1x

This window allows you to reauthenticate a port or group of ports by choosing a port or group of ports by using the pull down menus From and To and clicking **Apply**. The Reauthenticate Port Table displays the current status of the reauthenticated port(s) once you have clicked **Apply**.

Click **Configuration > Port Access Entity > PAE System Control > Reauthenticate Port(s)** to open the **Reauthenticate Port(s)** window:

Reauthenticate Port					
unit	From	To	Apply		
15	Port 1	Port 1	Apply		
Reauthenticate Port Table					
Port	MAC Address	Auth State	BackendState	OperDir	PortStatus
1	---	N/A	N/A	both	authorized
2	---	N/A	N/A	both	authorized
3	---	N/A	N/A	both	authorized
4	---	N/A	N/A	both	authorized
5	---	N/A	N/A	both	authorized
6	---	N/A	N/A	both	authorized
7	---	N/A	N/A	both	authorized
8	---	N/A	N/A	both	authorized
9	---	N/A	N/A	both	authorized
10	---	N/A	N/A	both	authorized
11	---	N/A	N/A	both	authorized
12	---	N/A	N/A	both	authorized

Figure 4- 25. Reauthenticate Port window

This window displays the following information:

Parameter	Description
Unit	Choose the Switch ID number of the Switch in the Switch stack to be modified.
Port	The port number of the reauthenticated port.
MAC Address	Displays the physical address of the Switch where the port resides.
Auth PAE State	The Authenticator State will display one of the following: <i>Initialize, Disconnected, Connecting, Authenticating, Authenticated, Aborting, Held, ForceAuth, ForceUnauth,</i> and <i>N/A</i> .
BackendState	The Backend State will display one of the following: <i>Request, Response, Success, Fail, Timeout, Idle, Initialize,</i> and <i>N/A</i> .
PortStatus	The status of the controlled port can be <i>Authorized, Unauthorized,</i> or <i>N/A</i> .



NOTE: The user must first globally enable 802.1X in the **Switch Information (Advanced Settings)** window in the **Configuration** folder before reauthenticating ports. Information in the Reauthenticate Ports Table cannot be viewed before enabling 802.1X.

Reauthenticate Port(s) for MAC-based 802.1x

To reauthenticate ports for the MAC side of 802.1x, the user must first enable 802.1x by MAC address in the **Advanced Settings** window. Click **Configuration > Port Access Entity > PAE System Control > Reauthenticate Port(s)** to open the following window:

The screenshot shows a configuration window titled "Reauthenticate Port(s)" with a blue header. It contains four rows of fields:

Unit	15
From	Port 1
To	Port 1
Mac Address	<input type="checkbox"/> 00:00:00:00:00:00

An "Apply" button is located at the bottom right of the window.

Figure 4- 26. Reauthenticate Ports – MAC based 802.1x

To reauthenticate ports, first choose the Switch in the Switch stack by using the **Unit** pull-down menu, then the range of ports in the **From** and **To** field. Then the user must specify the MAC address to be reauthenticated by entering it into the **MAC Address** field and checking the corresponding check box. To begin the reauthentication, click **Apply**.

RADIUS Server

The RADIUS feature of the Switch allows you to facilitate centralized user administration as well as providing protection against a sniffing, active hacker.

RADIUS Server

Click the **RADIUS Server** link in the **RADIUS Server** folder under **Port Access Entity**.

Authentic RADIUS Server Setting				
Succession	First			
Radius Server	0.0.0.0			
Authentic Port	1812			
Accounting Port	1813			
Key				
Confirm Key				
Status	Valid			
Apply				
Current Radius Server(s) Settings Table				
Succession	Radius Server	Auth UDP Port	Acct UDP Port	Status
First				
Second				
Third				

Figure 4- 27. Authentic RADIUS Server Setting window

Once the following parameters have been set, click **Apply** to set the RADIUS server settings:

Parameter	Description
Succession	RADIUS server settings index.
RADIUS Server	Type in the IP address of the RADIUS server.
Authentic Port	This is the UDP port on the RADIUS server that will be used to authenticate users. The default is <i>1812</i> .
Accounting Port	This is the UDP port on the RADIUS server that will be used to store the account information. The default is <i>1813</i> .
Key	Type the shared-secret key used by the RADIUS server and the Switch. Up to 32 characters can be used.
Confirm Key	Retype the Key information from the Key field above.
Status	This drop-down menu allows you to select <i>Valid</i> or <i>Invalid</i> .

IGMP Snooping

In order to use IGMP Snooping it must first be enabled for the entire Switch (see **Advanced Settings**). You may then fine-tune the settings for each VLAN using the **IGMP Snooping Settings** window. When enabled for IGMP snooping, the Switch can open or close a port to a specific Multicast group member based on IGMP messages sent from the device to the IGMP host or vice versa. The Switch monitors IGMP messages and discontinues forwarding multicast packets when there are no longer hosts requesting that they continue.

IGMP Snooping Configuration

Use this window, which can be viewed by clicking **Configuration > IGMP Snooping > IGMP Snooping**, to view the IGMP Snooping status. To modify settings, click the **Modify** button for the VLAN ID to change.

Total Entries:1				
Current IGMP Snooping Group Entries				
VLAN ID	VLAN Name	State	Querier State	Modify
1	default	Disabled	Disabled	<input type="button" value="Modify"/>

Figure 4- 28. Current IGMP Snooping Group Entries window

Click the **Modify** button to bring up the **IGMP Snooping Settings** window pictured below.

IGMP Snooping Settings	
VLAN ID	<input type="text" value="1"/>
VLAN Name	<input type="text" value="default"/>
Query Interval(1-65535 sec)	<input type="text" value="125"/>
Max Response Time(1-25 sec)	<input type="text" value="10"/>
Robustness Value(1-255)	<input type="text" value="2"/>
Last Member Query Interval(1-25 sec)	<input type="text" value="1"/>
Host Timeout(1-16711450 sec)	<input type="text" value="260"/>
Router Timeout(1-16711450 sec)	<input type="text" value="260"/>
Leave Timer(0-16711450 sec)	<input type="text" value="2"/>
Querier State	<input type="text" value="Disabled"/>
Querier Router Behavior	<input type="text" value="Non-Querier"/>
State	<input type="text" value="Disabled"/>
<input type="button" value="Apply"/>	
Show All IGMP Group Entries	

Figure 4- 29. IGMP Snooping Settings window

The IGMP Snooping Settings are described below:

Parameter	Description
VLAN ID	The VLAN ID number.
VLAN Name	The VLAN name.
Query Interval (1-65535 sec)	The Query Interval field is used to set the time (in seconds) between transmitting IGMP queries. Entries between 1 and 65535 seconds are allowed. The default value is 125.
Max Response Time (1-25 sec)	This determines the maximum amount of time in seconds allowed before sending an IGMP response report. The Max Response Time field allows an entry between 1 and 25 (seconds). The default value is 10.
Robustness Variable (1-255)	Adjust this variable according to expected packet loss. If packet loss on the VLAN is expected to be high, the Robustness Variable should be increased to accommodate increased packet loss. This entry field allows an entry of 2 to 255. The default value is 2.
Last Member Query Interval (1-25 sec)	Specifies the maximum amount of time between group-specific query messages, including those sent in response to leave group messages. The default value is 1.
Host Timeout (1-16711450 sec)	This is the maximum amount of time in seconds allowed for a host to continue membership in a multicast group without the Switch receiving a host membership report. The default value is 260.
Router Timeout (1-16711450 sec)	This is the maximum amount of time in seconds a route is kept in the forwarding table without receiving a membership report. The default value is 260.
Leave Timer (0-16711450 sec)	This specifies the maximum amount of time in seconds between the Switch receiving a leave group message from a host, and the Switch issuing a group membership query. If no response to the membership query is received before the Leave Timer expires, the (multicast) forwarding entry for that host is deleted.
Querier State	Choose <i>Enabled</i> to enable transmitting IGMP Query packets. The default value is <i>Disabled</i> .
Querier Router Behavior	This read-only field describes the behavior of the router for sending query packets. <i>Querier</i> will denote that the router is sending out IGMP query packets. <i>Non-Querier</i> will denote that the router is not sending out IGMP query packets. This field will only read <i>Querier</i> when the Querier State and the State fields have been Enabled.
State	Select <i>Enabled</i> to implement IGMP Snooping. This is <i>Disabled</i> by default.

Click **Apply** to implement changes made.

Static Router Ports Entry

A static router port is a port that has a multicast router attached to it. Generally, this router would have a connection to a WAN or to the Internet. Establishing a router port will allow multicast packets coming from the router to be propagated through the network, as well as allowing multicast messages (IGMP) coming from the network to be propagated to the router.

A router port has the following behavior:

- All IGMP Report packets will be forwarded to the router port.
- IGMP queries (from the router port) will be flooded to all ports.
- All UDP multicast packets will be forwarded to the router port. Because routers do not send IGMP reports or implement IGMP snooping, a multicast router connected to the router port of the Layer 3 Switch would not be able to receive UDP data streams unless the UDP multicast packets were all forwarded to the router port.

A router port will be dynamically configured when IGMP query packets, RIPv2 multicast, DVMRP multicast, and PIM-DM multicast packets are detected flowing into a port.

Open the **IGMP Snooping** folder and then click on the **Static Router Ports Entry** link to open the **Current Static Router Ports Entries** window, as shown below.

Total Entries:2		
Current Static Router Ports Entries		
VLAN ID	VLAN Name	Modify
1	default	<input type="button" value="Modify"/>
11	engineering	<input type="button" value="Modify"/>

Figure 4- 30. Current Static Router Port Entries window

The window displays all of the current entries to the Switch's static router port table. To modify an entry, click the **Modify** button. This will open the **Static Router Ports Settings** window, as shown below.

Static Router Ports Settings											
VID	1										
VLAN Name	default										
Unit	<input type="text" value="15"/>										
Member Ports											
1	2	3	4	5	6	7	8	9	10	11	12
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="button" value="Apply"/>											
Show All Static Router Ports Entries											

Figure 4- 31. Static Router Ports Settings window

To configure a static router port(s):

1. Select the Unit containing the static router port.
2. Select the Port or Ports that will become static router ports.
3. Click **Apply** to let the changes take effect.

The following parameters are listed in the **Static Router Port** windows.

Parameter	Description
VLAN ID (VID)	This is the VLAN ID that, along with the VLAN name, identifies the VLAN where the multicast router is attached.
VLAN Name	This is the name of the VLAN where the multicast router is attached.
Unit	This is the Unit ID of the Switch in a Switch stack for which you are creating an entry into the Switch's static router port table.
Member Ports	There are the ports on the Switch that will have a multicast router attached to them.

Click **Apply** to implement changes made.

Spanning Tree

This Switch supports three versions of the Spanning Tree Protocol; 802.1d STP, 802.1w Rapid STP and 802.1s MSTP. 802.1d STP will be familiar to most networking professionals. However, since 802.1w RSTP and 802.1s MSTP has been recently introduced to D-Link managed Ethernet switches, a brief introduction to the technology is provided below followed by a description of how to set up 802.1d STP, 802.1w RSTP and 802.1s MSTP.

802.1s MSTP

Multiple Spanning Tree Protocol, or MSTP, is a standard defined by the IEEE community that allows multiple VLANs to be mapped to a single spanning tree instance, which will provide multiple pathways across the network. Therefore, these MSTP configurations will balance the traffic load, preventing wide scale disruptions when a single spanning tree instance fails. This will allow for faster convergences of new topologies for the failed instance. Frames designated for these VLANs will be processed quickly and completely throughout interconnected bridges utilizing either of the three spanning tree protocols (STP, RSTP or MSTP).

This protocol will also tag BDPUs packets so receiving devices can distinguish spanning tree instances, spanning tree regions and the VLANs associated with them. These instances will be classified by an MSTI ID. MSTP will connect multiple spanning trees with a Common and Internal Spanning Tree (CIST). The CIST will automatically determine each MSTP region, its maximum possible extent and will appear as one virtual bridge that runs a single spanning tree. Consequentially, frames assigned to different VLANs will follow different data routes within administratively established regions on the network, continuing to allow simple and full processing of frames, regardless of administrative errors in defining VLANs and their respective spanning trees.

Each switch utilizing the MSTP on a network will have a single MSTP configuration that will have the following three attributes:

1. A configuration name defined by an alphanumeric string of up to 32 characters (defined in the **MST Configuration Table** window in the Configuration Name field).
2. A configuration revision number (named here as a Revision Level and found in the **MST Configuration Table** window) and;
3. A 4094-element table (defined here as a VID List in the **MST Configuration Table** window) that will associate each of the possible 4094 VLANs supported by the Switch for a given instance.

To utilize the MSTP function on the Switch, three steps need to be taken:

1. The Switch must be set to the MSTP setting (found in the **STP Bridge Global Settings** window in the STP Version field)
2. The correct spanning tree priority for the MSTP instance must be entered (defined here as a Priority in the **MST Configuration Table** window when configuring MSTI ID settings).
3. VLANs that will be shared must be added to the MSTP Instance ID (defined here as a VID List in the **MST Configuration Table** window when configuring an MSTI ID settings).

802.1w Rapid Spanning Tree

The Switch implements three versions of the Spanning Tree Protocol, the Multiple Spanning Tree Protocol (MSTP) as defined by the IEEE 802.1s, the Rapid Spanning Tree Protocol (RSTP) as defined by the IEEE 802.1w specification and a version compatible with the IEEE 802.1d STP. RSTP can operate with legacy equipment implementing IEEE 802.1d, however the advantages of using RSTP will be lost.

The IEEE 802.1w Rapid Spanning Tree Protocol (RSTP) evolved from the 802.1d STP standard. RSTP was developed in order to overcome some limitations of STP that impede the function of some recent switching innovations, in particular, certain Layer 3 functions that are increasingly handled by Ethernet switches. The basic function and much of the terminology is the same as STP. Most of the settings configured for STP are also used for RSTP. This section introduces some new Spanning Tree concepts and illustrates the main differences between the two protocols.

Port Transition States

An essential difference between the three protocols is in the way ports transition to a forwarding state and in the way this transition relates to the role of the port (forwarding or not forwarding) in the topology. MSTP and RSTP combine the

transition states disabled, blocking and listening used in 802.1d and creates a single state Discarding. In either case, ports do not forward packets. In the STP port transition states disabled, blocking or listening or in the RSTP/MSTP port state discarding, there is no functional difference, the port is not active in the network topology. Table 6-1 below compares how the three protocols differ regarding the port state transition.

All three protocols calculate a stable topology in the same way. Every segment will have a single path to the root bridge. All bridges listen for BPDU packets. However, BPDU packets are sent more frequently - with every Hello packet. BPDU packets are sent even if a BPDU packet was not received. Therefore, each link between bridges is sensitive to the status of the link. Ultimately this difference results in faster detection of failed links, and thus faster topology adjustment. A drawback of 802.1d is this absence of immediate feedback from adjacent bridges.

802.1d MSTP	802.1w RSTP	802.1d STP	Forwarding	Learning
Discarding	Discarding	Disabled	No	No
Discarding	Discarding	Blocking	No	No
Discarding	Discarding	Listening	No	No
Learning	Learning	Learning	No	Yes
Forwarding	Forwarding	Forwarding	Yes	Yes

Table 4- 1. Comparing Port States

RSTP is capable of a more rapid transition to a forwarding state - it no longer relies on timer configurations - RSTP compliant bridges are sensitive to feedback from other RSTP compliant bridge links. Ports do not need to wait for the topology to stabilize before transitioning to a forwarding state. In order to allow this rapid transition, the protocol introduces two new variables: the edge port and the point-to-point (P2P) port.

Edge Port

The edge port is a configurable designation used for a port that is directly connected to a segment where a loop cannot be created. An example would be a port connected directly to a single workstation. Ports that are designated as edge ports transition to a forwarding state immediately without going through the listening and learning states. An edge port loses its status if it receives a BPDU packet, immediately becoming a normal spanning tree port.

P2P Port

A P2P port is also capable of rapid transition. P2P ports may be used to connect to other bridges. Under RSTP/MSTP, all ports operating in full-duplex mode are considered to be P2P ports, unless manually overridden through configuration.

802.1d / 802.1w / 802.1s Compatibility

MSTP or RSTP can interoperate with legacy equipment and is capable of automatically adjusting BPDU packets to 802.1d format when necessary. However, any segment using 802.1d STP will not benefit from the rapid transition and rapid topology change detection of MSTP or RSTP. The protocol also provides for a variable used for migration in the event that legacy equipment on a segment is updated to use RSTP or MSTP.

The Spanning Tree Protocol (STP) operates on two levels:

1. On the Switch level, the settings are globally implemented.
2. On the port level, the settings are implemented on a per user-defined group of ports basis.

STP Bridge Global Settings

To open the following window, open the **Spanning Tree** folder in the **Configuration** menu and click the **STP Bridge Global Settings** link.

STP Bridge Global Settings	
STP Status	Disabled ▾
STP Version	STP compatible ▾
Hello Time(1-10 Sec)	2
Max Age(6-40 Sec)	20
Forward Delay(4-30 Sec)	15
Max Hops(1-20)	20
TX Hold Count(1-10)	3
Forwarding BPDU	Enabled ▾
Apply	
<p><i>Note: $2 * (\text{Forward Delay} - 1) \geq \text{Max Age}$, $\text{Max Age} \geq 2 * (\text{Hello Time} + 1)$</i></p>	

Figure 4- 32. STP Bridge Global Settings – STP compatible

STP Bridge Global Settings	
STP Status	Disabled ▾
STP Version	RSTP ▾
Hello Time(1-10 Sec)	2
Max Age(6-40 Sec)	20
Forward Delay(4-30 Sec)	15
Max Hops(1-20)	20
TX Hold Count(1-10)	3
Forwarding BPDU	Enabled ▾
Apply	
<p><i>Note: $2 * (\text{Forward Delay} - 1) \geq \text{Max Age}$, $\text{Max Age} \geq 2 * (\text{Hello Time} + 1)$</i></p>	

Figure 4- 33. STP Bridge Global Settings - RSTP (default)

STP Bridge Global Settings	
STP Status	Disabled ▾
STP Version	MSTP ▾
Max Age(6-40 Sec)	20
Forward Delay(4-30 Sec)	15
Max Hops(1-20)	20
TX Hold Count(1-10)	3
Forwarding BPDU	Enabled ▾
Apply	
<p><i>Note: $2 * (\text{Forward Delay} - 1) \geq \text{Max Age}$, $\text{Max Age} \geq 2 * (\text{Hello Time} + 1)$</i></p>	

Figure 4- 34. STP Bridge Global Settings - MSTP

The following parameters can be set:

Parameter	Description
STP Status	Use the pull-down menu to enable or disable STP globally on the Switch. The default is <i>Disabled</i> .
STP Version	Use the pull-down menu to choose the desired version of STP to be implemented on the Switch. There are three choices: <i>STP</i> - Select this parameter to set the Spanning Tree Protocol (STP) globally on the Switch. <i>RSTP</i> - Select this parameter to set the Rapid Spanning Tree Protocol (RSTP) globally on the Switch. <i>MSTP</i> - Select this parameter to set the Multiple Spanning Tree Protocol (MSTP) globally on the Switch.
Hello Time (1 - 10 Sec)	The Hello Time can be set from 1 to 10 seconds. This is the interval between two transmissions of BPDU packets sent by the Root Bridge to tell all other switches that it is indeed the Root Bridge. This field will only appear here when STP or RSTP is selected for the STP Version. For MSTP, the Hello Time must be set on a port per port basis. See the MSTP Port Information section for further details.
Max Age (6 - 40 Sec)	The Max Age may be set to ensure that old information does not endlessly circulate through redundant paths in the network, preventing the effective propagation of the new information. Set by the Root Bridge, this value will aid in determining that the Switch has spanning tree configuration values consistent with other devices on the bridged LAN. If the value ages out and a BPDU has still not been received from the Root Bridge, the Switch will start sending its own BPDU to all other switches for permission to become the Root Bridge. If it turns out that your switch has the lowest Bridge Identifier, it will become the Root Bridge. The user may choose a time between 6 and 40 seconds. The default value is 20.
Forward Delay (4 - 30 Sec)	The Forward Delay can be from 4 to 30 seconds. Any port on the Switch spends this time in the listening state while moving from the blocking state to the forwarding state.

Max Hops (1-20)	Used to set the number of hops between devices in a spanning tree region before the BPDU (bridge protocol data unit) packet sent by the Switch will be discarded. Each switch on the hop count will reduce the hop count by one until the value reaches zero. The Switch will then discard the BPDU packet and the information held for the port will age out. The user may set a hop count from 1 to 20. The default is 20.
TX Hold Count (1-10)	Used to set the maximum number of Hello packets transmitted per interval. The count can be specified from 1 to 10. The default is 3.
Forwarding BPDU	This field can be <i>Enabled</i> or <i>Disabled</i> . When <i>Enabled</i> , it allows the forwarding of STP BPDU packets from other network devices. The default is <i>Enabled</i> .

Click **Apply** to implement changes made.



NOTE: The Hello Time cannot be longer than the Max. Age. Otherwise, a configuration error will occur. Observe the following formulas when setting the above parameters:

Max. Age $\leq 2 \times$ (Forward Delay - 1 second)

Max. Age $\geq 2 \times$ (Hello Time + 1 second)

MST Configuration Table

The **MST Configuration Table** window allow the user to configure a MSTI instance on the Switch. These settings will uniquely identify a multiple spanning tree instance set on the Switch. The Switch initially possesses one *CIST* or Common Internal Spanning Tree of which the user may modify the parameters for but cannot change the MSTI ID for, and cannot be deleted. To view the **MST Configuration Identification** window, click **Configuration > Spanning Tree > MST Configuration Identification**:

Current MST Configuration Identification		
Configuration Name	Revision Level	
	0	
MSTI ID	VID List	Delete
CIST	1-4094	Can't be Deleted!

MST Configuration Identification Settings	
Configuration Name	<input type="text"/>
Revision Level(0-65535)	<input type="text" value="0"/>

Apply

Figure 4- 35. MST Configuration Identification window

The window above contains the following information:

Parameter	Description
Configuration Name	A previously configured name set on the Switch to uniquely identify the MSTI (Multiple Spanning Tree Instance). If a configuration name is not set, this field will show the MAC address to the device running MSTP.
Revision Level	This value, along with the Configuration Name will identify the MSTP region configured on the Switch.
MSTI ID	This field shows the MSTI IDs currently set on the Switch. This field will always have the CIST MSTI, which may be configured but not deleted. Clicking the hyperlinked name will open a new window for configuring parameters associated with that particular MSTI.
VID List	This field displays the VLAN IDs associated with the specific MSTI.


To delete a previously set MSTI Instance ID, click the corresponding  under the Delete heading in the **MST Configuration Identification** window. Note that the CIST cannot be deleted. Clicking the **Add** button will reveal the following window to configure:

Figure 4- 36. Instance ID Settings window- Add

The user may configure the following parameters to create a MSTI in the Switch.

Parameter	Description
MSTI ID	Enter a number between 1 and 15 to set a new MSTI on the Switch.
Type	<i>Create</i> is selected to create a new MSTI. No other choices are available for this field when creating a new MSTI.
VID List (1-4094)	This field is used to specify the VID range from configured VLANs set on the Switch. Supported VIDs on the Switch range from ID number 1 to 4094.

Click **Apply** to implement changes made.

To configure the settings for the CIST, click on its hyperlinked **MSTI ID** number in the **MST Configuration Identification** window, which will reveal the following window to configure:

Figure 4- 37. Instance ID Settings window - CIST modify

The user may configure the following parameters to configure the CIST on the Switch.

Parameter	Description
MSTI ID	The MSTI ID of the CIST is 0 and cannot be altered.
Type	This field allows the user to choose a desired method for altering the MSTI settings. The user has 2 choices. <ul style="list-style-type: none"> <i>Add VID</i> - Select this parameter to add VIDs to the MSTI ID, in conjunction with the VID List parameter. <i>Remove VID</i> - Select this parameter to remove VIDs from the MSTI ID, in conjunction with the VID List parameter.
VID List (1-4094)	This field is used to specify the VID range from configured VLANs set on the Switch. Supported VIDs on the Switch range from ID number 1 to 4094.

Click **Apply** to implement changes made.

To configure the parameters for a previously set MSTI, click on its hyperlinked **MSTI ID** number, which will reveal the following screen for configuration.

Figure 4- 38. Instance ID Settings window - Modify

The user may configure the following parameters for a MSTI on the Switch.

Parameter	Description
MSTI ID	Displays the MSTI ID previously set by the user.
Type	This field allows the user to choose a desired method for altering the MSTI settings. The user has 2 choices. <ul style="list-style-type: none"> <i>Add VID</i> - Select this parameter to add VIDs to the MSTI ID, in conjunction with the VID List parameter. <i>Remove VID</i> - Select this parameter to remove VIDs from the MSTI ID, in conjunction with the VID List parameter.
VID List (1-4094)	This field is used to specify the VID range from configured VLANs set on the Switch that the user wishes to add to this MSTI ID. Supported VIDs on the Switch range from ID number 1 to 4094. This parameter can only be utilized if the Type chosen is <i>Add VID</i> or <i>Remove VID</i> .

Click **Apply** to implement changes made.

MSTI Settings

This window displays the current MSTI configuration settings and can be used to update the port configuration for an MSTI ID. If a loop occurs, the MSTP function will use the port priority to select an interface to put into the forwarding state. Set a higher priority value for interfaces to be selected for forwarding first. In instances where the priority value is identical, the MSTP function will implement the lowest port number into the forwarding state and other interfaces will be blocked. Remember that lower priority values mean higher priorities for forwarding packets.

To view the following window, click **Configuration > Spanning Tree > MSTI Settings**:

Unit	Port	Apply
15	Port 1	Apply

MSTI Port Information-Port 1 of Unit 15					
MSTI	Designated Bridge	Internal PathCost	Priority	Status	Role
0	N/A	200000	128	Forwarding	NonStp

Figure 4- 39. MSTP Port Information window

To view the MSTI settings for a particular port, select the Port number, located in the top left hand corner of the screen and click **Apply**. To modify the settings for a particular MSTI Instance, click on its hyperlinked MSTI ID, which will reveal the following window.

MSTI Settings-Port 1 of Unit 15	
Instance ID	<input type="text" value="0"/>
Internal cost(0=Auto)	<input type="text" value="200000"/>
Priority	<input type="text" value="128"/>
<input type="button" value="Apply"/>	
Show MSTP Port Information Table-Port 1 of Unit 15	

Figure 4- 40. MSTI Settings window

Parameter	Description
Instance ID	Displays the MSTI ID of the instance being configured. An entry of 0 in this field denotes the CIST (default MSTI).
Internal Cost	This parameter is set to represent the relative cost of forwarding packets to specified ports when an interface is selected within a STP instance. The default setting is 0 (auto). There are two options: <ul style="list-style-type: none"> • <i>0 (auto)</i> - Selecting this parameter for the <i>internalCost</i> will set quickest route automatically and optimally for an interface. The default value is derived from the media speed of the interface. • <i>value 1-200000000</i> - Selecting this parameter with a value in the range of 1 to 200000000 will set the quickest route when a loop occurs. A lower Internal cost represents a quicker transmission.
Priority	Enter a value between 0 and 240 to set the priority for the port interface. A higher priority will designate the interface to forward packets first. A lower number denotes a higher priority. This entry must be divisible by 16. The default priority setting is 128.

Click **Apply** to implement changes made.

STP Instance Settings

The following window displays MSTIs currently set on the Switch. To view the following table, click **Configuration > Spanning Tree > STP Instance Settings**:

STP Instance Table			
Instance Type	Instance Status	Instance Priority	Priority
CIST	Disabled	32768(bridge priority : 32768, sys ID ext : 0)	<input type="button" value="Modify"/>

Figure 4- 41. STP Instance Table window

The following information is displayed:

Parameter	Description
Instance Type	Displays the instance type(s) currently configured on the Switch. Each instance type is classified by an MSTI ID. CIST refers to the default MSTI configuration set on the Switch.
Instance Status	Displays the current status of the corresponding MSTI ID
Instance Priority	Displays the priority of the corresponding MSTI Instance Type. The lowest priority will be the root bridge.
Priority	Click the Modify button to change the priority of the MSTI. This will open the Instance ID Settings window to configure. The Type field in this window will be permanently set to <i>Set Priority Only</i> . Enter the new priority in the Priority field and click Apply to implement the new priority setting.

Click **Apply** to implement changes made.

Clicking the hyperlinked name will allow the user to view the current parameters set for the MSTI Instance.

STP Instance Operational Status	
Designated Root Bridge	32768/00-01-02-48-65-00
External Root Cost	200004
Regional Root Bridge	32768/00-88-88-31-03-60
Internal Root Cost	0
Designated Bridge	32768/00-50-ba-71-20-d6
Root Port	15:1
Max Age	20
Forward Delay	15
Last Topology Change	156
Topology Changes Count	3
Show STP Instance Table	

Figure 4- 42. STP Instance Operational Status – CIST

STP Instance Operational Status	
Regional Root Bridge	32770/00-53-13-1a-33-24
Internal Root Cost	0
Designated Bridge	32770/00-53-13-1a-33-24
Root Port	None
Remaining Hops	20
Last Topology Change	288
Topology Changes Count	3
Show STP Instance Table	

Figure 4- 43. STP Instance Operational Status – Previously Configured MSTI

The following parameters may be viewed in the **STP Instance Operational Status** windows:

Parameter	Description
Designated Root Bridge	This field will show the priority and MAC address of the Root Bridge.
External Root Cost	<p>This defines a metric that indicates the relative cost of forwarding packets to the specified port list. Port cost can be set automatically or as a metric value. The default value is 0 (auto).</p> <ul style="list-style-type: none"> • <i>0 (auto)</i> - Setting 0 for the external cost will automatically set the speed for forwarding packets to the specified port(s) in the list for optimal efficiency. Default port cost: 100Mbps port = 200000. Gigabit port = 20000. • <i>value 1-200000000</i> - Define a value between 1 and 200000000 to determine the external cost. The lower the number, the greater the probability the port will be chosen to forward packets.
Regional Root Bridge	This field will show the priority and MAC address of the Regional (Internal) Root Bridge. This MAC address should be the MAC address of the Switch.
Internal Root Cost	<p>This parameter is set to represent the relative cost of forwarding packets to specified ports when an interface is selected within a STP instance. The default setting is 0 (auto). There are two options:</p> <ul style="list-style-type: none"> • <i>0 (auto)</i> - Selecting this parameter for the internal cost will set quickest route automatically and optimally for an interface. The default value is derived from the media speed of the interface. • <i>value 1-2000000</i> - Selecting this parameter with a value in the range of 1-2000000 will set the quickest route when a loop occurs. A lower Internal cost represents a quicker transmission.
Designated Bridge	This field will show the priority and MAC address of the Designated Bridge. The information shown in this table comes from a BPDU packet originating from this bridge.
Root Port	This is the port on the Switch that is physically connected to the Root Bridge.

Max Age	The Max Age may be set to ensure that old information does not endlessly circulate through redundant paths in the network, preventing the effective propagation of the new information. Set by the Root Bridge, this value will aid in determining that the Switch has spanning tree configuration values consistent with other devices on the bridged LAN. If the value ages out and a BPDU has still not been received from the Root Bridge, the Switch will start sending its own BPDU to all other switches for permission to become the Root Bridge. If it turns out that your switch has the lowest Bridge Identifier, it will become the Root Bridge. The user may choose a time between 6 and 40 seconds. The default value is 20.
Forward Delay	The Forward Delay can be from 4 to 30 seconds. Any port on the Switch spends this time in the listening state while moving from the blocking state to the forwarding state.
Last Topology Change	This field shows the time, in seconds, since the last spanning tree topology change.
Topology Changes Count	This field displays the number of times that the spanning tree topology has changed since the original initial boot up of the Switch.

STP Port Settings

STP can be set up on a port per port basis. To view the following window click **Configuration > Spanning Tree > STP Port Settings**:

STP Port Settings								
Unit	From	To	External Cost (0=Auto)	Hello Time	Migrate	Edge	P2P	State
15	Port 1	Port 1	0	1	No	False	True	Enabled
Apply								
STP Port Information Table-Unit 15								
Port	External Cost	Hello Time	Edge	P2P	Port STP			
1	AUTO/200000	2/2	No/No	Auto/Yes	Enabled			
2	AUTO/20000	2/2	No/No	Auto/Yes	Enabled			
3	AUTO/20000	2/2	No/No	Auto/Yes	Enabled			
4	AUTO/20000	2/2	No/No	Auto/Yes	Enabled			
5	AUTO/20000	2/2	No/No	Auto/Yes	Enabled			
6	AUTO/20000	2/2	No/No	Auto/Yes	Enabled			
7	AUTO/20000	2/2	No/No	Auto/Yes	Enabled			
8	AUTO/20000	2/2	No/No	Auto/Yes	Enabled			
9	AUTO/20000	2/2	No/No	Auto/Yes	Enabled			
10	AUTO/20000	2/2	No/No	Auto/Yes	Enabled			
11	AUTO/20000	2/2	No/No	Auto/Yes	Enabled			
12	AUTO/20000	2/2	No/No	Auto/Yes	Enabled			

Figure 4- 44. STP Port Settings window

In addition to setting Spanning Tree parameters for use on the Switch level, the Switch allows for the configuration of groups of ports, each port-group of which will have its own spanning tree, and will require some of its own configuration settings. An STP Group will use the Switch-level parameters entered above, with the addition of **Port Priority** and **Port Cost**.

An STP Group spanning tree works in the same way as the Switch-level spanning tree, but the root bridge concept is replaced with a root port concept. A root port is a port of the group that is elected based on port priority and port cost, to be

the connection to the network for the group. Redundant links will be blocked, just as redundant links are blocked on the Switch level.

The STP on the Switch level blocks redundant links between switches (and similar network devices). The port level STP will block redundant links within an STP Group.

It is advisable to define an STP Group to correspond to a VLAN group of ports.

The following fields can be set:

Parameter	Description
Unit	Choose the Switch ID number of the Switch in the Switch stack to be modified.
From/To	A consecutive group of ports may be configured starting with the selected port.
External Cost (0 = Auto)	<p>This defines a metric that indicates the relative cost of forwarding packets to the specified port list. Port cost can be set automatically or as a metric value. The default value is 0 (auto).</p> <ul style="list-style-type: none"> <i>0 (auto)</i> - Setting 0 for the external cost will automatically set the speed for forwarding packets to the specified port(s) in the list for optimal efficiency. Default port cost: 100Mbps port = 200000. Gigabit port = 20000. <i>value 1-200000000</i> - Define a value between 1 and 200000000 to determine the external cost. The lower the number, the greater the probability the port will be chosen to forward packets.
Hello Time	The time interval between the transmission of configuration messages by the designated port, to other devices on the bridged LAN, thus stating that the Switch is still functioning. The user may choose a time between 1 and 10 seconds. The default is 2 seconds. This field is only operable when the Switch is enabled for MSTP.
Migrate	Setting this parameter as <i>yes</i> will set the ports to send out BPDU packets to other bridges, requesting information on their STP setting. If the Switch is configured for RSTP, the port will be capable to migrate from 802.1d STP to 802.1w RSTP. If the Switch is configured for MSTP, the port is capable of migrating from 802.1d STP to 802.1s MSTP. RSTP and MSTP can coexist with standard STP, however the benefits of RSTP and MSTP are not realized on a port where an 802.1d network connects to an 802.1w or 802.1s enabled network. Migration should be set as <i>yes</i> on ports connected to network stations or segments that are capable of being upgraded to 802.1w RSTP or 802.1s MSTP on all or some portion of the segment.
Edge	Choosing the <i>true</i> parameter designates the port as an edge port. Edge ports cannot create loops, however an edge port can lose edge port status if a topology change creates a potential for a loop. An edge port normally should not receive BPDU packets. If a BPDU packet is received, it automatically loses edge port status. Choosing the <i>false</i> parameter indicates that the port does not have edge port status.
P2P	Choosing the <i>True</i> parameter indicates a point-to-point (P2P) shared link. P2P ports are similar to edge ports, however they are restricted in that a P2P port must operate in full duplex. Like edge ports, P2P ports transition to a forwarding state rapidly thus benefiting from RSTP. A p2p value of <i>false</i> indicates that the port cannot have p2p status. <i>Auto</i> allows the port to have p2p status whenever possible and operate as if the p2p status were true. If the port cannot maintain this status, (for example if the port is forced to half-duplex operation) the p2p status changes to operate as if the p2p value were <i>False</i> . The default setting for this parameter is <i>True</i> .
State	This drop-down menu allows you to enable or disable STP for the selected group of ports. The default is <i>Enabled</i> .

Click **Apply** to implement changes made.

Forwarding & Filtering

The Switch allows permanent or static entries into the forwarding database (FDB). These FDB entries are MAC addresses that will not age out. In addition, multicast forwarding may be customized to conform to rules for the different ports by setting up multicast filter modes for each port.

Unicast Forwarding

Open the **Forwarding & Filtering** folder and click on the **Unicast Forwarding** link. This will open the **Setup Static Unicast Forwarding Table** window, as shown below.

Setup Static Unicast Forwarding Table					
VLAN ID	MAC Address	Allowed to Go Unit	Port		
1	00:00:00:00:00:00	15	Port 1		
Add/Modify					
Static Unicast Forwarding Table					
Mac Address	VID	VLAN Name	Unit	Port	Delete
End of data!					

Figure 4- 45. Setup Static Unicast Forwarding Table window

To add an entry, define the following parameters:

Parameter	Description
VLAN ID	The VLAN ID number of the VLAN on which the above Unicast MAC address resides.
MAC Address	The MAC address to which packets will be statically forwarded. This must be a unicast MAC address.
Allowed to Go Unit	Allows the designation of the module on which the above MAC address resides.
Port	Choose the port on which the MAC address resides.

Click on the **Add/Modify** button to add a unicast MAC address to the Switch's forwarding table, or to modify a previous entry.

Multicast Forwarding

The following figure and table describe how to set up Multicast forwarding on the Switch. Open the **Forwarding & Filtering** folder and click on the **Multicast Forwarding** link to see the entry window below:

Figure 4- 46. Static Multicast Forwarding Settings window

The **Static Multicast Forwarding Settings** window displays all of the entries made into the Switch's static multicast forwarding table. Click the **Add** button to open the **Setup Static Multicast Forwarding Table** window, as shown below.

Figure 4- 47. Setup Static Multicast Forwarding Table window

The following parameters can be set:

Parameter	Description
Unit	Select the Switch in the Switch stack to configure. 15 represents the Switch in standalone mode.
VID	The VLAN ID of the VLAN to which the MAC address below belongs.
Multicast MAC Address	The MAC address of the static source of multicast packets. This must be a multicast MAC address.
Port Settings	Allows the selection of ports that will be members of the static multicast group and ports that are either forbidden from joining dynamically, or that can join the multicast group dynamically, using GMRP. The options are None and Egress. None means there are no restrictions on the port dynamically joining the multicast group. If None is chosen, then an end station attached to the port can join the multicast group using GMRP. Egress means the port is a static member of the multicast group.

Click **Apply** to implement changes made.

VLANs

The Switch Web Manager's VLANs sub-folder is divided into two main windows, **802.1Q Static VLANs** and **802.1Q Port Settings**. Each is described after a short overview of VLANs.

Understanding 802.1Q VLANs

This review of 802.1Q VLANs presents some basic background about how VLANs work according to the IEEE 802.1Q standard. VLANs operate according to the same rules regardless of whether the Switching environment is Layer 2 or Layer 3. The difference is primarily that in a Layer 3 Switch there is an added capability of unique association between a VLAN and an IP interface or subnet group.

A VLAN is a collection of end nodes grouped by logic rather than physical location. End nodes that frequently communicate with each other are assigned to the same VLAN, regardless of where they are located physically on the network. Logically, a VLAN can be equated to a broadcast domain, because broadcast packets are forwarded only to members of the VLAN on which the broadcast was initiated

IEEE 802.1Q VLANs

Some relevant terms:

- Tagging - The act of putting 802.1Q VLAN information into the header of a packet.
- Untagging - The act of stripping 802.1Q VLAN information out of the packet header.
- Ingress port - A port on a Switch where packets are flowing into the Switch and VLAN decisions must be made.
- Egress port - A port on a Switch where packets are flowing out of the Switch, either to another Switch or to an end station, and tagging decisions must be made.

IEEE 802.1Q (tagged) VLANs are implemented on the DGS-3212SR Switch. 802.1Q VLANs require tagging, which enables the VLANs to span an entire network (assuming all Switches on the network are IEEE 802.1Q-compliant).

Any port can be configured as either *tagging* or *untagging*. The *untagging* feature of IEEE 802.1Q VLANs allow VLANs to work with legacy Switches that don't recognize VLAN tags in packet headers. The *tagging* feature allows VLANs to span multiple 802.1Q VLAN compliant Switches through a single physical connection and allows Spanning Tree to be enabled on all ports and work normally.

802.1Q VLAN Packet Forwarding

Packet forwarding decisions are made based upon the following three types of rules:

- Ingress rules – rules relevant to the classification of received frames belonging to a VLAN.
- Forwarding rules between ports – decides filter or forward the packet
- Egress rules – determines if the packet must be sent tagged or untagged.

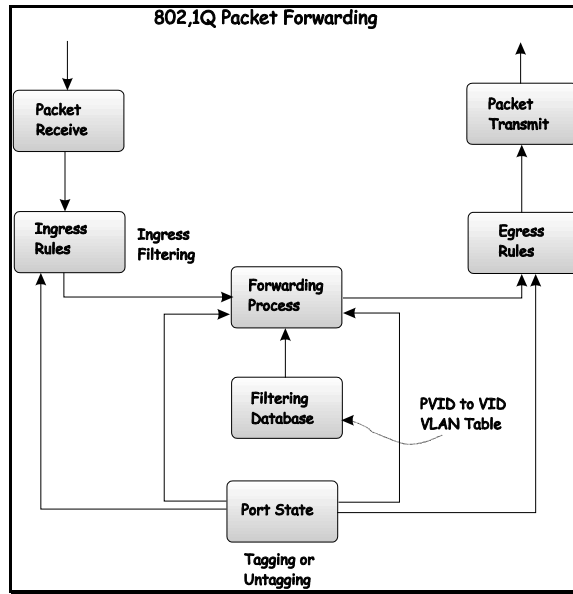


Figure 4- 48. 802.1Q Packet Forwarding

802.1Q VLAN Tags

The figure below shows the 802.1Q VLAN tag. There are four additional octets inserted after the source MAC address. Their presence is indicated by a value of 0x8100 in the EtherType field. When a packet's EtherType field is equal to 0x8100, the packet carries the IEEE 802.1Q/802.1p tag. The tag is contained in the following two octets and consists of three bits of user priority, one bit of Canonical Format Identifier (CFI – used for encapsulating Token Ring packets so they can be carried across Ethernet backbones) and twelve bits of VLAN ID (VID). The three bits of user priority are used by 802.1p. The VID is the VLAN identifier and is used by the 802.1Q standard. Because the VID is twelve bits long, 4094 unique VLANs can be identified.

The tag is inserted into the packet header making the entire packet longer by four octets. All of the information contained in the packet originally is retained.

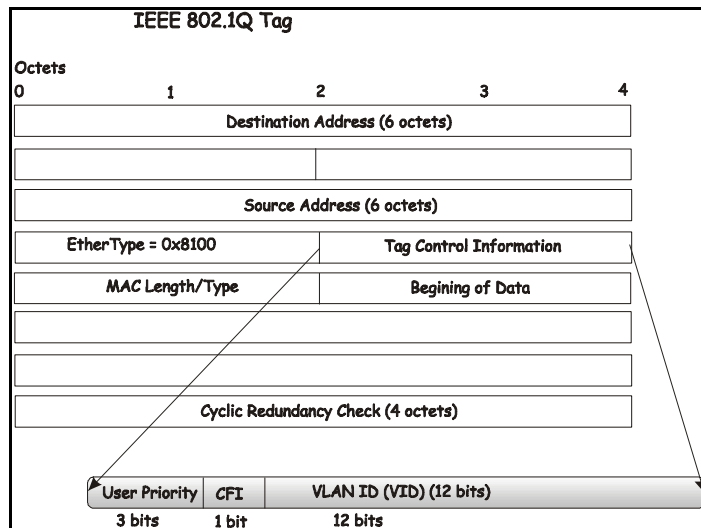


Figure 4- 49. IEEE 802.1Q Tag

The EtherType and VLAN ID are inserted after the MAC source address, but before the original EtherType/Length or Logical Link Control. Because the packet is now a bit longer than it was originally, the Cyclic Redundancy Check (CRC) must be recalculated.

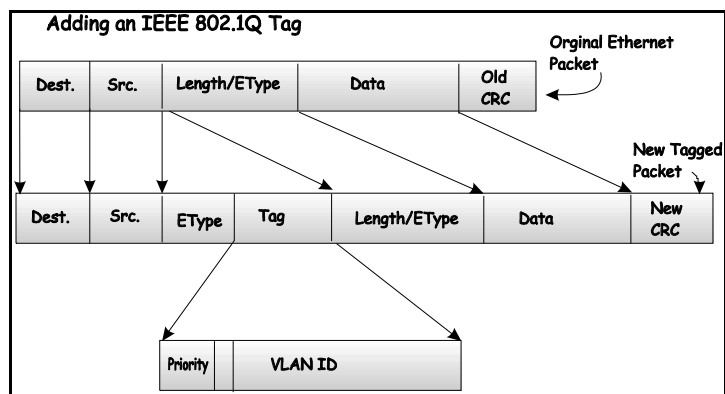


Figure 4- 50. Adding an IEEE 802.1Q Tag

Port VLAN ID

Packets that are tagged (are carrying the 802.1Q VID information) can be transmitted from one 802.1Q compliant network device to another with the VLAN information intact. This allows 802.1Q VLANs to span network devices (and indeed, the entire network – if all network devices are 802.1Q compliant).

Unfortunately, not all network devices are 802.1Q compliant. These devices are referred to as *tag-unaware*. 802.1Q devices are referred to as *tag-aware*.

Prior to the adoption 802.1Q VLANs, port-based and MAC-based VLANs were in common use. These VLANs relied upon a Port VLAN ID (PVID) to forward packets. A packet received on a given port would be assigned that port's PVID and then be forwarded to the port that corresponded to the packet's destination address (found in the Switch's forwarding table). If the PVID of the port that received the packet is different from the PVID of the port that is to transmit the packet, the Switch will drop the packet.

Within the Switch, different PVIDs mean different VLANs. (remember that two VLANs cannot communicate without an external router). So, VLAN identification based upon the PVIDs cannot create VLANs that extend outside a given Switch (or Switch stack).

Every physical port on a Switch has a PVID. 802.1Q ports are also assigned a PVID, for use within the Switch. If no VLANs are defined on the Switch, all ports are then assigned to a default VLAN with a PVID equal to 1. Untagged packets are assigned the PVID of the port on which they were received. Forwarding decisions are based upon this PVID, in so far as VLANs are concerned. Tagged packets are forwarded according to the VID contained within the tag. Tagged packets are also assigned a PVID, but the PVID is not used to make packet forwarding decisions, the VID is.

Tag-aware Switches must keep a table to relate PVIDs within the Switch to VIDs on the network. The Switch will compare the VID of a packet to be transmitted to the VID of the port that is to transmit the packet. If the two VIDs are different, the Switch will drop the packet. Because of the existence of the PVID for untagged packets and the VID for tagged packets, tag-aware and tag-unaware network devices can coexist on the same network.

A Switch port can have only one PVID, but can have as many VIDs as the Switch has memory in its VLAN table to store them.

Because some devices on a network may be tag-unaware, a decision must be made at each port on a tag-aware device before packets are transmitted – should the packet to be transmitted have a tag or not? If the transmitting port is connected to a tag-unaware device, the packet should be untagged. If the transmitting port is connected to a tag-aware device, the packet should be tagged.

Tagging and Untagging

Every port on an 802.1Q compliant Switch can be configured as *tagging* or *untagging*.

Ports with tagging enabled will put the VID number, priority and other VLAN information into the header of all packets that flow into and out of it. If a packet has previously been tagged, the port will not alter the packet, thus keeping the VLAN information intact. The VLAN information in the tag can then be used by other 802.1Q compliant devices on the network to make packet forwarding decisions.

Ports with untagging enabled will strip the 802.1Q tag from all packets that flow into and out of those ports. If the packet doesn't have an 802.1Q VLAN tag, the port will not alter the packet. Thus, all packets received by and forwarded by an untagging port will have no 802.1Q VLAN information. (Remember that the PVID is only used internally within the Switch). Untagging is used to send packets from an 802.1Q-compliant network device to a non-compliant network device.

Ingress Filtering

A port on a Switch where packets are flowing into the Switch and VLAN decisions must be made is referred to as an *ingress port*. If ingress filtering is enabled for a port, the Switch will examine the VLAN information in the packet header (if present) and decide whether or not to forward the packet.

If the packet is tagged with VLAN information, the ingress port will first determine if the ingress port itself is a member of the tagged VLAN. If it is not, the packet will be dropped. If the ingress port is a member of the 802.1Q VLAN, the Switch then determines if the destination port is a member of the 802.1Q VLAN. If it is not, the packet is dropped. If the destination port is a member of the 802.1Q VLAN, the packet is forwarded and the destination port transmits it to its attached network segment.

If the packet is not tagged with VLAN information, the ingress port will tag the packet with its own PVID as a VID (if the port is a tagging port). The Switch then determines if the destination port is a member of the same VLAN (has the same VID) as the ingress port. If it does not, the packet is dropped. If it has the same VID, the packet is forwarded and the destination port transmits it on its attached network segment.

This process is referred to as *ingress filtering* and is used to conserve bandwidth within the Switch by dropping packets that are not on the same VLAN as the ingress port at the point of reception. This eliminates the subsequent processing of packets that will just be dropped by the destination port.

802.1Q Static VLANs

To create or modify an 802.1Q VLAN:

In the **Configuration** folder, open the **VLANs** folder and click the **Static VLAN Entry** link to open the following window:

802.1Q Static VLANs			
Add new 802.1Q VLAN			Add
Current 802.1Q Static VLANs Entries			
VLAN ID	VLAN name	Modify	Delete
1	default	Modify	X

Figure 4- 51. 802.1Q Static VLANs window

The first **802.1Q Static VLANs** window lists all previously configured VLANs by VLAN ID and name. To delete an existing 802.1Q VLAN, click the corresponding **Delete** button.

To create a new 802.1Q VLAN, click the **Add** button. A new window appears, use this to configure the port settings and to assign a unique name and number to the new VLAN. See the table below for a description of the parameters in the new window.

802.1Q Static VLANs													
Unit	VID	VLAN Name	Advertisement										
15	1 <input type="checkbox"/> AutoAssign		Disabled										
Port Settings		1	2	3	4	5	6	7	8	9	10	11	12
Tag		<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
None		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Egress		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Forbidden		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
												Apply	
Show All Static VLAN Entries													

Figure 4- 52. 802.1Q Static VLANs window - Add

To configure the newly created VLAN, select the Switch being configured from the **Unit** drop-down menu and provide a unique VLAN identifier and name. Configure the port settings for VLAN membership by selecting the appropriate options for each port. Click the **Apply** button to configure the VLAN port membership settings. A success or fail message appears to confirm whether the settings have been applied. To view the VLANs that have been thus far configured, click the [Show All Static VLAN Entries](#) hyperlink (see example below). To add another new VLAN entry, click the **Add** button again in the first **802.1Q Static VLANs** window.

See the table below for a description of the port VLAN membership settings.

The following fields can then be set in either the **Add** or **Modify** 802.1Q Static VLANs windows:

Parameter	Description
Unit	Choose the Switch on which the VLAN will be created.
VID (VLAN ID)	For a new VLAN entry, type in a unique identifier. This number is used to configure other settings such as GVRP status for ports in the VLAN. <i>Auto Assign</i> – Checking this box will automatically assign a VID to the new VLAN entry.
VLAN Name	For a new VLAN entry type in a unique name. This name can be used to identify the VLAN for IP interface assignment. Remember that VLAN names are case-sensitive when referring to them for other applications (such as setting up IP interfaces).
Advertisement	Enabling this function will allow the Switch to send out GVRP packets to outside sources, notifying that they may join the existing VLAN.
Port	Configure each individual port to be specified as member or nonmember of the VLAN.
Tag	Specifies the port as either 802.1Q tagging or 802.1Q untagged. Checking the box will designate the port as Tagged.
None	Specifies the port as not being a static member of the VLAN, but with no restrictions for joining the VLAN dynamically through GVRP.
Egress	Select this to specify the port as a static member of the VLAN. Egress member ports are ports that will be transmitting traffic for the VLAN. These ports can be either tagged or untagged.
Forbidden	Select this to specify the port as not being a member of the VLAN and that the port is forbidden from becoming a member of the VLAN dynamically.

The illustration below displays the port settings for a new VLAN (engineering) with a VID of 11.

802.1Q Static VLANs												
Unit	VID	VLAN Name										
15	11	engineering										
Port Settings	1	2	3	4	5	6	7	8	9	10	11	12
Tag	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
None	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Egress	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Forbidden	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
												Apply
Show All Static VLAN Entries												

Figure 4- 53. Add New Static VLAN Example window

Click the [Show All Static VLAN Entries](#) link to return to the first 802.1Q Static VLANs window, the new VLAN entry appears listed in the current entries table.

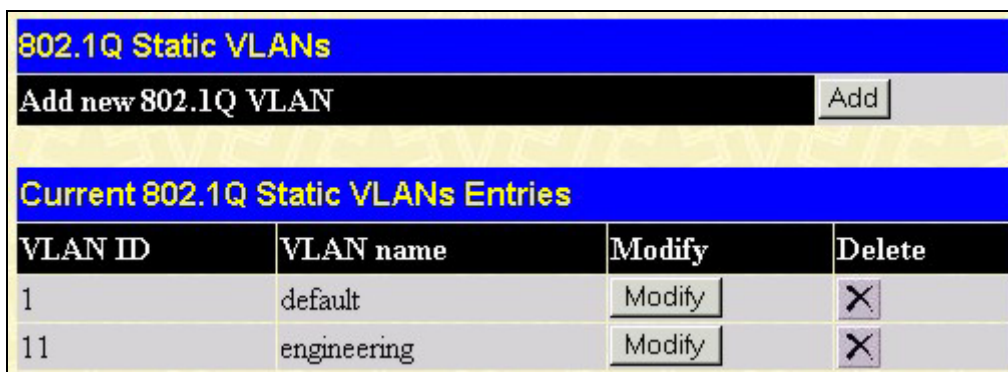


Figure 4- 54. 802.1Q Static VLANs With Added VLAN window

To change the port settings of any listed VLAN, click the **Modify** button.

Now click the **Modify** button in the first **802.1Q Static VLANs** window for the newly created VLAN (engineering). A new window appears, use this to configure the port settings to the existing VLAN, exactly as in the Add New VLAN window. Notice that the VID and name cannot be changed. If you want to change the VID or VLAN Name it will be necessary to delete the existing entry and create a new one.



Figure 4- 55. 802.1Q Static VLANs – Modify window

GVRP Settings

Open the **GVRP Settings** window and select the Unit and range of ports to configure. For the selected port or group of ports, choose to enable or disable Ingress checking and establish an acceptable packet rule. Ingress Checking is used to limit traffic by filtering incoming packets that have a PVID does not match the PVID of the port. 802.1Q port settings are also used to determine whether the Switch will share its VLAN configuration information with GARP VLAN Registration Protocol (GVRP) enabled Switches.

The window and table below describe how to configure the 802.1Q VLAN port settings for the Switch.

GVRP Settings							
Unit	From	To	Ingress Check	Acceptable Frame	PVID	GVRP	Apply
15	Port 1	Port 1	Disabled	Admit_all		Disabled	Apply

GVRP Table				
Port	PVID	Ingress	Frame Type	GVRP
1	1	Enabled	All frames	Disabled
2	1	Enabled	All frames	Disabled
3	1	Enabled	All frames	Disabled
4	1	Enabled	All frames	Disabled
5	1	Enabled	All frames	Disabled
6	1	Enabled	All frames	Disabled
7	1	Enabled	All frames	Disabled
8	1	Enabled	All frames	Disabled
9	1	Enabled	All frames	Disabled
10	1	Enabled	All frames	Disabled
11	1	Enabled	All frames	Disabled
12	1	Enabled	All frames	Disabled

Figure 4- 56. GVRP Settings window

Configure the 802.1p Port Settings by implementing the parameters listed below:

Parameter	Description
Unit	Select the relevant Switch in the Switch stack for configuration.
From and To	Use these drop-down menus to specify the range of ports that will be included in the VLAN.
Ingress Check	This field can be toggled using the space bar between <i>Enabled</i> and <i>Disabled</i> . <i>Enabled</i> enables the port to compare the VID tag of an incoming packet with the PVID number assigned to the port. If the two are different, the port filters (drops) the packet. <i>Disabled</i> disables Ingress filtering. Ingress Checking is disabled by default.
Acceptable Frame (Frame Type)	Allows you to specify the action the Switch will take when a packet is received. If you specify <i>Admit_all</i> the Switch will receive and forward all packets to this VLAN regardless of whether or not the packet has an 802.1Q VLAN tag or not. If you specify <i>Tagged_only</i> the Switch will drop and untagged packets it receives for this VLAN.

PVID	A Port VLAN Identifier is a classification mechanism that associates a port with a specific VLAN and is used to make forwarding decisions for untagged packets received by the port. For example, if port 2 is assigned a PVID of 3, then all untagged packets received on port 2 will be assigned to VLAN 3. This number is generally the same as the VID number assigned to the port in the Edit 802.1Q VLANs window above.
GVRP	The Group VLAN Registration Protocol (GVRP) enables the port to dynamically become a member of a VLAN. GVRP is disabled by default.

Click **Apply** to implement changes made.

QoS

The DGS-3212SR supports 802.1p priority queuing Quality of Service. The following section discusses the implementation of QoS (Quality of Service) and benefits of using 802.1p priority queuing.

The Advantages of QoS

QoS is an implementation of the IEEE 802.1p standard that allows network administrators a method of reserving bandwidth for important functions that require a large bandwidth or have a high priority, such as VoIP (voice-over Internet Protocol), web browsing applications, file server applications or video conferencing. Not only can a larger bandwidth be created, but other less critical traffic can be limited, so excessive bandwidth can be saved. The Switch has separate hardware queues on every physical port to which packets from various applications can be mapped to, and, in turn prioritized. View the following map to see how the DGS-3212SR family of switches implements basic 802.1P priority queuing.

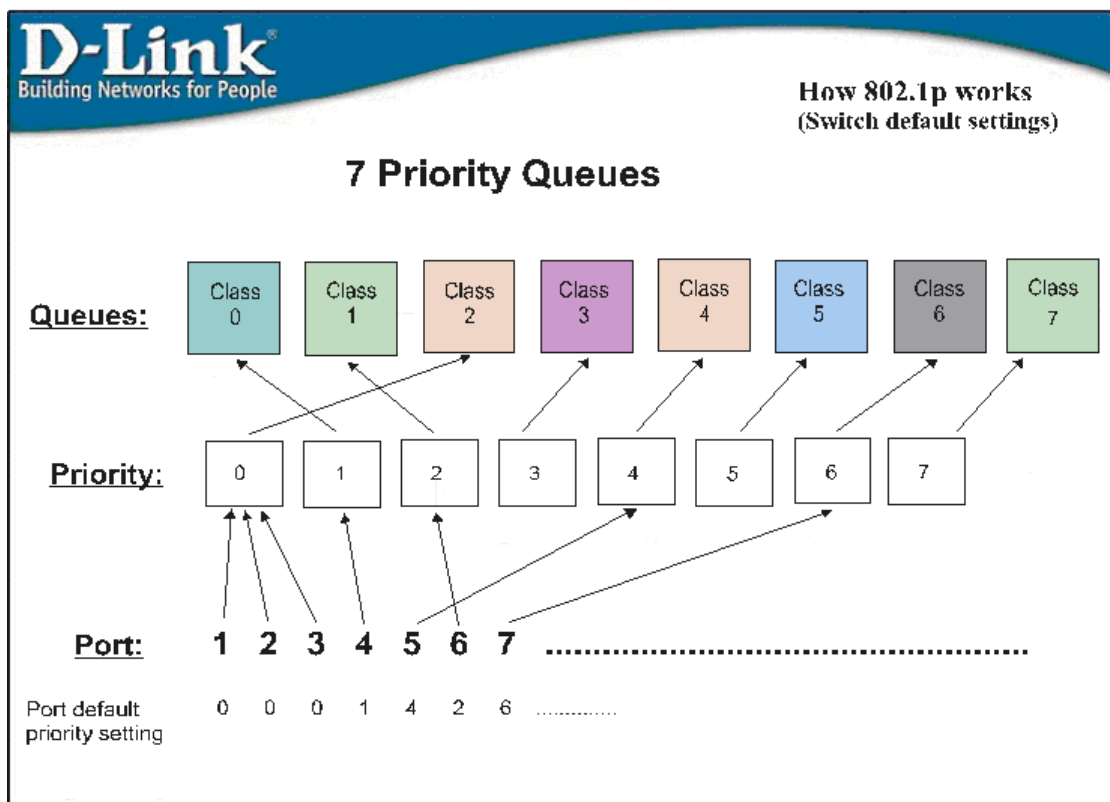


Figure 4- 57. An Example of the Default QoS Mapping on the Switch

The picture above shows the default priority setting for the Switch. Class-7 has the highest priority of the seven priority classes of service on the Switch. In order to implement QoS, the user is required to instruct the Switch to examine the header of a packet to see if it has the proper identifying tag. Then the user may forward these tagged packets to designated classes of service on the Switch where they will be emptied, based on priority.

For example, lets say a user wishes to have a video conference between two remotely set computers. The administrator can add priority tags to the video packets being sent out, utilizing the Access Profile commands. Then, on the receiving end, the administrator instructs the Switch to examine packets for this tag, acquires the tagged packets and maps them to a class queue on the Switch. Then in turn, the administrator will set a priority for this queue so that will be emptied before any other packet is forwarded. This results in the end user receiving all packets sent as quickly as possible, thus prioritizing the queue and allowing for an uninterrupted stream of packets, which optimizes the use of bandwidth available for the video conference.

Understanding QoS

The Switch has nine priority classes of service, one of which is internal and not configurable. These priority classes of service are labeled as 7, the high class to 0, the lowest class. The eight priority tags, specified in IEEE 802.1p are mapped to the Switch's priority classes of service as follows:

- Priority 0 is assigned to the Switch's Q2 class.
- Priority 1 is assigned to the Switch's Q0 class.
- Priority 2 is assigned to the Switch's Q1 class.
- Priority 3 is assigned to the Switch's Q3 class.
- Priority 4 is assigned to the Switch's Q4 class.
- Priority 5 is assigned to the Switch's Q5 class.
- Priority 6 is assigned to the Switch's Q6 class.
- Priority 7 is assigned to the Switch's Q7 class.

For strict priority-based scheduling, any packets residing in the higher priority classes of service are transmitted first. Multiple strict priority classes of service are emptied based on their priority tags. Only when these classes are empty, are packets of lower priority transmitted.

For weighted round-robin queuing, the number of packets sent from each priority queue depends upon the assigned weight. For a configuration of 8 CoS queues, A~H with their respective weight value: 8~1, the packets are sent in the following sequence: A1, B1, C1, D1, E1, F1, G1, H1, A2, B2, C2, D2, E2, F2, G2, A3, B3, C3, D3, E3, F3, A4, B4, C4, D4, E4, A5, B5, C5, D5, A6, B6, C6, A7, B7, A8, A1, B1, C1, D1, E1, F1, G1, H1.

For weighted round-robin queuing, if each CoS queue has the same weight value, then each CoS queue has an equal opportunity to send packets just like round-robin queuing.

For weighted round-robin queuing, if the weight for a CoS is set to 0, then it will continue processing the packets from this CoS until there are no more packets for this CoS. The other CoS queues that have been given a nonzero value, and depending upon the weight, will follow a common weighted round-robin scheme.

Remember that the DGS-3212SR has eight configurable priority queues (and eight Classes of Service) for each port on the Switch.



NOTICE: The Switch contains nine classes of service for each port on the Switch. One of these classes is reserved for internal use on the Switch and is therefore not configurable. All references in the following section regarding classes of service will refer to only the seven classes of service that may be used and configured by the Switch's Administrator.

802.1p Default Priority

The Switch allows the assignment of a default 802.1p priority to each port on the Switch.

Click on the **802.1p Default Priority** link in the **QoS** sub-folder:

Unit	From	To	Priority(0~7)	Apply
15	Port 1	Port 1	0	Apply

Port	Priority
1	0
2	0
3	0
4	0
5	0
6	0
7	0
8	0
9	0
10	0
11	0
12	0

Figure 4- 58. Port Default Priority assignment and The Port Priority Table window

This page allows you to assign a default 802.1p priority to any given port on the Switch. The priority queues are numbered from 0 – the lowest priority – to 7 – the highest priority.

802.1p User Priority

The DGS-3212SR allows the assignment of a User Priority to each of the 802.1p priorities.

Priority	Class
Priority-0	Class-2
Priority-1	Class-0
Priority-2	Class-1
Priority-3	Class-3
Priority-4	Class-4
Priority-5	Class-5
Priority-6	Class-6
Priority-7	Class-7

Apply

Figure 4- 59. User Priority Configuration window

Once you have assigned a priority to the port groups on the Switch, you can then assign this Class to each of the eight levels of 802.1p priorities.

QoS Output Scheduling Configuration

QoS can be customized by changing the output scheduling used for the hardware queues in the Switch. As with any changes to QoS implementation, careful consideration should be given to how network traffic in lower priority queues are affected. Changes in scheduling may result in unacceptable levels of packet loss or significant transmission delay. If you choose to customize this setting, it is important to monitor network performance, especially during peak demand as bottlenecks can quickly develop if the QoS settings are not suitable.

QoS Output Scheduling Configuration	
Scheduling Mechanism	Apply
RoundRobin ▾	Apply
QoS Output Scheduling Table	
Class	Scheduling Mechanism
Class_0	RoundRobin
Class_1	RoundRobin
Class_2	RoundRobin
Class_3	RoundRobin
Class_4	RoundRobin
Class_5	RoundRobin
Class_6	RoundRobin
Class_7	RoundRobin

Figure 4- 60. QoS Output Scheduling Configuration window

Use the Scheduling Mechanism drop-down menu to select between a *RoundRobin* and a *Strict* mechanism for emptying the priority queues.

Click **Apply** to let your changes take effect.

Traffic Segmentation

Traffic segmentation is used to limit traffic flow from a single port to a group of ports on either a single Switch (in standalone mode) or a group of ports on another Switch in a Switch stack. This method of segmenting the flow of traffic is similar to using VLANs to limit traffic, but is more restrictive. It provides a method of directing traffic that does not increase the overhead of the Master Switch CPU.

This page allows you to determine which port on the master switch in a switch stack will be allowed to forward packets to other ports on that switch.

Configuring traffic segmentation on the DGS-33121SR is accomplished in two parts. First, you specify a switch from a switch stack by using the Unit pull-down menu, and then a port from that switch, using the Port pull-down menu. Then specify which ports on the Switch that you want to be able to receive packets from the Switch and port you specified in the first part.

Clicking the **Apply** button will enter the combination of transmitting port and allowed receiving ports into the Switch's Traffic Segmentation table.

The Unit drop-down menu at the top of the page allows you to select a switch from a switch stack using that switch's Unit ID. The Port drop-down menu allows you to select a port from that switch. This is the port that will be transmitting packets. The Portlist field will allow the user to set a port or series of ports to which traffic will be forwarded, on the same switch. These ports will be configured for the same switch in the Switch stack that has been selected. For the master switch of a switch stack, the traffic segmentation can be done per stacking port so the Switch can forward traffic to all the ports on a specific switch in the Switch stack. Clicking the null click box will instruct the Switch not to forward traffic to any ports on the selected switch.

Clicking the **Apply** button will enter the combination of transmitting port and allowed receiving ports into the Switch's Traffic Segmentation Table.

Traffic Segmentation Setting				
Unit	Port	Portlist	Configuration	Apply
2	Port 1	<input type="text"/> <input type="checkbox"/> null	View	Apply
Current Traffic Segmentation Table				
Unit	Forward Portlist			
15	1-12			
1				
2	1-50			
3				
4				
5	1-26			
6				
7				
8				
9				
10				
11				
12				

Figure 4- 61. Traffic Segmentation Setting window

Port Bandwidth

The bandwidth control settings are used to place a ceiling on the transmitting and receiving data rates for any selected port.

Bandwidth Settings						
Unit	From	To	Type	no_limit	Rate	Apply
15	Port 1	Port 1	RX	Disabled	1	Apply

Port Bandwidth Table		
Port	RX Rate (Mbit/sec)	TX Rate (Mbit/sec)
1	no_limit	no_limit
2	no_limit	no_limit
3	no_limit	no_limit
4	no_limit	no_limit
5	no_limit	no_limit
6	no_limit	no_limit
7	no_limit	no_limit
8	no_limit	no_limit
9	no_limit	no_limit
10	no_limit	no_limit
11	no_limit	no_limit
12	no_limit	no_limit

Figure 4- 62. Bandwidth Settings window

The following parameters can be set or are displayed:

Parameter	Description
Unit	Allows you to specify a Switch in a Switch stack using that Switch's Unit ID. 15 indicates a Switch in standalone mode.
From/To	A consecutive group of ports may be configured starting with the selected port.
Type	This drop-down menu allows you to select between <i>RX</i> (receive,) <i>TX</i> (transmit,) and <i>Both</i> . This setting will determine whether the bandwidth ceiling is applied to receiving, transmitting, or both receiving and transmitting packets.
no_limit	This drop-down menu allows you to specify that the selected port will have no bandwidth limit. <i>Enabled</i> disables the limit.
Rate	This field allows you to enter the data rate, in Mb/s, that will be the limit for the selected port.

Click **Apply** to implement changes made.

MAC Notification

MAC address notification is used to monitor MAC addresses as they are learned and entered into the Switch's MAC forwarding database.

MAC Notification Global Settings

The following window will allow the user to globally enable MAC Notification on the Switch. To view this window, click **Configuration > MAC Notification > MAC Notification Global Settings**.

MAC Notification Global Settings	
State	Disabled ▾
Interval (sec)	1
History size	1
Apply	

Figure 4- 63. MAC Notification Global Settings window

The following parameters can be set:

Parameter	Description
State	This drop-down menu is used to enable or disable MAC notification on the selected Switch.
Interval (sec)	The time in seconds between notifications.
History size	The maximum number of entries that will be listed in the History log. Up to 500 entries can be specified.

Click **Apply** to implement changes made.

MAC Notification Port Settings

Enable or disable MAC notification for ports with the window below.

MAC Notification Port Settings				
Unit	From	To	State	Apply
15	Port 1	Port 1	Disabled	Apply

MAC Notification Port State Table	
Port	State
1	Disabled
2	Disabled
3	Disabled
4	Disabled
5	Disabled
6	Disabled
7	Disabled
8	Disabled
9	Disabled
10	Disabled
11	Disabled
12	Disabled

Figure 4- 64. MAC Notification Port Settings window

The following parameters can be set:

Parameter	Description
Unit	Allows you to specify a Switch in a Switch stack using that Switch's Unit ID. 15 indicates the DGS-3212SR.
From/To	A consecutive group of ports may be configured starting with the selected port.
State	This pull-down menu allows you to enable or disable MAC notification for the specified Switch and group of ports.

Click **Apply** to implement changes made.

Port Security Configuration

The following three windows will allow the user to implement security functions on a per port basis on the Switch or a switch in a switch stack. To access the following windows, open the **Port Security Configuration** folder in the **Configuration** folder.

Port Security

A given port's (or a range of port's) dynamic MAC address learning can be locked such that the current source MAC addresses entered into the MAC address forwarding table can not be changed once the port lock is enabled. The port can be locked by using the Admin State pull-down menu to *Enabled*, and clicking **Apply**.

This is a security feature that prevents unauthorized computers (with source MAC addresses unknown to the Switch prior to locking the port (or ports) from connecting to the Switch's locked ports and gaining access to the network.

Port Security Settings						
Unit	From	To	Admin State	Max.Addr(0-10)	Lock Address Mode	Apply
15	Port 1	Port 1	Disabled	0	Permanent	Apply
Port Security Table						
Port	Admin State		Max.Learning Addr	Lock Address Mode		
1	Disabled		1	DeleteOnReset		
2			Stacking Link Port			
3	Disabled		1	DeleteOnReset		
4	Disabled		1	DeleteOnReset		
5			Stacking Link Port			
6			Stacking Link Port			
7			Stacking Link Port			
8			Stacking Link Port			
9	Disabled		1	DeleteOnReset		
10	Disabled		1	DeleteOnReset		
11	Disabled		1	DeleteOnReset		
12	Disabled		1	DeleteOnReset		

Figure 4- 65. Port Security Settings window

The following parameters can be set:

Parameter	Description
Unit	Allows you to specify a Switch in a Switch stack using that Switch's Unit ID. The number 15 indicates a Switch in standalone mode.
From/To	A consecutive group of ports may be configured starting with the selected port.
Admin State	This pull-down menu allows you to enable or disable Port Security (locked MAC address table for the selected ports.)
Max.Addr (0-10)	The number of MAC addresses that will be in the MAC address forwarding table for the selected Switch and group of ports.
Lock Address Mode	This pull-down menu allows you to select how the MAC address table locking will be implemented on the Switch, for the selected group of ports. The options are: <ul style="list-style-type: none"> <i>Permanent</i> – The locked addresses will not age out after the aging timer expires. <i>DeleteOnTimeout</i> – The locked addresses will age out after the aging timer expires. <i>DeleteOnReset</i> – The locked addresses will not age out until the Switch has

	been reset.
--	-------------

Port Lock Entry Delete

The **Port Lock Entry Delete** window is used to remove an entry from the port security entries learned by the Switch and entered into the forwarding database. To view the following window, click **Configuration > Port Security Configuration > Port Lock Entry Delete**:

Figure 4- 66. Port Lock Entry window

This function is only operable if the Mode in the **Port Security** window is selected as Permanent or DeleteOnReset, or in other words, only addresses that are permanently learned by the Switch can be deleted. Once the entry has been defined by entering the correct information into the window above, click **Delete**.

Parameter	Description
VLAN Name	The VLAN Name of the entry in the forwarding database table that has been permanently learned by the Switch.
Unit	The ID number of the Switch in the Switch stack that has permanently learned the MAC address.
Port	Enter the port on which the MAC address resides.
MAC Address	The MAC address of the entry in the forwarding database table that has been permanently learned by the Switch.

Port Security Clear

This window is used to clear the security settings implemented on the Switch on a per port basis. To view this window, click **Configuration > Port Security Configuration > Port Security Clear**:

Figure 4- 67. Port Security Clear window

To clear the security configurations on a port, use the pull-down menus to select a switch within the Switch stack and then a port on that switch and click the clear button. A **Success!** message will appear in a pop-up window when the port has been cleared of security restrictions.

System Log Server

Use the System Log to keep a record of warning and other pertinent system information.

The Switch can send system log (SysLog) messages to up to four designated servers, which can be set on the Switch utilizing the **System Log Servers** window. To view the following window, click **Configuration > System Log Server**:

System Log Servers						
Add New System Log Server						Add
Current System Log Servers						
Index	Server IP	Severity	Facility	UDP Port	Status	Delete
1	10.53.13.94	warning	Local0	514	Enabled	X

Figure 4- 68. System Log Servers window

Click the **Add** or the hyperlinked number under the **Index** heading will bring up the window pictured below. The parameters configured for adding System Log are described in the table below. To eliminate a System Log Server configuration, click the X in the **Delete** column for the configuration being removed.

System Log Server-Add	
Index(1-4)	1
Server IP	10.53.13.94
Severity	Warning
Facility	Local0
UDP Port	514
Status	Enabled
Apply	
Show All System Log Servers	

Figure 4- 69. System Log Server – Add window

Configure these parameters for the system log:

Parameter	Description
Index	Syslog server settings index (1-4).
Server IP	The IP address of the Syslog server.
Severity	This drop-down menu allows you to select the level of messages that will be sent. The options are <i>Warning</i> , <i>Informational</i> , and <i>ALL</i> .

Facility	<p>Some of the operating system daemons and processes have been assigned Facility values. Processes and daemons that have not been explicitly assigned a Facility may use any of the "local use" facilities or they may use the "user-level" Facility. Those Facilities that have been designated are shown in the following: Bold font means the facility values that the Switch currently supports.</p> <p>Numerical Facility Code</p> <p>0 kernel messages 1 user-level messages 2 mail system 3 system daemons 4 security/authorization messages 5 messages generated internally by syslog line printer subsystem 7 network news subsystem 8 UUCP subsystem 9 clock daemon 10 security/authorization messages 11 FTP daemon 12 NTP subsystem 13 log audit 14 log alert 15 clock daemon 16 local use 0 (local0) 17 local use 1 (local1) 18 local use 2 (local2) 19 local use 3 (local3) 20 local use 4 (local4) 21 local use 5 (local5) 22 local use 6 (local6) 23 local use 7 (local7)</p>
UDP Port	Type the UDP port number used for sending Syslog messages. The default is <i>514</i> .
Status	Choose <i>Enabled</i> or <i>Disabled</i> to activate or deactivate this

Click **Apply** to implement changes made.

SNTP Settings

The Simple Network Time Protocol (SNTP) (an adaptation of the Network Time Protocol (NTP)) is configured on the Switch using the following windows.

Time Setting

The following window will allow the user to configure the time settings for the Switch and can be accessed by clicking **Configuration > SNTP Settings > Time Setting**. Click **Apply** to implement changes made.

The screenshot displays two configuration windows. The top window, titled 'Current Time: Status', shows the current system time as '0 days 20:00:14' and the time source as 'System Clock'. Below this is the 'Current Time: SNTP Settings' window, which includes a dropdown for 'SNTP State' set to 'Disabled', text input fields for 'SNTP Primary Server' and 'SNTP Secondary Server' both containing '0.0.0.0', and a text input field for 'SNTP Poll Interval in Seconds' containing '720'. An 'Apply' button is located at the bottom right of this section. The bottom window, titled 'Current Time: Set Current Time', features dropdown menus for 'Year', 'Month', and 'Day', and three dropdown menus for 'Time in HH MM SS'. An 'Apply' button is also present at the bottom right of this section.

Figure 4- 70. Current Time: Status window

The following parameters can be set or are displayed:

Parameter	Description
Current Time	Displays the current system time.
Time Source	Displays the time source for the system.
SNTP State	Use this pull-down menu to enable or disable SNTP.
SNTP Primary Server	This is the primary server from which SNTP information will be taken.
SNTP Secondary Server	This is the secondary server from which the SNTP information will be taken, if the primary server fails.
SNTP Poll Interval in Seconds	This is the interval between requests for updated SNTP information.
Year	Enter the current year, to update the system clock.
Month	Enter the current month, to update the system clock.
Day	Enter the current day, to update the system clock.
Time in HH MM SS	Enter the current time in hours, minutes, and seconds, to update the system clock.

Time Zone and DST Settings

The following window is used to set up Time Zone and Daylight Savings configurations for the Switch and can be accessed by clicking **Configuration > SNMP Settings > Time Zone and DST**.

Time Zone and DST Settings	
Daylight Saving Time State	Disabled ▾
Daylight Saving Time Offset in Minutes	60 ▾
Time Zone Offset from GMT in +/-HH:MM	- ▾ 06 ▾ 00 ▾
DST Repeating Settings	
From Which Week of the month	First ▾
From Which Day of the Week	Sunday ▾
From Which Month	April ▾
From What Time HH:MM	00 ▾ 00 ▾
To Which Week	Last ▾
To Which Day	Sunday ▾
To Which Month	October ▾
To What Time HH:MM	00 ▾ 00 ▾
DST Annual Settings	
From What Month	April ▾
From What Date	29 ▾
From What Time	00 ▾ 00 ▾
To What Month	October ▾
To What Date	12 ▾
To What Time	00 ▾ 00 ▾
Apply	

Figure 4- 71. Time Zone and DST Settings window

The following parameters can set:

Parameter	Description
Daylight Saving Time State	Use this pull-down menu to enable or disable the DST Settings.
Daylight Saving Time Offset in Minutes	Use this pull-down menu to specify the amount of time that will constitute your local DST offset – 30, 60, 90, or 120 minutes.
Time Zone Offset from GMT in +/-HH:MM	Use these pull-down menus to specify your local time zone's offset from Greenwich Mean Time (GMT.)

<i>DST Repeating Settings</i>	Repeating - Using repeating mode will enable DST seasonal time adjustment. Repeating mode requires that the DST beginning and ending date be specified using a formula. For example, specify to begin DST on Saturday during the second week of April and end DST on Sunday during the last week of October.
From: Which Week of the month	Enter the week of the month that DST will start.
From: Which Day of Week	Enter the day of the week that DST will start on.
From: Which Month	Enter the month DST will start on.
From: What Time HH:MM	Enter the time of day that DST will start on.
To: Which Week	Enter the week of the month the DST will end.
To: Which Day	Enter the day of the week that DST will end.
To: Which Month	Enter the month that DST will end.
To: What Time HH:MM	Enter the time DST will end.
<i>DST Annual Settings</i>	Annual - Using annual mode will enable DST seasonal time adjustment. Annual mode requires that the DST beginning and ending date be specified concisely. For example, specify to begin DST on April 3 and end DST on October 14.
From: What Month	Enter the month DST will start on, each year.
From: What Date	Enter the day of the week DST will start on, each year.
From: What Time	Enter the time of day DST will start on, each year.
To: What Month	Enter the month DST will end on, each year.
To: What Date	Enter the day of the week DST will end on, each year.
To: What Time	Enter the time of day that DST will end on, each year.


Click **Apply** to implement changes made.

Access Profile Table

Access profiles allow you to establish criteria to determine whether or not the Switch will forward packets based on the information contained in each packet's header. These criteria can be specified on a basis of VLAN, MAC address or IP address.

Creating an access profile is divided into two basic parts. The first is to specify which part or parts of a frame the Switch will examine, such as the MAC source address or the IP destination address. The second part is entering the criteria the Switch will use to determine what to do with the frame. The entire process is described below in two parts.


To display the currently configured Access Profiles on the Switch, open the **Configuration** folder and click on the **Access Profile Table** link. This will open the **Access Profile Table** window, as shown below.

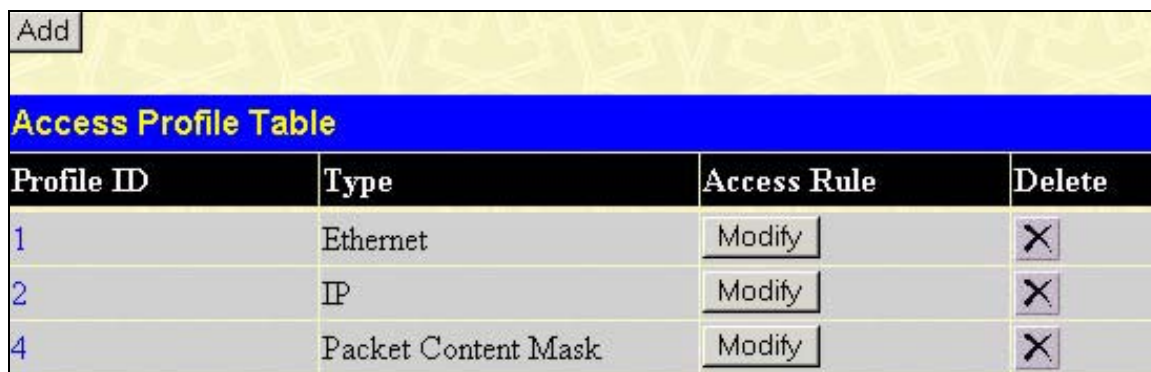

Profile ID	Type	Access Rule	Delete
1	Ethernet	Modify	X
2	IP	Modify	X
4	Packet Content Mask	Modify	X

Figure 4- 72. Access Profile Table window

To add an entry to the **Access Profile Table** window, click the **Add** button. This will open the **Access Profile Configuration** window, as shown below. There are three **Access Profile Configuration** windows – one for Ethernet (or MAC address-based) profile configuration, one for IP address-based profile configuration, and one for Packet Content Mask-based profile configuration. You can Switch among the three **Access Profile Configuration** windows by using the Type drop-down menu, and clicking on the **Apply** button. The **Access Profile Configuration** window for Ethernet is shown below.

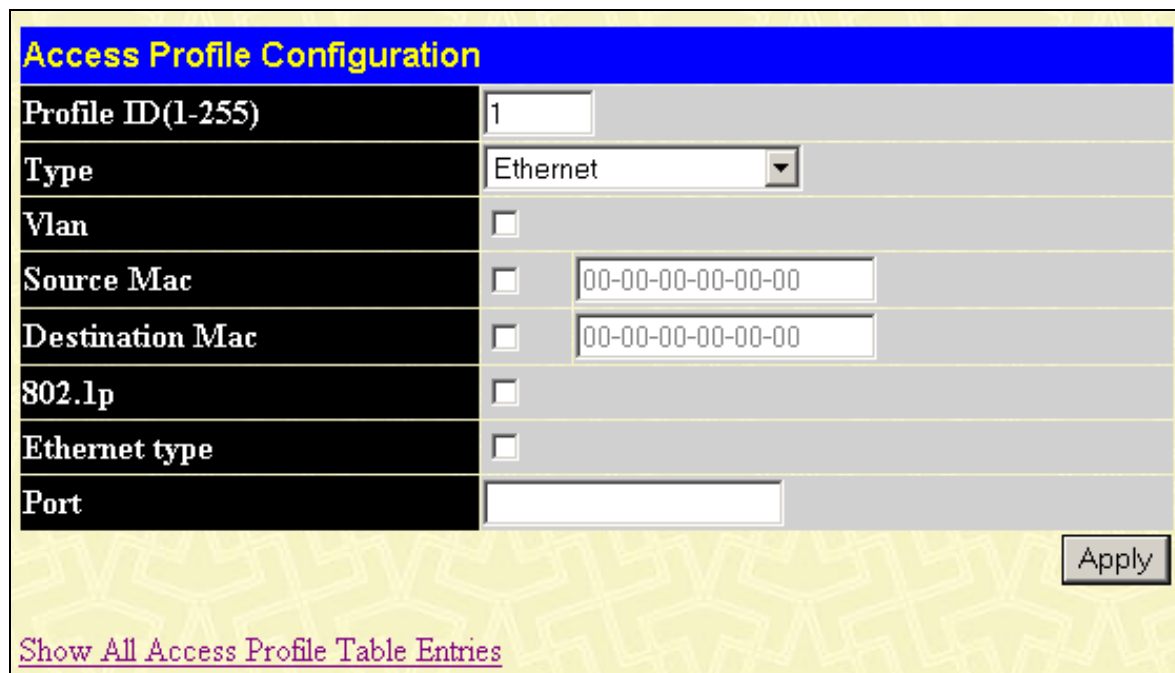

Profile ID(1-255)	1
Type	Ethernet
Vlan	<input type="checkbox"/>
Source Mac	<input type="checkbox"/> 00-00-00-00-00-00
Destination Mac	<input type="checkbox"/> 00-00-00-00-00-00
802.1p	<input type="checkbox"/>
Ethernet type	<input type="checkbox"/>
Port	

[Apply](#)

[Show All Access Profile Table Entries](#)

Figure 4- 73. Access Profile Configuration (Ethernet) window

The following parameters can be set:

Parameter	Description
Profile ID (1-255)	Type in a unique identifier number for this profile set. This value can be set from 1 to 255.
Type	Select profile based on Ethernet (MAC Address), IP address or packet content mask. This will change the menu according to the requirements for the type of profile. <ul style="list-style-type: none"> • Select <i>Ethernet</i> to instruct the Switch to examine the layer 2 part of each packet header. • Select <i>IP</i> to instruct the Switch to examine the IP address in each frame's header. • Select <i>Packet Content Mask</i> to specify a mask to hide the content of the packet header.
VLAN	Selecting this option instructs the Switch to examine the VLAN part of each packet header and use this as the, or part of the criterion for forwarding.
Source MAC	Source MAC Mask - Enter a MAC address mask for the source MAC address.
Destination MAC	Destination MAC Mask - Enter a MAC address mask for the destination MAC address.
802.1p	Selecting this option instructs the Switch to examine the 802.1p priority value of each packet header and use this as the, or part of the criterion for forwarding.
Ethernet type	Selecting this option instructs the Switch to examine the Ethernet type value of each packet header and use this as the, or part of the criterion for forwarding.
Port	The user may set the Access Profile Table window on a per-port basis by entering a port number in this field. Entering "all" will denote all ports on the Switch.

Click **Apply** to set the parameters for Ethernet.

The page shown below is the **Access Profile Configuration** window for IP:

Access Profile Configuration			
Profile ID(1-255)	<input type="text" value="1"/>		
Type	IP <input type="button" value="v"/>		
Vlan	<input type="checkbox"/>		
Source IP Mask	<input type="checkbox"/>	<input type="text"/>	
Destination IP Mask	<input type="checkbox"/>	<input type="text"/>	
Dscp	<input type="checkbox"/>		
Protocol	<input type="checkbox"/>	<input checked="" type="radio"/> ICMP	<input type="checkbox"/> type <input type="checkbox"/> code
		<input type="radio"/> IGMP	<input type="checkbox"/> type
			<input type="checkbox"/> src port mask <input type="text" value="0000"/>
			<input type="checkbox"/> dest port mask <input type="text" value="0000"/>
		<input type="radio"/> TCP	<input type="checkbox"/> flag bit
			<input type="checkbox"/> urg <input type="checkbox"/> ack <input type="checkbox"/> psh
			<input type="checkbox"/> rst <input type="checkbox"/> syn <input type="checkbox"/> fin
		<input type="radio"/> UDP	<input type="checkbox"/> src port mask <input type="text" value="0000"/>
			<input type="checkbox"/> dest port mask <input type="text" value="0000"/>
		<input type="radio"/> protocol id	user mask <input type="text" value="00000000"/>
Port	<input type="text"/>		
<input type="button" value="Apply"/>			
Show All Access Profile Table Entries			

Figure 4- 74. Access Profile Configuration (IP) window

The following parameters can be set:

Parameter	Description
Profile ID (1-255)	Type in a unique identifier number for this profile set. This value can be set from 1 to 255.
Type	Select profile based on Ethernet (MAC Address), IP address, packet content mask or IPv6. This will change the menu according to the requirements for the type of profile. <ul style="list-style-type: none"> Select <i>Ethernet</i> to instruct the Switch to examine the layer 2 part of each packet header. Select <i>IP</i> to instruct the Switch to examine the IP address in each frame's header. Select <i>Packet Content Mask</i> to specify a mask to hide the content of the packet header.
VLAN	Selecting this option instructs the Switch to examine the VLAN part of each packet header and use this as the, or part of the criterion for forwarding.

Source IP Mask	Source IP Mask - Enter an IP address mask for the source IP address.
Destination IP Mask	Destination IP Mask - Enter an IP address mask for the destination MAC address.
DSCP	Selecting this option instructs the Switch to examine the DiffServ Code part of each packet header and use this as the, or part of the criterion for forwarding.
Protocol	<p>Selecting this option instructs the Switch to examine the protocol type value in each frame's header. You must then specify what protocol(s) to include according to the following guidelines:</p> <p>Select <i>ICMP</i> to instruct the Switch to examine the Internet Control Message Protocol (ICMP) field in each frame's header.</p> <ul style="list-style-type: none"> Select <i>type</i> to further specify that the access profile will apply an ICMP type value, or specify code to further specify that the access profile will apply an ICMP code value. <p>Select <i>IGMP</i> to instruct the Switch to examine the Internet Group Management Protocol (ICMP) field in each frame's header.</p> <ul style="list-style-type: none"> Select <i>type</i> to further specify that the access profile will apply an IGMP type value. <p>Select <i>TCP</i> to use the TCP port number contained in an incoming packet as the forwarding criterion. Selecting TCP requires that you specify a source port mask, a destination port mask or a flag bite.</p> <ul style="list-style-type: none"> <i>src port mask</i> – Specify a TCP port mask for the source port in hex form (hex 0x0-0xffff). <i>dest port mask</i> – Specify a TCP port mask for the destination port in hex form (hex 0x0-0xffff). <i>flag bit</i> – Specify a flag bite in the TCP header. <p>Select <i>UDP</i> to use the UDP port number contained in an incoming packet as the forwarding criterion. Selecting UDP requires that you specify a source port mask and/or a destination port mask.</p> <ul style="list-style-type: none"> <i>src port mask</i> – Specify a TCP port mask for the source port in hex form (hex 0x0-0xffff). <i>dest port mask</i> – Specify a TCP port mask for the destination port in hex form (hex 0x0-0xffff). <p><i>protocol id</i> – Enter a value defining the protocol ID in the packet header to mask. Specify the protocol ID mask in hex form (hex 0x0-0xffffffff).</p>
Port	The user may set the Access Profile Table window on a per-port basis by entering a port number in this field. Entering "all" will denote all ports on the Switch.

Click **Apply** to set the parameters for IP.

The window shown below is the **Access Profile Configuration** window for *Packet Content Mask*.

Access Profile Configuration		
Profile ID(1-255)	1	
Type	Packet Content Mask	
Offset	<input type="checkbox"/> value(0-15)	mask 00000000
		mask 00000000
		mask 00000000
		mask 00000000
	<input type="checkbox"/> value(16-31)	mask 00000000
		mask 00000000
		mask 00000000
		mask 00000000
	<input type="checkbox"/> value(32-47)	mask 00000000
		mask 00000000
		mask 00000000
		mask 00000000
	<input type="checkbox"/> value(48-63)	mask 00000000
		mask 00000000
		mask 00000000
		mask 00000000
	<input type="checkbox"/> value(64-79)	mask 00000000
		mask 00000000
		mask 00000000
		mask 00000000
Port		
<input type="button" value="Apply"/>		
Show All Access Profile Table Entries		

Figure 4- 75. Access Profile Configuration (Packet Content Mask) window

This window will aid the user in configuring the Switch to mask packet headers beginning with the offset value specified. The following fields are used to configure the **Packet Content Mask** window:

The following parameters can be set:

Parameter	Description
Profile ID (1-255)	Type in a unique identifier number for this profile set or allow an ID to be automatically assigned by checking the Auto Assign option. This value can be set from 1 to 255.

<p>Type</p>	<p>Select profile based on <i>Ethernet</i> (MAC Address), <i>IP</i> address or <i>packet content mask</i>. This will change the menu according to the requirements for the type of profile.</p> <ul style="list-style-type: none"> • Select <i>Ethernet</i> to instruct the Switch to examine the layer 2 part of each packet header. • Select <i>IP</i> to instruct the Switch to examine the IP address in each frame's header. • Select <i>Packet Content Mask</i> to specify a mask to hide the content of the packet header.
<p>Offset</p>	<p>This field will instruct the Switch to mask the packet header beginning with the offset value specified:</p> <ul style="list-style-type: none"> • <i>value (0-15)</i> - Enter a value in hex form to mask the packet from the beginning of the packet to the 15th byte. • <i>value (16-31)</i> - Enter a value in hex form to mask the packet from byte 16 to byte 31. • <i>value (32-47)</i> - Enter a value in hex form to mask the packet from byte 32 to byte 47. • <i>value (48-63)</i> - Enter a value in hex form to mask the packet from byte 48 to byte 63. • <i>value (64-79)</i> - Enter a value in hex form to mask the packet from byte 64 to byte 79.
<p>Port</p>	<p>The user may set the Access Profile Table window on a per-port basis by entering a port number in this field. Entering "all" will denote all ports on the Switch.</p>

To establish the rule for a previously created Access Profile, select the Access Profile entry from the **Access Profile Table** window and then click the **Modify** button for that individual entry.

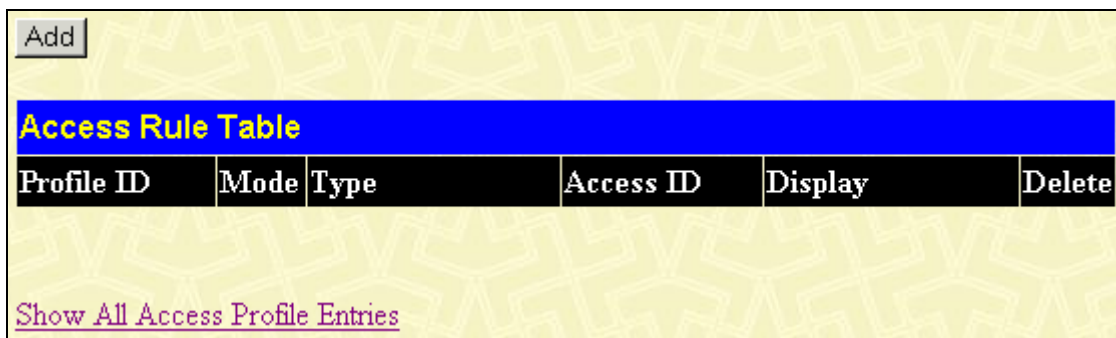


Figure 4- 76. Access Rule Table window

To create a new rule set for the access profile, click the **Add** button. A new window is displayed. To remove a previously created rule, select it and click the **Delete** button.

Configure the **Access Rule Configuration** settings for Ethernet on the window below.

Access Rule Configuration	
Profile ID	1
Mode	<input checked="" type="radio"/> Permit <input type="radio"/> Deny
Access ID	1
Type	Ethernet
Priority(0-7)	<input type="checkbox"/> 0 <input type="checkbox"/> replace priority
Vlan Name	
Source Mac	00-00-00-00-00-00
Destination Mac	00-00-00-00-00-00
802.1p(0-7)	0
Ethernet Type	0000
<input type="button" value="Apply"/>	
Show All Access Rule Entries	

Figure 4- 77. Access Rule Configuration (Ethernet) window

The following parameters can be set:

Parameter	Description
Profile ID	This is the identifier number for this profile set.
Mode	Select <i>Permit</i> to specify that the packets that match the access profile are forwarded by the Switch, according to any additional rule added (see below). Select <i>Deny</i> to specify that packets that do not match the access profile are not forwarded by the Switch and will be filtered.
Access ID	Type in a unique identifier number for this access. This value can be set from 1 to 255.
Type	Selected profile based on Ethernet (MAC Address), IP address or packet content mask. This will change the menu according to the requirements for the type of profile. <ul style="list-style-type: none"> <i>Ethernet</i> instructs the Switch to examine the layer 2 part of each packet header. <i>IP</i> instructs the Switch to examine the IP address in each frame's header. <i>Packet Content Mask</i> specifies a mask to hide the content of the packet header.
Priority (0-7)	Specify the priority tag, located in the packet header that will be identified by the Switch.
Replace Priority (0-7)	This parameter is specified if you want to re-write the 802.1p default priority previously set in the Switch, which is used to determine the CoS queue to which packets are forwarded to. Once this field is specified, packets accepted by the Switch that match this priority are forwarded to the CoS queue specified previously by the user.

	<p><i>Replace priority</i> – Click the corresponding box if you want to re-write the 802.1p default priority of a packet to the value entered in the Priority field, which meets the criteria specified previously in this command, before forwarding it on to the specified CoS queue. Otherwise, a packet will have its incoming 802.1p user priority re-written to its original value before being forwarded by the Switch.</p> <p>For more information on priority queues, CoS queues and mapping for 802.1p, see the QoS section of this manual.</p>
VLAN Name	Allows the entry of a name for a previously configured VLAN.
Source MAC	Source MAC Address - Enter a MAC Address for the source MAC address.
Destination MAC	Destination MAC Address - Enter a MAC Address mask for the destination MAC address.
802.1p (0-7)	Enter a value from 0 to 7 to specify that the access profile will apply only to packets with this 802.1p priority value.
Ethernet Type	Specifies that the access profile will apply only to packets with this hexadecimal 802.1Q Ethernet type value (hex 0x0-0xffff) in the packet header. The Ethernet type value may be set in the form: hex 0x0-0xffff, which means the user may choose any combination of letters and numbers ranging from a-f and from 0-9999.

Configure the **Access Rule Configuration** settings for IP on the window below.

Access Rule Configuration

Profile ID	2	
Mode	<input checked="" type="radio"/> Permit <input type="radio"/> Deny	
Access ID	<input type="text" value="1"/>	
Type	IP	
Priority(0-7)	<input type="checkbox"/> <input type="text" value="0"/>	<input type="checkbox"/> replace priority
Replace Dscp(0-63)	<input type="checkbox"/> <input type="text" value="0"/>	
Vlan Name	<input type="text"/>	
Source IP	<input type="text" value="0.0.0.0"/>	
Destination IP	<input type="text" value="0.0.0.0"/>	
Dscp(0-63)	<input type="text" value="0"/>	
Protocol	Protocol id <input type="text" value="0"/>	
	user define <input type="text" value="00000000"/>	

[Show All Access Rule Entries](#)

Figure 4- 78. Access Rule Configuration (IP) window

The following parameters can be set:

Parameter	Description
Profile ID	This is the identifier number for this profile set.
Mode	Select <i>Permit</i> to specify that the packets that match the access profile are forwarded by the Switch, according to any additional rule added (see below). Select <i>Deny</i> to specify that packets that do not match the access profile are not forwarded by the Switch and will be filtered.
Access ID	Type in a unique identifier number for this access. This value can be set from 1 to 255.
Type	Selected profile based on Ethernet (MAC Address), IP address or packet content mask. This will change the menu according to the requirements for the type of profile. <ul style="list-style-type: none"> • <i>Ethernet</i> instructs the Switch to examine the layer 2 part of each packet header. • <i>IP</i> instructs the Switch to examine the IP address in each frame's header. • <i>Packet Content Mask</i> specifies a mask to hide the content of the packet header.
Priority (0-7)	This parameter is specified if you want to re-write the 802.1p default priority previously set in the Switch, which is used to determine the CoS queue to which packets are forwarded to. Once this field is specified, packets accepted by the Switch that match this priority are forwarded to the CoS queue specified previously by the user. <i>Replace priority</i> – Click the corresponding box if you want to re-write the 802.1p default priority of a packet to the value entered in the Priority field, which meets the criteria specified previously in this command, before forwarding it on to the specified CoS queue. Otherwise, a packet will have its incoming 802.1p user priority re-written to its original value before being forwarded by the Switch. For more information on priority queues, CoS queues and mapping for 802.1p, see the QoS section of this manual.
Replace DSCP (0-63)	Select this option to instruct the Switch to replace the DSCP value (in a packet that meets the selected criteria) with the value entered in the adjacent field.
VLAN Name	Allows the entry of a name for a previously configured VLAN.
Source IP	Source IP Address - Enter an IP Address mask for the source IP address.
Destination IP	Destination IP Address - Enter an IP Address mask for the destination IP address.
DSCP (0-63)	This field allows the user to enter a DSCP value in the space provided, which will instruct the Switch to examine the DiffServ Code part of each packet header and use this as the, or part of the criterion for forwarding. The user may choose a value between 0 and 63.
Protocol	This field allows the user to modify the protocol ID used in configuring the Access Rule Table window; depending on which protocol the user has chosen in the Access Profile Table window.

Configure the **Access Rule Configuration** settings for the Packet Content Mask on the window below.

Access Rule Configuration		
Profile ID	4	
Mode	<input checked="" type="radio"/> Permit <input type="radio"/> Deny	
Access ID	1	
Type	Packet Content Mask	
Priority(0-7)	<input type="checkbox"/> <input type="text"/> <input type="checkbox"/> replace priority	
Offset	<input type="checkbox"/> value(0-15)	mask <input type="text" value="00000000"/>
		mask <input type="text" value="00000000"/>
		mask <input type="text" value="00000000"/>
		mask <input type="text" value="00000000"/>
	<input type="checkbox"/> value(16-31)	mask <input type="text" value="00000000"/>
		mask <input type="text" value="00000000"/>
		mask <input type="text" value="00000000"/>
		mask <input type="text" value="00000000"/>
	<input type="checkbox"/> value(32-47)	mask <input type="text" value="00000000"/>
		mask <input type="text" value="00000000"/>
		mask <input type="text" value="00000000"/>
		mask <input type="text" value="00000000"/>
	<input type="checkbox"/> value(48-63)	mask <input type="text" value="00000000"/>
		mask <input type="text" value="00000000"/>
		mask <input type="text" value="00000000"/>
		mask <input type="text" value="00000000"/>
	<input type="checkbox"/> value(64-79)	mask <input type="text" value="00000000"/>
		mask <input type="text" value="00000000"/>
		mask <input type="text" value="00000000"/>
		mask <input type="text" value="00000000"/>
<input type="button" value="Apply"/>		

Figure 4- 79. Access Rule Configuration (Package Content Mask) window

The following parameters can be set:

Parameter	Description
Profile ID	This is the identifier number for this profile set.
Mode	Select <i>Permit</i> to specify that the packets that match the access profile are forwarded by the Switch, according to any additional rule added (see below). Select <i>Deny</i> to specify that packets that do not match the access profile are not forwarded by the Switch and will be filtered.

Access ID	Type in a unique identifier number for this access. This value can be set from 1 to 255.
Type	<p>Selected profile based on Ethernet (MAC Address), IP address or packet content mask. This will change the menu according to the requirements for the type of profile.</p> <ul style="list-style-type: none"> • <i>Ethernet</i> instructs the Switch to examine the layer 2 part of each packet header. • <i>IP</i> instructs the Switch to examine the IP address in each frame's header. • <i>Packet Content Mask</i> specifies a mask to hide the content of the packet header.
Priority (0-7)	<p>This parameter is specified if you want to re-write the 802.1p default priority previously set in the Switch, which is used to determine the CoS queue to which packets are forwarded to. Once this field is specified, packets accepted by the Switch that match this priority are forwarded to the CoS queue specified previously by the user.</p> <p><i>Replace priority</i> – Click the corresponding box if you want to re-write the 802.1p default priority of a packet to the value entered in the Priority field, which meets the criteria specified previously in this command, before forwarding it on to the specified CoS queue. Otherwise, a packet will have its incoming 802.1p user priority re-written to its original value before being forwarded by the Switch.</p> <p>For more information on priority queues, CoS queues and mapping for 802.1p, see the QoS section of this manual.</p>
Offset	<p>This field will instruct the Switch to match the packet header beginning with the offset value specified:</p> <ul style="list-style-type: none"> • <i>value (0-15)</i> - Enter a value in hex form to mask the packet from the beginning of the packet to the 15th byte. • <i>value (16-31)</i> - Enter a value in hex form to mask the packet from byte 16 to byte 31. • <i>value (32-47)</i> - Enter a value in hex form to mask the packet from byte 32 to byte 47. • <i>value (48-63)</i> - Enter a value in hex form to mask the packet from byte 48 to byte 63. • <i>value (64-79)</i> - Enter a value in hex form to mask the packet from byte 64 to byte 79.

Click **Apply** to implement changes made.

Section 5

Security

Trusted Host

Secure Socket Layer (SSL)

Secure Shell (SSH)

Access Authentication Control

Trusted Host

The **Security IP Management** window allows you to specify the IP addresses of management stations (PCs) on your network that will be allowed to access the Switch's Web-based management agent.

You can enter up to three IP addresses of local hosts (on the same subnet as the Switch) that will be allowed to manage the Switch. It is recommended that the IP address of the local host that will be used to manage the Switch be entered here to avoid possible frequent disconnection from the Switch's Web-based management agent.

Security IP Management	
IP1 Access to Switch	<input type="text" value="0.0.0.0"/>
IP2 Access to Switch	<input type="text" value="0.0.0.0"/>
IP3 Access to Switch	<input type="text" value="0.0.0.0"/>

Note : Create a list of IP addresses that can access the switch. Your local host IP address must be one of the IP addresses to avoid disconnection.

Figure 5- 1. Security IP Management window

Use the **Security IP Management** to permit remote stations to manage the Switch. If you choose to define one or more designated management stations, only the chosen stations, as defined by IP address, will be allowed management privilege through the web manager or Telnet session. This IP address must be on the same subnet as the Switch. To define a management station IP setting, type in the IP address and click the **Apply** button.

Secure Socket Layer (SSL)

Secure Sockets Layer or SSL is a security feature that will provide a secure communication path between a host and client through the use of authentication, digital signatures and encryption. These security functions are implemented through the use of a ciphersuite, which is a security string that determines the exact cryptographic parameters, specific encryption algorithms and key sizes to be used for an authentication session and consists of three levels:

Key Exchange: The first part of the ciphersuite string specifies the public key algorithm to be used. This switch utilizes the Rivest Shamir Adleman (RSA) public key algorithm and the Digital Signature Algorithm (DSA), specified here as the DHE DSS Diffie-Hellman (DHE) public key algorithm. This is the first authentication process between client and host as they “exchange keys” in looking for a match and therefore authentication to be accepted to negotiate encryptions on the following level.

Encryption: The second part of the ciphersuite that includes the encryption used for encrypting the messages sent between client and host. The Switch supports two types of cryptology algorithms:

Stream Ciphers – There are two types of stream ciphers on the Switch, RC4 with 40-bit keys and RC4 with 128-bit keys. These keys are used to encrypt messages and need to be consistent between client and host for optimal use.

CBC Block Ciphers – CBC refers to Cipher Block Chaining, which means that a portion of the previously encrypted block of encrypted text is used in the encryption of the current block. The Switch supports the 3DES EDE encryption code defined by the Data Encryption Standard (DES) to create the encrypted text.

Hash Algorithm: This part of the ciphersuite allows the user to choose a message digest function that will determine a Message Authentication Code. This Message Authentication Code will be encrypted with a sent message to provide integrity and prevent against replay attacks. The Switch supports two hash algorithms, MD5 (Message Digest 5) and SHA (Secure Hash Algorithm).

These three parameters are uniquely assembled in four choices on the Switch to create a three-layered encryption code for secure communication between the server and the host. The user may implement any one or combination of the ciphersuites available, yet different ciphersuites will affect the security level and the performance of the secured connection. The information included in the ciphersuites is not included with the Switch and requires downloading from a third source in a file form called a certificate. This function of the Switch cannot be executed without the presence and implementation of the certificate file and can be downloaded to the Switch by utilizing a TFTP server. The Switch supports SSLv3 and TLSv1. Other versions of SSL may not be compatible with this switch and may cause problems upon authentication and transfer of messages from client to host.

Download Certificate

This window is used to download a certificate file for the SSL function on the Switch from a TFTP server. The certificate file is a data record used for authenticating devices on the network. It contains information on the owner, keys for authentication and digital signatures. Both the server and the client must have consistent certificate files for optimal use of the SSL function. The Switch only supports certificate files with `.der` file extensions and comes with one RSA certificate already set in the Switch.

To view the following window, click **Security > Secure Socket Layer (SSL) > Download Certificate**:

Download Certificate	
Server IP	0.0.0.0
Certificate File Name	
Key File Name	
Apply	
Current Certificate: Loaded with RSA Certificate!	

Figure 5- 2. Download Certificate window

To download certificates, set the following parameters and click **Apply**.

Parameter	Description
Server IP	Enter the IP address of the TFTP server where the certificate files are located.
Certificate File Name	Enter the path and the filename of the certificate file to download. This file must have a .der extension. (Ex. c:/cert.der)
Key File Name	Enter the path and the filename of the key file you wish to download. This file must have a .der extension (Ex. c:/pkey.der)

Configuration

This window will allow the user to enable SSL on the Switch and implement any one or combination of listed ciphersuites on the Switch. A ciphersuite is a security string that determines the exact cryptographic parameters, specific encryption algorithms and key sizes to be used for an authentication session. The Switch possesses four possible ciphersuites for the SSL function, which are all enabled by default. To utilize a particular ciphersuite, disable the unwanted ciphersuites, leaving the desired one for authentication. When the SSL function has been enabled, the web will become disabled. To manage the Switch through the web based management while utilizing the SSL function, the web browser must support SSL encryption and the header of the URL must begin with https://. (Ex. https://10.90.90.90) Any other method will result in an error and no access can be authorized for the web-based management.

To view the following window, click **Security > Secure Socket Layer (SSL) > Configuration**:

Figure 5- 3. SSL Configuration window

To set up the SSL function on the Switch, configure the following parameters and click **Apply**.

Parameter	Description
RSA with RC4 128 MD5	This ciphersuite combines the RSA key exchange, stream cipher RC4 encryption with 128-bit keys and the MD5 Hash Algorithm. Use the pull-down menu to enable or disable this ciphersuite. This field is <i>Enabled</i> by default.
RSA with 3DES EDE CBC SHA	This ciphersuite combines the RSA key exchange, CBC Block Cipher 3DES_EDE encryption and the SHA Hash Algorithm. Use the pull-down menu to enable or disable this ciphersuite. This field is <i>Enabled</i> by default.
DHE DSS with 3DES EDE CBC SHA	This ciphersuite combines the DSA Diffie Hellman key exchange, CBC Block Cipher 3DES_EDE encryption and SHA Hash Algorithm. Use the pull-down menu to enable or disable this ciphersuite. This field is <i>Enabled</i> by default.

RSA EXPORT with RC4 40 MD5	This ciphersuite combines the RSA Export key exchange and stream cipher RC4 encryption with 40-bit keys. Use the pull-down menu to enable or disable this ciphersuite. This field is <i>Enabled</i> by default.
Status	You can individually enable or disable these four ciphersuites above or use this Status drop-down menu to globally turn encryption on or off without changing the ciphersuite settings you have already made. The default is <i>Disabled</i> .



NOTE: Certain implementations concerning the function and configuration of SSL are not available on the web-based management of this Switch and need to be configured using the command line interface. For more information on SSL and its functions, see the ***DGS-3212SR Command Line Reference Manual***, located on the documentation CD of this product.



NOTE: Enabling the SSL command will disable the web-based switch management. To log on to the Switch again, the header of the URL must begin with `https://`. Entering anything else into the address field of the web browser will result in an error and no authentication will be granted.

Secure Shell (SSH)

SSH is the abbreviation of Secure Shell, which is a program allowing secure remote login and secure network services over an insecure network. It allows you to securely login to remote host computers, to execute commands safely in a remote computer and so forth, and to provide secure encrypted and authenticated communications between two non-trusted hosts. SSH with its array of unmatched security features is an essential tool in today's network environment. It is a powerful guardian against the numerous security hazards that nowadays threaten network communications.

The steps required to use the SSH protocol for secure communication between a remote PC (the SSH Client) and the Switch (the SSH Server), are as follows:

1. Create a user account with admin-level access using the **User Accounts** window in the **Management** folder. This is identical to creating any other admin-level User account on the Switch, including specifying a password. This password is used to login to the Switch, once secure communication has been established using the SSH protocol.
2. Configure the user account to use a specified authorization method to identify users that are allowed to establish SSH connections with the Switch using the **SSH User Authentication** window. There are three choices as to the method SSH will use to authorize the user, and they are Host Based, Password, Public Key, and None.
3. Configure the encryption algorithm that SSH will use to encrypt and decrypt messages sent between the SSH Client and the SSH Server, using the **SSH Algorithm** window.
4. Finally, enable SSH on the Switch using the **SSH User Authentication** window.

After following the above steps, you can configure an SSH Client on the remote PC and manage the Switch using secure, in-band communication.

SSH Configuration

The following window is used to configure and view settings on the SSH server and can be opened by clicking **Security > Secure Shell (SSH) > SSH Configuration**:

Current SSH Configuration Settings	
SSH Server Status	Disabled
Max Session	8
Time Out	300
Auth. Fail	2
Session Rekeying	Never
Ports	22

New SSH Configuration Settings	
SSH Server Status	Disabled <input type="button" value="v"/>
Max Session(1-8)	8 <input type="text"/>
Time Out(120-600)	300 <input type="text"/>
Auth. Fail(2-20)	2 <input type="text"/>
Session Rekeying	Never <input type="button" value="v"/>
Port(1-65535)	22 <input type="text"/>

Figure 5- 4. Current SSH Configuration Settings window

To set up the SSH server on the Switch, configure the following parameters and click **Apply**.

Parameter	Description
SSH Server Status	Use the pull-down menu to enable or disable SSH on the Switch. The default is <i>Disabled</i> .
Max Session (1-8)	Enter a value between 1 and 8 to set the number of users that may simultaneously access the Switch. The default is 8.
Time Out (120-600)	Allows the user to set the connection timeout. The user may set a time between 120 and 600 seconds. The default is 300 seconds.
Auth. Fail (2-20)	Allows the administrator to set the maximum number of attempts that a user may try to log on to the SSH Server utilizing SSH authentication. After the maximum number of attempts is exceeded, the Switch will be disconnected and the user must reconnect to the Switch to attempt another login. The number of maximum attempts may be set between 2 and 20. The default is 2.
Session Rekeying	The user may set the time period that the Switch will change the security shell encryptions by using the pull-down menu. The options are <i>Never</i> , <i>10 min</i> , <i>30 min</i> , and <i>60 min</i> . The default setting is <i>Never</i> .
Port (1-65535)	Enter the TCP port number associated with this function. The default TCP port number for SSH is 22.

SSH Algorithm

The **Encryption Algorithm** window allows the configuration of the desired types of SSH algorithm used for authentication encryption. There are four categories of algorithms listed and specific algorithms in each may be enabled or disabled by using their corresponding pull-down menu. All algorithms are enabled by default. To view the following window, click **Security > Secure Shell (SSH) > SSH Algorithm**.

Encryption Algorithm	
3DES-CBC	Enabled ▾
Blow-fish-CBC	Enabled ▾
AES128-CBC	Enabled ▾
AES192-CBC	Enabled ▾
AES256-CBC	Enabled ▾
ARC4	Enabled ▾
Cast128-CBC	Enabled ▾
Twofish128	Enabled ▾
Twofish192	Enabled ▾
Twofish256	Enabled ▾
Data Integrity Algorithm	
HMAC-SHA1	Enabled ▾
HMAC-MD5	Enabled ▾
Public Key Algorithm	
HMAC-RSA	Enabled ▾
HMAC-DSA	Enabled ▾
Authentication Algorithm	
Password	Enabled ▾
Publickey	Enabled ▾
Host-based	Enabled ▾

Apply

Figure 5- 5. Encryption Algorithm window

The user may set the following parameters:

Parameter	Description
Encryption Algorithm	
3DES-CBC	Use the pull-down menu to enable or disable the Triple_ Data Encryption Standard encryption algorithm with Cipher Block Chaining. The default is <i>Enabled</i> .
Blow-fish CBC	Use the pull-down menu to enable or disable the Blowfish encryption algorithm with Cipher Block Chaining. The default is <i>Enabled</i> .

AES128-CBC	Use the pull-down menu to enable or disable the Advanced Encryption Standard AES128 encryption algorithm with Cipher Block Chaining. The default is <i>Enabled</i> .
AES192-CBC	Use the pull-down menu to enable or disable the Advanced Encryption Standard AES192 encryption algorithm with Cipher Block Chaining. The default is <i>Enabled</i> .
AES256-CBC	Use the pull-down menu to enable or disable the Advanced Encryption Standard AES256 encryption algorithm with Cipher Block Chaining. The default is <i>Enabled</i> .
ARC4	Use the pull-down menu to enable or disable the Arcfour encryption algorithm. The default is <i>Enabled</i> .
Cast128-CBC	Use the pull-down menu to enable or disable the Cast128 encryption algorithm with Cipher Block Chaining. The default is <i>Enabled</i> .
Twofish128	Use the pull-down menu to enable or disable the twofish128 encryption algorithm. The default is <i>Enabled</i> .
Twofish192	Use the pull-down menu to enable or disable the twofish192 encryption algorithm. The default is <i>Enabled</i> .
Twofish256	Use the pull-down menu to enable or disable the twofish256 encryption algorithm. The default is <i>Enabled</i> .
Data Integrity Algorithm	
HMAC-SHA1	Use the pull-down menu to enable or disable the HMAC (Hash for Message Authentication Code) mechanism utilizing the Secure Hash Algorithm encryption. The default is <i>Enabled</i> .
HMAC-MD5	Use the pull-down menu to enable or disable the HMAC (Hash for Message Authentication Code) mechanism utilizing the MD5 Message Digest encryption algorithm. The default is <i>Enabled</i> .
Public Key Algorithm	
HMAC-RSA	Use the pull-down menu to enable or disable the HMAC (Hash for Message Authentication Code) mechanism utilizing the RSA encryption algorithm. The default is <i>Enabled</i> .
HMAC-DSA	Use the pull-down menu to enable or disable the HMAC (Hash for Message Authentication Code) mechanism utilizing the Digital Signature Algorithm encryption. The default is <i>Enabled</i> .
Authentication Algorithm	
Password	This parameter may be enabled if the administrator wishes to use a locally configured password for authentication on the Switch. The default is <i>Enabled</i> .
Public Key	This parameter may be enabled if the administrator wishes to use a publickey configuration set on a SSH server, for authentication. The default is <i>Enabled</i> .
Host-based	This parameter may be enabled if the administrator wishes to use a host computer for authentication. This parameter is intended for Linux users requiring SSH authentication techniques and the host computer is running the Linux operating system with a SSH program previously installed. The default is <i>Enabled</i> .

Click **Apply** to implement changes made.

SSH User Authentication

The following windows are user to configure parameters for users attempting to access the Switch through SSH. To access the following window, click **Security > Secure Shell (SSH) > SSH User Authentication**.

Current Accounts			
User Name	Auth. Mode	Host Name	Host IP
Darren	Password		

Figure 5- 6. Current Accounts window

In the example window above, the user account “TheTrinity” has been previously set using the **User Accounts** window in the **Management** folder. A user account **MUST** be set in order to set the parameters for the SSH user. To configure the parameters for the SSH user, click on the hyperlinked user name in the window above, which will reveal the following window.

User Name	<input type="text" value="TheTrinity"/>
Auth. Mode	<input type="text" value="None"/>
Host Name	<input type="text"/>
Host IP	<input type="checkbox"/> <input type="text" value="0.0.0.0"/>
<input type="button" value="Apply"/>	
Show All User Authentication Entries	

Figure 5- 7. SSH User window

The user may set the following parameters:

Parameter	Description
User Name	Enter a username of no more than 15 characters to identify the SSH user. This User Name must be a previously configured user account on the Switch.
Auth. Mode	<p>The administrator may choose one of the following to set the authorization for users attempting to access the Switch:</p> <p><i>Host Based</i> – This parameter should be chosen if the administrator wishes to use a remote SSH server for authentication purposes. Choosing this parameter requires the user to input the following information to identify the SSH user.</p> <p><i>Host Name</i> – Enter an alphanumeric string of up to 31 characters identifying the remote SSH user.</p> <p><i>Host IP</i> – Enter the corresponding IP address of the SSH user.</p> <p><i>Password</i> – This parameter should be chosen if the user wishes to use an administrator-defined password for authentication. Upon entry of this command, the Switch will prompt the user for a password, and then to retype the password for confirmation.</p> <p><i>Public Key</i> – This parameter should be chosen if the user wishes to use the public key on a SSH server for authentication.</p> <p><i>None</i> – Choose this parameter if no authentication is desired.</p>

Host Name	Enter an alphanumeric string of up to 31 characters identifying the remote SSH user. This parameter is only used in conjunction with the Host Based choice in the <i>Auth. Mode</i> .
Host IP	Enter the corresponding IP address of the SSH user. This parameter is only used in conjunction with the Host Based choice in the <i>Auth. Mode</i> .

Click **Apply** to implement changes made.



NOTE: To set the SSH User Authentication parameters on the Switch, a user account must be previously configured. For more information on configuring local user accounts on the Switch, see the Security IP section of this document.

Access Authentication Control

The TACACS / XTACACS / TACACS+ / RADIUS commands let you secure access to the Switch using the TACACS / XTACACS / TACACS+ / RADIUS protocols. When a user logs in to the Switch or tries to access the administrator level privilege, he or she is prompted for a password. If TACACS / XTACACS / TACACS+ / RADIUS authentication is enabled on the Switch, it will contact a TACACS / XTACACS / TACACS+ / RADIUS server to verify the user. If the user is verified, he or she is granted access to the Switch.

There are currently three versions of the TACACS security protocol, each a separate entity. The Switch's software supports the following versions of TACACS:

- **TACACS** (Terminal Access Controller Access Control System) - Provides password checking and authentication, and notification of user actions for security purposes utilizing via one or more centralized TACACS servers, utilizing the UDP protocol for packet transmission.
- **Extended TACACS (XTACACS)** - An extension of the TACACS protocol with the ability to provide more types of authentication requests and more types of response codes than TACACS. This protocol also uses UDP to transmit packets.
- **TACACS+ (Terminal Access Controller Access Control System plus)** - Provides detailed access control for authentication for network devices. TACACS+ is facilitated through Authentication commands via one or more centralized servers. The TACACS+ protocol encrypts all traffic between the Switch and the TACACS+ daemon, using the TCP protocol to ensure reliable delivery

In order for the TACACS / XTACACS / TACACS+ / RADIUS security function to work properly, a TACACS / XTACACS / TACACS+ / RADIUS server must be configured on a device other than the Switch, called an Authentication Server Host and it must include usernames and passwords for authentication. When the user is prompted by the Switch to enter usernames and passwords for authentication, the Switch contacts the TACACS / XTACACS / TACACS+ / RADIUS server to verify, and the server will respond with one of three messages:

- The server verifies the username and password, and the user is granted normal user privileges on the Switch.
- The server will not accept the username and password and the user is denied access to the Switch.
- The server doesn't respond to the verification query. At this point, the Switch receives the timeout from the server and then moves to the next method of verification configured in the method list.

The Switch has four built-in **Authentication Server Groups**, one for each of the TACACS, XTACACS, TACACS+ and RADIUS protocols. These built-in Authentication Server Groups are used to authenticate users trying to access the Switch. The users will set **Authentication Server Hosts** in a preferable order in the built-in Authentication Server Groups and when a user tries to gain access to the Switch, the Switch will ask the first Authentication Server Hosts for authentication. If no authentication is made, the second server host in the list will be queried, and so on. The built-in Authentication Server Groups can only have hosts that are running the specified protocol. For example, the TACACS Authentication Server Groups can only have TACACS Authentication Server Hosts.

The administrator for the Switch may set up six different authentication techniques per user-defined method list (TACACS / XTACACS / TACACS+ / RADIUS / local / none) for authentication. These techniques will be listed in an order preferable, and defined by the user for normal user authentication on the Switch, and may contain up to eight authentication techniques. When a user attempts to access the Switch, the Switch will select the first technique listed for authentication. If the first technique goes through its Authentication Server Hosts and no authentication is returned, the Switch will then go to the next technique listed in the server group for authentication, until the authentication has been verified or denied, or the list is exhausted.

Please note that users granted access to the Switch will be granted normal user privileges on the Switch. To gain access to administrator level privileges, the user must access the **Enable Admin** window and then enter a password, which was previously configured by the administrator of the Switch.



NOTE: TACACS, XTACACS, and TACACS+ are separate entities and are not compatible. The Switch and the server must be configured exactly the same, using the same protocol. (For example, if the Switch is set up for TACACS authentication, so must be the host server.)

Policy & Parameters

This command will enable an administrator-defined authentication policy for users trying to access the Switch. When enabled, the device will check the **Login Method List** and choose a technique for user authentication upon login.

To access the following window, click **Security > Access Authentication Control > Policy & Parameters**:

Figure 5- 8. Policy & Parameters Settings window

The following parameters can be set:

Parameters	Description
Authentication Policy	Use the pull-down menu to enable or disable the Authentication Policy on the Switch.
Response timeout (1-255)	This field will set the time the Switch will wait for a response of authentication from the user. The user may set a time between 1 and 255 seconds. The default setting is 30 seconds.
User attempts (1-255)	This command will configure the maximum number of times the Switch will accept authentication attempts. Users failing to be authenticated after the set amount of attempts will be denied access to the Switch and will be locked out of further authentication attempts. Command line interface users will have to wait 60 seconds before another authentication attempt. Telnet and web users will be disconnected from the Switch. The user may set the number of attempts from 1 to 255. The default setting is 3.

Click **Apply** to implement changes made.

Application Authentication Settings

This window is used to configure switch configuration applications (console, Telnet, SSH, and web) for login at the user level and at the administration level (Enable Admin) utilizing a previously configured method list.

Application	Login Method List	Enable Method List
Console	default ▼	default ▼
Telnet	default ▼	default ▼
SSH	default ▼	default ▼
HTTP	default ▼	default ▼

Apply

Figure 5- 9. Application's authentication settings window

The following parameters can be set:

Parameter	Description
Application	Lists the configuration applications on the Switch. The user may configure the Login Method List and Enable Method List for authentication for users utilizing the Console (Command Line Interface) application, the Telnet application, the Secure Shell (SSH) application, and the Web (HTTP) application.
Login Method List	Using the pull-down menu, configure an application for normal login on the user level, utilizing a previously configured method list. The user may use the default Method List or other Method List configured by the user. See the Login Method List Settings window, in this section, for more information
Enable Method List	Using the pull-down menu, configure an application for normal login on the user level, utilizing a previously configured method list. The user may use the default Method List or other Method List configured by the user. See the Enable Method List Settings window, in this section, for more information

Click **Apply** to implement changes made.

Authentication Server Group

This window will allow users to set up **Authentication Server Groups** on the Switch. A server group is a technique used to group RADIUS, TACACS, TACACS+, and XTACACS server hosts into user-defined categories for authentication using method lists. The user may define the type of server group by protocol or by previously defined server group. The Switch has four built-in Authentication Server Groups that cannot be removed but can be modified. Up to eight authentication server hosts may be added to any particular group.

To view the following window, click **Security > Access Authentication Control > Authentication Server Group**:

Authentication Server Group Settings	
Group Name	Delete
Darren	X
radius	X
tacacs	X
tacacs+	X
xtacacs	X

Figure 5- 10. Authentication Server Group Settings window

This window displays the Authentication Server Groups on the Switch. The Switch has four built-in Authentication Server Groups that cannot be removed but can be modified. To modify a particular group, click its hyperlinked Group Name, which will then display the following window.

Add a Server Host to Server Group (radius)		
IP Address	<input type="text" value="0.0.0.0"/>	
Protocol	<input type="text" value="TACACS"/>	
<input type="button" value="Add"/>		
Server Group (radius)		
IP Address	Protocol	Delete
Show All Server Group Entries		

Figure 5- 11. Add a Server Host to Server Group (radius) window

To add an Authentication Server Host to the list, enter its IP address in the IP Address field, choose the protocol associated with the IP address of the Authentication Server Host (*RADIUS*, *TACACS*, *TACACS+*, or *XTACACS*) and click **Add** to add this Authentication Server Host to the group.

To add a server group other than the ones listed, click the add button, revealing the following window to configure.



Authentication Server Group Table Add Settings

Group Name

Apply

[Show All Server Group Table Entries](#)

Figure 5- 12. Authentication Server Group Table Add Settings window

Enter a group name of up to 16 characters into the Group Name field and click **Apply**. The entry should appear in the **Authentication Server Group Settings** window.



NOTE: The user must configure Authentication Server Hosts using the **Authentication Server Host Settings** window before adding hosts to the list. Authentication Server Hosts must be configured for their specific protocol on a remote centralized server before this function can work properly.



NOTE: The four built in server groups can only have server hosts running the same TACACS / RADIUS daemon. RADIUS, TACACS, TACACS+, and XTACACS protocols are separate entities and are not compatible with each other.

Authentication Server Host

This window will set user-defined Authentication Server Hosts for the RADIUS, TACACS, TACACS+, and XTACACS security protocols on the Switch. When a user attempts to access the Switch with Authentication Policy enabled, the Switch will send authentication packets to a remote RADIUS/TACACS/XTACACS/TACACS+ server host on a remote host. The RADIUS/TACACS/TACACS+/XTACACS server host will then verify or deny the request and return the appropriate message to the Switch. More than one authentication protocol can be run on the same physical server host but, remember that RADIUS/TACACS/TACACS+/XTACACS are separate entities and are not compatible with each other. The maximum supported number of server hosts is 16.

To view the following window, click **Security > Access Authentication Control > Authentication Server Host**:

Authentication Server Host Settings					
IP Address	Protocol	Port	Timeout	Retransmit	Delete
10.53.13.94	TACACS	49	5	2	X

Figure 5- 13. Authentication Server Host Settings window

To add an Authentication Server Host, click the **Add** button, revealing the following window:

Authentication Server Host Setting - Add	
IP Address	0.0.0.0
Protocol	TACACS
Port(1-65535)	49
Timeout(1-255)	5
Retransmit(1-255)	2
Key	

Apply

[Show All Authentication Server Host Entries](#)

Figure 5- 14. Authentication Server Host Setting – Add window

The user may also modify an existing Authentication Server Host by clicking the Hyperlinked IP Address in the **Authentication Server Host Settings** window, which will display a similar window, as shown below.

Authentication Server Host Setting - Edit	
IP Address	<input type="text" value="10.53.13.94"/>
Protocol	<input type="text" value="TACACS"/>
Port(1-65535)	<input type="text" value="49"/>
Timeout(1-255)	<input type="text" value="5"/>
Retransmit(1-255)	<input type="text" value="2"/>
Key	<input type="text"/>
<input type="button" value="Apply"/>	
Show All Authentication Server Host Entries	

Figure 5- 15. Authentication Server Host Setting – Edit window

Configure the following parameters to add or edit an Authentication Server Host:

Parameter	Description
IP Address	The IP address of the remote server host to add.
Protocol	The protocol used by the server host. The user may choose one of the following: <i>TACACS</i> – Enter this parameter if the server host utilizes the TACACS protocol. <i>XTACACS</i> – Enter this parameter if the server host utilizes the XTACACS protocol. <i>TACACS+</i> – Enter this parameter if the server host utilizes the TACACS+ protocol. <i>RADIUS</i> – Enter this parameter if the server host utilizes the RADIUS protocol.
Port (1-65535)	Enter a number between 1 and 65535 to define the virtual port number of the authentication protocol on a server host. The default port number is 49 for TACACS/XTACACS/TACACS+ and 1812 for RADIUS servers, but the user may set a unique port number for higher security.
Timeout (1-255)	Enter the time in seconds the Switch will wait for the server host to reply to an authentication request. The default value is 5 seconds.
Retransmit (1-255)	Enter the value in the retransmit field to change how many times the device will resend an authentication request when the TACACS/RADIUS server does not respond.
Key	Authentication key to be shared with a configured TACACS+ server only. Specify an alphanumeric string up to 254 characters.

Click **Apply** to add the server host.



NOTE: More than one authentication protocol can be run on the same physical server host but, remember that RADIUS, TACACS, TACACS+, and XTACACS are separate entities and are not compatible with each other

Login Method Lists

This command will configure a user-defined or default Login Method List of authentication techniques for users logging on to the Switch. The sequence of techniques implemented in this command will affect the authentication result. For example, if a user enters a sequence of techniques, for example TACACS – XTACACS – local, the Switch will send an authentication request to the first TACACS host in the server group. If no response comes from the server host, the Switch will send an authentication request to the second TACACS host in the server group and so on, until the list is exhausted. At that point, the Switch will restart the same sequence with the following protocol listed, XTACACS. If no authentication takes place using the XTACACS list, the local account database set in the Switch is used to authenticate the user. When the local method is used, the privilege level will be dependant on the local account privilege configured on the Switch.

Successful login using any of these techniques will give the user a “user” privilege only. If the user wishes to upgrade his or her status to the administrator level, the user must use the **Enable Admin** window, in which the user must enter a previously configured password, set by the administrator. (See the **Enable Admin** part of this section for more detailed information concerning the **Enable Admin** command.)

To view the following window, click **Security > Access Authentication Control > Login Method Lists**:

Login Method List Settings					
Method List Name	Method 1	Method 2	Method 3	Method 4	Delete
default	local				

Figure 5- 16. Login Method Lists Settings window

The Switch contains one Method List that is set and cannot be removed, yet can be modified. To delete a Login Method List defined by the user, click the under the **Delete** heading corresponding to the entry desired to be deleted. To modify a Login Method List, click on its hyperlinked Method List Name. To configure a Method List, click the **Add** button.

Both actions will result in the same window to configure:

Login Method List - Add	
Method List Name	<input type="text"/>
Method 1	local
Method 2	<input type="text"/>
Method 3	<input type="text"/>
Method 4	<input type="text"/>

[Show All Authentication Login Method List Entries](#)

Figure 5- 17. Login Method List – Add window

Figure 5- 18. Login Method List – Edit window

To define a Login Method List, set the following parameters and click **Apply**:

Parameter	Description
Method List Name	Enter a method list name defined by the user of up to 15 characters.
Method 1, 2, 3, 4	<p>The user may add one, or a combination of up to four of the following authentication methods to this method list:</p> <p><i>local</i> - Adding this parameter will require the user to be authenticated using the local user account database on the Switch.</p> <p><i>none</i> – Adding this parameter will require no authentication to access the Switch.</p> <p><i>radius</i> - Adding this parameter will require the user to be authenticated using the RADIUS protocol from a remote RADIUS server.</p> <p><i>tacacs</i> – Adding this parameter will require the user to be authenticated using the TACACS protocol from a remote TACACS server.</p> <p><i>tacacs+</i> – Adding this parameter will require the user to be authenticated using the TACACS+ protocol from a remote TACACS+ server.</p> <p><i>xtacacs</i> – Adding this parameter will require the user to be authenticated using the XTACACS protocol from a remote XTACACS server.</p>

Enable Method Lists

This window is used to set up Method Lists to promote users with normal level privileges to Administrator level privileges using authentication methods on the Switch. Once a user acquires normal user level privileges on the Switch, he or she must be authenticated by a method on the Switch to gain administrator privileges on the Switch, which is defined by the Administrator. A maximum of eight Enable Method Lists can be implemented on the Switch, one of which is a default Enable Method List. This default Enable Method List cannot be deleted but can be configured.

The sequence of methods implemented in this command will affect the authentication result. For example, if a user enters a sequence of methods like TACACS – XTACACS – Local Enable, the Switch will send an authentication request to the first TACACS host in the server group. If no verification is found, the Switch will send an authentication request to the second TACACS host in the server group and so on, until the list is exhausted. At that point, the Switch will restart the same sequence with the following protocol listed, XTACACS. If no authentication takes place using the XTACACS list, the Local Enable password set in the Switch is used to authenticate the user.

Successful authentication using any of these methods will give the user an “Admin” privilege.



NOTE: To set the Local Enable Password, see the next section, entitled **Local Enable Password**.

To view the following table, click **Security > Access Authentication Control > Enable Method Lists**:

Add					
Enable Method List Settings					
Method List Name	Method 1	Method 2	Method 3	Method 4	Delete
default	local_enable				

Figure 5- 19. Enable Method List Settings window

To delete an Enable Method List defined by the user, click the under the **Delete** heading corresponding to the entry desired to be deleted. To modify an Enable Method List, click on its hyperlinked Enable Method List Name. To configure a Method List, click the **Add** button.

Both actions will result in the same window to configure:

Enable Method List - Add	
Method List Name	<input type="text"/>
Method 1	local_enable
Method 2	<input type="text"/>
Method 3	<input type="text"/>
Method 4	<input type="text"/>
<input type="button" value="Apply"/>	
Show All Authentication Enable List Entries	

Figure 5- 20. Enable Method List – Add window

Figure 5- 21. Enable Method List – Edit window

To define an **Enable Login Method List**, set the following parameters and click **Apply**:

Parameter	Description
Method List Name	Enter a method list name defined by the user of up to 15 characters.
Method 1, 2, 3, 4	<p>The user may add one, or a combination of up to four of the following authentication methods to this method list:</p> <p><i>local_enable</i> - Adding this parameter will require the user to be authenticated using the local enable password database on the Switch. The local enable password must be set by the user in the next section, entitled Local Enable Password.</p> <p><i>none</i> – Adding this parameter will require no authentication to access the Switch.</p> <p><i>radius</i> - Adding this parameter will require the user to be authenticated using the RADIUS protocol from a remote RADIUS server.</p> <p><i>tacacs</i> – Adding this parameter will require the user to be authenticated using the TACACS protocol from a remote TACACS server.</p> <p><i>tacacs+</i> – Adding this parameter will require the user to be authenticated using the TACACS+ protocol from a remote TACACS+ server.</p> <p><i>xtacacs</i> – Adding this parameter will require the user to be authenticated using the XTACACS protocol from a remote XTACACS server.</p>

Local Enable Password

This window will configure the locally enabled password for Enable Admin. When a user chooses the Local_Enable method to promote user level privileges to administrator privileges, he or she will be prompted to enter the password configured here that is locally set on the Switch.

To view the following window, click **Security > Access Authentication Control > Local Enable Password**:

Figure 5- 22. Configure Local Enable Password window

To set the Local Enable Password, set the following parameters and click **Apply**.

Parameter	Description
Old Local Enable	If a password was previously configured for this entry, enter it here in order to change it to a new password.
New Local Enable	Enter the new password that you wish to set on the Switch to authenticate users attempting to access Administrator Level privileges on the Switch. The user may set a password of up to 16 characters.
Confirm Local Enable	Confirm the new password entered above. Entering a different password here from the one set in the New Local Enabled field will result in a fail message.

Enable Admin

This window is for users who have logged on to the Switch on the normal user level, and wish to be promoted to the administrator level. After logging on to the Switch, users will have only user level privileges. To gain access to administrator level privileges, the user will open this window and will have to enter an authentication password. Possible authentication methods for this function include RADIUS, TACACS, TACACS+, and XTACACS, local enable (local account on the Switch), or no authentication (none). Because XTACACS and TACACS do not support the enable function, the user must create a special account on the server host, which has the username “enable”, and a password configured by the administrator that will support the enable function. This function becomes inoperable when the authentication policy is disabled.

To view the following window, click **Security > Access Authentication Control > Enable Admin**:



Figure 5- 23. Enable Admin window

When this window appears, click the **Enable Admin** button revealing a dialog box for the user to enter authentication (password, username), as seen below. A successful entry will promote the user to Administrator level privileges on the Switch.

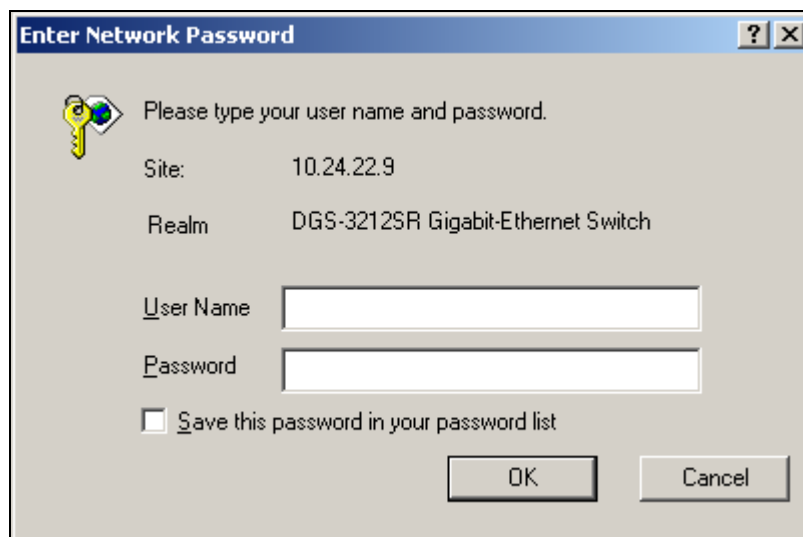


Figure 5- 24. Enter Network Password dialog box

Section 6

Management

User Accounts

SNMP Manager

User Accounts

Use the **User Account Management** window to control user privileges. To view existing User Accounts, open the **Management** folder and click on the **User Accounts** link. This will open the **User Account Management** window, as shown below.

User Account Management		
User Name	Access Right	Add
br5-49	Admin	Modify
dilbert1	User	Modify
routergods	Admin	Modify
sinatra	User	Modify

Figure 6- 1. User Account Management window

To add a new user, click on the **Add** button. To modify or delete an existing user, click on the **Modify** button for that user.

User Account Modify Table	
User Name	<input type="text" value="newguy3"/>
New Password	<input type="password" value="*****"/>
Confirm New Password	<input type="password" value="*****"/>
Access Right	<input type="text" value="User"/> <input type="text" value="User"/> <input type="text" value="Admin"/>
<input type="button" value="Apply"/>	
Show All User Account Entries	

Figure 6- 2. User Account Modify Table window

Add a new user by typing in a **User Name**, and **New Password** and retype the same password in the **Confirm New Password**. Choose the level of privilege (*Admin* or *User*) from the **Access Right** drop-down menu.

User Account Modify Table	
User Name	<input type="text" value="br5-49"/>
New Password	<input type="password"/>
Confirm New Password	<input type="password"/>
Access Right	<input type="text" value="Admin"/> <input type="text" value="Admin"/>
<input type="button" value="Apply"/> <input type="button" value="Delete"/>	
Show All User Account Entries	

Figure 6- 3. User Account Modify Table window

Modify or delete an existing user account in the **User Account Modify Table** window. To delete the user account, click on the **Delete** button. To change the password, type in the New Password and retype it in the Confirm New Password entry field. Choose the level of privilege (*Admin* or *User*) from the Access Right drop-down menu.

Admin and User Privileges

There are two levels of user privileges: *Admin* and *User*. Some menu selections available to users with *Admin* privileges may not be available to those with *User* privileges.

The following table summarizes the *Admin* and *User* privileges:

Management	Admin	User
Configuration	Yes	Read Only
Network Monitoring	Yes	Read Only
Community Strings and Trap Stations	Yes	Read Only
Update Firmware and Configuration Files	Yes	No
System Utilities	Yes	No
Factory Reset	Yes	No
User Account Management		
Add/Update/Delete User Accounts	Yes	No
View User Accounts	Yes	No

Table 6- 1. Admin and User Privileges

After establishing a User Account with *Admin*-level privileges, be sure to save the changes (see below).

SNMP

SNMP Settings

Simple Network Management Protocol (SNMP) is an OSI Layer 7 (Application Layer) designed specifically for managing and monitoring network devices. SNMP enables network management stations to read and modify the settings of gateways, routers, switches, and other network devices. Use SNMP to configure system features for proper operation, monitor performance and detect potential problems in the Switch, switch group or network.

Managed devices that support SNMP include software (referred to as an agent), which runs locally on the device. A defined set of variables (managed objects) is maintained by the SNMP agent and used to manage the device. These objects are defined in a Management Information Base (MIB), which provides a standard presentation of the information controlled by the on-board SNMP agent. SNMP defines both the format of the MIB specifications and the protocol used to access this information over the network.

The DGS-3212SR supports the SNMP versions 1, 2c, and 3. You can specify which version of the SNMP you want to use to monitor and control the Switch. The three versions of SNMP vary in the level of security provided between the management station and the network device.

In SNMP v.1 and v.2, user authentication is accomplished using 'community strings', which function like passwords. The remote user SNMP application and the Switch SNMP must use the same community string. SNMP packets from any station that has not been authenticated are ignored (dropped).

The default community strings for the Switch used for SNMP v.1 and v.2 management access are:

public - Allows authorized management stations to retrieve MIB objects.

private - Allows authorized management stations to retrieve and modify MIB objects.

SNMPv3 uses a more sophisticated authentication process that is separated into two parts. The first part is to maintain a list of users and their attributes that are allowed to act as SNMP managers. The second part describes what each user on that list can do as an SNMP manager.

The Switch allows groups of users to be listed and configured with a shared set of privileges. The SNMP version may also be set for a listed group of SNMP managers. Thus, you may create a group of SNMP managers that are allowed to view read-only information or receive traps using SNMPv1 while assigning a higher level of security to another group, granting read/write privileges using SNMPv3.

Using SNMPv3 individual users or groups of SNMP managers can be allowed to perform or be restricted from performing specific SNMP management functions. The functions allowed or restricted are defined using the Object Identifier (OID) associated with a specific MIB. An additional layer of security is available for SNMPv3 in that SNMP messages may be encrypted. To read more about how to configure SNMPv3 settings for the Switch read the next section.

Traps

Traps are messages that alert network personnel of events that occur on the Switch. The events can be as serious as a reboot (someone accidentally turned OFF the Switch), or less serious like a port status change. The Switch generates traps and sends them to the trap recipient (or network manager). Typical traps include trap messages for Authentication Failure, Topology Change and Broadcast/Multicast Storm.

MIBs

Management and counter information are stored by the Switch in the Management Information Base (MIB). The Switch uses the standard MIB-II Management Information Base module. Consequently, values for MIB objects can be retrieved from any SNMP-based network management software. In addition to the standard MIB-II, the Switch also supports its own proprietary enterprise MIB as an extended Management Information Base. The proprietary MIB may also be retrieved by specifying the MIB Object Identifier. MIB values can be either read-only or read-write.

The DGS-3212SR incorporates a flexible SNMP management for the switching environment. SNMP management can be customized to suit the needs of the networks and the preferences of the network administrator. Use the SNMP V3 menus to select the SNMP version used for specific tasks.

The DGS-3212SR supports the Simple Network Management Protocol (SNMP) versions 1, 2c, and 3. The administrator can specify the SNMP version used to monitor and control the Switch. The three versions of SNMP vary in the level of security provided between the management station and the network device.

SNMP settings are configured using the menus located on the SNMP V3 folder of the web manager. Workstations on the network that are allowed SNMP privileged access to the Switch can be restricted with the Management Station IP Address menu.

SNMP User Table

The **SNMP User Table** displays all of the SNMP User's currently configured on the Switch.

Open the **Management** folder and then the **SNMP Manager** folder. Finally, click on the **SNMP User Table** link. This will open the **SNMP User Table** window, as shown below.

SNMP User Table			
User Name	Group Name	SNMP Version	Delete
initial	initial	V3	X

Figure 6- 4. SNMP User Table window

To delete an existing SNMP User Table entry, click on the **X** icon below the **Delete** heading corresponding to the entry you want to delete.

SNMP User Table Display

To display the detailed entry for a given user, click on the blue hyperlinked User Name. This will open the **SNMP User Table Display** window, as shown below.

SNMP User Table Display	
User Name	initial
Group Name	initial
SNMP Version	V3
Auth-Protocol	None
Priv-Protocol	None

[Show All SNMP User Table Entries](#)

Figure 6- 5. SNMP User Table Display window

The following parameters are displayed:

Parameter	Description
User Name	An alphanumeric string of up to 32 characters. This is used to identify the SNMP users.
Group Name	This name is used to specify the SNMP group created can request SNMP messages.
SNMP Version	V1 - Indicates that SNMP version 1 is in use. V2 - Indicates that SNMP version 2 is in use. V3 - Indicates that SNMP version 3 is in use.
Auth-Protocol	<i>None</i> - Indicates that no authorization protocol is in use. <i>MD5</i> - Indicates that the HMAC-MD5-96 authentication level will be used. <i>SHA</i> - Indicates that the HMAC-SHA authentication protocol will be used.
Priv-Protocol	<i>None</i> - Indicates that no authorization protocol is in use. <i>DES</i> - Indicates that DES 56-bit encryption is in use based on the CBC-DES (DES-56) standard.

To add a new entry to the SNMP User Table, click on the **Add** button on the **SNMP User Table** window. This will open the **SNMP User Table Configuration** window, as shown below.

The image shows a configuration window titled "SNMP User Table Configuration". It contains the following fields:

- User Name:** A text input field.
- Group Name:** A text input field.
- SNMP V3 Encryption:** A checkbox labeled "encrypted".
- Auth-Protocol:** A dropdown menu currently set to "MD5", followed by a "Password" text input field.
- Priv-Protocol:** A dropdown menu currently set to "DES", followed by a "Password" text input field.

At the bottom right of the window is an "Apply" button. At the bottom left, there is a link that says "Show All SNMP User Table Entries".

Figure 6- 6. SNMP User Table Configuration window

The following parameters can set:

Parameter	Description
User Name	Enter an alphanumeric string of up to 32 characters. This is used to identify the SNMP user.
Group Name	This name is used to specify the SNMP group created can request SNMP messages.
SNMP Version	V1 - Specifies that SNMP version 1 will be used. V2 - Specifies that SNMP version 2 will be used. V3 - Specifies that SNMP version 3 will be used.
Auth-Protocol	<i>MD5</i> - Specifies that the HMAC-MD5-96 authentication level will be used. This field is only operable when V3 is selected in the SNMP Version field and the Encryption field has been checked. This field will require the user to enter a password. <i>SHA</i> - Specifies that the HMAC-SHA authentication protocol will be used. This field is only operable when V3 is selected in the SNMP Version field and the Encryption field has been checked. This field will require the user to enter a password.
Priv-Protocol	<i>None</i> - Specifies that no authorization protocol is in use. <i>DES</i> - Specifies that DES 56-bit encryption is in use, based on the CBC-DES (DES-56) standard. This field is only operable when V3 is selected in the SNMP Version field and the Encryption field has been checked. This field will require the user to enter a password between 8 and 16 alphanumeric characters.

Click **Apply** to implement changes made.

SNMP View Table

The SNMP View Table is used to assign views to community strings that define which MIB objects can be accessed by a remote SNMP manager. To view the **SNMP View Table** window, open the **SNMP Manager** folder, located in the **Management** folder, and click the **SNMP View Table** entry. The following window should appear:

SNMP View Table			
View Name	Subtree	View Type	Delete
restricted	1.3.6.1.2.1.1	Included	X
restricted	1.3.6.1.2.1.11	Included	X
restricted	1.3.6.1.6.3.10.2.1	Included	X
restricted	1.3.6.1.6.3.11.2.1	Included	X
restricted	1.3.6.1.6.3.15.1.1	Included	X
CommunityView	1	Included	X
CommunityView	1.3.6.1.6.3	Excluded	X
CommunityView	1.3.6.1.6.3.1	Included	X

Figure 6- 7. SNMP View Table window

To delete an existing **SNMP View Table** entry, click the **X** button listed under **Delete** on the far left that corresponds to **View Name**. To create a new entry, click the **Add** button, a separate window will appear.

Figure 6- 8. SNMP View Table Configuration window


The SNMP Group created with this table maps SNMP users (identified in the **SNMP User Table** window) to the views created in the previous window.

The following parameters can set:

Parameter	Description
View Name	Type an alphanumeric string of up to 32 characters. This is used to identify the new SNMP view being created.
Subtree OID	Type the Object Identifier (OID) Subtree for the view. The OID identifies an object tree (MIB tree) that will be included or excluded from access by an SNMP manager.
View Type	Select Included to include this object in the list of objects that an SNMP manager can access. Select Excluded to exclude this object from the list of objects that an SNMP manager can access.

SNMP Group Table

An SNMP Group created with this table maps SNMP users (identified in the SNMP User Table) to the views created in the previous menu. To view the SNMP Group Table, open the **SNMP Manager** folder in the **Management** folder and click the SNMP Group Table entry. The following window should appear:

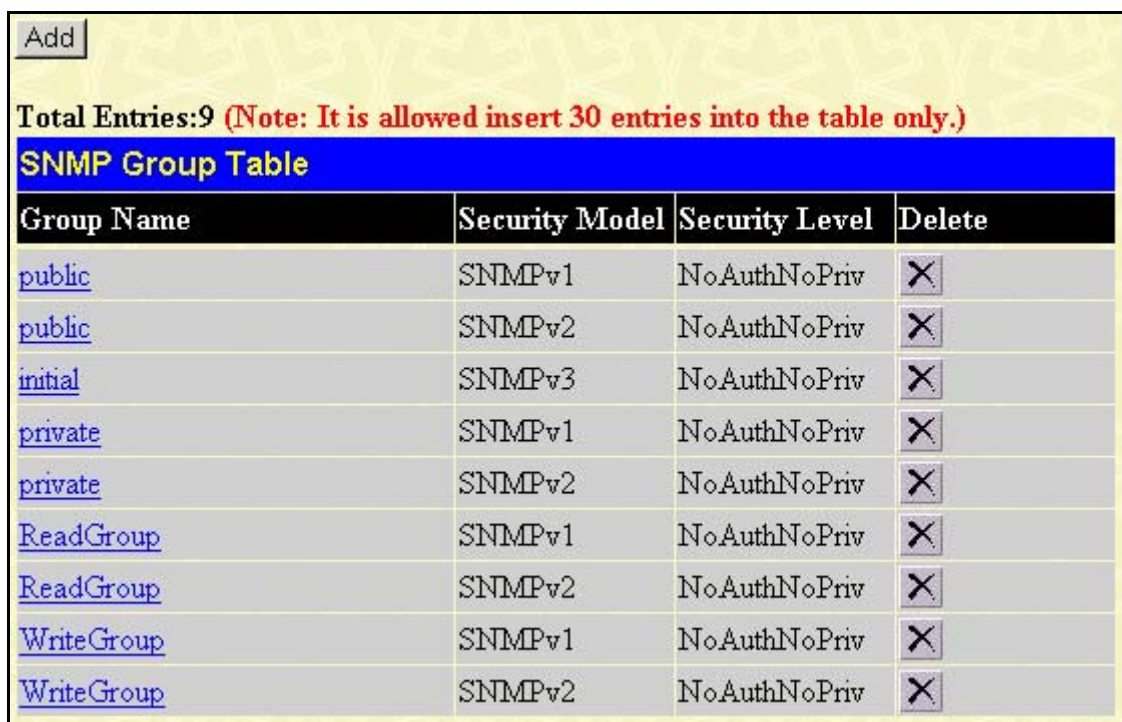


SNMP Group Table			
Group Name	Security Model	Security Level	Delete
public	SNMPv1	NoAuthNoPriv	X
public	SNMPv2	NoAuthNoPriv	X
initial	SNMPv3	NoAuthNoPriv	X
private	SNMPv1	NoAuthNoPriv	X
private	SNMPv2	NoAuthNoPriv	X
ReadGroup	SNMPv1	NoAuthNoPriv	X
ReadGroup	SNMPv2	NoAuthNoPriv	X
WriteGroup	SNMPv1	NoAuthNoPriv	X
WriteGroup	SNMPv2	NoAuthNoPriv	X

Figure 6- 9. SNMP Group Table window

To delete an existing SNMP Group Table entry, click the corresponding X icon under the **Delete** heading.

To display the current settings for an existing SNMP Group Table entry, click the blue hyperlink for the entry under the Group Name heading, revealing the following window.

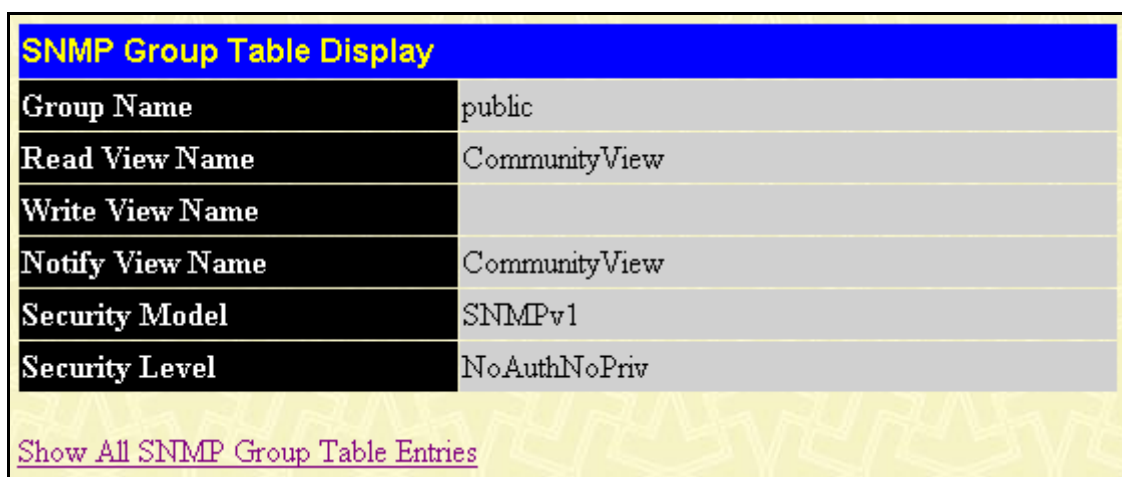

SNMP Group Table Display	
Group Name	public
Read View Name	CommunityView
Write View Name	
Notify View Name	CommunityView
Security Model	SNMPv1
Security Level	NoAuthNoPriv
Show All SNMP Group Table Entries	

Figure 6- 10. SNMP Group Table Display window

To add a new entry to the Switch's SNMP Group Table, click the **Add** button in the upper left-hand corner of the **SNMP Group Table** window. This will open the **SNMP Group Table Configuration** window, as shown below.

The image shows a configuration window titled "SNMP Group Table Configuration". It contains several input fields and dropdown menus. The fields are: Group Name, Read View Name, Write View Name, and Notify View Name, all of which are empty text boxes. The Security Model is set to "SNMPv1" and the Security Level is set to "NoAuthNoPriv". There is an "Apply" button at the bottom right and a link "Show All SNMP Group Table Entries" at the bottom left.

Figure 6- 11. SNMP Group Table Configuration window

The following parameters can be set:

Parameter	Description
Group Name	Type an alphanumeric string of up to 32 characters. This is used to identify the new SNMP group of SNMP users.
Read View Name	This name is used to specify the SNMP group created can request SNMP messages.
Write View Name	Specify a SNMP group name for users that are allowed SNMP write privileges to the Switch's SNMP agent.
Notify View Name	Specify a SNMP group name for users that can receive SNMP trap messages generated by the Switch's SNMP agent.
Security Model	<p><i>SNMPv1</i> - Specifies that SNMP version 1 will be used.</p> <p><i>SNMPv2</i> - Specifies that SNMP version 2c will be used. The SNMPv2 supports both centralized and distributed network management strategies. It includes improvements in the Structure of Management Information (SMI) and adds some security features.</p> <p><i>SNMPv3</i> - Specifies that the SNMP version 3 will be used. SNMPv3 provides secure access to devices through a combination of authentication and encrypting packets over the network.</p>
Security Level	<p>The Security Level settings only apply to SNMPv3.</p> <ul style="list-style-type: none"> <i>NoAuthNoPriv</i> - Specifies that there will be no authorization and no encryption of packets sent between the Switch and a remote SNMP manager. <i>AuthNoPriv</i> - Specifies that authorization will be required, but there will be no encryption of packets sent between the Switch and a remote SNMP manager. <i>AuthPriv</i> - Specifies that authorization will be required, and that packets sent between the Switch and a remote SNMP manger will be encrypted.

Click **Apply** to implement changes made.

SNMP Community Table

Use this table to create an SNMP community string to define the relationship between the SNMP manager and an agent. The community string acts like a password to permit access to the agent on the Switch. One or more of the following characteristics can be associated with the community string:

- An Access List of IP addresses of SNMP managers that are permitted to use the community string to gain access to the Switch's SNMP agent.
- Any MIB view that defines the subset of all MIB objects will be accessible to the SNMP community.
- Read/write or read-only level permission for the MIB objects accessible to the SNMP community.

To configure **SNMP Community** entries, open the **SNMP Manager** folder, located in the **Management** folder, and click the **SNMP Community Table** link, which will open the following screen:

SNMP Community Table Configuration			
Community Name	View Name	Access Right	
<input type="text"/>	<input type="text"/>	Read_Only	<input type="button" value="Apply"/>
Total Entries:2 (Note: It is allowed insert 10 entries into the table only.)			
SNMP Community Table			
Community Name	View Name	Access Right	Delete
private	CommunityView	Read_Write	<input type="button" value="X"/>
public	CommunityView	Read_Only	<input type="button" value="X"/>

Figure 6- 12. SNMP Community Table Configuration window

The following parameters can set:


Parameter	Description
Community Name	Type an alphanumeric string of up to 32 characters that is used to identify members of an SNMP community. This string is used like a password to give remote SNMP managers access to MIB objects in the Switch's SNMP agent.
View Name	Type an alphanumeric string of up to 32 characters that is used to identify the group of MIB objects that a remote SNMP manager is allowed to access on the Switch. The view name must exist in the SNMP View Table.
Access Right	<p><i>Read Only</i> - Specifies that SNMP community members using the community string created can only read the contents of the MIBs on the Switch.</p> <p><i>Read Write</i> - Specifies that SNMP community members using the community string created can read from, and write to the contents of the MIBs on the Switch.</p>

Click **Apply** to implement changes made.


SNMP Host Table

Use the **SNMP Host Table** to set up SNMP trap recipients.

Open the **SNMP Manager** folder, located in the Management folder, and click on the **SNMP Host Table** link. This will open the **SNMP Host Table** page, as shown below.

To delete an existing **SNMP Host Table** entry, click the corresponding  under the **Delete** heading.

To display the current settings for an existing **SNMP Group Table** entry, click the blue link for the entry under the **Host IP Address** heading.

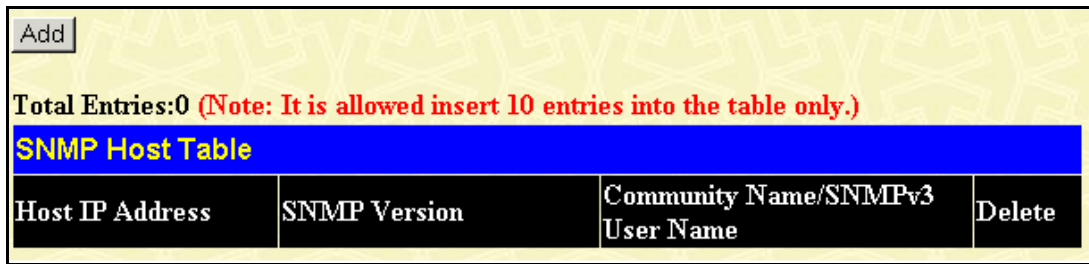

Add


Total Entries:0 (Note: It is allowed insert 10 entries into the table only.)

SNMP Host Table

Host IP Address	SNMP Version	Community Name/SNMPv3 User Name	Delete
-----------------	--------------	---------------------------------	--------

Figure 6- 13. SNMP Host Table window

To add a new entry to the Switch's **SNMP Group Table**, click the **Add** button in the upper left-hand corner of the **SNMP Host Table** window. This will open the **SNMP Host Table Configuration** window, as shown below.

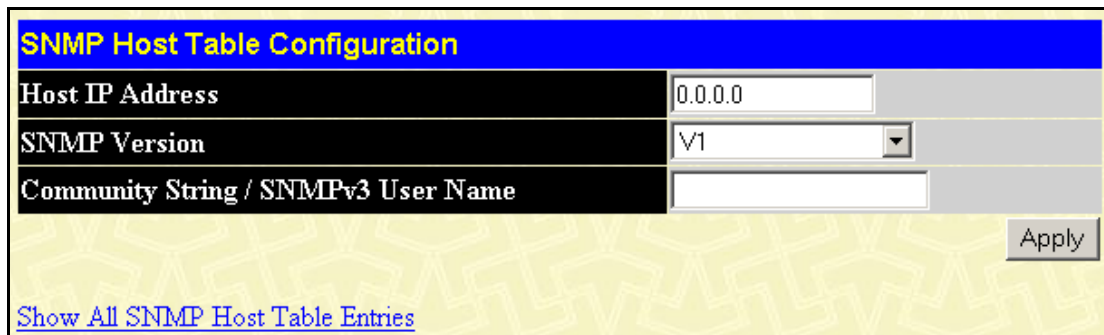

SNMP Host Table Configuration

Host IP Address: 0.0.0.0

SNMP Version: V1

Community String / SNMPv3 User Name:

Apply

[Show All SNMP Host Table Entries](#)

Figure 6- 14. SNMP Host Table Configuration window

The following parameters can set:

Parameter	Description
Host IP Address	Type the IP address of the remote management station that will serve as the SNMP host for the Switch.
SNMP Version	<p>V1 - To specifies that SNMP version 1 will be used.</p> <p>V2 - To specify that SNMP version 2 will be used.</p> <p>V3-NoAuth-NoPriv - To specify that the SNMP version 3 will be used, with a NoAuth-NoPriv security level.</p> <p>V3-Auth-NoPriv - To specify that the SNMP version 3 will be used, with an Auth-NoPriv security level.</p> <p>V3-Auth-Priv - To specify that the SNMP version 3 will be used, with an Auth-Priv security level.</p>
Community String or SNMP V3 User Name	Type in the community string or SNMP V3 user name as appropriate.

Click **Apply** to implement changes made.

SNMP Engine ID

The Engine ID is a unique identifier used for SNMP V3 implementations. This is an alphanumeric string used to identify the SNMP engine on the Switch.

To display the Switch's SNMP Engine ID, open the **SNMP Manger** folder, located in the **Management** folder and click on the **SNMP Engine ID** link. This will open the **SNMP Engine ID Configuration** window, as shown below.

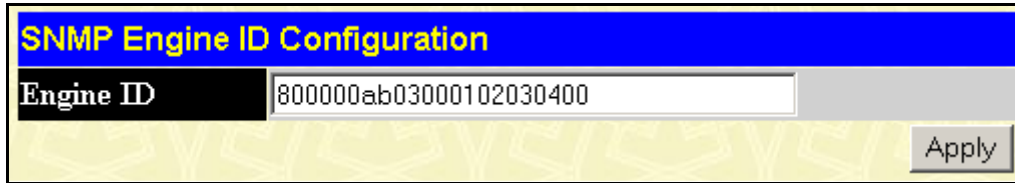


Figure 6- 15. SNMP Engine ID Configuration window

To change the Engine ID, type the new Engine ID in the space provided and click the **Apply** button.

Section 7

Monitoring

Stack Information

Port Utilization

CPU Utilization

Packets

Errors

Size

MAC Address

Switch History Log

IGMP Snooping Group

IGMP Snooping Forwarding

VLAN Status

Router Port

Session Table

The DGS-3212SR provides extensive network monitoring capabilities that can be viewed from the **Monitoring** folder.

Stack Information

The DGS-3212SR Switch can be used as a standalone high-capacity Switch or be used in a stacked arrangement. There are two hardware requirements to use the Switch in a stacked group:

1. The proper module(s) must be installed to use the DES-3226S. One or two DEM-540, DEM-340T or the DEM-340MG Stacking modules must be installed in order to use the Switch in a stacked configuration.
2. Slave Switch units in a stacked Switch group must be one of the Switch models intended for use with the DGS-3212SR, namely DES-3226S Switches. The user may employ any combination of these two switches in a star topology.

One stacking module can be installed to stack up to four additional slave Switch units or two modules can be installed to stack up to eight additional slave Switch units.

The DES-3226S will stack with the DGS-3212SR with a gigabit Ethernet connection or over IEEE 1394 fire wire cabling. One of these ports **MUST** be connected to module port number 26 to the far right of the DES-3226S for the proper stacking implementation to function correctly.

The web manager can be used to enable or disable the stacking mode and to enable stacking for any of the built-in combination ports.

The Switch stack displayed in the upper right-hand corner of your web-browser is a virtual representation of the actual stack. The icons appear in the same order as their respective Switches.

When the Switches are properly interconnected, information about the resulting Switch stack is displayed in the **Stack Mode Setup** window. To view stacking information or to enable/disable the stacking mode, click the **Stack Information** link in the **Monitoring** folder.

Stack Mode Setup												
Stack Topology	Disable											
Setting	STANDALONE											
Current	STANDALONE											
Stack Mode State	Disable ▾											
Stack Port	1	2	3	4	5	6	7	8	9	10	11	12
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Apply												
Total Entries : 1												
Stack Information Table												
ID	MAC Address	Port Range	Mode	Version	RPS Status	Model Name						
15	00-00-33-12-00-20	1-12	STANDALONE	3.00-B01	Not Present	DGS-3212SR						

Figure 7- 1. Stack Mode Setup (stacking disabled) window

To enable the stacking mode, follow the steps listed below.

1. Select *Enable* from the Stack Mode State drop-down menu.
2. Click on the **Apply** button.

To enable stacking for one or more built-in combination ports, do the following:

1. Select *Enable* from the Stack Mode State drop-down menu.
2. Select the Stack Port by clicking to check a corresponding selection box.

The Stack Information Table displays the read-only information listed in the table on the next page.

The current order in the Switch stack is also displayed on the front panel of each slave Switch, under the STACK NO. heading. The Stack ID LED display on the front panel of the DGS-3212SR will always display an F (15 in hex), regardless of whether the DGS-3212SR is the master Switch in a Switch stack or in standalone mode.

Below is an example of the **Stack Mode Setup** window with stacking mode enabled on Port 2.

Stack Mode Setup												
Stack Topology	Auto Detect											
Setting	MASTER											
Current	MASTER											
Stack Mode State	Enable ▾											
Stack Port	1	2	3	4	5	6	7	8	9	10	11	12
	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Apply												
Total Entries : 2												
Stack Information Table												
ID	MAC Address	Port Range	Mode	Version	RPS Status	Model Name						
15	00-00-33-12-00-20	1-12	MASTER	3.00-B01	Not Present	DGS-3212SR						
9	00-05-5d-17-f6-60	451-476	AUTO	4.02-B26	Not Support	DES-3226S						

Figure 7- 2. Stack Mode Setup (stacking enabled) window

Variables in this window are described below:

Parameter	Description
ID	Displays the Switch's order in the stack. The Switch with a unit id of 1 is the master Switch.
MAC Address	Displays the unique address of the Switch assigned by the factory.
Port Range	Displays the total number of ports on the Switch. Note that the stacking port is included in the total count.
Mode	Displays the method used to determine the stacking order of the Switches in the Switch stack.
Version	Displays the version number of the stacking firmware.
RPS Status	Displays the status of an optional Redundant Power Supply.
Model Name	Displays the model name of the corresponding Switch in a stack.

When the stacked group is connected and properly configured, the virtual stack appears in the upper right-hand corner of the web page.

Stack Mode Setup

Stack Topology	Auto Detect																								
Setting	MASTER																								
Current	MASTER																								
Stack Mode State	Enable																								
Stack Port	<table border="1"> <tr> <th>1</th><th>2</th><th>3</th><th>4</th><th>5</th><th>6</th><th>7</th><th>8</th><th>9</th><th>10</th><th>11</th><th>12</th> </tr> <tr> <td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input checked="" type="checkbox"/></td> </tr> </table>	1	2	3	4	5	6	7	8	9	10	11	12	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
1	2	3	4	5	6	7	8	9	10	11	12														
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>														

Apply

Total Entries : 2

Stack Information Table

ID	MAC Address	Port Range	Mode	Version	RPS Status	Model Name
15	00-00-33-12-00-20	1-12	MASTER	3.00-B01	Not Present	DGS-3212SR
9	00-05-5d-17-f6-60	451-476	AUTO	4.02-B26	Not Support	DES-3226S

Figure 7- 3. Stack Information web page

Port Utilization

The **Port Utilization** window displays the percentage of the total available bandwidth being used on the port.

To view the port utilization, click on the **Monitoring** folder and then the **Port Utilization** link:

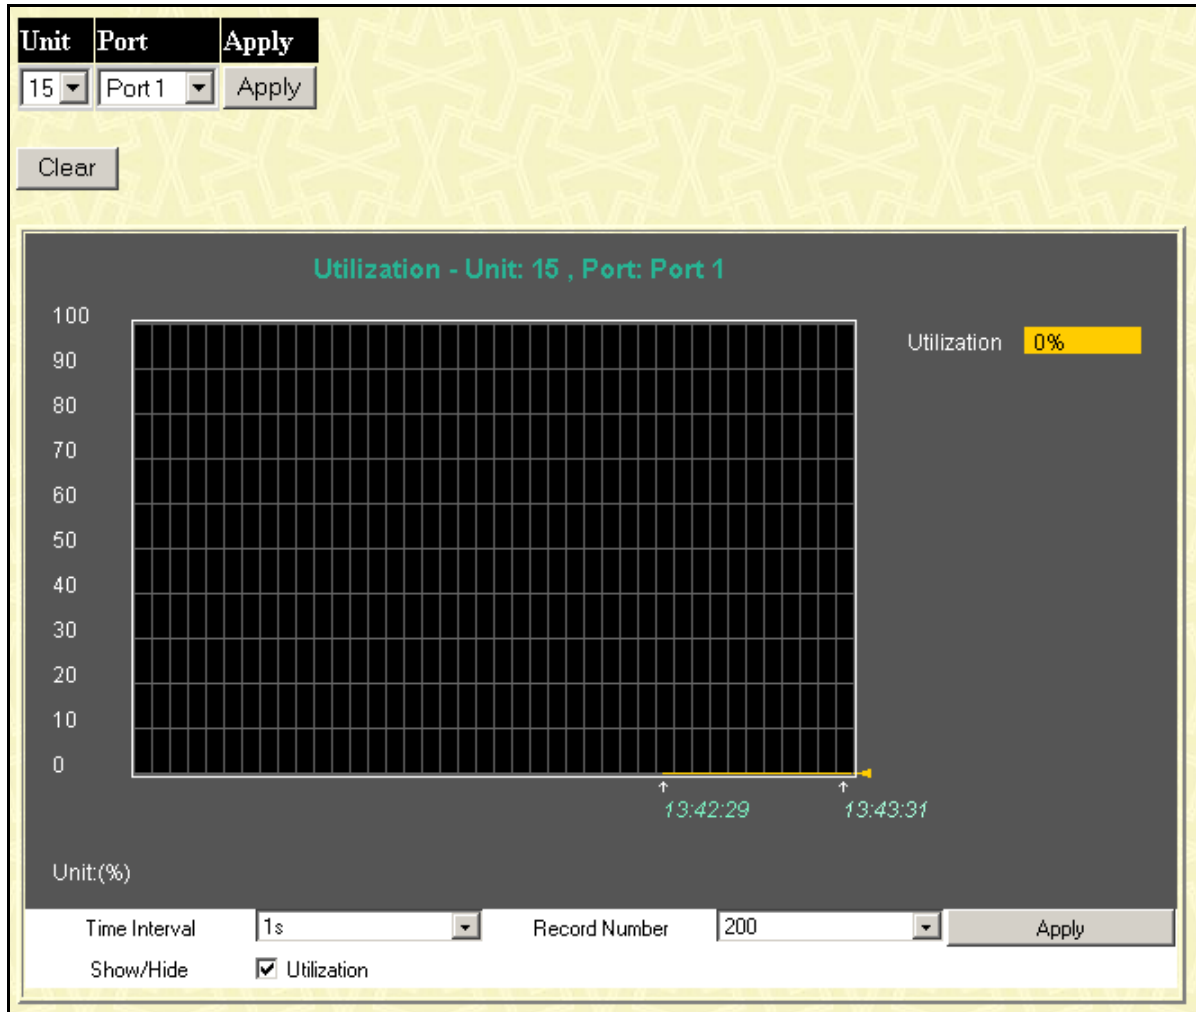


Figure 7- 4. Utilization window

The following field can be set:

Parameter	Description
Unit	Allows you to specify a Switch in a Switch stack using that Switch's Unit ID. The number 15 indicates a Switch in standalone mode.
Port	Allows you to specify a port to monitor from the Switch selected above.
Clear	Clicking this button clears all statistics counters on this window.
Time Interval <1s>	Select the desired setting between 1s and 60s, where "s" stands for seconds. The default value is one second.
Record Number <200>	Select number of times the Switch will be polled between 20 and 200. The default value is 200.
Show/Hide	Check to display Utilization.

CPU Utilization

This **CPU Utilization** window displays the moving average of the CPU.

To view the CPU utilization, click on the **Monitoring** folder and then the **CPU Utilization** link:

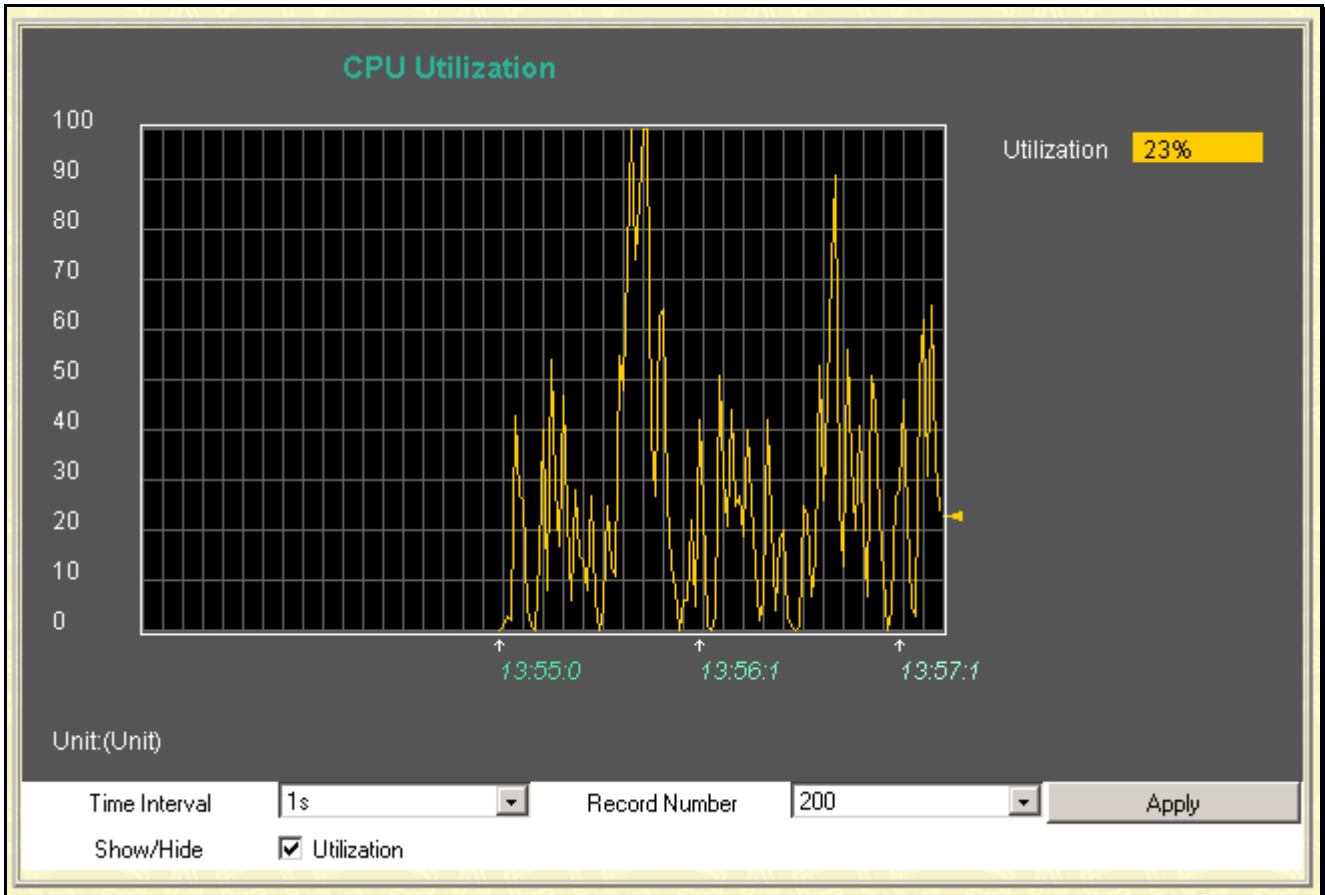


Figure 7- 5. CPU Utilization window

The following field can be set:

Parameter	Description
Time Interval <1s>	Select the desired setting between 1s and 60s, where “s” stands for seconds. The default value is one second.
Record Number <200>	Select number of times the Switch will be polled between 20 and 200. The default value is 200.
Show/Hide	Check to display Utilization.

Packets

Various statistics can be viewed as either a line graph or a table:

- Received Packets
- Received Unicast/Multicast/Broadcast Packets
- Transmitted Packet

Received Packets

Click the **Received (RX)** link in the **Packets** folder of the **Monitoring** menu to view the following graph of packets received on the Switch. To select a port to view these statistics for, first select the Switch in the Switch stack by using the Unit pull-down menu and then select the port by using the Port pull-down menu. The user may also use the real-time graphic of the Switch and/or switch stack at the top of the web page by simply clicking on a port.

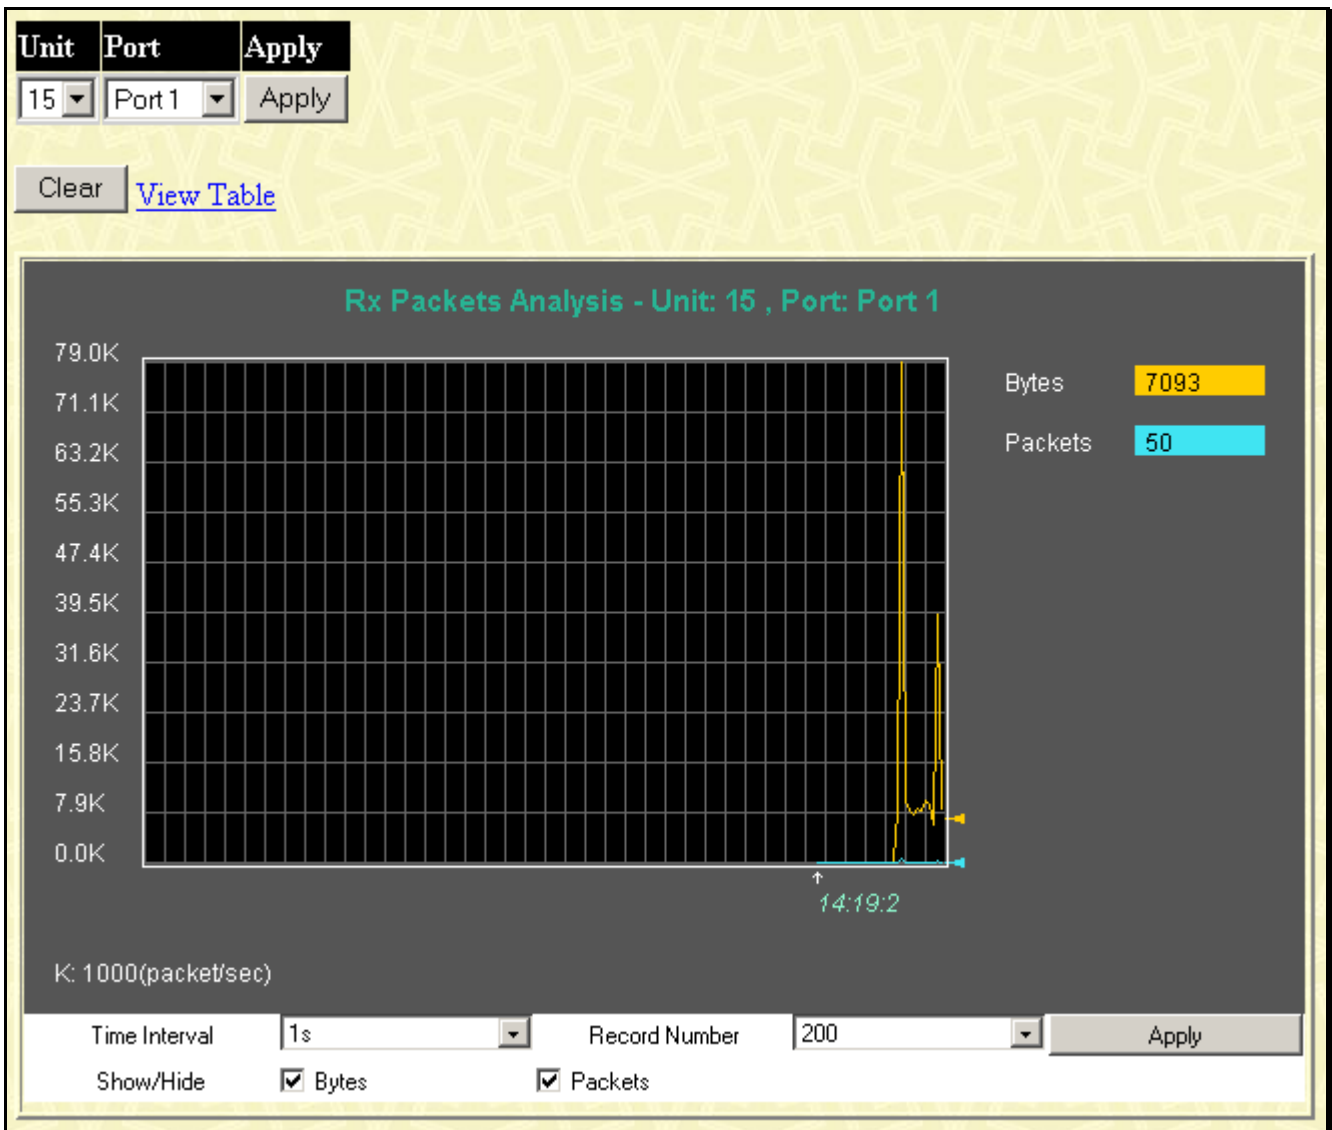


Figure 7- 6. Rx Packets Analysis (line graph for Bytes & Packets) window

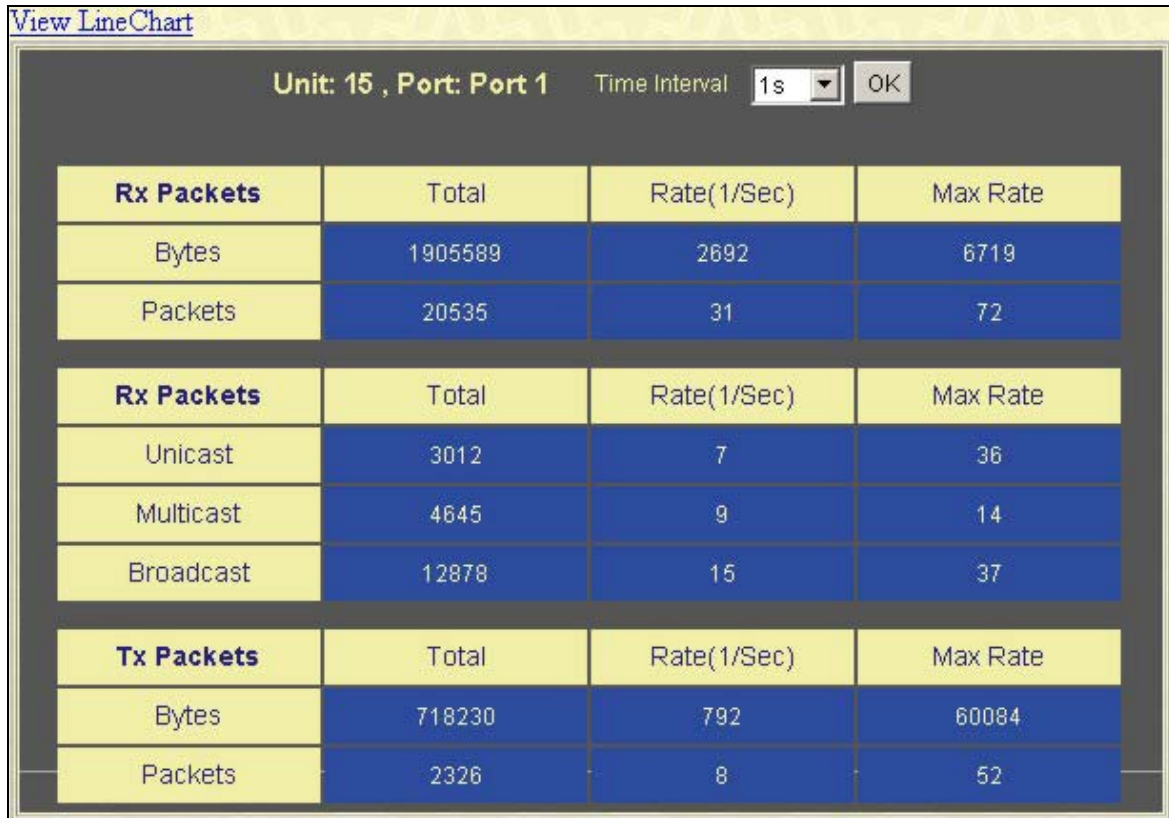


Figure 7-7. Rx Packets Analysis (table for Bytes & Packets) window

Select the desired Switch using the Unit drop-down menu and the desired port using the Port drop-down menu. The Time Interval field sets the interval at which the error statistics are updated.

The following field can be set:

Parameter	Description
Time Interval <1s>	Select the desired setting between 1s and 60s, where "s" stands for seconds. The default value is one second.
Record Number <200>	Select number of times the Switch will be polled between 20 and 200. The default value is 200.
Bytes	Counts the number of bytes received on the port.
Packets	Counts the number of packets received on the port.
Unicast	Counts the total number of good packets that were received by a unicast address.
Multicast	Counts the total number of good packets that were received by a multicast address.
Broadcast	Counts the total number of good packets that were received by a broadcast address.
Show/Hide	Check whether to display Bytes and Packets.
Clear	Clicking this button clears all statistics counters on this window.
View Table	Clicking this button instructs the Switch to display a table rather than a line graph.
View Line Chart	Clicking this button instructs the Switch to display a line graph rather than a table.

Received Unicast/Multicast/Broadcast Packets

Click the **UMB Cast (RX)** link in the **Packets** folder of the **Monitoring** menu to view the following graph of UMB cast packets received on the Switch. To select a port to view these statistics for, first select the Switch in the Switch stack by using the Unit pull-down menu and then select the port by using the Port pull-down menu. The user may also use the real-time graphic of the Switch and/or switch stack at the top of the web page by simply clicking on a port.

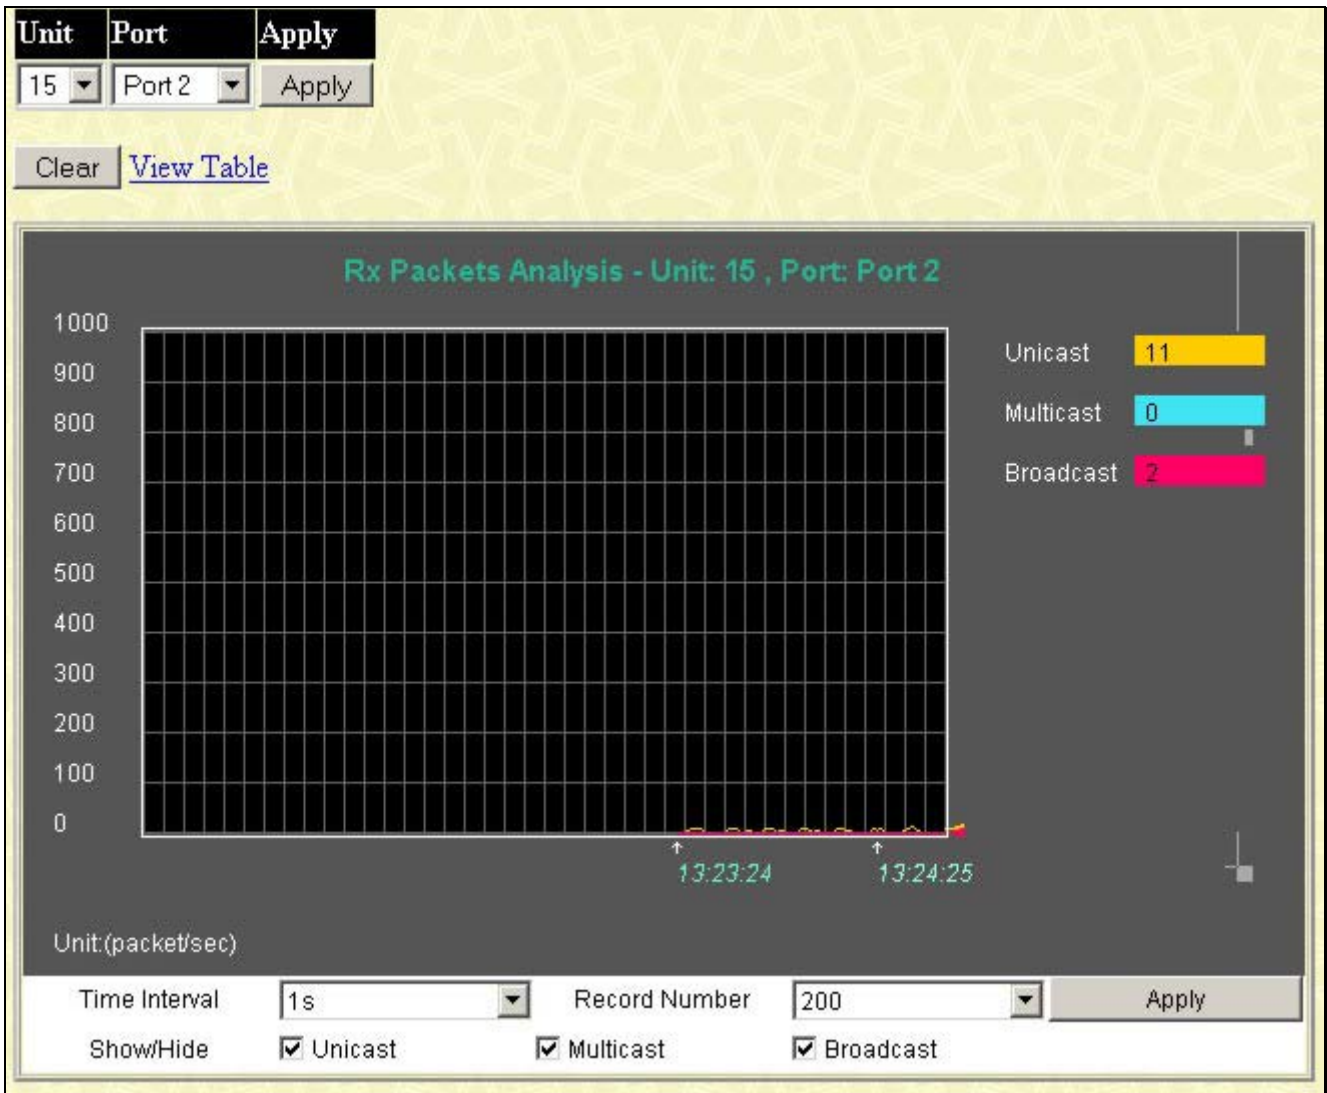


Figure 7- 8. Rx Packets Analysis (line graph for Unicast, Multicast, & Broadcast) window

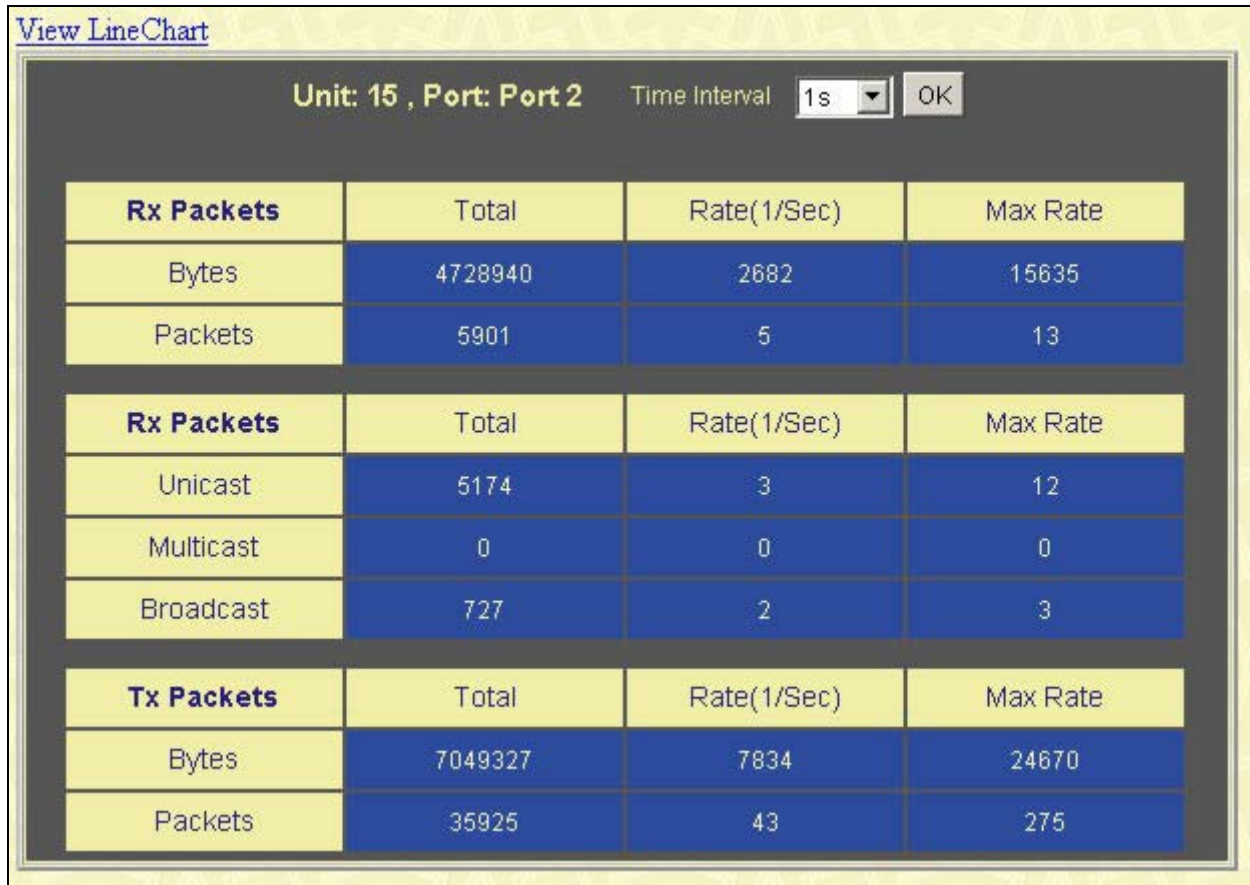


Figure 7- 9. Rx Packets Analysis (table for Unicast, Multicast, & Broadcast) window

Select the desired Switch using the Unit drop-down menu and the desired port using the Port drop-down menu. The Time Interval field sets the interval at which the error statistics are updated.

The following fields can be set:

Parameter	Description
Time Interval <1s>	Select the desired setting between 1s and 60s, where "s" stands for seconds. The default value is one second.
Record Number <200>	Select number of times the Switch will be polled between 20 and 200. The default value is 200.
Unicast	Counts the total number of good packets that were received by a unicast address.
Multicast	Counts the total number of good packets that were received by a multicast address.
Broadcast	Counts the total number of good packets that were received by a broadcast address.
Show/Hide	Check whether or not to display Multicast, Broadcast, and Unicast Packets.
Clear	Clicking this button clears all statistics counters on this window.
View Table	Clicking this button instructs the Switch to display a table rather than a line graph.
View Line Chart	Clicking this button instructs the Switch to display a line graph rather than a table.

Transmitted Packets

Click the **Transmitted (TX)** link in the **Packets** folder of the **Monitoring** menu to view the following graph of packets transmitted from the Switch. To select a port to view these statistics for, first select the Switch in the Switch stack by using the Unit pull-down menu and then select the port by using the Port pull down menu. The user may also use the real-time graphic of the Switch and/or switch stack at the top of the web page by simply clicking on a port.

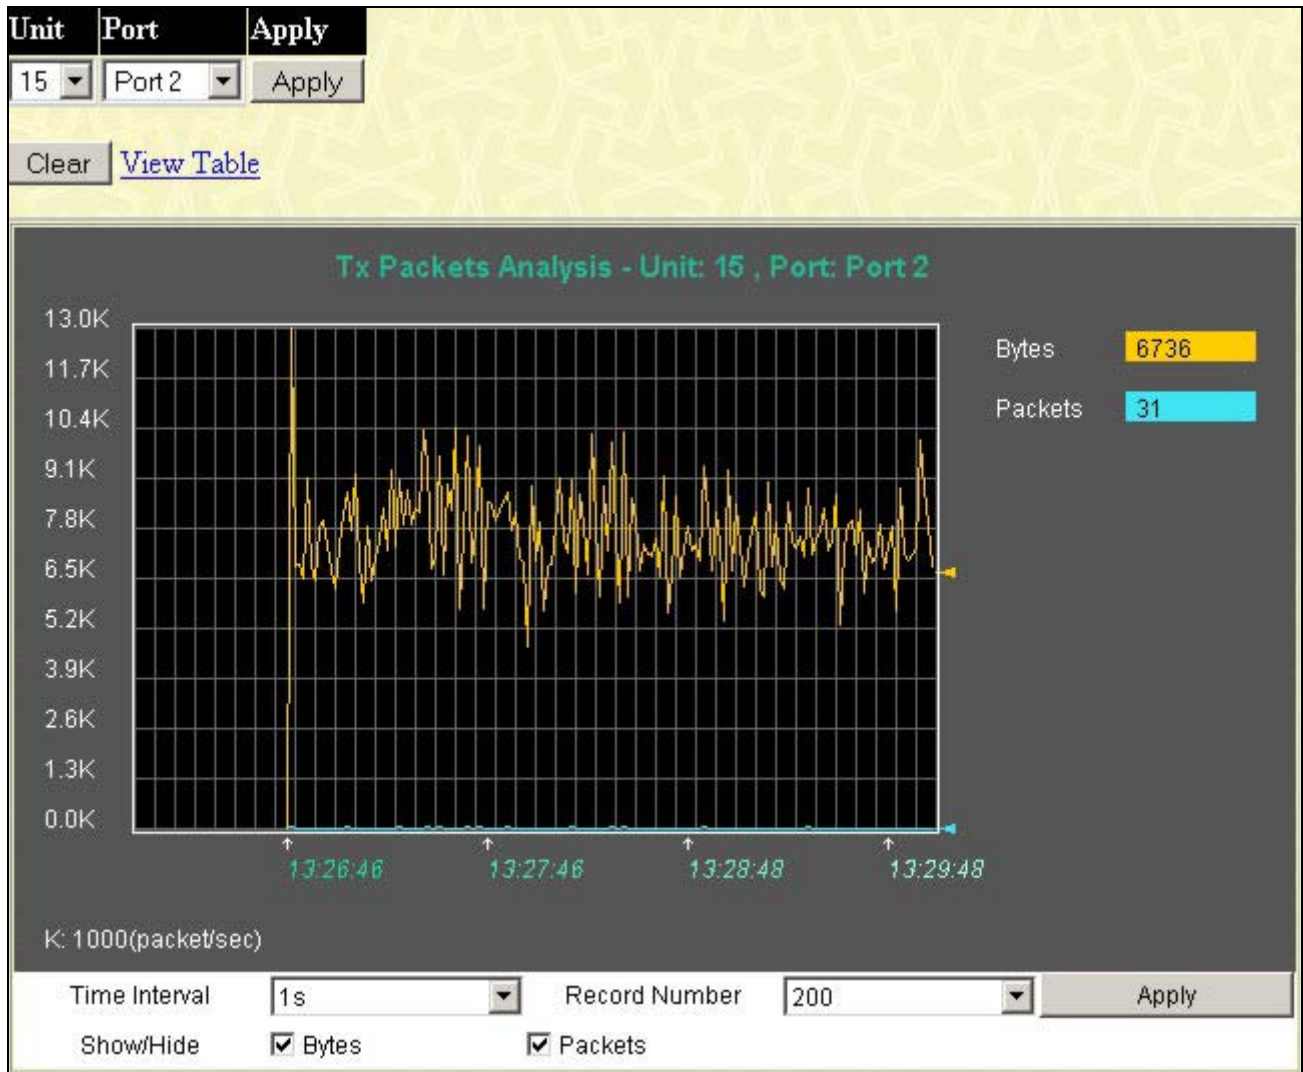


Figure 7- 10. Tx Packets Analysis (line graph for Bytes & Packets) window

[View Line Chart](#)

Unit: 15 , Port: Port 2 Time Interval 1s OK

Rx Packets	Total	Rate(1/sec)	Max Rate
Bytes	6381230	2044	16009
Packets	7308	1	14

Rx Packets	Total	Rate(1/sec)	Max Rate
Unicast	6348	1	12
Multicast	0	0	0
Broadcast	960	0	3

Tx Packets	Total	Rate(1/sec)	Max Rate
Bytes	9508746	7174	24670
Packets	48049	33	275

Figure 7- 11. Tx Packets Analysis (table for Bytes & Packets) window

Select the desired Switch using the Unit drop-down menu and the desired port using the Port drop-down menu. The Time Interval field sets the interval at which the error statistics are updated.

The following fields can be set or are displayed:

Parameter	Description
Time Interval <1s>	Select the desired setting between 1s and 60s, where "s" stands for seconds. The default value is one second.
Record Number <200>	Select number of times the Switch will be polled between 20 and 200. The default value is 200.
Bytes	Counts the number of bytes successfully sent from the port.
Packets	Counts the number of packets successfully sent on the port.
Unicast	Counts the total number of good packets that were transmitted by a unicast address.
Multicast	Counts the total number of good packets that were transmitted by a multicast address.
Broadcast	Counts the total number of good packets that were transmitted by a broadcast address.
Show/Hide	Check whether or not to display Bytes and Packets.
Clear	Clicking this button clears all statistics counters on this window.
View Table	Clicking this button instructs the Switch to display a table rather than a line graph.
View Line Chart	Clicking this button instructs the Switch to display a line graph rather than a table.

Errors

Various statistics can be viewed as either a line graph or a table:

- Received Errors
- Transmitted Errors

Received Errors

Click the **Received (RX)** link in the **Error** folder of the **Monitoring** menu to view the following graph of error packets received on the Switch. To select a port to view these statistics for, first select the Switch in the Switch stack by using the Unit pull-down menu and then select the port by using the Port pull-down menu. The user may also use the real-time graphic of the Switch and/or switch stack at the top of the web page by simply clicking on a port.


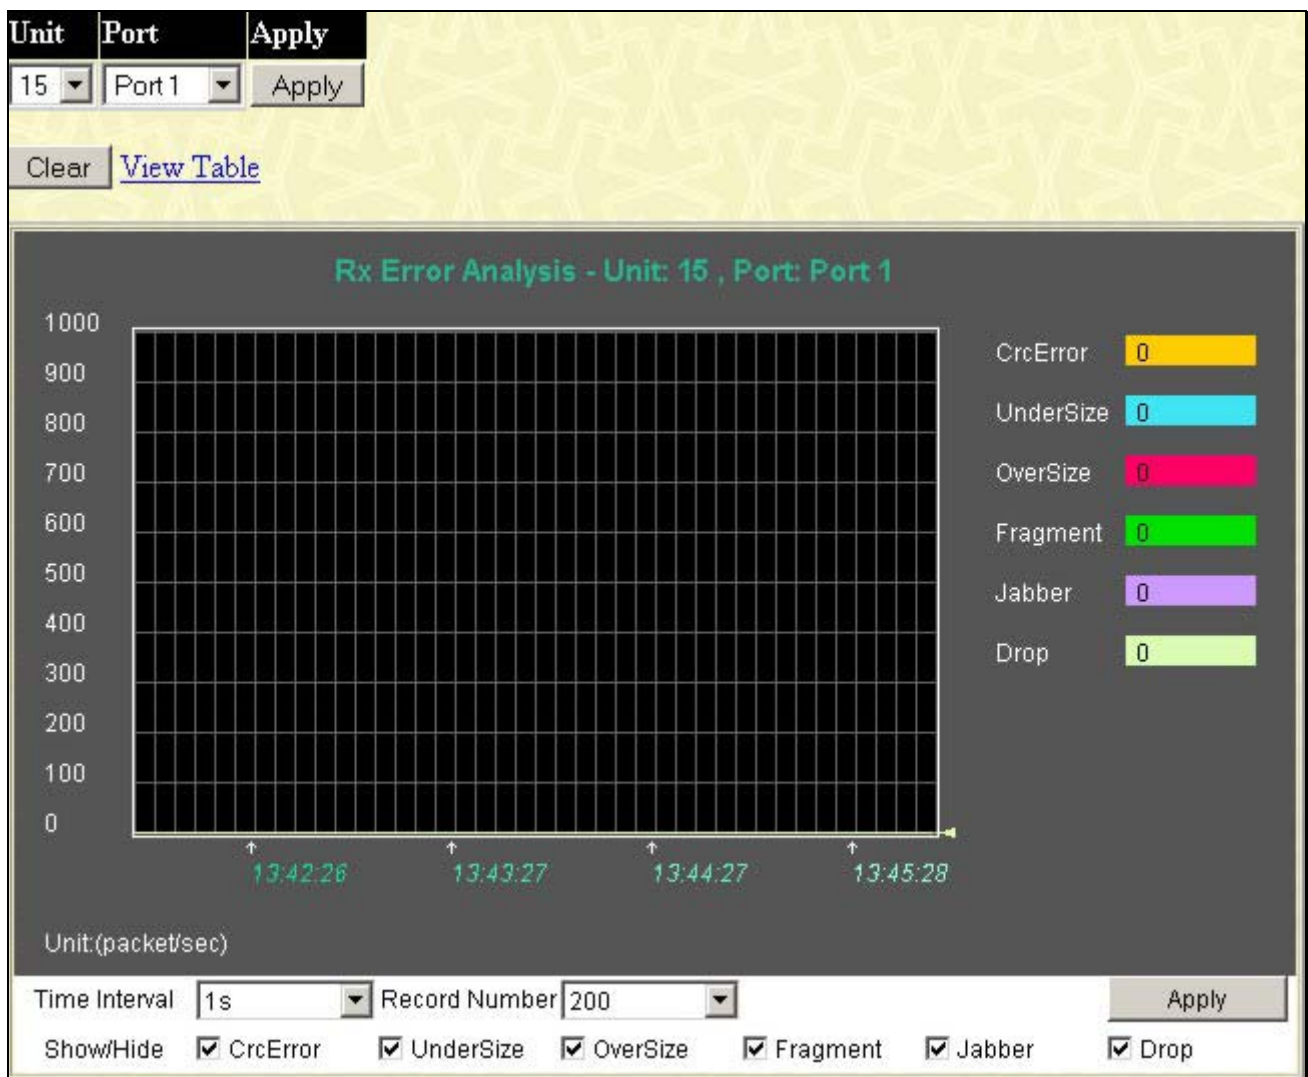


Figure 7- 12. Rx Error Analysis (line graph) window

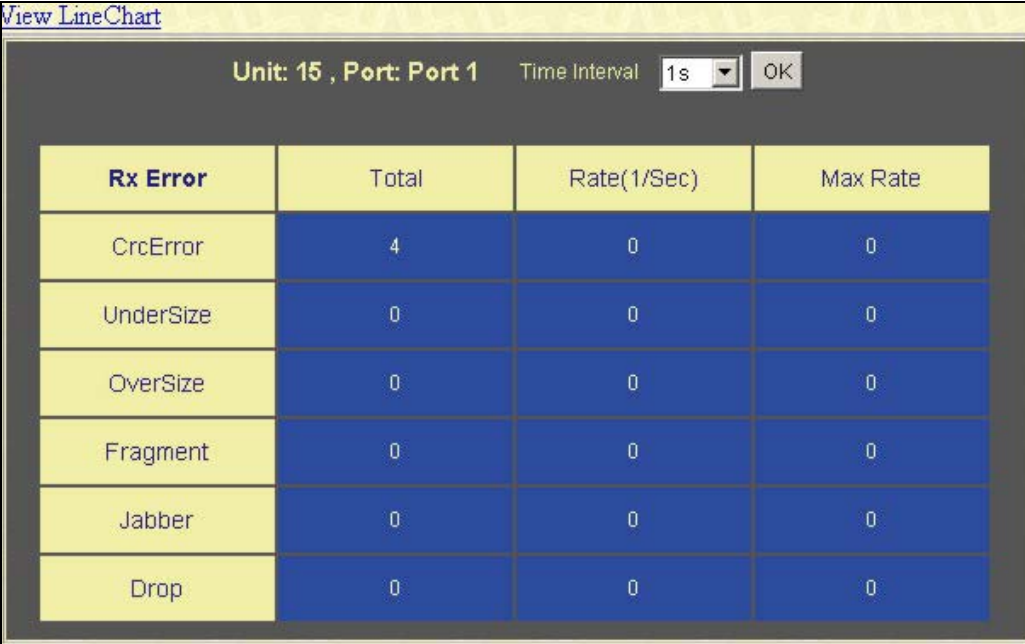

Rx Error	Total	Rate(1/Sec)	Max Rate
CrcError	4	0	0
UnderSize	0	0	0
OverSize	0	0	0
Fragment	0	0	0
Jabber	0	0	0
Drop	0	0	0

Figure 7- 13. Rx Error Analysis (table) window

Select the desired Switch using the Unit drop-down menu and the desired port using the Port drop-down menu. The Time Interval field sets the interval at which the error statistics are updated.

The following fields can be set or are displayed:

Parameter	Description
Time Interval <1s>	Select the desired setting between 1s and 60s, where "s" stands for seconds. The default value is one second.
Record Number <200>	Select number of times the Switch will be polled between 20 and 200. The default value is 200.
Crc Error	Counts otherwise valid packets that did not end on a byte (octet) boundary.
UnderSize	The number of packets detected that are less than the minimum permitted packets size of 64 bytes and have a good CRC. Undersize packets usually indicate collision fragments, a normal network occurrence.
OverSize	Counts packets received that were longer than 1518 octets, or if a VLAN frame is 1522 octets, and less than the MAX_PKT_LEN. Internally, MAX_PKT_LEN is equal to 1522.
Fragment	The number of packets less than 64 bytes with either bad framing or an invalid CRC. These are normally the result of collisions.
Jabber	The number of packets with lengths more than the MAX_PKT_LEN bytes. Internally, MAX_PKT_LEN is equal to 1522.
Drop	The number of packets that are dropped by this port since the last Switch reboot.
Show/Hide	Check whether or not to display Crc Error, Under Size, Over Size, Fragment, Jabber, and Drop errors.
Clear	Clicking this button clears all statistics counters on this window.
View Table	Clicking this button instructs the Switch to display a table rather than a line graph.
View Line Chart	Clicking this button instructs the Switch to display a line graph rather than a table.

Transmitted Errors

Click the **Transmitted (TX)** link in the **Error** folder of the **Monitoring** menu to view the following graph of error packets received on the Switch. To select a port to view these statistics for, first select the Switch in the switch stack by using the Unit pull-down menu and then select the port by using the Port pull-down menu. The user may also use the real-time graphic of the Switch and/or switch stack at the top of the web page by simply clicking on a port.

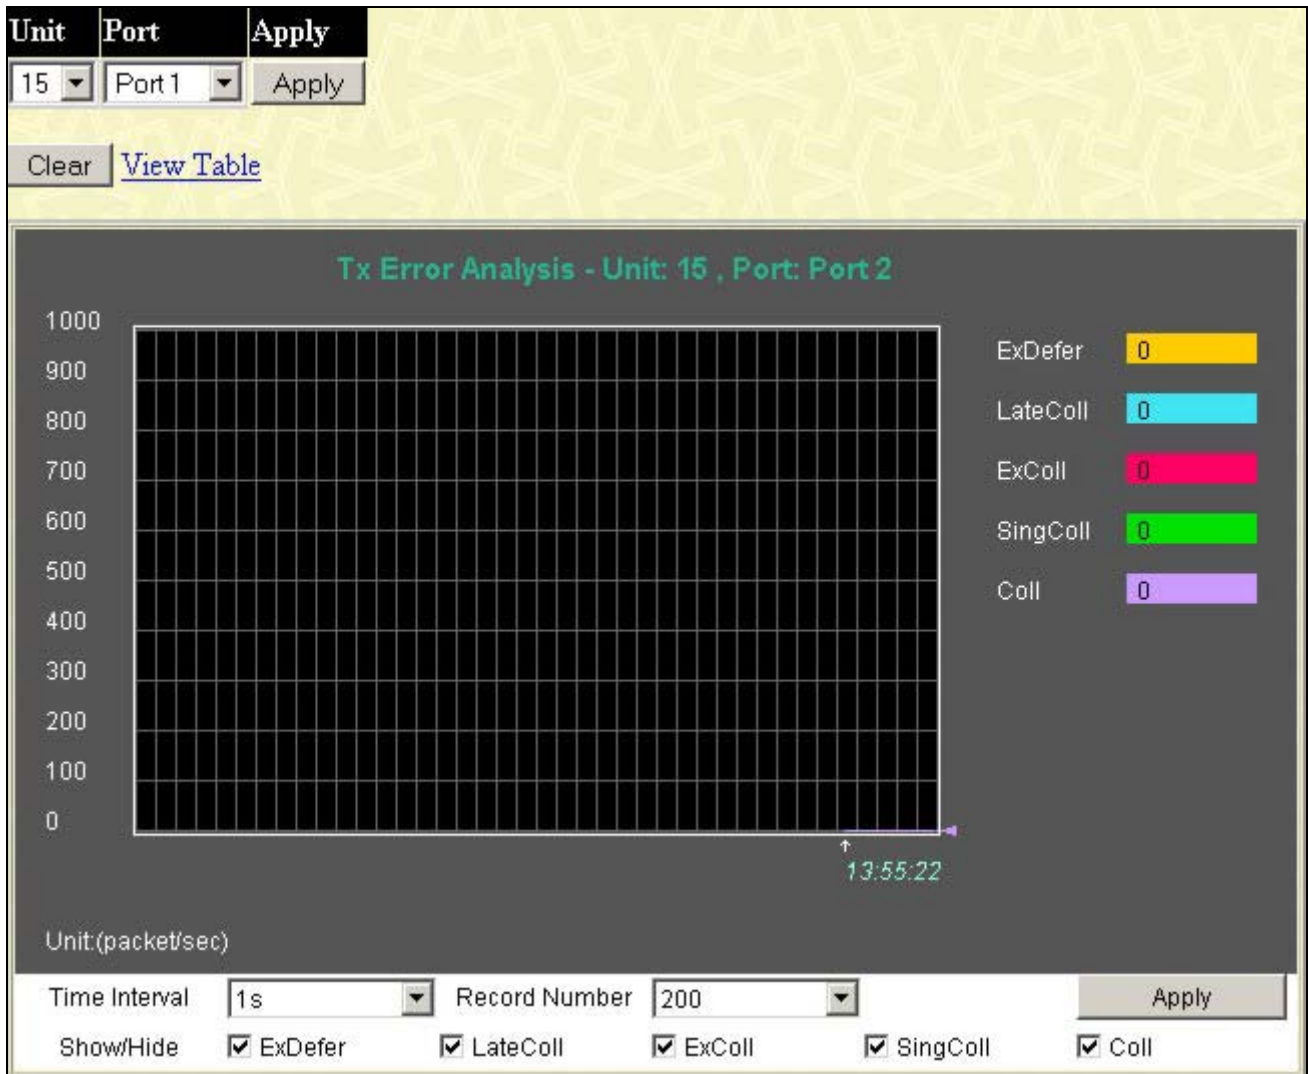


Figure 7- 14. Tx Error Analysis (line graph) window

Tx Error	Total	Rate(1/Sec)	Max Rate
ExDefer	0	0	0
LateColl	0	0	0
ExColl	0	0	0
SingColl	0	0	0
Coll	0	0	0

Figure 7- 15. Tx Error Analysis (table) window

Select the desired Switch using the Unit drop-down menu and the desired port using the Port drop-down menu. The Time Interval field sets the interval at which the error statistics are updated.

The following fields can be set:

Parameter	Description
Time Interval <1s>	Select the desired setting between 1s and 60s, where "s" stands for seconds. The default value is one second.
Record Number <200>	Select number of times the Switch will be polled between 20 and 200. The default value is 200.
ExDefer	Counts the number of packets for which the first transmission attempt on a particular interface was delayed because the medium was busy.
CRC Error	Counts otherwise valid packets that did not end on a byte (octet) boundary.
LateColl	Counts the number of times that a collision is detected later than 512 bit-times into the transmission of a packet.
ExColl	Excessive Collisions. The number of packets for which transmission failed due to excessive collisions.
SingColl	Single Collision Frames. The number of successfully transmitted packets for which transmission is inhibited by more than one collision.
Coll	An estimate of the total number of collisions on this network segment.
Show/Hide	Check whether or not to display ExDefer, LateColl, ExColl, SingColl, and Coll errors.
Clear	Clicking this button clears all statistics counters on this window.
View Table	Clicking this button instructs the Switch to display a table rather than a line graph.
View Line Chart	Clicking this button instructs the Switch to display a line graph rather than a table.

Size

Various statistics can be viewed as either a line graph or a table:

- Packet Size

Packet Size

The Web Manager allows packets received by the Switch, arranged in six groups and classed by size, to be viewed as either a line graph or a table. Two windows are offered. To select a port to view these statistics for, first select the Switch in the Switch stack by using the Unit pull-down menu and then select the port by using the Port pull-down menu. The user may also use the real-time graphic of the Switch and/or switch stack at the top of the web page by simply clicking on a port.

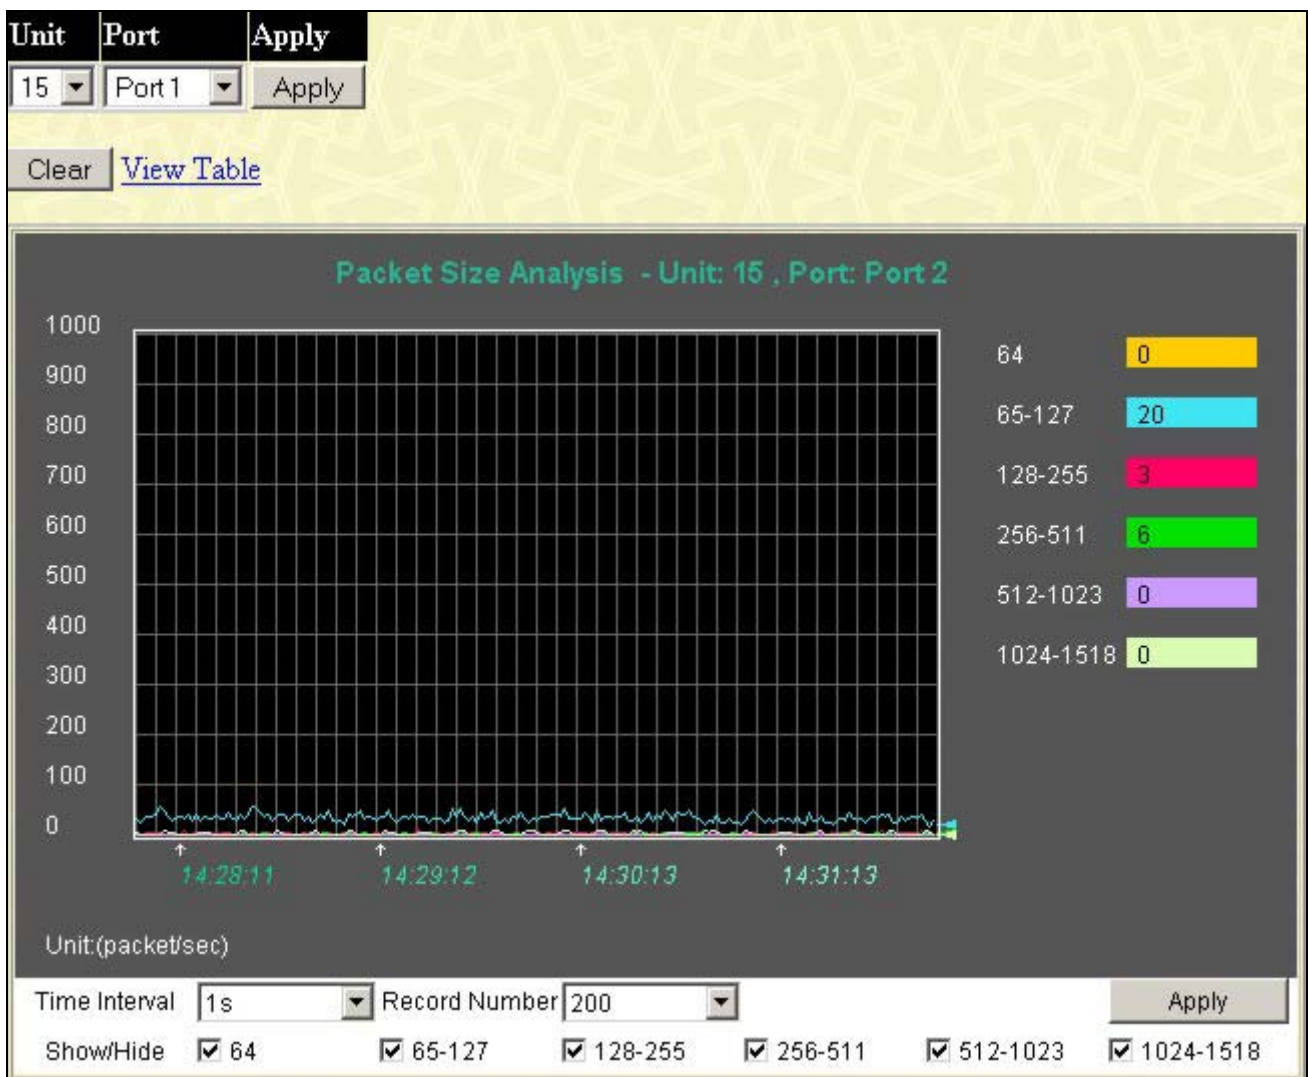


Figure 7- 16. Packet Size Analysis (line graph) window

View Line Chart

Unit: 15 , Port: Port 2 Time Interval 1s OK

Packet Size	Total	Rate(1/Sec)	Max Rate
64	0	0	0
65-127	166377	34	268
128-255	19491	0	23
256-511	12173	1	19
512-1023	2191	0	5
1024-1518	11682	3	10

Figure 7- 17. Packet Size Analysis (table) window

Select the desired Switch using the Unit drop-down menu and the desired port using the Port drop-down menu. The Time Interval field sets the interval at which the error statistics are updated.

The following field can be set:

Parameter	Description
Time Interval <1s>	Select the desired setting between 1s and 60s, where "s" stands for seconds. The default value is one second.
Record Number <200>	Select number of times the Switch will be polled between 20 and 200. The default value is 200.
64	The total number of packets (including bad packets) received that were 64 octets in length (excluding framing bits but including FCS octets).
65-127	The total number of packets (including bad packets) received that were between 65 and 127 octets in length inclusive (excluding framing bits but including FCS octets).
128-255	The total number of packets (including bad packets) received that were between 128 and 255 octets in length inclusive (excluding framing bits but including FCS octets).
256-511	The total number of packets (including bad packets) received that were between 256 and 511 octets in length inclusive (excluding framing bits but including FCS octets).
512-1023	The total number of packets (including bad packets) received that were between 512 and 1023 octets in length inclusive (excluding framing bits but including FCS octets).
1024-1518	The total number of packets (including bad packets) received that were between 1024 and 1518 octets in length inclusive (excluding framing bits but including FCS octets).
Show/Hide	Check whether or not to display 64, 65-127, 128-255, 256-511, 512-1023, and 1024-1518 packets received.
Clear	Clicking this button clears all statistics counters on this window.
View Table	Clicking this button instructs the Switch to display a table rather than a line graph.
View Line Chart	Clicking this button instructs the Switch to display a line graph rather than a table.

MAC Address

This allows the Switch's dynamic MAC address forwarding table to be viewed. When the Switch learns an association between a MAC address and a port number, it makes an entry into its forwarding table. These entries are then used to forward packets through the Switch.

VLAN ID	<input type="text"/>	<input type="button" value="Find"/>	<input type="button" value="Delete"/>	
MAC Address	<input type="text" value="00-00-00-00-00-00"/>	<input type="button" value="Find"/>		
Unit - Port	<input type="text" value="15"/> <input type="text" value="Port 1"/>	<input type="button" value="Find"/>	<input type="button" value="Delete"/>	
		<input type="button" value="View All Entry"/>	<input type="button" value="Delete All Entry"/>	
MAC Address Table				
VID	MAC Address	Unit	Port	Learned
1	00-00-48-af-02-ca	15	1	Dynamic
1	00-00-5e-00-01-0a	15	1	Dynamic
1	00-00-81-17-f0-01	15	1	Dynamic
1	00-00-81-9a-f2-ba	15	1	Dynamic
1	00-00-81-9a-f2-f4	15	1	Dynamic
1	00-00-81-9a-f5-b7	15	1	Dynamic
1	00-00-81-ff-00-53	15	1	Dynamic
1	00-00-e2-64-e3-3e	15	1	Dynamic
1	00-00-e2-93-66-06	15	1	Dynamic
1	00-01-02-03-04-00	15	1	Dynamic
1	00-01-02-03-04-01	15	1	Dynamic
1	00-01-03-83-11-fd	15	1	Dynamic
1	00-01-24-02-45-00	15	1	Dynamic
1	00-01-30-12-13-02	15	1	Dynamic
1	00-02-06-12-34-56	15	1	Dynamic
1	00-03-09-18-10-01	15	1	Dynamic
1	00-03-9d-73-32-f0	15	1	Dynamic
1	00-04-76-01-35-c9	15	1	Dynamic
1	00-05-00-80-01-71	15	1	Dynamic
1	00-05-5d-64-96-97	15	1	Dynamic
<input type="button" value="Next"/>				
Total Entries: 262				

Figure 7- 18. MAC Address Table window

The following fields can be set:

Parameter	Description
VLAN Name	Enter a VLAN Name for the forwarding table to be browsed by.
MAC Address	Enter a MAC address for the forwarding table to be browsed by.
Unit – Port	Select the Switch Unit ID of the Switch in the Switch stack and then the port by using the corresponding pull-down menus.
Find	Allows the user to move to a sector of the database corresponding to a user defined port, VLAN, or MAC address.
VID	The VLAN ID of the VLAN of which the port is a member.
MAC Address	The MAC address entered into the address table.
Unit	Refers to the Unit of the Switch stack from which the MAC address was learned.
Port	The port to which the MAC address above corresponds.
Type	Describes the method which the Switch discovered the MAC address. The possible entries are Dynamic, Self, and Static.
Next	Click this button to view the next page of the address table.
Clear Dynamic Entry	Clicking this button will clear Dynamic entries learned by the Switch. This may be accomplished by VLAN Name or by Port.
View All Entry	Clicking this button will allow the user to view all entries of the address table.
Delete All Entry	Clicking this button will allow the user to delete all entries of the address table.

Switch History Log

The **Switch History** window displays the Switch's history log, as compiled by the Switch's management agent.

Switch History		
Sequence	Time	Log Text
266	0 days 01:14:39	Port 15:5 link up, 1000Mbps FULL duplex
265	0 days 01:14:38	Port 15:5 link down
264	0 days 01:14:21	Port 15:5 link up, 1000Mbps FULL duplex
263	0 days 01:14:07	Port 15:5 link down
262	0 days 01:10:36	Port 15:5 link up, 1000Mbps FULL duplex
261	0 days 01:10:35	Port 15:5 link down
260	0 days 01:10:19	Port 15:5 link up, 1000Mbps FULL duplex
259	0 days 01:10:05	Port 15:5 link down
258	0 days 01:06:33	Port 15:5 link up, 1000Mbps FULL duplex
257	0 days 01:06:32	Port 15:5 link down
256	0 days 01:06:16	Port 15:5 link up, 1000Mbps FULL duplex
255	0 days 01:06:01	Port 15:5 link down
254	0 days 01:02:29	Port 15:5 link up, 1000Mbps FULL duplex
253	0 days 01:02:28	Port 15:5 link down
252	0 days 01:02:11	Port 15:5 link up, 1000Mbps FULL duplex
251	0 days 01:01:57	Port 15:5 link down
250	0 days 00:58:26	Port 15:5 link up, 1000Mbps FULL duplex
249	0 days 00:58:25	Port 15:5 link down
248	0 days 00:58:09	Port 15:5 link up, 1000Mbps FULL duplex
247	0 days 00:57:55	Port 15:5 link down

Clear Next

Figure 7- 19. Switch History window

The Switch can record event information in its own logs, to designated SNMP trap receiving stations, and to the PC connected to the console manager. Clicking **Next** at the bottom of the window will allow you to display all the Switch Trap Logs.

The information is described as follows:

Parameter	Description
Sequence	A counter incremented whenever an entry to the Switch's history log is made. The table displays the last entry (highest sequence number) first.
Time	Displays the time in days, hours, and minutes since the Switch was last restarted.
Log Text	Displays text describing the event that triggered the history log entry.

IGMP Snooping Table

This window allows the Switch's IGMP Snooping Group Table to be viewed. IGMP Snooping allows the Switch to read the Multicast Group IP address and the corresponding MAC address from IGMP packets that pass through the Switch. The number of IGMP reports that were snooped is displayed in the Reports field.

To view the **IGMP Snooping Group Table** window, click **IGMP Snooping Group** on the **Monitoring** menu:

Vid : <input type="text" value="0"/> Search			
Total Entries : 0			
IGMP Snooping Table			
VLAN ID	Multicast Group	MAC Address	Reports
0	0.0.0.0	00:00:00:00:00:00	0
Unit	Port Member		
15			
1			
2			
3			
4			
5			
6			
7			
8			
9			
10			
11			
12			

Figure 7- 20. IGMP Snooping Table window

The user may search the IGMP Snooping Group Table by VLAN Name by entering it in the top left hand corner and clicking **Search**.

The following field can be set:

Parameter	Description
VLAN Name	The VLAN Name of the multicast group.
Multicast Group	The IP address of the multicast group.
MAC Address	The MAC address of the multicast group.
Reports	The total number of reports received for this group.
Port Member	These are the ports where the IGMP packets were snooped are displayed.



NOTE: To configure IGMP snooping for the xStack family of switches, go to the **Configuration** folder and select **IGMP Snooping**. Configuration and other information concerning IGMP snooping may be found in Section 6 of this manual under **IGMP Snooping**.

IGMP Snooping Forwarding

This window will display the current IGMP snooping forwarding table entries currently configured on the Switch. To view the following screen, open the **Monitoring** folder and click the **IGMP Snooping Forwarding** link.

VLAN Name : <input type="text"/> Search		
Total Entries : 0		
IGMP Snooping Forwarding Table		
VLAN ID	Source IP	Multicast Group
0	0.0.0.0	0.0.0.0
Unit	Port Member	
15		
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		
11		
12		

Figure 7- 21. IGMP Snooping Forwarding Table

The user may search the **IGMP Snooping Forwarding Table** by VLAN Name using the top left hand corner **Search**.

The following field can be viewed:

Parameter	Description
VLAN Name	The VLAN Name of the multicast group.
Source IP	The Source IP address of the multicast group.
Multicast Group	The IP address of the multicast group.
Port Map	These are the ports where the IP multicast packets are being forwarded to.

VLAN Status

This window displays the status of VLANs on any Switch in a Switch stack managed by a DGS-3212SR.

Total VLAN Entries: 1																									
VLAN Status																									
VLAN ID	VLAN Name															VLAN Type	Advertisement								
1	default															static	Enabled								
Units	Ports																								
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25
	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50
15	E-	ET	E-	E-	ET	ET	ET	ET	E-	E-	E-	E-													
1	- Non_Stacking Module -																								
2	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-
	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	ET
3	- Non_Stacking Module -																								
4	- Non_Stacking Module -																								
5	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-	E-
	ET	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--
6	- No Stacking Device Attached -																								
7	- No Stacking Device Attached -																								
8	- No Stacking Device Attached -																								
9	- Non_Stacking Module -																								
10	- Non_Stacking Module -																								
11	- Non_Stacking Module -																								
12	- Non_Stacking Module -																								

Figure 7- 22. VLAN Status window

Router Port


This displays which of the Switch's ports are currently configured as router ports. A router port configured by a user (using the console or Web-based management interfaces) is displayed as a static router port, designated by S. A router port that is dynamically configured by the Switch is designated by D.

Browse Router Port																									
VLAN ID													VLAN Name												
1													default												
Units	Ports																								
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25
	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50
15																									
1																									
2																									
3																									
4																									
5																									
6																									
7																									
8																									
9																									
10																									
11																									
12																									

Figure 7- 23. Browse Router Port window

Session Table

This window displays the management sessions since the Switch was last rebooted.

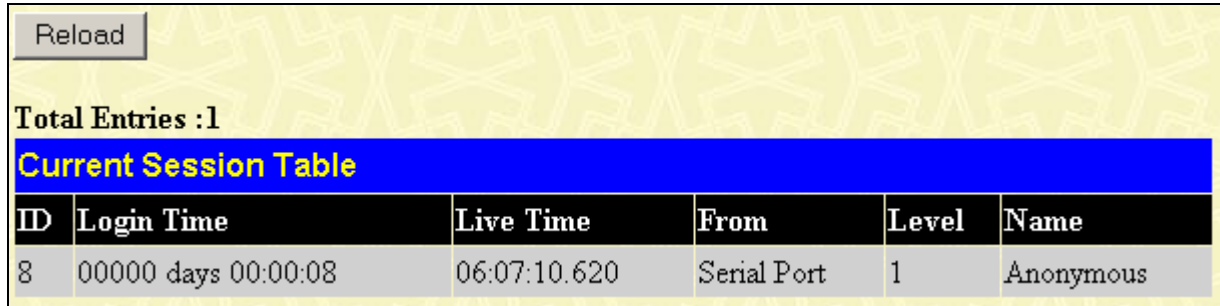

The screenshot shows a window titled "Current Session Table" with a "Reload" button in the top left corner. Below the button, it says "Total Entries :1". The table has six columns: ID, Login Time, Live Time, From, Level, and Name. There is one row of data with the following values: ID 8, Login Time 00000 days 00:00:08, Live Time 06:07:10.620, From Serial Port, Level 1, and Name Anonymous.

ID	Login Time	Live Time	From	Level	Name
8	00000 days 00:00:08	06:07:10.620	Serial Port	1	Anonymous

Figure 7- 24. Current Session Table window

Section 8

Maintenance

TFTP Services

PING Test

Save Changes

Factory Reset

Restart System


Logout

TFTP Services

Trivial File Transfer Protocol (TFTP) services allow the Switch firmware to be upgraded by transferring a new firmware file from a TFTP server to the Switch. A configuration file can also be loaded into the Switch from a TFTP server, Switch settings can be saved to the TFTP server, and a history log can be uploaded from the Switch to the TFTP server.

Download Firmware

To update the Switch's firmware, click on the **Maintenance** folder and then the **TFTP Services** folder and then the **Download Firmware** link:

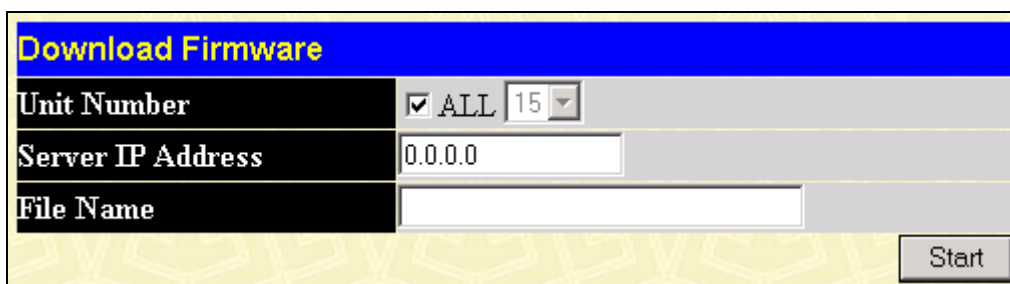

Download Firmware	
Unit Number	<input checked="" type="checkbox"/> ALL 15
Server IP Address	0.0.0.0
File Name	
<input type="button" value="Start"/>	

Figure 8- 1. Download Firmware window

Use the Unit Number drop-down menu to select which Switch of a Switch stack on which you want to update the firmware. This allows the selection of a particular Switch from a Switch stack if you have installed the optional stacking module and have properly interconnected the Switches. The number 15 indicates a Switch in standalone mode.

Enter the IP address of the TFTP server in the Server IP Address field.


The TFTP server must be on the same IP subnet as the Switch.

Enter the path and the filename to the firmware file on the TFTP server. The TFTP server must be running TFTP server software to perform the file transfer. TFTP server software is a part of many network management software packages – such as NetSight, or can be obtained as a separate program.

Click **Start** to record the IP address of the TFTP server.

Download Configuration File

To download a configuration file from a TFTP server, click on the **Maintenance** folder and then the **TFTP Service** folder and then the **Download Configuration File** link:

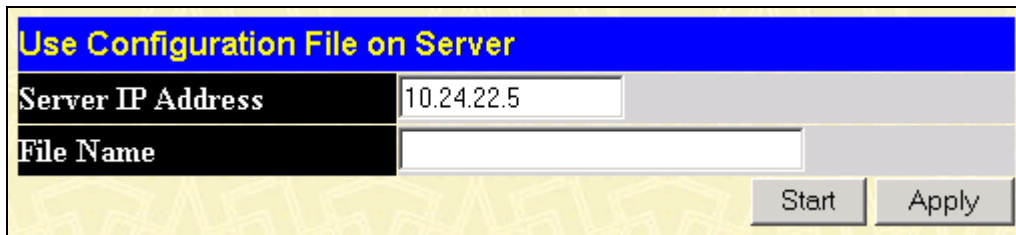

Use Configuration File on Server	
Server IP Address	10.24.22.5
File Name	
Start Apply	

Figure 8- 2. Use Configuration File on Server window


Enter the IP address of the TFTP server and specify the location of the Switch configuration file on the TFTP server.

Click **Apply** to record the IP address of the TFTP server.

Click **Start** to initiate the file transfer.

Upload Configuration

To upload the Switch settings to a TFTP server, click on the **Maintenance** folder and then the **TFTP Service** folder and then the **Save Settings** link:

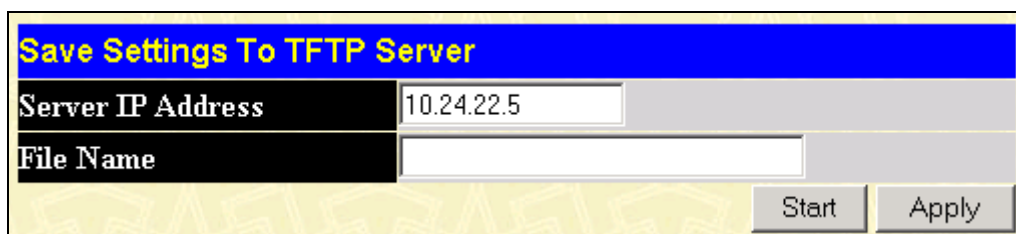

Save Settings To TFTP Server	
Server IP Address	10.24.22.5
File Name	
Start Apply	


Figure 8- 3. Save Settings to TFTP Server window

Enter the IP address of the TFTP server and the path and filename for the history log on the TFTP server. Click **Apply** to make the changes current.

Click **Start** to initiate the file transfer.

Upload Log

To upload the Switch history log file to a TFTP server, click on the **Maintenance** folder and then the **TFTP Service** folder and then the **Save History Log** link:

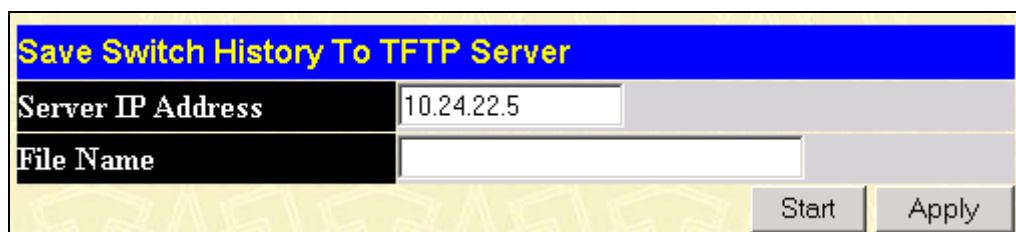

Save Switch History To TFTP Server	
Server IP Address	10.24.22.5
File Name	
Start Apply	

Figure 8- 4. Save Switch History To TFTP Server window

Enter the IP address of the TFTP server and the path and filename for the history log on the TFTP server. Click **Apply** to make the changes current.

Click **Start** to initiate the file transfer

Ping Test

PING is a small program that sends data packets to the IP address you specify. The destination node then returns the packets to the Switch. This is very useful to verify connectivity between the Switch and other nodes on the network.

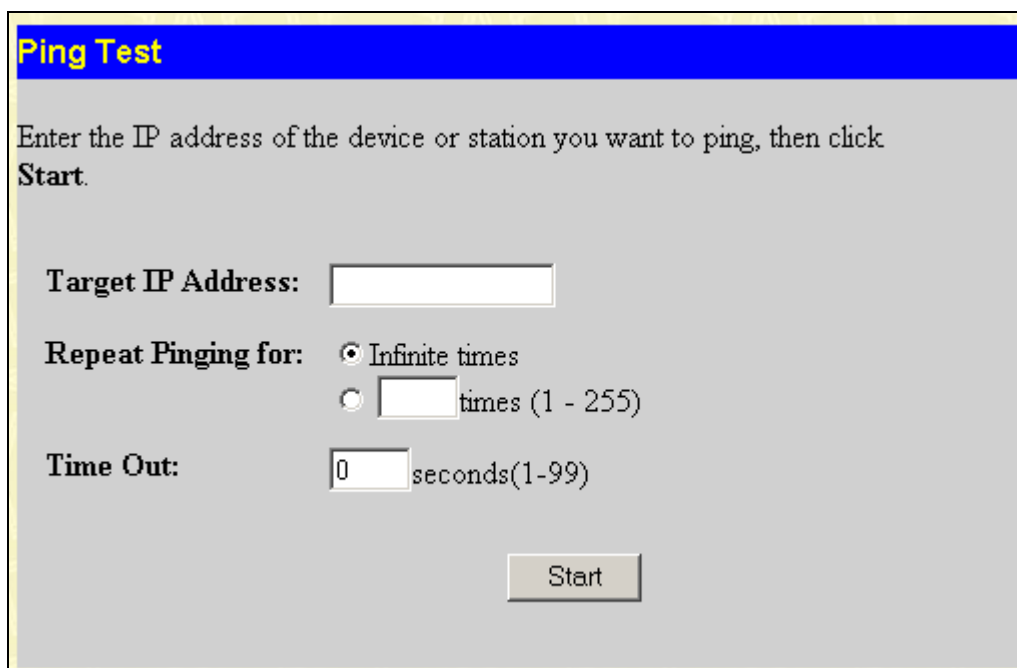


Figure 8- 5. Ping Test window

The Infinite times checkbox, in the Repeat Pinging for field, tells PING to keep sending data packets to the specified IP address until the program is stopped.

Save Changes

The DGS-3212SR has two levels of memory; normal RAM and non-volatile or NV-RAM. Configuration changes are made effective clicking the **Apply** button. When this is done, the settings will be immediately applied to the Switching software in RAM, and will immediately take effect.

Some settings, though, require you to restart the Switch before they will take effect. Restarting the Switch erases all settings in RAM and reloads the stored settings from the NV-RAM. Thus, it is necessary to save all setting changes to NV-RAM before rebooting the Switch.

To retain any configuration changes permanently, click the **Save Configuration** button in window below.

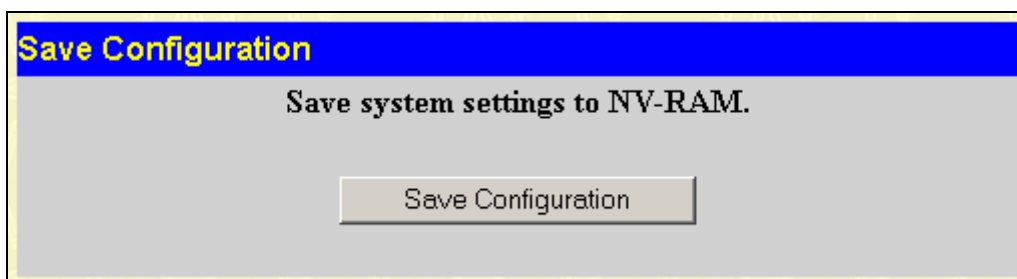


Figure 8- 6. Save Configuration window

Once the Switch configuration settings have been saved to NV-RAM, they become the default settings for the Switch. These settings will be used every time the Switch is rebooted.

Factory Reset

The Factory Reset function has several options when resetting the Switch. Some of the current configuration parameters can be retained while resetting all other configuration parameters to their factory defaults.

Please note that the Reset System option will enter the factory default parameters into the Switch's non-volatile RAM, and then restart the Switch. All other options enter the factory defaults into the current configuration, but do not save this configuration. Reset System will return the Switch's configuration to the state it was when it left the factory.

Reset gives the option of retaining the Switch's User Accounts and History Log while resetting all other configuration parameters to their factory defaults. If the Switch is reset with this option enabled, and Save Changes is not executed, the Switch will return to the last saved configuration when rebooted.

The Reset Config option will reset all of the Switch's configuration parameters to their factory defaults, without saving these default values to the Switch's non-volatile RAM. If the Switch is reset with this option enabled, and Save Changes is not executed, the Switch will return to the last saved configuration when rebooted.

In addition, the Reset System option is added to reset all configuration parameters to their factory defaults, save these parameters to the Switch's non-volatile RAM, and then restart the Switch. This option is equivalent to Reset Config (above) followed by Save Changes.

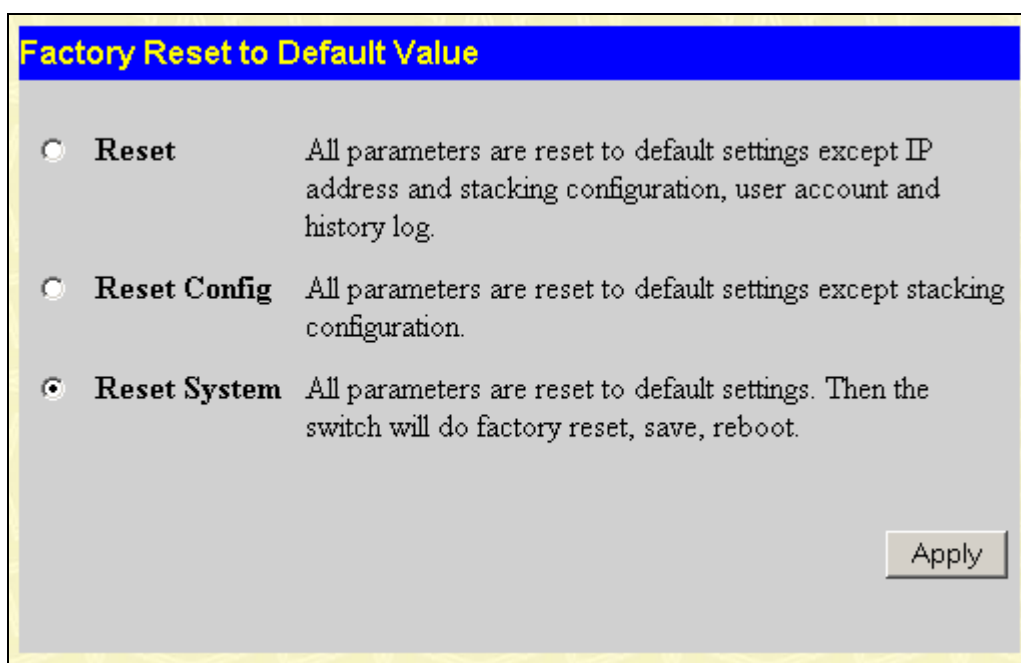


Figure 8- 7. Factory Reset to Default Value window

Restart System

The following window is used to restart the Switch.

Clicking the **Yes** click-box will instruct the Switch to save the current configuration to non-volatile RAM before restarting the Switch.

Clicking the **No** click-box instructs the Switch not to save the current configuration before restarting the Switch. All of the configuration information entered from the last time **Save Changes** was executed will be lost.

Click the **Restart** button to restart the Switch.

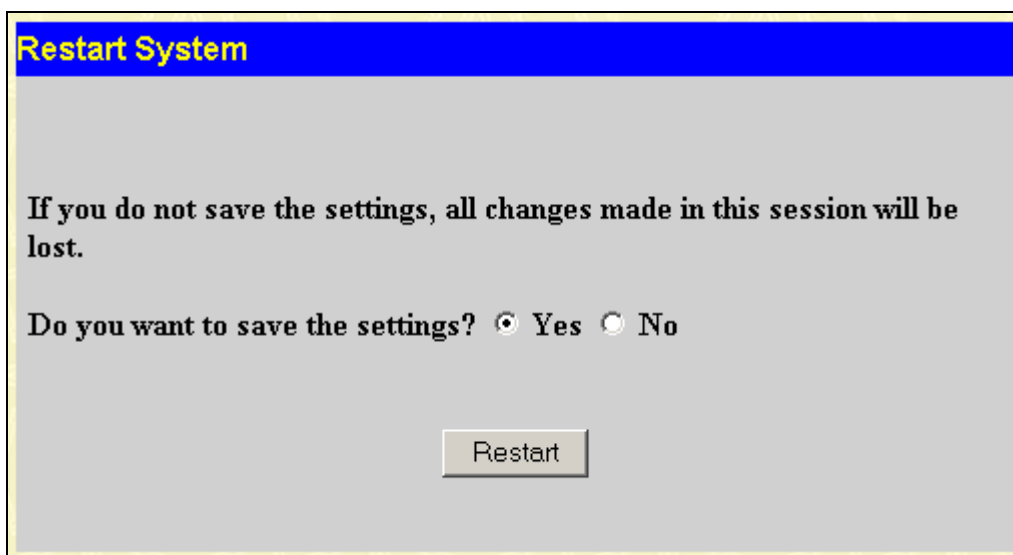


Figure 8- 8. Restart System window

Logout

Use this window to logout of the Switch's Web-based management agent by clicking on the **Log Out** button.

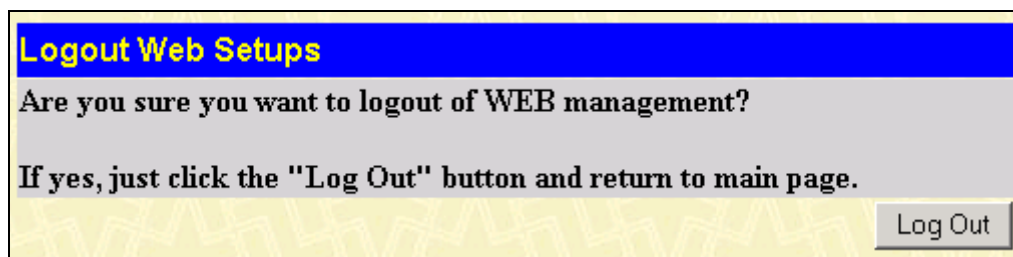


Figure 8- 9. Logout Web Setups window

Section 9

Single IP Management

SIM Settings

Topology

Firmware Upgrade

Configuration Backup/Restore

Simply put, Single IP Management is a concept that will stack switches together over Ethernet instead of using stacking ports or modules. There are some advantages to implement “Single IP Management” feature:

1. SIM can simplify management of small workgroups or wiring closets while scaling the network to handle increased bandwidth demand.
2. SIM can reduce the number of IP address needed in your network.
3. SIM can eliminate any specialized cables for stacking connectivity and remove the distance barriers that typically limit your topology options when using other stacking technology.

Switches using Single IP Management (labeled here as SIM) must conform to the following rules:

- SIM is an optional feature on the Switch and can easily be enabled or disabled through the Command Line Interface. SIM grouping has no effect on the normal operation of the Switch in the user’s network.
- There are three classifications for switches using SIM. The Commander Switch (CS), which is the master switch of the group, Member Switch (MS), which is a switch that is recognized by the CS a member of a SIM group, and a Candidate Switch (CaS), which is a Switch that has a physical link to the SIM group but has not been recognized by the CS as a member of the SIM group.
- A SIM group can only have one Commander Switch (CS).
- All switches in a particular SIM group must be in the same IP subnet (broadcast domain). Members of a SIM group cannot cross a router.
- A SIM group accepts up to 32 switches (numbered 0-31), including the Commander Switch (numbered 0).
- There is no limit to the number of SIM groups in the same IP subnet (broadcast domain), however a single switch can only belong to one group.
- If multiple VLANs are configured, the SIM group will only utilize the default VLAN on any switch.
- SIM allows intermediate devices that do not support SIM. This enables the user to manage a switch that is more than one hop away from the CS.

The SIM group is a group of switches that are managed as a single entity. The DGS-3212SR may take on three different roles:

→ **Commander Switch (CS)** – This is a switch that has been manually configured as the controlling device for a group, and takes on the following characteristics:

It has an IP Address.

It is not a command switch or member switch of another Single IP group.

It is connected to the member switches through its management VLAN.

→ **Member Switch (MS)** – This is a switch that has joined a single IP group and is accessible from the CS, and it takes on the following characteristics:

It is not a CS or MS of another IP group.

It is connected to the CS through the CS management VLAN.

→ **Candidate Switch (CaS)** – This is a switch that is ready to join a SIM group but is not yet a member of the SIM group. The Candidate Switch may join the SIM group through an automatic function of the DGS-3212SR, or by manually configuring it to be a MS of a SIM group. A switch configured as a CaS is not a member of a SIM group and will take on the following characteristics:

It is not a CS or MS of another Single IP group.

It is connected to the CS through the CS management VLAN

The following rules also apply to the above roles:

- Each device begins in a Commander state.
- CS's must change their role to CaS and then to MS, to become a MS of a SIM group. Thus the CS cannot directly be converted to a MS.
- The user can manually configure a CS to become a CaS.

A MS can become a CaS by:

- Being configured as a CaS through the CS.
- If report packets from the CS to the MS time-out.
- The user can manually configure a CaS to become a CS
- The CaS can be configured through the CS to become a MS.

After configuring one switch to operate as the CS of a SIM group, additional DGS-3212SR switches may join the group either by an automatic method or by manually configuring the Switch to be a MS. The CS will then serve as the in band entry point for access to the MS. The CS's IP address will become the path to all MS's of the group and the CS's Administrator's password, and/or authentication will control access to all MS's of the SIM group.

With SIM enabled, the applications in the CS will redirect the packet instead of executing the packets. The applications will decode the packet from the administrator, modify some data, and then send it to the MS. After execution, the CS may receive a response packet from the MS, which it will encode and send it back to the administrator.

When a CaS becomes a MS, it automatically becomes a member of the first SNMP community (include read/write and read only) to which the CS belongs. However, if a MS has its own IP address, it can belong to SNMP communities to which other switches in the group, including the CS, do not belong.

All DGS-3212SR switches are set as Candidate (CaS) switches, as their factory default configuration and the Single IP Management feature will be disabled. To enable SIM for the Switch using the Web interface, go to the **Single IP Management** folder and click the **SIM Settings** link, revealing the following window.

SIM Settings

The DGS-3212SR is set as a Candidate (CaS) switch as its factory default configuration and Single IP Management will be disabled. To enable SIM for the Switch using the Web interface, go to the **Single IP Management** folder and click the **SIM Settings** link, revealing the following window.

The screenshot shows the 'SIM Settings' window. At the top, there is a blue header with the text 'SIM Settings'. Below the header, there is a row with 'SIM State' on the left and a dropdown menu showing 'Disabled' on the right. The background of the window has a light yellow pattern. In the bottom right corner, there is a grey 'Apply' button.

Figure 9- 1. SIM Settings window (disabled)

Change the SIM State to *Enabled* using the pull down menu and click **Apply**. The window will then refresh and the **SIM Settings** window will look like this:

The screenshot shows the 'SIM Settings' window after being updated. The 'SIM State' dropdown now shows 'Enabled'. Below it, there are two more rows: 'Role State' with a dropdown showing 'Commander', and 'Discovery Interval' with a text input '60' and a range '(30..90 sec)'. Below that is 'Holdtime' with a text input '180' and a range '(100..255 sec)'. The 'Apply' button is still present in the bottom right corner.

Figure 9- 2. SIM Settings window (enabled)

The following parameters can be set:

Parameters	Description
SIM State	Use the pull down menu to either enable or disable the SIM state on the Switch. <i>Disabled</i> will render all SIM functions on the Switch inoperable.
Role State	Use the pull down menu to change the SIM role of the Switch. The two choices are: <i>Candidate</i> - A Candidate Switch (CaS) is not the member of a SIM group but is connected to a Commander Switch. This is the default setting for the SIM role of the DGS-3212SR. <i>Commander</i> - Choosing this parameter will make the Switch a Commander Switch (CS). The user may join other switches to this Switch, over Ethernet, to be part of its SIM group. Choosing this option will also enable the Switch to be configured for SIM.
Discovery Interval	The user may set the discovery protocol interval, in seconds, that the Switch will send out discovery packets. Returning information to a Commander Switch will include information about other switches connected to it. (Ex. MS, CaS). The user may set the Discovery Interval from 30 to 90 seconds.
Holdtime	This parameter may be set for the time, in seconds, the Switch will hold information sent to it from other switches, utilizing the Discovery Interval. The user may set the hold time from 100 to 255 seconds.

Click **Apply** to implement the settings changed.

After enabling the Switch to be a Commander Switch (CS), the **Single IP Management** folder will then contain three added links to aid the user in configuring SIM through the web, including **Topology**, **Firmware Upgrade** and **Configuration Backup/Restore**.

Topology

The **Topology** window will be used to configure and manage the Switch within the SIM group and requires Java script to function properly on your computer. The following message should appear the first time the user clicks the **Topology** link in the **Single IP Management** folder.

It is necessary to setup your Java Runtime Environment to v1.4.2 to view the topology.
Click [here](#) to link to the topology page and it will setup your Java Runtime Environment automatically.

Figure 9- 3. Java window

Clicking the [here](#) link will setup the Java Runtime Environment on your server and lead you to the topology window, as seen below.

Device name	Local port	Speed	Remote port	Mac Address	Model name
(default:12-00-20)	-	-	-	00-00-33-12-00-20	DGS-3212SR L2 Switch
(default:01-01-00)	23	100-Half	1	00-06-01-01-01-00	DGS-3324SR L3 Switch
(default:19-27-30)	9	Gigabit-Full	13	1a-2b-3c-19-27-30	DGS-3324SR L3 Switch
(default:01-02-03)	26	Gigabit-Full	50	1a-2b-bc-01-02-03	DXS-3326GSR L3 Switch
(default:86-71-76)	31	100-Full	13	00-0f-3d-86-71-76	DES-3550 L2 Switch

Figure 9- 4. Single IP Management window-Tree View

The **Tree View** window holds the following information under the Data tab:

Parameter	Description
Device Name	This field will display the Device Name of the Switches in the SIM group configured by the user. If no Device Name is configured by the name, it will be given the name default and tagged with the last six digits of the MAC Address to identify it.
Local Port	Displays the number of the physical port on the CS that the MS or CaS is connected to. The CS will have no entry in this field.

Speed	Displays the connection speed between the CS and the MS or CaS.
Remote Port	Displays the number of the physical port on the MS or CaS that the CS is connected to. The CS will have no entry in this field.
MAC Address	Displays the MAC Address of the corresponding Switch.
Model Name	Displays the full Model Name of the corresponding Switch.

To view the **Topology Map**, click the **View** menu in the toolbar and then **Topology**, which will produce the following screen. The Topology View will refresh itself periodically (20 seconds by default).

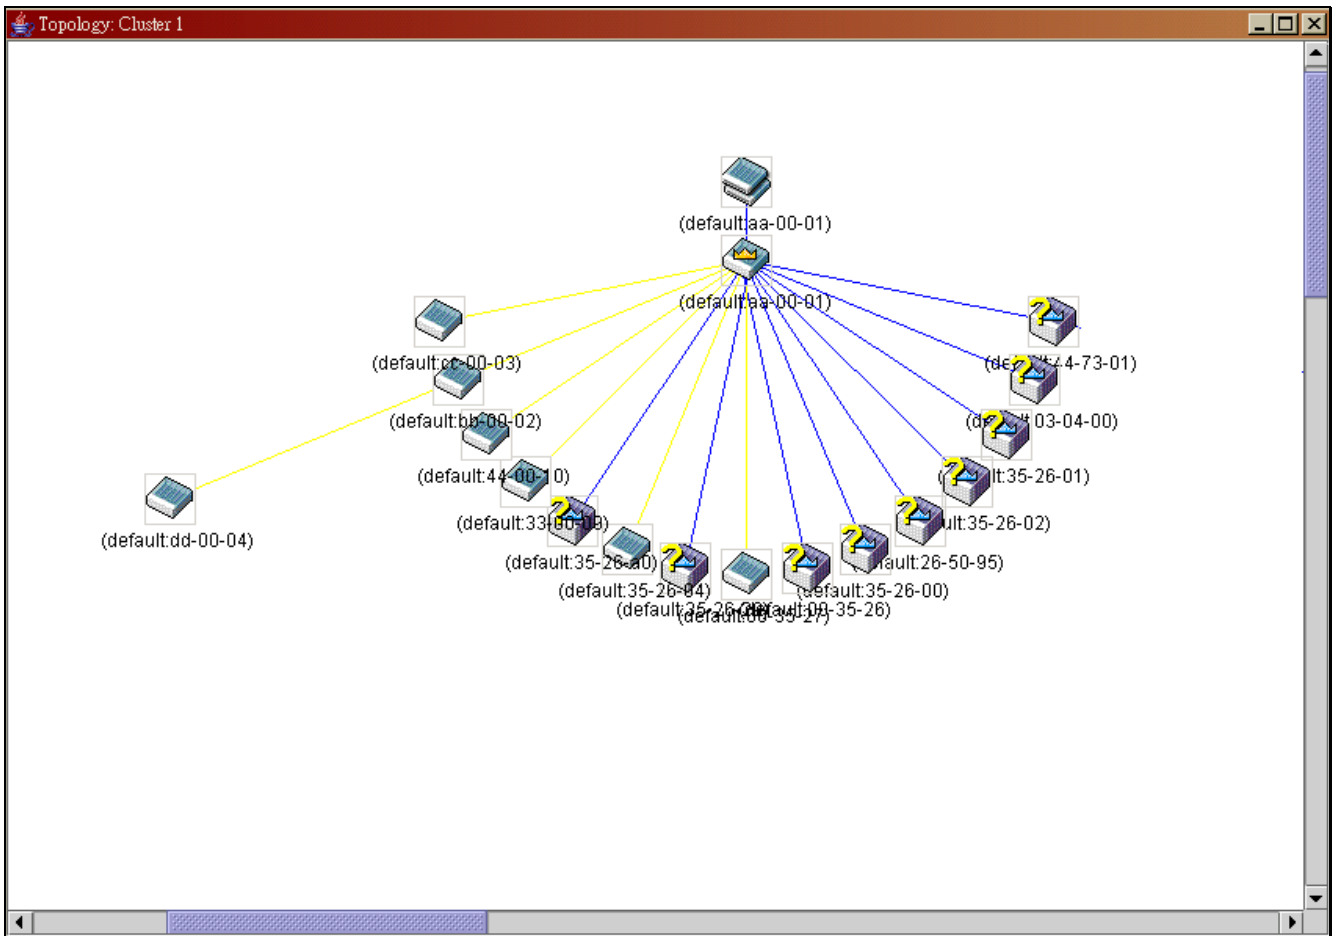










Figure 9- 5. Topology view

This screen will display how the devices within the Single IP Management Group are connected to other groups and devices. Possible icons in this screen are as follows:

Icon	Description
	Group
	Layer 2 commander switch
	Layer 3 commander switch

	Commander switch of other group
	Layer 2 member switch
	Layer 3 member switch
	Member switch of other group
	Layer 2 candidate switch
	Layer 3 candidate switch
	Unknown device
	Non-SIM devices

Tool Tips

In the Topology view window, the mouse plays an important role in configuration and in viewing device information. Setting the mouse cursor over a specific device in the topology window (tool tip) will display the same information about a specific device as the Tree view does. See the window below for an example.

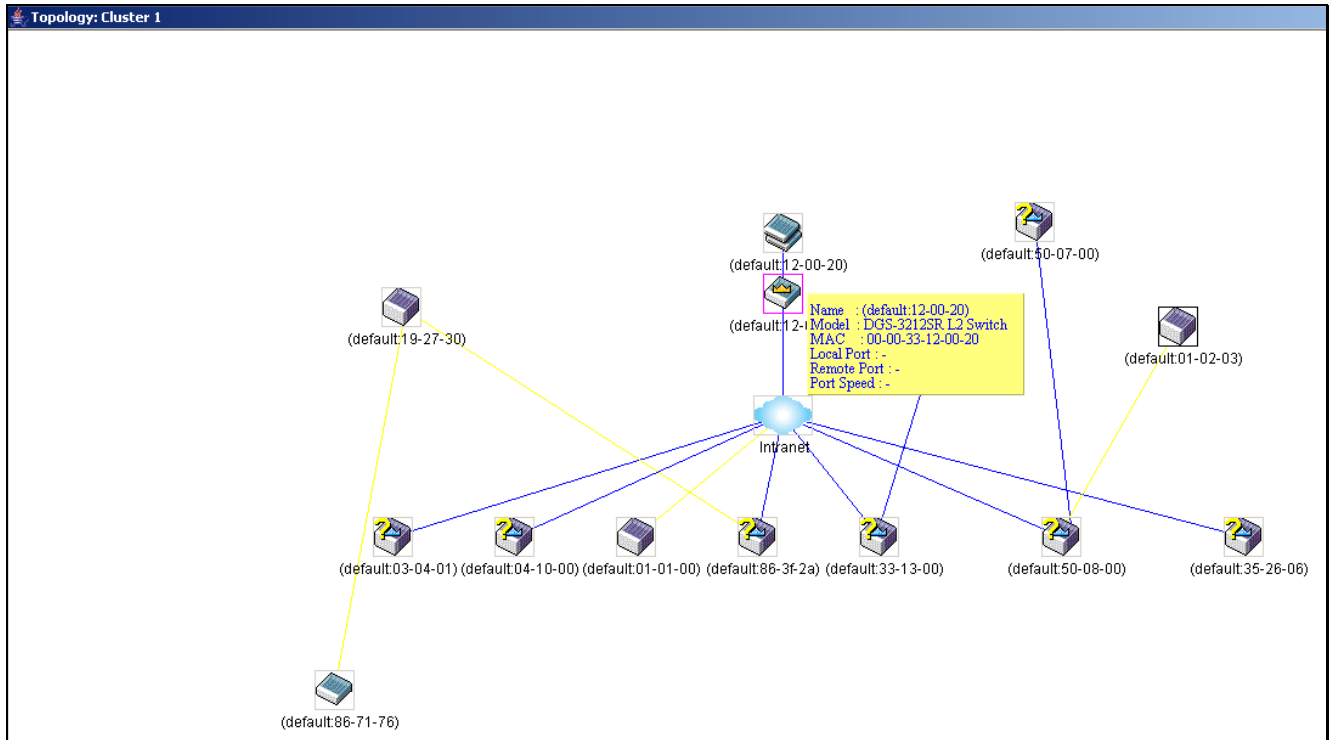


Figure 9- 6. Device Information Utilizing the Tool Tip

Setting the mouse cursor over a line between two devices will display the connection speed between the two devices, as shown below.

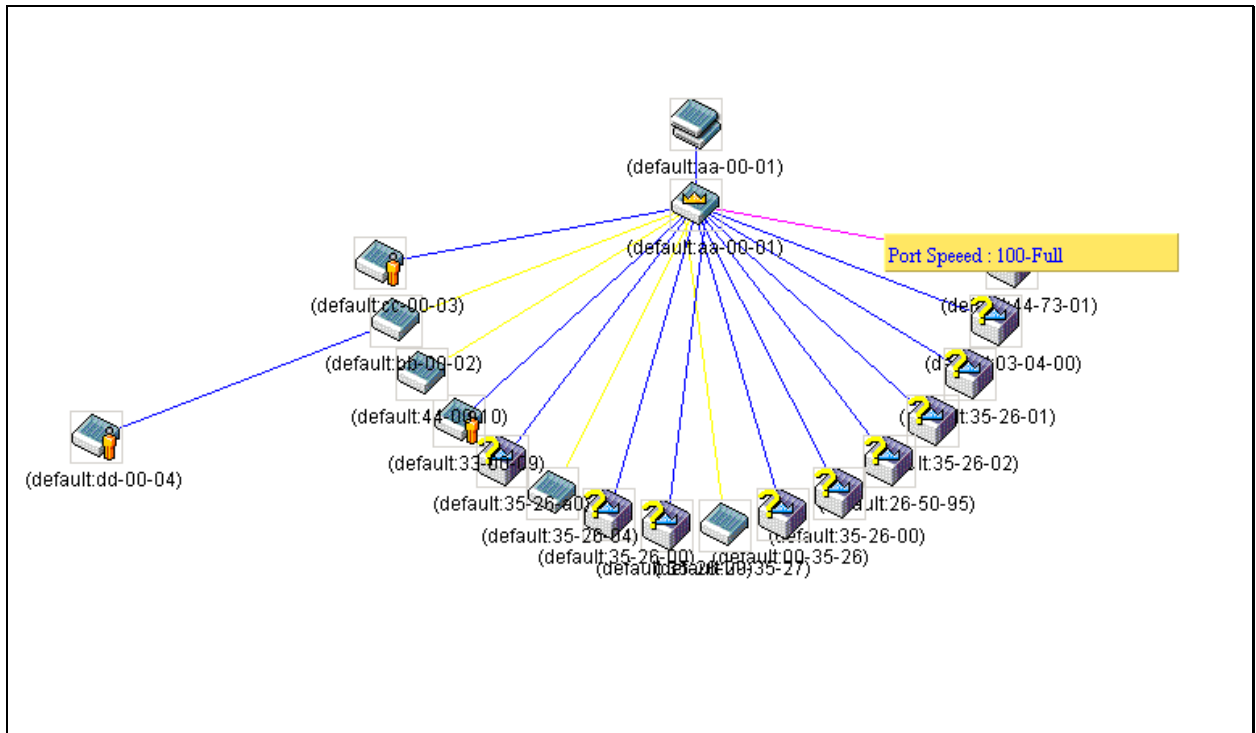


Figure 9- 7. Port Speed Utilizing the Tool Tip

Right-click

Right-clicking on a device will allow the user to perform various functions, depending on the role of the Switch in the SIM group and the icon associated with it.

Group Icon

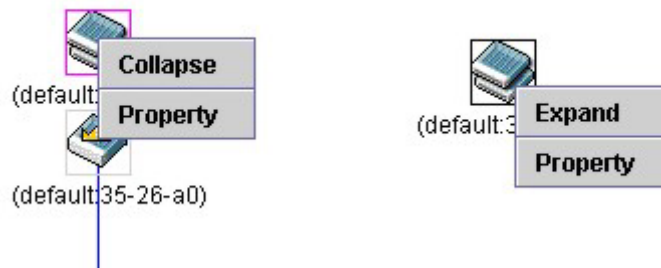


Figure 9- 8. Right-clicking a Group Icon

The following options may appear for the user to configure:

- **Collapse** - To collapse the group that will be represented by a single icon.
- **Expand** - To expand the SIM group, in detail.
- **Property** - To pop up a window to display the group information.

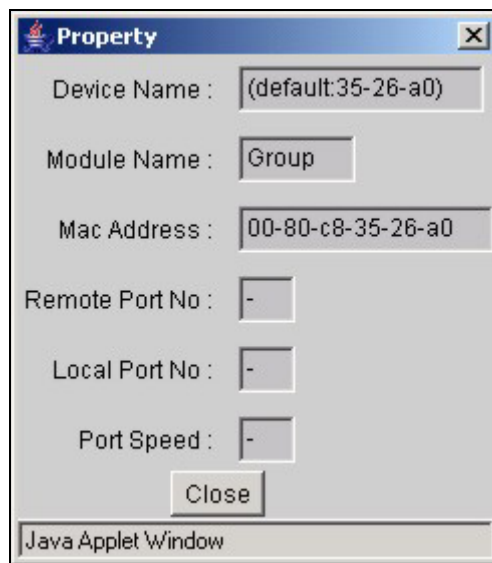


Figure 9- 9. Property dialog box

This window holds the following information:

Parameter	Description
Device Name	This field will display the Device Name of the Switches in the SIM group configured by the user. If no Device Name is configured by the name, it will be given the name default and tagged with the last six digits of the MAC Address to identify it.
Module Name	Displays the full module name of the Switch that was right-clicked.
MAC Address	Displays the MAC Address of the corresponding Switch.

Remote Port No.	Displays the number of the physical port on the MS or CaS that the CS is connected to. The CS will have no entry in this field.
Local Port No.	Displays the number of the physical port on the CS that the MS or CaS is connected to. The CS will have no entry in this field.
Port Speed	Displays the connection speed between the CS and the MS or CaS

Commander Switch Icon

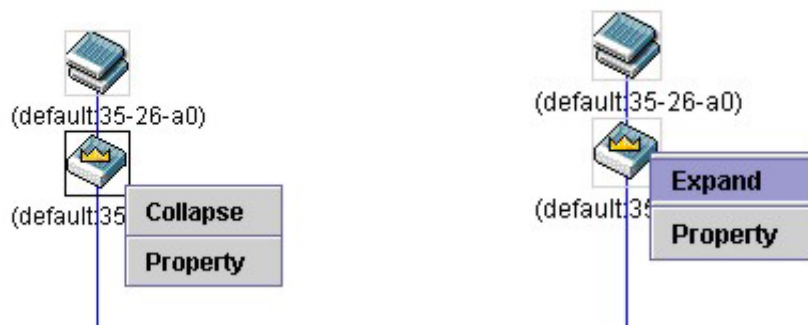


Figure 9-10. Right-clicking a Commander Icon

The following options may appear for the user to configure:

- **Collapse** - To collapse the group that will be represented by a single icon.
- **Expand** - To expand the SIM group, in detail.
- **Property** - To pop up a window to display the group information.



Figure 9-11. Property dialog box

Member Switch Icon

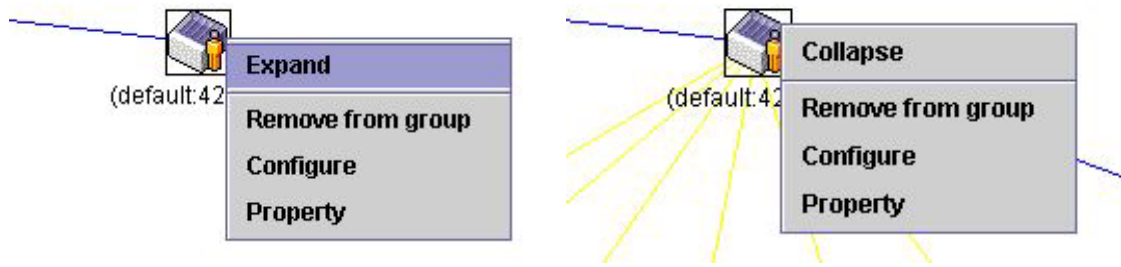


Figure 9- 12. Right-clicking a Member icon

The following options may appear for the user to configure:

- **Collapse** - To collapse the group that will be represented by a single icon.
- **Expand** - To expand the SIM group, in detail.
- **Remove from group** - Remove a member from a group.
- **Configure** - Launch the web management to configure the Switch.
- **Property** - To pop up a window to display the device information.

Candidate Switch Icon

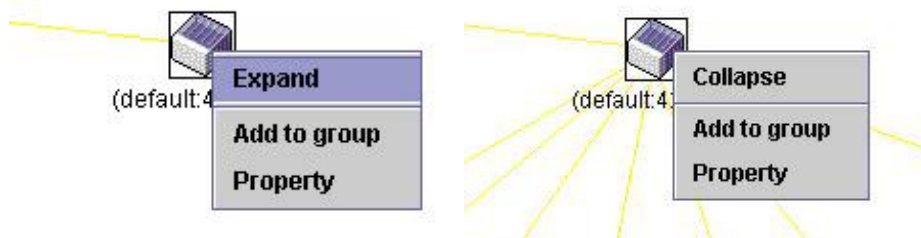


Figure 9- 13. Right-clicking a Candidate icon

The following options may appear for the user to configure:

- **Collapse** - To collapse the group that will be represented by a single icon.
- **Expand** - To expand the SIM group, in detail.
- **Add to group** - Add a candidate to a group. Clicking this option will reveal the following screen for the user to enter a password for authentication from the Candidate Switch before being added to the SIM group. Click **OK** to enter the password or **Cancel** to exit the window.

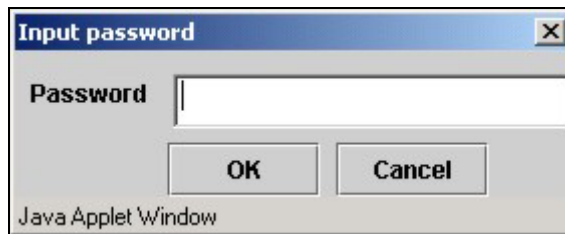


Figure 9- 14. Input Password dialog box

- **Property** - To pop up a window to display the device information, as shown below.

Menu Bar

The **Single IP Management** window contains a menu bar for device configurations, as seen below.



Figure 9- 15. Menu Bar of the Topology View

The five menus on the menu bar are as follows.

File

- **Print Setup** - Will view the image to be printed.
- **Print Topology** - Will print the topology map.
- **Preference** - Will set display properties, such as polling interval, and the views to open at SIM startup.

Group

- **Add to group** - add a candidate to a group. Clicking this option will reveal the following screen for the user to enter a password for authentication from the Candidate Switch before being added to the SIM group. Click OK to enter the password or Cancel to exit the window.

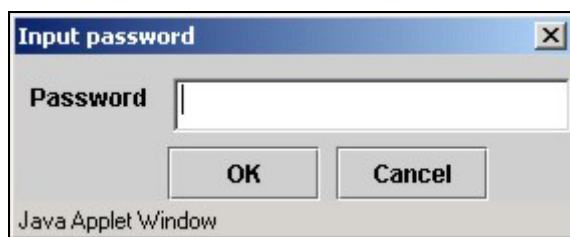


Figure 9- 16. Input Password window

- **Remove from Group** - Remove an MS from the group.

Device

- **Configure** - Will open the web manager for the specific device.

View

- **Refresh** - Update the views with the latest status.
- **Topology** - Display the Topology view.

Help

- **About** - Will display the SIM information, including the current SIM version.

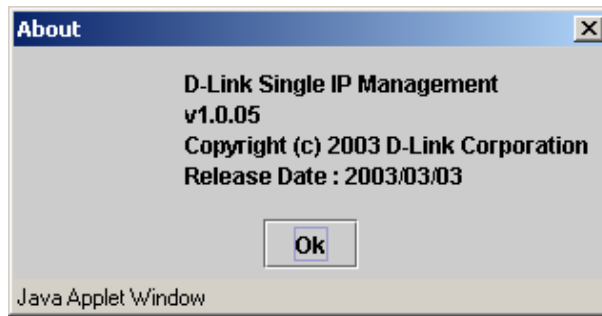


Figure 9- 17. About window



NOTE: Upon this firmware release, some functions of the SIM can only be configured through the Command Line Interface. See the **DGS-3212SR Command Line Interface Reference Manual** for more information on SIM and its configurations.

Firmware Upgrade

This screen is used to upgrade firmware from the Commander Switch to the Member Switch. Member Switches will be listed in the table and will be specified by Port (port on the CS where the MS resides), MAC Address, Model Name and Version. To specify a certain Switch for firmware download, click its corresponding check box under the Port heading. To update the firmware, enter the Server IP Address where the firmware resides and enter the Path/File name of the firmware. Click **Download** to initiate the file transfer.

Firmware Upgrade				
ID	Port	Mac Address	Model Name	Version
Server IP Address		<input type="text" value="0.0.0.0"/>		
Path \ Filename		<input type="text"/>		
				Download

Figure 9- 18. Firmware Upgrade window

Configuration File Backup/Restore

This screen is used to upgrade configuration files from the Commander Switch to the Member Switch. Member Switches will be listed in the table and will be specified by Port (port on the CS where the MS resides), MAC Address, Model Name and Version. To specify a certain Switch for upgrading configuration files, click its corresponding radio button under the Port heading. To update the configuration file, enter the Server IP Address where the firmware resides and enter the Path/File name of the firmware. Click **Download** to initiate the file transfer.

Configuration File Backup/Restore				
ID	Port	Mac Address	Model Name	Version
Server IP Address		<input type="text" value="0.0.0.0"/>		
Path \ Filename		<input type="text"/>		
				Upload Download

Figure 9- 19. Configuration File Backup/Restore window

Appendix A

Technical Specifications

General

Standard:	IEEE 802.3 10BASE-T Ethernet IEEE 802.3u 100BASE-TX Fast Ethernet IEEE 802.3ab 1000BASE-T Gigabit Ethernet IEEE 802.1 P/Q VLAN IEEE 802.3x Full-duplex Flow Control IEEE 802.3 Nway auto-negotiation
Protocols:	CSMA/CD
Data Transfer Rates:	Half-duplex Full-duplex
Ethernet	10 Mbps 20Mbps
Fast Ethernet	100Mbps 200Mbps
Gigabit Ethernet	N/A 2000Mbps
Fiber Optic	IEC 793-2:1992 Type A1a - 50/125um multimode Type A1b - 62.5/125um multimode Both types use LC optical connector
Topology:	Star
Network Cables:	UTP Cat. 5 for 100Mbps UTP Cat. 3, 4, 5 for 10Mbps EIA/TIA-568 100-ohm screened twisted-pair (STP)(100m)

Performance

Transmission Method:	Store-and-forward
RAM Buffer:	1 MB per device
Filtering Address Table:	16 K MAC address per device
Packet Filtering/ Forwarding Rate:	Full-wire speed for all connections. 148,800 pps per port (for 100Mbps) 1,488,000 pps per port (for 1000Mbps)

MAC Address Learning:	Automatic update.
Forwarding Table Age Time:	Max age: 10 - 1000000 seconds. Default = 300.

Physical & Environmental

AC Inputs:	100 - 240 VAC, 50/60 Hz (internal universal power supply)
Power Consumption:	30 watts maximum
DC Fan:	1 built-in 75 x 75 x30 mm fan
Operating Temperature:	0 to 40 degrees Celsius (32 to 104 degrees Fahrenheit)
Storage Temperature:	-25 to 55 degrees Celsius (-13 to 131 degrees Fahrenheit)
Humidity:	Operating: 5% to 95% RH, non-condensing Storage: 0% to 95% RH, non-condensing
Dimensions:	441 mm x 309 mm x 44 mm (17.36 x 12.16 x 1.73 inches), 1UHeight, 19 inch rack-mount width
Weight:	4.4 kg (9.7 lbs.)
EMI:	FCC Class A, CE Mark, C-Tick
Safety:	CSA International

Appendix B

Cables and Connectors

When connecting the Switch to another switch, a bridge or hub, a normal cable is necessary. Please review these products for matching cable pin assignment.

The following diagrams and tables show the standard RJ-45 receptacle/connector and their pin assignments.

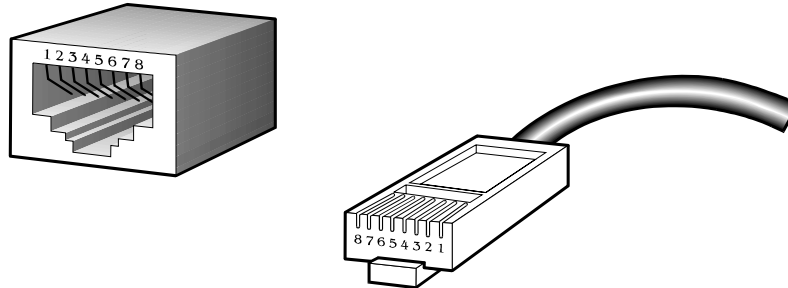


Figure B- 1. The standard RJ-45 port and connector

RJ-45 Pin Assignments		
Contact	MDI-X Port	MDI-II Port
1	RD+ (receive)	TD+ (transmit)
2	RD- (receive)	TD- (transmit)
3	TD+ (transmit)	RD+ (receive)
4	Not used	Not used
5	Not used	Not used
6	TD- (transmit)	RD- (receive)
7	Not used	Not used
8	Not used	Not used

Figure B- 2. The standard RJ-45 pin assignments

Appendix C

Cable Lengths

Use the following table to as a guide for the maximum cable lengths.

Standard	Media Type	Maximum Distance
Mini-GBIC	1000BASE-LX, Single-mode fiber module	10km
	1000BASE-SX, Multi-mode fiber module	550m
	1000BASE-LHX, Single-mode fiber module	40km
	1000BASE-ZX, Single-mode fiber module	80km
1000BASE-T	Category 5e UTP Cable	100m
	Category 5 UTP Cable (1000 Mbps)	
100BASE-TX	Category 5 UTP Cable (100 Mbps)	100m
10BASE-T	Category 3 UTP Cable (10 Mbps)	100m

Glossary

1000BASE-LX: A short laser wavelength on multimode fiber optic cable for a maximum length of 550 meters

1000BASE-SX: A long wavelength for a "long haul" fiber optic cable for a maximum length of 10 kilometers

100BASE-FX: 100Mbps Ethernet implementation over fiber.

100BASE-TX: 100Mbps Ethernet implementation over Category 5 and Type 1 Twisted Pair cabling.

10BASE-T: The IEEE 802.3 specification for Ethernet over Unshielded Twisted Pair (UTP) cabling.

aging: The automatic removal of dynamic entries from the Switch Database which have timed-out and are no longer valid.

ATM: Asynchronous Transfer Mode. A connection oriented transmission protocol based on fixed length cells (packets). ATM is designed to carry a complete range of user traffic, including voice, data and video signals.

auto-negotiation: A feature on a port which allows it to advertise its capabilities for speed, duplex and flow control. When connected to an end station that also supports auto-negotiation, the link can self-detect its optimum operating setup.

backbone port: A port which does not learn device addresses, and which receives all frames with an unknown address. Backbone ports are normally used to connect the Switch to the backbone of your network. Note that backbone ports were formerly known as designated downlink ports.

backbone: The part of a network used as the primary path for transporting traffic between network segments.

bandwidth: Information capacity, measured in bits per second, that a channel can transmit. The bandwidth of Ethernet is 10Mbps, the bandwidth of Fast Ethernet is 100Mbps.

baud rate: The switching speed of a line. Also known as line speed between network segments.

BOOTP: The BOOTP protocol allows you to automatically map an IP address to a given MAC address each time a device is started. In addition, the protocol can assign the subnet mask and default gateway to a device.

bridge: A device that interconnects local or remote networks no matter what higher level protocols are involved. Bridges form a single logical network, centralizing network administration.

broadcast: A message sent to all destination devices on the network.

broadcast storm: Multiple simultaneous broadcasts that typically absorb available network bandwidth and can cause network failure.

console port: The port on the Switch accepting a terminal or modem connector. It changes the parallel arrangement of data within computers to the serial form used on data transmission links. This port is most often used for dedicated local management.

CSMA/CD: Channel access method used by Ethernet and IEEE 802.3 standards in which devices transmit only after finding the data channel clear for some period of time. When two devices transmit simultaneously, a collision occurs and the colliding devices delay their retransmissions for a random amount of time.

data center switching: The point of aggregation within a corporate network where a switch provides high-performance access to server farms, a high-speed backbone connection and a control point for network management and security.

Ethernet: A LAN specification developed jointly by Xerox, Intel and Digital Equipment Corporation. Ethernet networks operate at 10Mbps using CSMA/CD to run over cabling.

Fast Ethernet: 100Mbps technology based on the Ethernet/CD network access method.

Flow Control: (IEEE 802.3z) A means of holding packets back at the transmit port of the connected end station. Prevents packet loss at a congested switch port.

forwarding: The process of sending a packet toward its destination by an internetworking device.

full duplex: A system that allows packets to be transmitted and received at the same time and, in effect, doubles the potential throughput of a link.

half duplex: A system that allows packets to be transmitted and received, but not at the same time. Contrast with full duplex.

IP address: Internet Protocol address. A unique identifier for a device attached to a network using TCP/IP. The address is written as four octets separated with full-stops (periods), and is made up of a network section, an optional subnet section and a host section.

IPX: Internetwork Packet Exchange. A protocol allowing communication in a NetWare network.

LAN - Local Area Network: A network of connected computing resources (such as PCs, printers, servers) covering a relatively small geographic area (usually not larger than a floor or building). Characterized by high data rates and low error rates.

latency: The delay between the time a device receives a packet and the time the packet is forwarded out of the destination port.

line speed: See baud rate.

main port: The port in a resilient link that carries data traffic in normal operating conditions.

MDI - Medium Dependent Interface: An Ethernet port connection where the transmitter of one device is connected to the receiver of another device.

MDI-X - Medium Dependent Interface Cross-over: An Ethernet port connection where the internal transmit and receive lines are crossed.

MIB - Management Information Base: Stores a device's management characteristics and parameters. MIBs are used by the Simple Network Management Protocol (SNMP) to contain attributes of their managed systems. The Switch contains its own internal MIB.

multicast: Single packets copied to a specific subset of network addresses. These addresses are specified in the destination-address field of the packet.

protocol: A set of rules for communication between devices on a network. The rules dictate format, timing, sequencing and error control.

resilient link: A pair of ports that can be configured so that one will take over data transmission should the other fail. See also main port and standby port.

RJ-45: Standard 8-wire connectors for IEEE 802.3 10BASE-T networks.

RMON: Remote Monitoring. A subset of SNMP MIB II that allows monitoring and management capabilities by addressing up to ten different groups of information.

RPS - Redundant Power System: A device that provides a backup source of power when connected to the Switch.

server farm: A cluster of servers in a centralized location serving a large user population.

SLIP - Serial Line Internet Protocol: A protocol which allows IP to run over a serial line connection.

SNMP - Simple Network Management Protocol: A protocol originally designed to be used in managing TCP/IP internets. SNMP is presently implemented on a wide range of computers and networking equipment and may be used to manage many aspects of network and end station operation.

Spanning Tree Protocol (STP): A bridge-based system for providing fault tolerance on networks. STP works by allowing you to implement parallel paths for network traffic, and ensure that redundant paths are disabled when the main paths are operational and enabled if the main paths fail.

stack: A group of network devices that are integrated to form a single logical device.

standby port: The port in a resilient link that will take over data transmission if the main port in the link fails.

switch: A device which filters, forwards and floods packets based on the packet's destination address. The switch learns the addresses associated with each switch port and builds tables based on this information to be used for the Switching decision.

TCP/IP: A layered set of communications protocols providing Telnet terminal emulation, FTP file transfer, and other services for communication among a wide range of computer equipment.

telnet: A TCP/IP application protocol that provides virtual terminal service, letting a user log in to another computer system and access a host as if the user were connected directly to the host.

TFTP - Trivial File Transfer Protocol: Allows you to transfer files (such as software upgrades) from a remote device using your switch's local management capabilities.

UDP - User Datagram Protocol: An Internet standard protocol that allows an application program on one device to send a datagram to an application program on another device.

VLAN - Virtual LAN: A group of location- and topology-independent devices that communicate as if they are on a common physical LAN.

VLT - Virtual LAN Trunk: A Switch-to-Switch link which carries traffic for all the VLANs on each Switch.

VT100: A type of terminal that uses ASCII characters. VT100 screens have a text-based appearance.

International Offices

U.S.A

17595 Mt. Herrmann Street
Fountain Valley, CA. 92708
TEL: 714-885-6000
Fax 866-743-4905
URL: www.dlink.com

Canada

2180 Winston Park Drive
Oakville, Ontario, L6H 5W1
Canada
TEL: 1-905-8295033
FAX: 1-905-8295223
URL: www.dlink.ca

Europe (U. K.)

4th Floor, Merit House
Edgware Road, Colindale
London NW9 5AB
U.K.
TEL: 44-20-8731-5555
FAX: 44-20-8731-5511
URL: www.dlink.co.uk

Germany

Schwalbacher Strasse 74
D-65760 Eschborn
Germany
TEL: 49-6196-77990
FAX: 49-6196-7799300
URL: www.dlink.de

France

Le Florilege #.2, Allee de la Fresnerie
78330 Fontenay le Fleury
France
TEL: 33-1-30238688
FAX: 33-1-30238689
URL: www.dlink-france.fr

Netherlands

Weena 290
3012 NJ Rotterdam
Netherlands
Tel: +31-10-282-1445
Fax: +31-10-282-1331
URL: www.dlink-benelux.com

Belgium

Rue des Colonies 11
B-1000 Brussels
Belgium
Tel: +32(0)2 517 7111
Fax: +32(0)2 517 6500
URL: www.dlink-benelux.com

Italy

Via Nino Bonnet n. 6/b
20154 – Milano,
Italy
TEL: 39-02-2900-0676
FAX: 39-02-2900-1723
URL: www.dlink.it

Sweden

P.O. Box 15036, S-167 15 Bromma
Sweden
TEL: 46-(0)8564-61900
FAX: 46-(0)8564-61901
URL: www.dlink.se

Denmark

Naverland 2, DK-2600
Glostrup, Copenhagen,
TEL: 45-43-969040
FAX: 45-43-424347
URL: www.dlink.dk

Norway

Karihaugveien 89
1086 Oslo
Norway
TEL: 47-23-897189
FAX: 47-22-309085
URL: www.dlink.no

Finland

Pakkalankuja 7A
01510 Vantaa,
Finland
TEL: +358-9-2707 5080
FAX: +358-9-2707 5081
URL: www.dlink.fi

Iberia

C/Sabino De Arana,
56 Bajos
08028 Barcelona
TEL: 34 93 4090770
FAX: 34 93 4910795
URL: www.dlinkiberia.es

Singapore

1 International Business Park
#03-12 The Synergy
Singapore 609917
TEL: 65-6774-6233
FAX: 65-6774-6322
URL: www.dlink-intl.com

Australia

1 Giffnock Avenue,
North Ryde, NSW 2113
Australia
TEL: 61-2-8899-1800
FAX: 61-2-8899-1868
URL: www.dlink.com.au

India

D-Link House, Kurla Bandra Complex Road,
Off CST Road, Santacruz (East), Mumbai - 400098.
India
TEL: 91-022-26526696/56902210
FAX: 91-022-26528914
URL: www.dlink.co.in

Middle East (Dubai)

P.O.Box: 500376
Office No.:103, Building:3
Dubai Internet City
Dubai, United Arab Emirates
Tel:+971-4-3916480
Fax:+971-4-3908881
URL: www.dlink-me.com

Turkey

Regus Offices
Beybi Giz Plaza, Ayazaga Mah. Meydan Sok. No:28
Maslak 34396, Istanbul-Turkiye
TEL: +90 212 335 2553
FAX: +90 212 335 2500
URL: www.dlink.com.tr

Egypt

19 El-Shahed Helmy, El Masri
Al-Maza, Heliopolis
Cairo, Egypt.
TEL: +202 414 4295
FAX: +202 415 6704
URL: www.dlink-me.com

Israel

11 Hamanofim Street
Ackerstein Towers, Regus Business Center
P.O.B 2148, Hertzelia-Pituach 46120.
Israel
TEL: +972-9-9715700
FAX: +972-9-9715601
URL: www.dlink.co.il

LatinAmerica

Isidora Goyechea 2934 of 702,
Las Condes
Santiago – Chile S.A.
TEL: 56-2-232-3185
FAX: 56-2-232-0923
URL: www.dlink.cl

Brasil

Av das Nacoes Unidas,
11857 - 14 - andar - cj 141/142
Brooklin Novo
Sao Paulo - SP - Brazil
CEP 04578-000
TEL: +55 11 55039320
FAX: +55 11 55039322
URL: www.dlinkbrasil.com.br

South Africa

Einstein Park II
Block B
102-106 Witch-Hazel Avenue
Highveld Technopark
Centurion
Gauteng
Republic of South Africa
TEL: 27-12-665-2165
FAX: 27-12-665-2186
URL: www.d-link.co.za

Russia

Grafsky per., 14, floor 6
Moscow
129626 Russia
TEL: 7-095-744-0099
FAX: 7-095-744-0099 #350
URL: www.dlink.ru

China

No.202,C1 Building, Huitong Office Park,
No.71, Jianguo Road, Chaoyang District, Beijing,
100025, China.
TEL +86-10-58635800
FAX: +86-10-58635799
URL: www.dlink.com.cn

Taiwan

2F, No. 119, Pao-Chung Rd.
Hsin-Tien, Taipei
Taiwan
TEL: 886-2-2910-2626
FAX: 886-2-2910-1515
URL: www.dlinktw.com.tw

Headquarters

2F, No. 233-2, Pao-Chiao Rd.
Hsin-Tien, Taipei
Taiwan
TEL: 886-2-2916-1600
FAX: 886-2-2914-6299
URL: www.dlink.com

WARRANTIES EXCLUSIVE

IF THE D-LINK PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, THE CUSTOMER'S SOLE REMEDY SHALL BE, AT D-LINK'S OPTION, REPAIR OR REPLACEMENT. THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. D-LINK NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION MAINTENANCE OR USE OF D-LINK'S PRODUCTS

D-LINK SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THAT THE ALLEGED DEFECT IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY THE CUSTOMER'S OR ANY THIRD PERSON'S MISUSE, NEGLIGENCE, IMPROPER INSTALLATION OR TESTING, UNAUTHORIZED ATTEMPTS TO REPAIR, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING OR OTHER HAZARD.

LIMITATION OF LIABILITY

IN NO EVENT WILL D-LINK BE LIABLE FOR ANY DAMAGES, INCLUDING LOSS OF DATA, LOSS OF PROFITS, COST OF COVER OR OTHER INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES ARISING OUT THE INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE OR INTERRUPTION OF A D- LINK PRODUCT, HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY. THIS LIMITATION WILL APPLY EVEN IF D-LINK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

IF YOU PURCHASED A D-LINK PRODUCT IN THE UNITED STATES, SOME STATES DO NOT ALLOW THE LIMITATION OR EXCLUSION OF LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

Limited Warranty

Hardware:

D-Link warrants each of its hardware products to be free from defects in workmanship and materials under normal use and service for a period commencing on the date of purchase from D-Link or its Authorized Reseller and extending for the length of time stipulated by the Authorized Reseller or D-Link Branch Office nearest to the place of purchase.

This Warranty applies on the condition that the product Registration Card is filled out and returned to a D-Link office within ninety (90) days of purchase. A list of D-Link offices is provided at the back of this manual, together with a copy of the Registration Card.

If the product proves defective within the applicable warranty period, D-Link will provide repair or replacement of the product. D-Link shall have the sole discretion whether to repair or replace, and replacement product may be new or reconditioned. Replacement product shall be of equivalent or better specifications, relative to the defective product, but need not be identical. Any product or part repaired by D-Link pursuant to this warranty shall have a warranty period of not less than 90 days, from date of such repair, irrespective of any earlier expiration of original warranty period. When D-Link provides replacement, then the defective product becomes the property of D-Link.

Warranty service may be obtained by contacting a D-Link office within the applicable warranty period, and requesting a Return Material Authorization (RMA) number. If a Registration Card for the product in question has not been returned to D-Link, then a proof of purchase (such as a copy of the dated purchase invoice) must be provided. If Purchaser's circumstances require special handling of warranty correction, then at the time of requesting RMA number, Purchaser may also propose special procedure as may be suitable to the case.

After an RMA number is issued, the defective product must be packaged securely in the original or other suitable shipping package to ensure that it will not be damaged in transit, and the RMA number must be prominently marked on the outside of the package. The package must be mailed or otherwise shipped to D-Link with all costs of mailing/shipping/insurance prepaid. D-Link shall never be responsible for any software, firmware, information, or memory data of Purchaser contained in, stored on, or integrated with any product returned to D-Link pursuant to this warranty.

Any package returned to D-Link without an RMA number will be rejected and shipped back to Purchaser at Purchaser's expense, and D-Link reserves the right in such a case to levy a reasonable handling charge in addition mailing or shipping costs.

Software:

Warranty service for software products may be obtained by contacting a D-Link office within the applicable warranty period. A list of D-Link offices is provided at the back of this manual, together with a copy of the Registration Card. If a Registration Card for the product in question has not been returned to a D-Link office, then a proof of purchase (such as a copy of the dated purchase invoice) must be provided when requesting warranty service. The term "purchase" in this software warranty refers to the purchase transaction and resulting license to use such software.

D-Link warrants that its software products will perform in substantial conformance with the applicable product documentation provided by D-Link with such software product, for a period of ninety (90) days from the date of purchase from D-Link or its Authorized Reseller. D-Link warrants the magnetic media, on which D-Link provides its software product, against failure during the same warranty period. This warranty applies to purchased software, and to replacement software provided by D-Link pursuant to this warranty, but shall not apply to any update or replacement which may be provided for download via the Internet, or to any update which may otherwise be provided free of charge.

D-Link's sole obligation under this software warranty shall be to replace any defective software product with product which substantially conforms to D-Link's applicable product documentation. Purchaser assumes responsibility for the selection of appropriate application and system/platform software and associated reference materials. D-Link makes no warranty that its software products will work in combination with any hardware, or any application or system/platform software product provided by any third party, excepting only such products as are expressly represented, in D-Link's applicable product documentation as being compatible. D-Link's obligation under this warranty shall be a reasonable effort to provide compatibility, but D-Link shall have no obligation to provide compatibility when there is fault in the third-party hardware or software. D-Link makes no warranty that operation of its software products will be uninterrupted or absolutely error-free, and no warranty that all defects in the software product, within or without the scope of D-Link's applicable product documentation, will be corrected.

D-Link Offices for Registration and Warranty Service

The product's Registration Card, provided at the back of this manual, must be sent to a D-Link office. To obtain an RMA number for warranty service as to a hardware product, or to obtain warranty service as to a software product, contact the D-Link office nearest you. An address/telephone/fax/e-mail/Web site list of D-Link offices is provided in the back of this manual.

Subject to the terms and conditions set forth herein, D-Link Systems, Inc. ("D-Link") provides this Limited warranty for its product only to the person or entity that originally purchased the product from:

- D-Link or its authorized reseller or distributor and
- Products purchased and delivered within the fifty states of the United States, the District of Columbia, U.S. Possessions or Protectorates, U.S. Military Installations, addresses with an APO or FPO.

Limited Warranty: D-Link warrants that the hardware portion of the D-Link products described below will be free from material defects in workmanship and materials from the date of original retail purchase of the product, for the period set forth below applicable to the product type ("Warranty Period"), except as otherwise stated herein.

Limited Lifetime Warranty for the Product(s) is defined as follows:

- Hardware for as long as the original customer/end user owns the product, or five years after product discontinuance, whichever occurs first (excluding power supplies and fans)
- Power Supplies and Fans Three (3) Year
- Spare parts and spare kits Ninety (90) days

D-Link's sole obligation shall be to repair or replace the defective Hardware during the Warranty Period at no charge to the original owner or to refund at D-Link's sole discretion. Such repair or replacement will be rendered by D-Link at an Authorized D-Link Service Office. The replacement Hardware need not be new or have an identical make, model or part. D-Link may in its sole discretion replace the defective Hardware (or any part thereof) with any reconditioned product that D-Link reasonably determines is substantially equivalent (or superior) in all material respects to the defective Hardware. Repaired or replacement Hardware will be warranted for the remainder of the original Warranty Period from the date of original retail purchase. If a material defect is incapable of correction, or if D-Link determines in its sole discretion that it is not practical to repair or replace the defective Hardware, the price paid by the original purchaser for the defective Hardware will be refunded by D-Link upon return to D-Link of the defective Hardware. All Hardware (or part thereof) that is replaced by D-Link, or for which the purchase price is refunded, shall become the property of D-Link upon replacement or refund.

Limited Software Warranty: D-Link warrants that the software portion of the product ("Software") will substantially conform to D-Link's then current functional specifications for the Software, as set forth in the applicable documentation, from the date of original retail purchase of the Software for a period of ninety (90) days ("Warranty Period"), provided that the Software is properly installed on approved hardware and operated as contemplated in its documentation. D-Link further warrants that, during the Warranty Period, the magnetic media on which D-Link delivers the Software will be free of physical defects. D-Link's sole obligation shall be to replace the non-conforming Software (or defective media) with software that substantially conforms to D-Link's functional specifications for the Software or to refund at D-Link's sole discretion. Except as otherwise agreed by D-Link in writing, the replacement Software is provided only to the original licensee, and is subject to the terms and conditions of the license granted by D-Link for the Software. Software will be warranted for the remainder of the original Warranty Period from the date of original retail purchase. If a material non-conformance is incapable of correction, or if D-Link determines in its sole discretion that it is not practical to replace the non-conforming Software, the price paid by the original licensee for the non-conforming Software will be refunded by D-Link; provided that the non-conforming Software (and all copies thereof) is first returned to D-Link. The license granted respecting any Software for which a refund is given automatically terminates.

Non-Applicability of Warranty: The Limited Warranty provided hereunder for hardware and software of D-Link's products will not be applied to and does not cover any refurbished product and any product purchased through the inventory clearance or liquidation sale or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product and in that case, the product is being sold "As-Is" without any warranty whatsoever including, without limitation, the Limited Warranty as described herein, notwithstanding anything stated herein to the contrary.

Submitting A Claim: The customer shall return the product to the original purchase point based on its return policy. In case the return policy period has expired and the product is within warranty, the customer shall submit a claim to D-Link as outlined below:

- The customer must submit with the product as part of the claim a written description of the Hardware defect or Software nonconformance in sufficient detail to allow D-Link to confirm the same.

The original product owner must obtain a Return Material Authorization ("RMA") number from the Authorized D-Link Service Office and, if requested, provide written proof of purchase of the product (such as a copy of the dated purchase invoice for the product) before the warranty service is provided.

After an RMA number is issued, the defective product must be packaged securely in the original or other suitable shipping package to ensure that it will not be damaged in transit, and the RMA number must be prominently marked on the outside of the package. Do not include any manuals or accessories in the shipping package. D-Link will only replace the defective portion of the Product and will not ship back any accessories.

The customer is responsible for all in-bound shipping charges to D-Link. No Cash on Delivery ("COD") is allowed. Products sent COD will either be rejected by D-Link or become the property of D-Link. Products shall be fully insured by the customer and shipped to **D-Link Systems, Inc., 17595 Mt. Herrman Street, Fountain Valley, CA 92708**. D-Link will not be held responsible for any packages that are

lost in transit to D-Link. The repaired or replaced packages will be shipped to the customer via UPS Ground or any common carrier selected by D-Link, with shipping charges prepaid. Expedited shipping is available if shipping charges are prepaid by the customer and upon request.

D-Link may reject or return any product that is not packaged and shipped in strict compliance with the foregoing requirements, or for which an RMA number is not visible from the outside of the package. The product owner agrees to pay D-Link's reasonable handling and return shipping charges for any product that is not packaged and shipped in accordance with the foregoing requirements, or that is determined by D-Link not to be defective or non-conforming.

What Is Not Covered: This limited warranty provided by D-Link does not cover: Products, if in D-Link's judgment, have been subjected to abuse, accident, alteration, modification, tampering, negligence, misuse, faulty installation, lack of reasonable care, repair or service in any way that is not contemplated in the documentation for the product, or if the model or serial number has been altered, tampered with, defaced or removed; Initial installation, installation and removal of the product for repair, and shipping costs; Operational adjustments covered in the operating manual for the product, and normal maintenance; Damage that occurs in shipment, due to act of God, failures due to power surge, and cosmetic damage; Any hardware, software, firmware or other products or services provided by anyone other than D-Link; Products that have been purchased from inventory clearance or liquidation sales or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product. Repair by anyone other than D-Link or an Authorized D-Link Service Office will void this Warranty.

Disclaimer of Other Warranties: EXCEPT FOR THE LIMITED WARRANTY SPECIFIED HEREIN, THE PRODUCT IS PROVIDED "AS-IS" WITHOUT ANY WARRANTY OF ANY KIND WHATSOEVER INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT. IF ANY IMPLIED WARRANTY CANNOT BE DISCLAIMED IN ANY TERRITORY WHERE A PRODUCT IS SOLD, THE DURATION OF SUCH IMPLIED WARRANTY SHALL BE LIMITED TO NINETY (90) DAYS. EXCEPT AS EXPRESSLY COVERED UNDER THE LIMITED WARRANTY PROVIDED HEREIN, THE ENTIRE RISK AS TO THE QUALITY, SELECTION AND PERFORMANCE OF THE PRODUCT IS WITH THE PURCHASER OF THE PRODUCT.

Limitation of Liability: TO THE MAXIMUM EXTENT PERMITTED BY LAW, D-LINK IS NOT LIABLE UNDER ANY CONTRACT, NEGLIGENCE, STRICT LIABILITY OR OTHER LEGAL OR EQUITABLE THEORY FOR ANY LOSS OF USE OF THE PRODUCT, INCONVENIENCE OR DAMAGES OF ANY CHARACTER, WHETHER DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF GOODWILL, LOSS OF REVENUE OR PROFIT, WORK STOPPAGE, COMPUTER FAILURE OR MALFUNCTION, FAILURE OF OTHER EQUIPMENT OR COMPUTER PROGRAMS TO WHICH D-LINK'S PRODUCT IS CONNECTED WITH, LOSS OF INFORMATION OR DATA CONTAINED IN, STORED ON, OR INTEGRATED WITH ANY PRODUCT RETURNED TO D-LINK FOR WARRANTY SERVICE) RESULTING FROM THE USE OF THE PRODUCT, RELATING TO WARRANTY SERVICE, OR ARISING OUT OF ANY BREACH OF THIS LIMITED WARRANTY, EVEN IF D-LINK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE SOLE REMEDY FOR A BREACH OF THE FOREGOING LIMITED WARRANTY IS REPAIR, REPLACEMENT OR REFUND OF THE DEFECTIVE OR NON-CONFORMING PRODUCT. THE MAXIMUM LIABILITY OF D-LINK UNDER THIS WARRANTY IS LIMITED TO THE PURCHASE PRICE OF THE PRODUCT COVERED BY THE WARRANTY. THE FOREGOING EXPRESS WRITTEN WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ANY OTHER WARRANTIES OR REMEDIES, EXPRESS, IMPLIED OR STATUTORY

Governing Law: This Limited Warranty shall be governed by the laws of the State of California. Some states do not allow exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the foregoing limitations and exclusions may not apply. This limited warranty provides specific legal rights and the product owner may also have other rights which vary from state to state.

Trademarks: D-Link is a registered trademark of D-Link Systems, Inc. Other trademarks or registered trademarks are the property of their respective manufacturers or owners.

Copyright Statement: No part of this publication or documentation accompanying this Product may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from D-Link Corporation/D-Link Systems, Inc., as stipulated by the United States Copyright Act of 1976. Contents are subject to change without prior notice. Copyright© 2002 by D-Link Corporation/D-Link Systems, Inc. All rights reserved.

CE Mark Warning: This is a Class A product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

FCC Statement: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For detailed warranty outside the United States, please contact corresponding local D-Link office.

***Register online your D-Link product at
<http://support.dlink.com/register/>***

Registration Card

Print, type or use block letters.

Your name: Mr./Ms _____
 Organization: _____ Dept. _____
 Your title at organization: _____
 Telephone: _____ Fax: _____
 Organization's full address: _____

 Country: _____
 Date of purchase (Month/Day/Year): _____

Product Model	Product Serial No.	* Product installed in type of computer (e.g., Compaq 486)	* Product installed in computer serial No.

(* Applies to adapters only)

Product was purchased from:

Reseller's name: _____
 Telephone: _____ Fax: _____
 Reseller's full address: _____

Answers to the following questions help us to support your product:

- 1. Where and how will the product primarily be used?**
Home Office Travel Company Business Home Business Personal Use
- 2. How many employees work at installation site?**
1 employee 2-9 10-49 50-99 100-499 500-999 1000 or more
- 3. What network protocol(s) does your organization use ?**
XNS/IPX TCP/IP DECnet Others _____
- 4. What network operating system(s) does your organization use ?**
D-Link LANsmart Novell NetWare NetWare Lite SCO Unix/Xenix PC NFS 3Com 3+Open
Banyan Vines DECnet Pathwork Windows NT Windows NTAS Windows '95
Others _____
- 5. What network management program does your organization use ?**
D-View HP OpenView/Windows HP OpenView/Unix SunNet Manager Novell NMS
NetView 6000 Others _____
- 6. What network medium/media does your organization use ?**
Fiber-optics Thick coax Ethernet Thin coax Ethernet 10BASE-T UTP/STP
100BASE-TX 100BASE-T4 100VGAnyLAN Others _____
- 7. What applications are used on your network?**
Desktop publishing Spreadsheet Word processing CAD/CAM
Database management Accounting Others _____
- 8. What category best describes your company?**
Aerospace Engineering Education Finance Hospital Legal Insurance/Real Estate Manufacturing
Retail/Chainstore/Wholesale Government Transportation/Utilities/Communication VAR
System house/company Other _____
- 9. Would you recommend your D-Link product to a friend?**
Yes No Don't know yet
- 10. Your comments on this product?**

PLEASE
PLACE STAMP
HERE

TO:

D-Link®