

# **D-Link**

# **DVG-2001S**

VoIP Terminal Adapter

Manual

**D-Link**<sup>®</sup>

Building Networks for People

Ver 1.00

651US2001S15

# Contents

<b>Package Contents</b> .....	<b>1</b>
<b>Introduction</b> .....	<b>1</b>
<b>Connections</b> .....	<b>2</b>
<b>LEDs</b> .....	<b>3</b>
<b>Features</b> .....	<b>4</b>
<b>Using the Configuration Wizard</b> .....	<b>5</b>
Home > WAN > Dynamic IP Address .....	6
Home > WAN > Static IP Address .....	7
Home > WAN > PPPoE .....	8
Advanced > VOIP > Server Configuration .....	11
Advanced > VOIP > Provisioning .....	13
Advanced > VOIP > STUN Configuration .....	14
Advanced > VOIP > User Agent .....	15
Advanced > VOIP > Peer to Peer .....	16
Advanced > VOIP > Telephony .....	17
Advanced > Misc. ....	18
Tools > Admin .....	19
Tools > System .....	20
Tools > Firmware .....	21
Tools > Config .....	22
Tools > Save & Reboot .....	22
Status > Device Info .....	23
Status > Stats .....	23
Status > Cable Tester .....	25

Help.....	26
<b>Technical Specifications .....</b>	<b>27</b>
<b>Frequently Asked Questions .....</b>	<b>29</b>

# Package Contents



- D-Link DVG-2001S VoIP Terminal Adapter
- Power Adapter - DC 12V, 1.2A
- Manual and Warranty on CD
- Quick Installation Guide
- Ethernet Cable (the DVG-2001S's Ethernet port is Auto-MDIX)

If any of the above items are missing, please contact your reseller.


*Note: Using a power supply with a different voltage rating than the one included with the DVG-2001S will cause damage and void the warranty for this product.*

## Introduction


The D-Link DVG-2001S VoIP Terminal Adapter links traditional telephony networks to IP networks with conventional telephony devices such as analog phones or fax machines. It can reduce long distance phone charges and deliver toll-quality voice communication over the IP network. This gateway provides one loop start Foreign Exchange Subscriber (FXS) port and one Ethernet port.

# Connections

The Ethernet Port (LAN) is auto MDI/MDIX, meaning you can use either a straight-through or a crossover Ethernet cable.

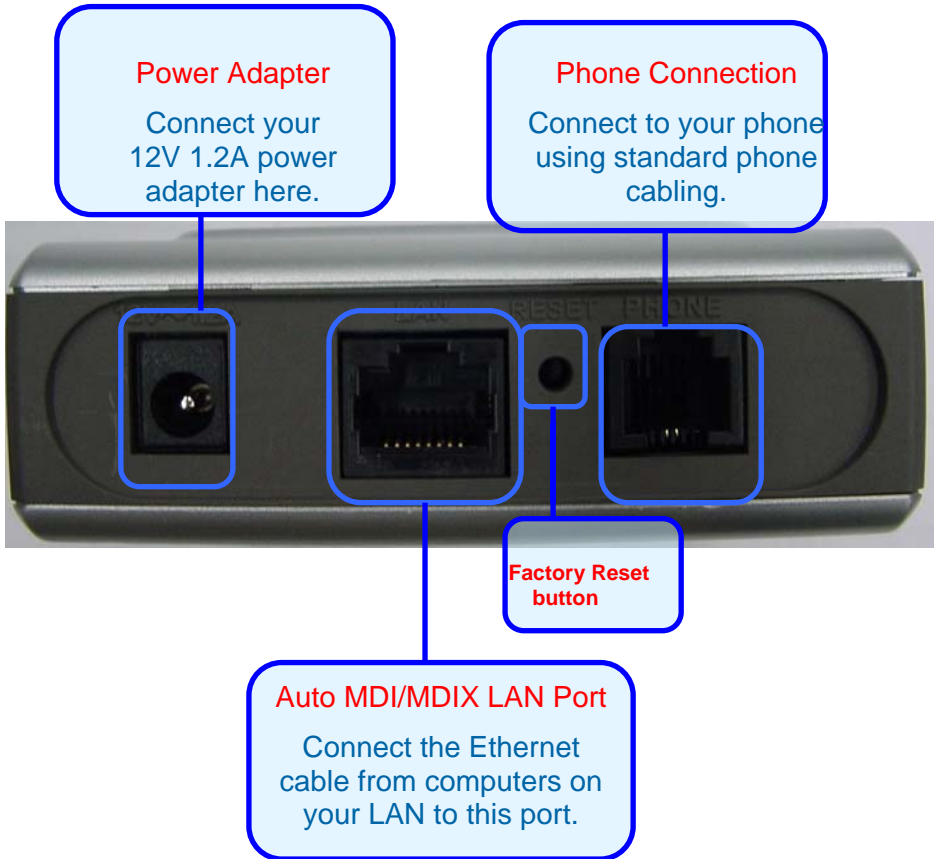

# LEDs

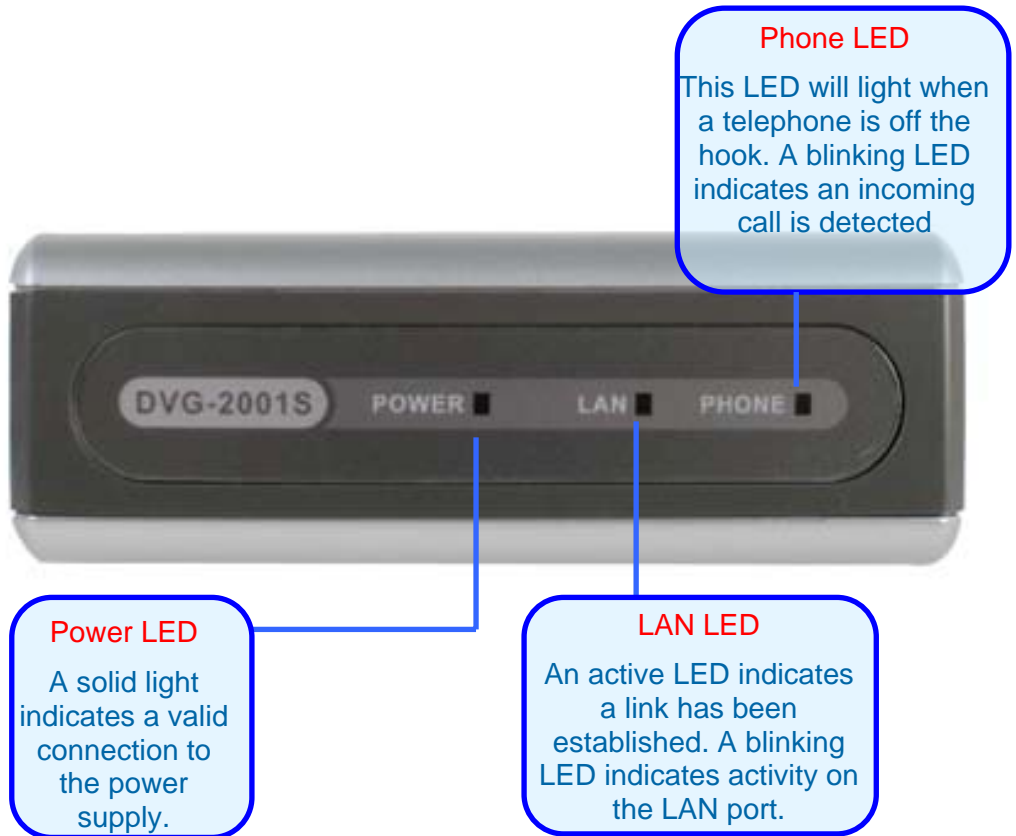

# Features

- One Foreign Exchange Subscriber (FXS) POTS port (RJ-11 Jack)
- One NWay 10/100BASE-TX Fast Ethernet port for network connection
- Voice Activity Detection (VAD)/Comfort Noise Generation (CNG)
- Silence suppression to reduce bandwidth consumption
- Adaptive jitter buffer for smooth voice reception
- Lost packet recovery ability for improved voice quality
- Support QoS (Quality of Service) for voice quality guarantee
- Built-in PPPoE function to support dial-up connection for broadband technology
- IP address assignment using DHCP or static configuration
- Support Caller ID function
- Remote configuration and management over the Internet using web browsers

# Using the Configuration Wizard



Whenever you want to configure your network or the DVG-2001S, you can access the Configuration Menu by opening the web-browser and typing in the IP Address of the DVG-2001S. The DVG-2001S default IP Address is shown to the right:

- Open the web browser
- Type in the IP Address of the Router (<http://10.1.1.1>)
- Type **admin** in the User Name field
- Type **admin** in the Password field
- Click OK

The **Home > Wizard** screen will appear. Please refer to the Quick Installation Guide for more information regarding the Setup Wizard.

These buttons appear on most of the configuration screens in this section. Please click on the appropriate button at the bottom of each screen after you have made a configuration change.

*Note: if you have changed the default IP Address assigned to the DVG-2001S, make sure to enter the correct IP Address.*

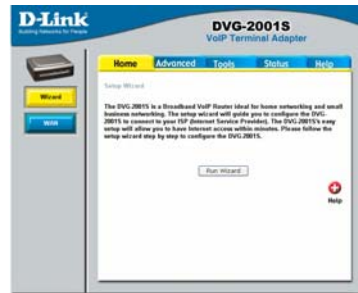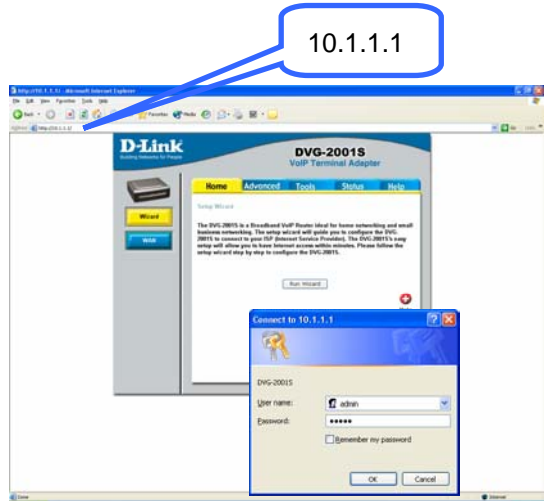

Apply



Cancel



Help



Refresh

Clicking this button will save configured settings to the router.


Clicking Cancel will clear changes made to the current page.

Clicking Help will provide the user with helpful information about the current window.

Click refresh will refresh the statistics of the current window.



## Home > WAN > Dynamic IP Address

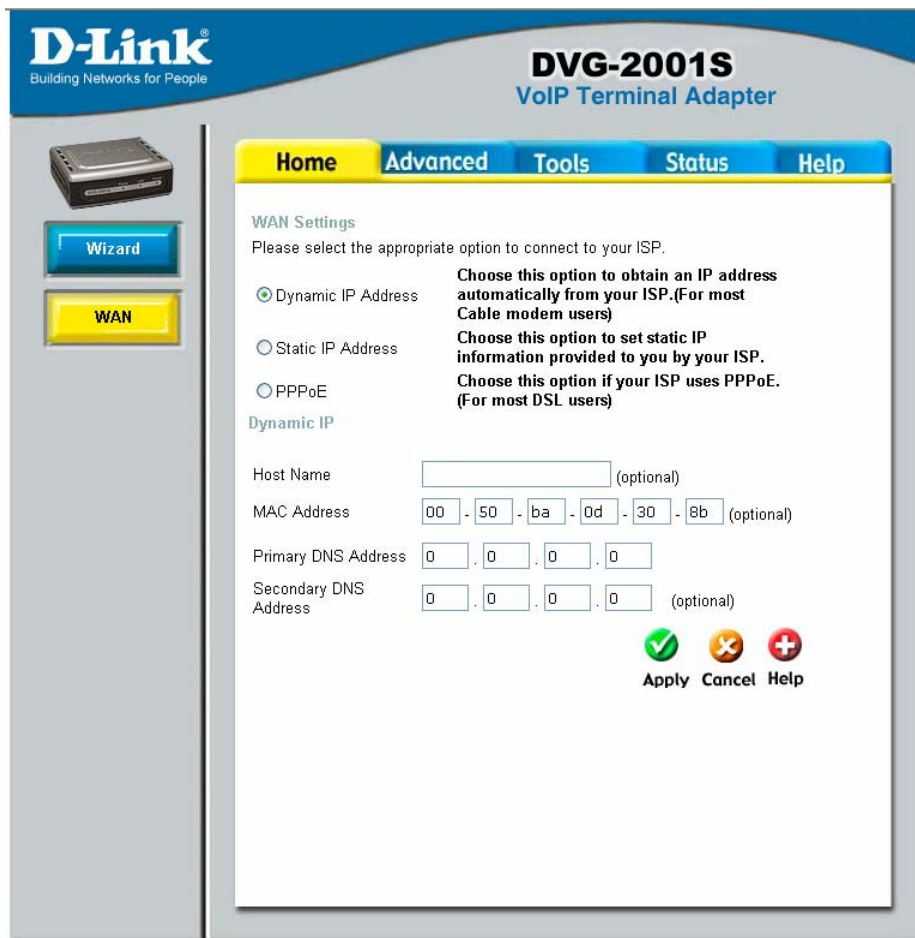

**D-Link**  
Building Networks for People

**DVG-2001S**  
VoIP Terminal Adapter

Home Advanced Tools Status Help

**Wizard**

**WAN**

**WAN Settings**  
Please select the appropriate option to connect to your ISP.

Dynamic IP Address **Choose this option to obtain an IP address automatically from your ISP. (For most Cable modem users)**

Static IP Address **Choose this option to set static IP information provided to you by your ISP.**

PPPoE **Choose this option if your ISP uses PPPoE. (For most DSL users)**


**Dynamic IP**

Host Name  (optional)

MAC Address  -  -  -  -  -  (optional)

Primary DNS Address  .  .  .

Secondary DNS Address  .  .  .  (optional)

    
**Apply Cancel Help**

### Dynamic IP Address

Choose Dynamic IP Address to obtain IP Address information automatically from your ISP. This option should be selected if your ISP has not supplied you with an IP address. This option is commonly used for Cable modem services.

### Host Name

The Host Name is optional but may be required by some ISPs. The default host name is the device name of the VoIP Terminal Adapter and may be changed.

### MAC Address

The default MAC Address is set to the WAN's physical interface MAC address on the VoIP Terminal Adapter. It is not recommended that you change the default MAC address unless required by your ISP.

## Primary/Secondary DNS Address

Enter a DNS Address if you wish not to use the address provided by your ISP.

## Home > WAN > Static IP Address

The screenshot shows the configuration interface for a D-Link DVG-2001S VoIP Terminal Adapter. The page has a blue header with the D-Link logo and the product name. On the left, there is a sidebar with a 'Wizard' button and a 'WAN' button. The main content area has a navigation bar with 'Home', 'Advanced', 'Tools', 'Status', and 'Help' tabs. The 'WAN Settings' section is active, displaying three radio button options: 'Dynamic IP Address', 'Static IP Address' (which is selected), and 'PPPoE'. To the right of these options are instructions for each. Below the radio buttons is the 'Static IP' section, which contains input fields for IP Address (10.1.1.1), Subnet Mask (255.0.0.0), Default Gateway (0.0.0.0), Primary DNS Address (0.0.0.0), and Secondary DNS Address (0.0.0.0). At the bottom right of the form are three buttons: 'Apply' (with a green checkmark), 'Cancel' (with a red X), and 'Help' (with a red plus sign).

## Static IP Address

Choose Static IP Address if all WAN IP information is provided to you by your ISP. You will need to enter in the IP address, subnet mask, gateway address, and DNS address(es) provided to you by your ISP. Each IP address entered in the fields must be in the appropriate IP form, which are four octets separated by a dot (x.x.x.x). The VoIP Terminal Adapter will not accept the IP address if it is not in this format.

IP Address

Input the public IP Address provided by your ISP.

Subnet Mask

Input your Subnet mask. (All devices in the network must have the same subnet mask.)

Default Gateway

Input the public IP address of the ISP to which you are connecting.

Primary  
DNS Address

Input the primary DNS (Domain Name Server) IP address provided by your ISP

Secondary  
DNS Address

This is an optional DNS Address entry to be used if the primary DNS Fails.

## Home > WAN > PPPoE



Choose PPPoE (Point to Point Protocol over Ethernet) if your ISP uses a PPPoE connection. Your ISP will provide you with a username and password. This option is typically used for DSL services. Select Dynamic PPPoE to obtain an IP address automatically for your PPPoE connection. Select Static PPPoE to use a static IP address for your PPPoE connection.



Wizard

WAN

Home

Advanced

Tools

Status

Help

WAN Settings

Please select the appropriate option to connect to your ISP.

Dynamic IP Address

**Choose this option to obtain an IP address automatically from your ISP. (For most Cable modem users)**

Static IP Address

**Choose this option to set static IP information provided to you by your ISP.**

PPPoE

**Choose this option if your ISP uses PPPoE. (For most DSL users)**

PPPoE

User Name

Password

Retype Password

IP Address

10.1.1.1

Primary DNS Address

 .  .  . 

Secondary DNS Address

 .  .  .  (optional)

Auto-reconnect

Disconnect

PPPoE Status

Disconnect

Connect

Disconnect



Apply Cancel Help

PPPoE

Choose this option if your ISP uses PPPoE. (Most DSL users will select this option.)

User Name

Enter The PPPoE user name provided to you by your ISP.

Password

Enter The PPPoE password provided to you by your ISP.

Retype Password

Retype the password entered in the previous field.

IP Address

This displays the current IP address.

Primary  
DNS Address

Input the primary DNS (Domain Name Server) IP address provided by your ISP.

Secondary  
DNS Address

This is an optional DNS Address entry to be used if the primary DNS fails.

Click **Apply** to set any changes made to the memory of the VoIP Terminal Adapter.

Click **Connect** to initiate a PPPoE connection.

Click **Disconnect** to end a PPPoE connection.

## Advanced > VOIP > Server Configuration

The VoIP Terminal Adapter can be configured to handle voice signals over the Internet Protocol (Voice Over IP – VOIP). The screen shown to the right, along with those on the following pages are used to configure your router to communicate with the devices that will send and receive telephone calls over the Internet.

The screenshot shows the D-Link VoIP Terminal Adapter configuration interface. The page title is 'D-Link Building Networks for People' and 'DVG-2001S VoIP Terminal Adapter'. The navigation tabs are 'Home', 'Advanced', 'Tools', 'Status', and 'Help'. The 'Advanced' tab is selected, and the sub-tab is 'SIP Configuration - Server'. The configuration options are as follows:

- SIP Configuration:  Server Configuration,  Provisioning,  STUN Configuration,  User Agent,  Peer to Peer,  Telephony
- Server FQDN: disabled
- IP Address: 0 0 0 0
- Domain Name: [text input]
- Port: 5060
- Service Domain: [text input]
- URL Format: SIP-URL
- User Parameter Phone: Enabled
- Caller ID Delivery: YES
- Display CID: Enabled
- Timer T2: 4 sec
- Initial Unregister: Enabled
- Register Expiration: 3600 sec
- Session Expires: 180 sec
- Min-SE: 180 sec
- Session Expires Refresher: uac

Codec Priority & Packet Interval:

Codec	Priority	Interval
G.711a-law	3rd	20 ms
G.711u-law	2nd	20 ms
G.723.1	no-use	30 ms
G.729a	1st	20 ms
G.726	4th	20 ms

Buttons: Apply, Cancel, Help

### Server FQDN

Use this drop-down menu to Enable or Disable the Server Fully Qualified Domain Name (FQDN) function. This is disabled when the SIP URL domain name is different from the SIP proxy server domain name. The phone will then use the domain name in **Domain Name** field as part of SIP URL but send and receive SIP messages through the SIP proxy server defined in the **Service Domain** field.

### IP Address

Enter the IP address of the SIP Server in this field.

### Domain Name

Enter the domain name corresponding to the IP address entered above in this field.

### Port

Enter the SIP server's listening port for the SIP in this field. Leave this field set to the default if your VoIP service provider did not give you a server port number for SIP.

### Service Domain

Enter the SIP service domain name in this field.

### URL Format

Select **SIP-URL** to have the router include the domain name with the SIP number in the SIP messages that it sends.

Select **TEL-URL** to have the router use the SIP number without a domain name in the SIP messages that it sends.

#### User Parameter Phone

You can set this to **Enabled** or **Disabled**. This determines whether or not the phone number is appended to the information forwarded to your SIP server. Your VoIP service provider will instruct you on which setting to use.

#### Caller ID Delivery

You can set this to **YES** or **NO**. This determines whether CID is received.

#### Display CID

You can set this to **Enabled** or **Disabled**. This determines whether to display Caller ID.

#### Timer T2

Use the drop-down menu provided to select the desired time increment.

#### Initial Unregister

You can set this to **Enabled** or **Disabled**. The default is **Enabled**.

#### Register Expiration

Use this field to set how long the router will wait before sending a repeat registration request if a registration attempt fails or there is no response from the registration server.

#### Session Expires

This field will set the longest time that the router will allow a SIP session to remain idle (without traffic) before dropping it.

#### Min-SE


When two SIP devices negotiate a SIP session, they must negotiate a common expiration time for idle SIP sessions. This field sets the shortest expiration time that the router will accept. The router checks the session expiration values of incoming SIP INVITE requests against the minimum session expiration value that you enter here. If the session expiration of an incoming INVITE request is less than this value, the router negotiates with the other SIP device to increase the session expiration value to match the minimum session expiration value.

#### Session Expires Refresher

This determines which side of an expired call session will initiate the session refresh. **uac** – specifies the Caller side will initiate the session refresh. **uas** – specifies the Call receiver (the “Callee”) will initiate the session refresh..

## Advanced > VOIP > Provisioning

Provisioning is a function that automatically updates your DVG-2001S's VoIP configuration by using a TFTP server located on the Internet. If you have access to such a service, you will need to know the URL and Proxy Address of the Provisioning Server.



The screenshot shows the web interface for the D-Link DVG-2001S VoIP Terminal Adapter. The page title is "DVG-2001S VoIP Terminal Adapter". The navigation menu includes "Home", "Advanced" (selected), "Tools", "Status", and "Help". On the left sidebar, there are buttons for "VoIP" and "Misc.". The main content area is titled "SIP Configuration:" and includes radio buttons for "Server Configuration" (selected), "Provisioning", "STUN Configuration", "User Agent", and "Peer to Peer". Under "Provisioning", there are radio buttons for "XML Provisioning" and "Telephony". The configuration fields are: "Provisioning Function" (set to "Disabled"), "SSL" (set to "Enabled"), "Server URL" (set to "https://devicecfg.iprimus.net/dev"), "Proxy Address" (empty), and "Proxy Port Number" (set to "8080"). At the bottom right, there are three icons: a green checkmark, a red X, and a red plus sign, with the labels "Apply", "Cancel", and "Help" below them.

**Provisioning Function** Use this drop-down menu to enable or disable the Provisioning Function on the VoIP Terminal Adapter.

**SSL** Use the drop-down menu to enable Secure Shell (SSL).

**Server URL** Enter the URL of the Provisioning Server in this field.

**Proxy Address** Enter the IP address of the Proxy Server in this field.

**Proxy Port Number** Enter the port number the Proxy Server will use to make the connection in this field.



## Advanced > VOIP > STUN Configuration

Simple Traversal of UDP over NAT (STUN) – is a protocol that enables a VoIP device, such as this router or an IP phone, to detect the presence and type of NAT behind which the phone is placed. This router supports STUN and can intelligently modify the private IP address and port in its SIP/SDP message by using the NAT mapped public IP address and port through a series of STUN queries against a STUN server located on the public Internet. This will allow SIP signaling and RTP media to successfully traverse a NAT without requiring any configuration changes on the NAT.

The screenshot shows the web interface for the D-Link DVG-2001S VoIP Terminal Adapter. The page is titled "DVG-2001S VoIP Terminal Adapter" and has a navigation bar with "Home", "Advanced", "Tools", "Status", and "Help". The "Advanced" tab is selected. Under "SIP Configuration:", there are radio buttons for "Server Configuration", "Provisioning", "STUN Configuration" (which is selected), "User Agent", and "Peer to Peer". Below this, there are fields for "STUN State" (set to "Disabled"), "STUN Server IP Address" (0.0.0.0), "STUN Server Port" (3478), "STUN ReqInterval" (60), and "STUN NAT Type" (Unknown). There are three status icons: a green checkmark, a red X, and a red plus sign. Below these is a "NAT Type Detect" button and "Apply", "Cancel", and "Help" buttons. At the bottom, there is a table showing the results of the NAT examination.

Index	SIP Message socket mapped ip/port	SIP RTP socket mapped ip/port
1	0.0.0.0:0	0.0.0.0:0
2	0.0.0.0:0	0.0.0.0:0

STUN is useful if you need to use the DVG-2001S behind a modem or router that provides the connection to your ISP and then to the Internet and does not support symmetric NAT. You will need access to a STUN server on the Internet and its IP address to use STUN on the DVG-2001S.

**STUN State** Use this drop-down menu to Enable or Disable STUN on the router.

**STUN Server IP Address** Enter the IP address of a STUN server in this field.

**STUN Server Port** Enter the port number the STUN server will use in this field. If you do not have any information as to the proper port number, leave the default setting here.

**STUN ReqInterval** This determines the amount of time, in seconds, between STUN requests. If you do not have any information as to the proper interval, leave the default setting here.

**STUN NAT Type** Displays the result of the STUN NAT examination.

## Advanced > VOIP > User Agent


The VoIP Terminal Adapter can be configured to handle voice signals over the Internet Protocol (Voice Over IP – VOIP).

The screenshot shows the configuration page for the D-Link DVG-2001S VoIP Terminal Adapter. The 'Advanced' tab is active, and the 'User Agent' configuration is selected. The configuration includes fields for Same Phone Number (set to Disabled), Index (set to 1), Phone Number, Display Name, User Agent Port (set to 5060), Authentication Username, Password, and Retype Password. There are buttons for Apply, Cancel, and Help, and a section for Querying Registration State with Query, Register, and Unregister buttons.

- Same Phone Number** Use this field to enable or disable the use of the same telephone number for the User Agent as for the Server Agent.
- Index** Use this field to assign the telephone socket (on the back of the router) to the information entered in the User Agent.
- Phone Number** The telephone number assigned to the User Agent.
- Domain Name** The name that will be displayed when the User Agent is in use.
- User Agent Port** This selects the port number the VoIP Terminal Adapter will listen to when determining when calls are being made.
- Authentication Name** The Username used to access your SIP server and your VoIP service provider.
- Password** The Password used to access your SIP server and your VoIP service provider.
- Retype Password** Retype your password to confirm.

## Advanced > VOIP > Peer to Peer

The VoIP Terminal Adapter can be configured to handle voice signals over the Internet Protocol (Voice Over IP – VOIP).

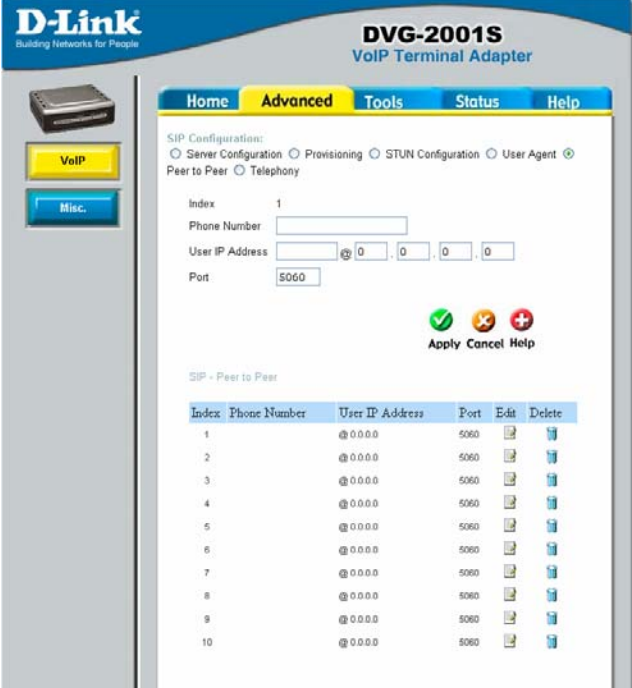

The screenshot shows the configuration interface for the D-Link DVG-2001S VoIP Terminal Adapter. The page is titled "D-Link Building Networks for People" and "DVG-2001S VoIP Terminal Adapter". The navigation tabs are "Home", "Advanced" (selected), "Tools", "Status", and "Help".

Under "SIP Configuration:", there are radio buttons for "Server Configuration", "Provisioning", "STUN Configuration", "User Agent", "Peer to Peer" (selected), and "Telephony".

The "Peer to Peer" configuration fields are:

- Index: 1
- Phone Number: [Empty text box]
- User IP Address: [IP address input box with a dropdown menu set to "0"]
- Port: 5060

At the bottom of the configuration section, there are three icons: a green checkmark, a red X, and a red plus sign, labeled "Apply", "Cancel", and "Help".


Below the configuration fields is a table titled "SIP - Peer to Peer" with the following columns: Index, Phone Number, User IP Address, Port, Edit, and Delete.

Index	Phone Number	User IP Address	Port	Edit	Delete
1		@ 0.0.0.0	5060	[Edit icon]	[Delete icon]
2		@ 0.0.0.0	5060	[Edit icon]	[Delete icon]
3		@ 0.0.0.0	5060	[Edit icon]	[Delete icon]
4		@ 0.0.0.0	5060	[Edit icon]	[Delete icon]
5		@ 0.0.0.0	5060	[Edit icon]	[Delete icon]
6		@ 0.0.0.0	5060	[Edit icon]	[Delete icon]
7		@ 0.0.0.0	5060	[Edit icon]	[Delete icon]
8		@ 0.0.0.0	5060	[Edit icon]	[Delete icon]
9		@ 0.0.0.0	5060	[Edit icon]	[Delete icon]
10		@ 0.0.0.0	5060	[Edit icon]	[Delete icon]

- [Index](#) This field assigns the telephone socket (on the back of the router) to the information entered in the User Agent.
- [Phone Number](#) The telephone number assigned to this entry.
- [User IP Address](#) Enter the IP address of the remote peer in this field.
- [Port](#) Enter the UDP port number the remote peer will use to make the connection in this field. If you do not have any information as to the proper port number, leave the default setting here.

## Advanced > VOIP > Telephony

The VoIP Terminal Adapter can be configured to handle voice signals over the Internet Protocol (Voice Over IP – VOIP).

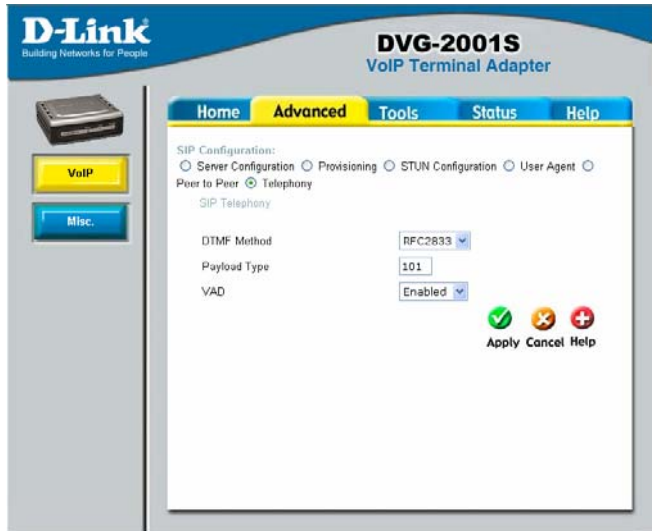

### DTMF Method

Out-of band Dual Tone Multi-frequency – The Dual Tone Multi-frequency (DTMF) mode sets how the router will handle the tones that your telephone makes when you push its buttons. It is recommended that you use the same mode that your VoIP service provider uses. Select Enabled (RFC 2833) to send the DTMF tones in RTP packets. Select Disabled (G.711) to include the DTMF tones in the voice data stream. This method works best when you are using a codec that does not use compression (like G.711).

### Payload Type

The payload type (PT) field identifies the format of the RTP payload and determines its interpretation by the receiving application

### VAD

Voice Activity Detection (VAD) – Detects whether or not speech is present. This lets the VoIP Terminal Adapter reduce the bandwidth that a call uses by not transmitting “silent Packets” when you are not speaking.

## Advanced > Misc.

The screenshot shows the web interface for the D-Link DVG-2001S VoIP Terminal Adapter. The interface has a blue header with the D-Link logo and the product name. Below the header is a navigation bar with tabs for Home, Advanced (selected), Tools, Status, and Help. On the left side, there is a sidebar with a product image and buttons for VoIP and Misc. (selected). The main content area is titled 'ToS' and contains the following configuration options:

ToS	
Signaling ToS	<input type="text" value="000000"/>
RTP ToS	<input type="text" value="000000"/>
Gain Control	
Receive Gain	<input type="text" value="0"/> db
Transmission Gain	<input type="text" value="0"/> db

At the bottom right of the configuration area, there are three buttons: a green checkmark icon labeled 'Apply', a red 'X' icon labeled 'Cancel', and a red plus sign icon labeled 'Help'.

### Signaling ToS

Signaling ToS -ToS field value in UDP IP Packets carrying a SIP Message

### RTP ToS

RTP ToS - ToS field value in UDP IP Packets carrying a RTP data

### Receive Gain


Used to raise or lower the gain (volume) of signals that come in from the IP and are sent to the line-side or trunk-side interface. The Rx Gain dB level may be set in 0.5 db increments from -20 dBm to 20 dBm.

### Transmission Gain

Used to raise or lower the gain (volume) of signals that go out to the IP from the line-side or trunk-side interface. The Tx Gain dB level may be set in 0.5 db increments from -20 dBm to 20 dBm.

### Change System Password

To change the password used to access the web manager, type the **New Password** and **Confirm Password** to be certain you have typed it correctly. Click the **Apply** button to activate the new password. The System User Name remains “admin”, this cannot be changed using the web manager interface. Be sure to save the new setting.

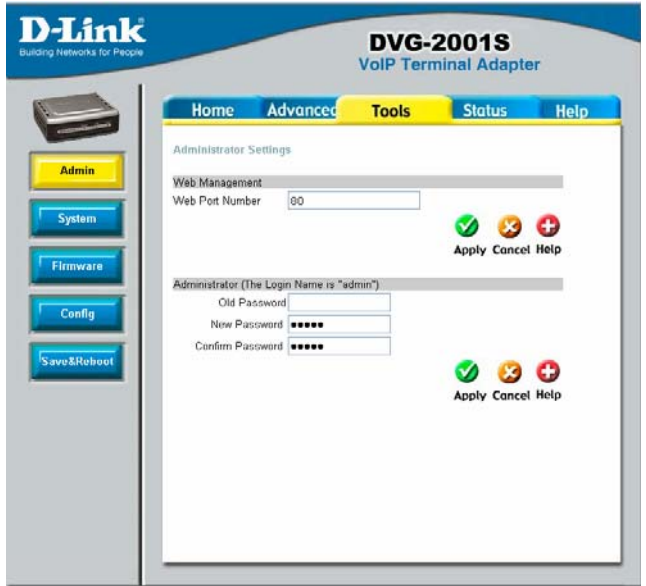

#### Administrator

#### Password

**admin** is the Administrator login name.

Enter the password here and the same password in the **Confirm Password** field. This will be the password that the administrator will use to gain access to the configuration menu of the device. The default password is “admin.”

#### User

#### Password

**user** is the User login name.

Enter the password here and the same password in the **Confirm Password** field. This will be the password that the users will use to gain access to the configuration menu of the device. Users will have limited privileges on this device. The default password is “admin.”


#### Remote Management

Remote management allows the VoIP Terminal Adapter to be configured from the Internet by a web browser. A username and password is still required to access the Web-Management interface. In general, only a member of your network can browse the built-in web pages to perform **Administrator** tasks. This feature enables you to perform Administrator tasks from the remote (Internet) host.

#### Web Port Number

The port number used to access the VoIP Terminal Adapter. The default port number for web management is 80.

## Tools > System

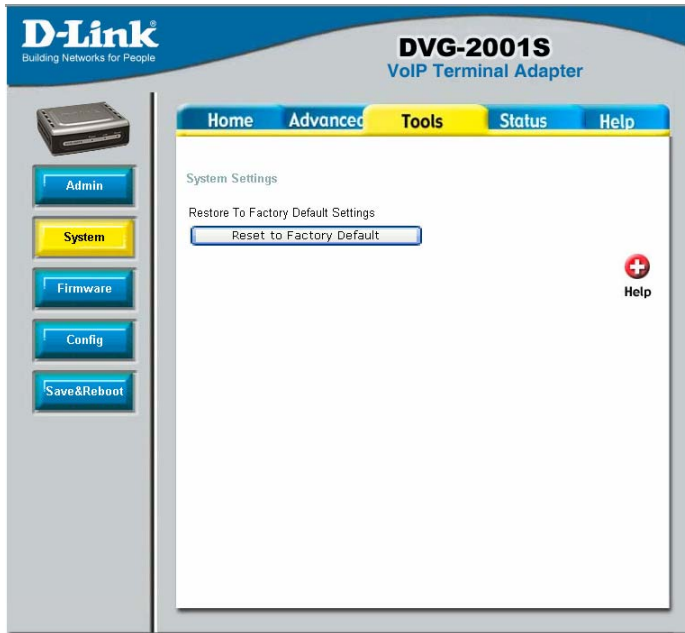

Reset to Factory Default

Click **Reset to Factory Default** to restore the settings.

## Tools > Firmware



The screenshot shows the D-Link VoIP Terminal Adapter (DVG-2001S) web interface. The top navigation bar includes 'Home', 'Advanced', 'Tools' (highlighted), 'Status', and 'Help'. The left sidebar contains buttons for 'Admin', 'System', 'Firmware' (highlighted), 'Config', and 'Save&Reboot'. The main content area is titled 'Firmware Update' and contains the following fields:

- TFTP Server Address: A text input field with a grey background.
- TFTP Server Address: A numeric input field with four segments, each containing '0'.
- Update Firmware: A section header.
- Firmware Update: A dropdown menu set to 'Disabled'.
- File Name: A text input field.
- Last Update Status: A light blue rectangular area.

At the bottom right of the form, there are three buttons: 'Apply' (with a green checkmark icon), 'Cancel' (with a red 'X' icon), and 'Help' (with a red plus icon).

You can upgrade the firmware of the VoIP Terminal Adapter here. Make sure the firmware you want to use is on the local hard drive of the computer. Please check the D-Link Support site for firmware updates at <http://support.dlink.com>. You can download firmware upgrades to your hard drive from the D-Link support site.

### Firmware Update

Click on the link in this screen to find out if there is an updated firmware; if so, download the new firmware to your hard drive.

### File Name


Enter the firmware file name and DOS path in this field. For example, C:\firmware.had

Click **Apply** to complete the firmware upgrade.




## Tools > Config

This screen allows you to backup and restore configuration files. Click **Backup** to initiate the backing up of a configuration file. Click **Upload** to initiate the uploading of the configuration file once you have located it by using the **Browse** button.

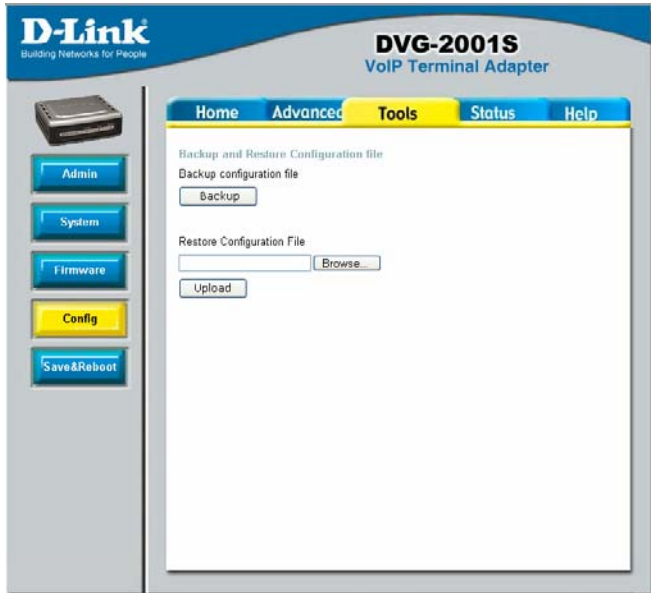

## Tools > Save & Reboot

This screen allows you to save and reboot the VoIP Terminal Adapter. Click the **Reboot** button.

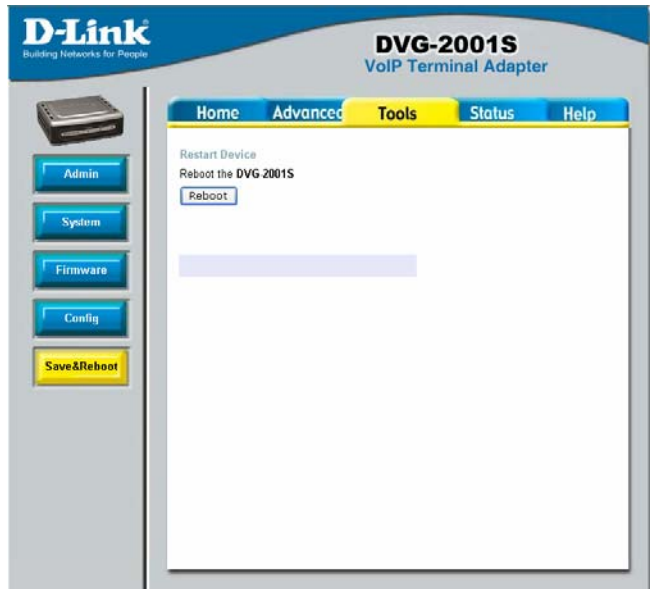

## Status > Device Info

This page displays the current information for the DVG-2001S.

The screenshot shows the web interface for the D-Link DVG-2001S VoIP Terminal Adapter. The page title is "DVG-2001S VoIP Terminal Adapter". The navigation menu includes Home, Advanced, Tools, Status (selected), and Help. The main content area is titled "Device Information" and displays the following details:

Device Type	VoIP Gateway
MAC Address	00:50:ba:0d:30:8b
Boot PROM Version	D1.0B00T
Firmware Version	D1.0S01T
DSP Version	1.3B.7

Below the Device Information section, there is a "WAN" section with the following details:

IP Address	10.1.1.1
Subnet Mask	255.0.0.0
Default Gateway	0.0.0.0

A "Help" button with a red plus icon is located in the bottom right corner of the main content area.

### WAN

**MAC Address:** MAC address of the DVG-2001S

**IP Address:** WAN/Public IP Address

**Subnet Mask:** WAN/Public Subnet Mask

**Default Gateway:** WAN/Public Gateway IP Address

## Status > Stats

The VoIP Terminal Adapter keeps a running log of events and activities occurring on the device. If it is rebooted, the logs are automatically cleared. You may save the log files under Log Settings.



Device Info

Stats

Cable Tester

Home Advanced Tools **Status** Help

Traffic Statistics

Traffic Statistics display Receive and Transmit packets passing through the DVG-2001S.

Refresh

Reset

WAN	Receive	Transmit
	packets	packets
	bytes	bytes
	NonUcastPackets	NonUcastPackets
	DiscardPackets	DiscardPackets
	FrameTooLong	HeartbeatErrors
	NonAlignedErrors	LateCollision
	CollisionErrors	RetransmissionLimit
	ShortFrames	UnderrunPackets
	CRCErrors	CarrierSenseLost
	OverrunPackets	


Phone Port Statistics

Phone Port	1	2
Channel	1	3
RxVoicePackets		2
RxMinJitter		4
RxMaxJitter		
RxRTPAvgJitter		
RxDTMFPackets		
TxVoicePackets		
TxGrantReSyncCount		
TxDTMFPackets		
MicroOverflowCount		
PktsLostByNetwork		
TxHoldDropCount		
RxHoldDropCount		

The screen above displays the Traffic Statistics. Here you can view the amount of packets that pass through the DVG-2001S on the WAN port. The traffic counter will reset if the device is rebooted or can be reset by clicking the **Reset** button. To refresh current statistics, click the **Refresh** button.

## Status > Cable Tester

The VoIP Terminal Adapter offers you to conduct a Ping test by entering the IP address in the field below and then clicking the **test** button. .

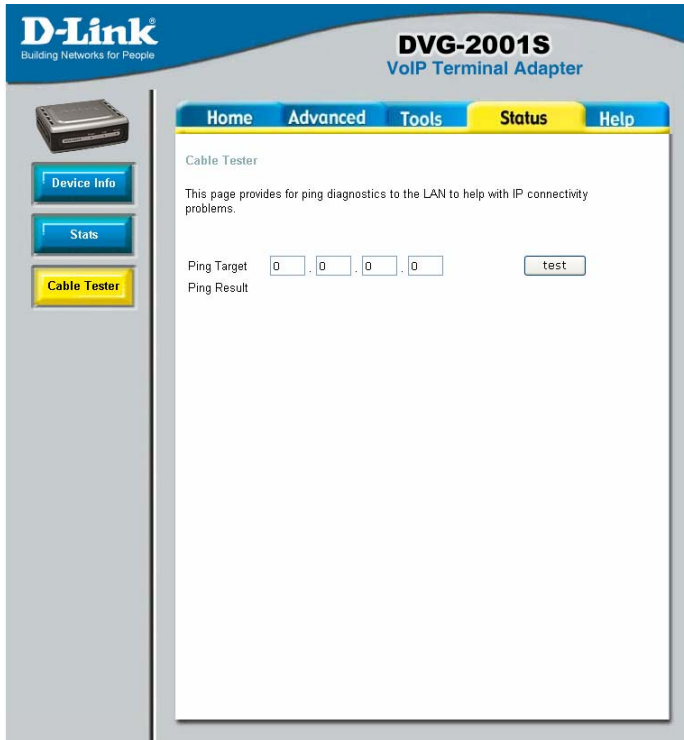

The screenshot shows the web interface for the D-Link DVG-2001S VoIP Terminal Adapter. The interface has a blue header with the D-Link logo and the product name. Below the header is a navigation menu with tabs for Home, Advanced, Tools, Status, and Help. The Status tab is currently selected. On the left side, there is a sidebar with a device image and three buttons: Device Info, Stats, and Cable Tester. The main content area is titled 'Cable Tester' and contains a description: 'This page provides for ping diagnostics to the LAN to help with IP connectivity problems.' Below this, there is a 'Ping Target' field with four input boxes containing the number '0', and a 'test' button. A 'Ping Result' label is positioned below the input fields.

**D-Link**  
Building Networks for People

**DVG-2001S**  
VoIP Terminal Adapter

Home Advanced Tools **Status** Help


Cable Tester

This page provides for ping diagnostics to the LAN to help with IP connectivity problems.

Ping Target  .  .  .

Ping Result

# Help

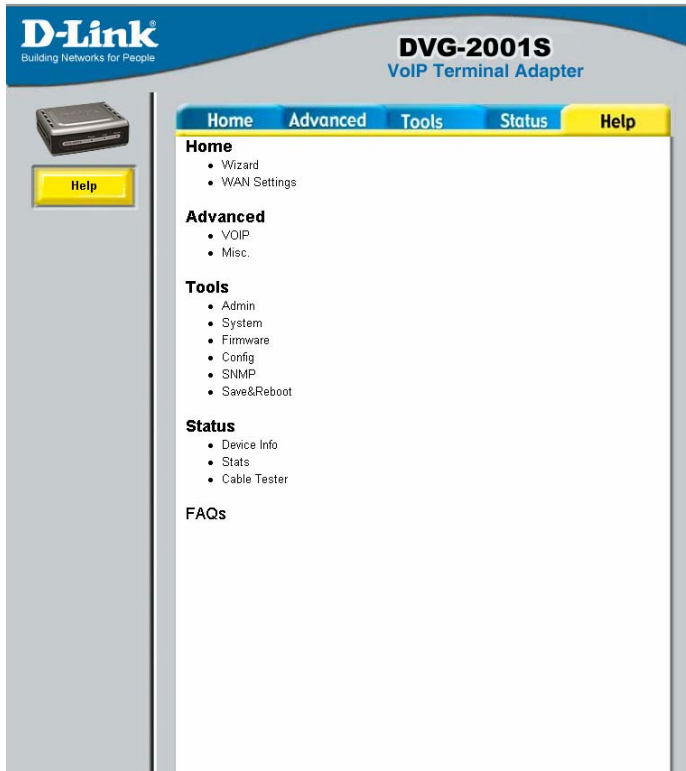

The **Help** tab will give basic information referring to various screens located in the VoIP Terminal Adapter. To view a specific section, click on its hyperlinked name. A new window of information will appear.

# Technical Specifications

## Standards:

- IEEE 802.3
- IEEE 802.3u

## Device Management:

- HTTP 1.0 Web-Based - Internet Explorer v6 or later; Netscape Navigator v6 or later; or other Java-enabled browsers
- DHCP Client
- Auto-provisioning
- Telnet
- TFTP Client
- Performance monitoring using DSP/Ethernet statistics

## Operating Temperature:

- 32°F to 131 °F (0°C to 55°C)

## Humidity Range:

- 5% to 95% Non-condensing

## Safety and Emissions:

- FCC part15

## LEDs:

- Power
- LAN
- Phone

## Physical Dimensions:

- L = 3.25 inches (82.46 mm)
- W = 3.54 inches (90 mm)

## Technical Specifications

- H = 1.22 inches (31 mm)

### Security:

- User Authentication Administration – Username/Password control for Telnet and Web configuration
- SIP Authentication
- Provisioning Security using HTTPS and SSL/TLS client certificate encryption and authentication
- VoIP NAT Traversal – SIP/STUN

### Miscellaneous:

- PPPoE (RFC 2516)

### Power Input:

- Ext. Power Supply DC 12V, 1.2A

### Weight:

- 0.1225kg

### Warranty:

- 3 year (depends on D-Link global warranty policy)

### Telephony Support:

- Call Control Protocol – SIP (RFC 3261)
- CODEC – G.711 (A-law and U-law), G.723.1 (optional), G.726, and G.729A
- Echo Cancellation – G.168
- DTMF Relay – G.711 (in band)
- FAX Support

# Frequently Asked Questions

## Why can't I access the web based configuration?

When entering the IP Address of the DVG-2001S (10.1.1.1), you are not connecting to the Internet or have to be connected to the Internet. The device has the utility built-in to a ROM chip in the device itself. Your computer must be on the same IP subnet to connect to the web-based utility, however.

To resolve difficulties accessing a web utility, please follow the steps below.

**Step 1** Verify physical connectivity by checking for solid link lights on the device.

If you do not get a solid link light, try using a different cable or connect to a different port on the device if possible. If the computer is turned off, the link light may not be on.

### What type of cable should I be using?

#### The following connections require a Crossover Cable:

Computer to Computer

Computer to Uplink Port

Computer to Access Point

Computer to Print Server

Computer/XBOX/PS2 to DWL-810

Computer/XBOX/PS2 to DWL-900AP+

Uplink Port to Uplink Port (hub/switch)

Normal Port to Normal Port (hub/switch)

#### The following connections require a Straight-through Cable:

Computer to Residential Gateway/Router

Computer to Normal Port (hub/switch)

Access Point to Normal Port (hub/switch)

Print Server to Normal Port (hub/switch)

Uplink Port to Normal Port (hub/switch)

Rule of Thumb: "If there is a link light, the cable is right."




## Frequently Asked Questions (continued)

### Why can't I access the web based configuration? (continued)


#### What type of cable should I be using? (continued)

##### What's the difference between a crossover cable and a straight-through cable?

The wiring in crossover and straight-through cables are different. The two types of cable have different purposes for different LAN configurations. EIA/TIA 568A/568B define the wiring standards and allow for two different wiring color codes as illustrated in the following diagram.

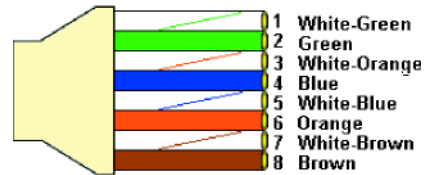

568A CABLE END

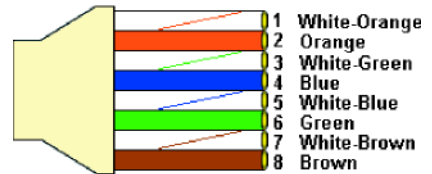

568B CABLE END

\*The wires with colored backgrounds may have white stripes and may be denoted that way in diagrams found elsewhere.

#### How to tell straight-through cable from a crossover cable:

The main way to tell the difference between the two cable types is to compare the wiring order on the ends of the cable. If the wiring is the same on both sides, it is straight-through cable. If one side has opposite wiring, it is a crossover cable.

All you need to remember to properly configure the cables is the pinout order of the two cable ends and the following rules: **A straight-through cable has identical ends** **A crossover cable has different ends**

It makes no functional difference which standard you follow for straight-through cable ends, as long as both ends are the same. You can start a crossover cable with either standard as long as the other end is the other standard. It makes no functional difference which end is which. The order in which you pin the cable is important. Using a pattern other than what is specified in the above diagram could cause connection problems.

## Frequently Asked Questions (continued)

### Why can't I access the web based configuration? (continued)

When to use a crossover cable and when to use a straight-through cable:  
Computer to Computer – Crossover

Computer to an normal port on a Hub/Switch – Straight-through

Computer to an uplink port on a Hub/Switch – Crossover

Hub/Switch uplink port to another Hub/Switch uplink port – Crossover

Hub/Switch uplink port to another Hub/Switch normal port – Straight-through


## Frequently Asked Questions (continued)

### Why can't I access the web based configuration? (continued)


**Step 2** Disable any Internet security software running on the computer. Software firewalls like Zone Alarm, Black Ice, Sygate, Norton Personal Firewall, etc. might block access to the configuration pages. Check the help files included with your firewall software for more information on disabling or configuring it.

**Step 3** Configure your Internet settings.


Go to Start>Settings>Control Panel. Double-click the Internet Options icon. From the Security tab, click the button to restore the settings to their defaults.

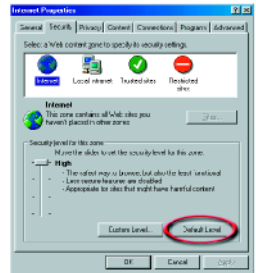

Click to the Connection tab and set the dialup option to Never Dial a Connection. Click the LAN Settings button

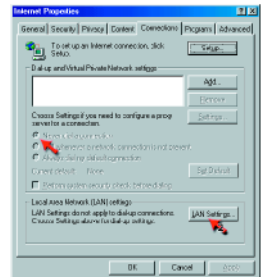


Nothing should be checked. Click OK

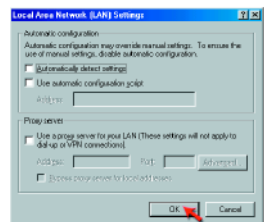

Go to the Advanced tab and click the button to restore these settings to their defaults

Click OK. Go to the desktop and close any open windows

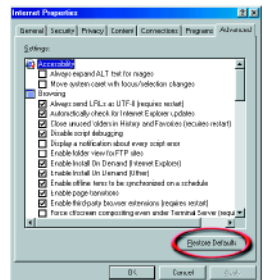

## Frequently Asked Questions (continued)

### Why can't I access the web based configuration? (continued)

**Step 4** Check your IP Address. Your computer must have an IP Address in the same range of the device you are attempting to configure. Most D-Link devices use either 10.0.0.1 or the 192.168.0.X range.

### How can I find my IP Address in Windows 95, 98, or ME?

**Step 1** Click on Start and then click on Run.

**Step 2** The Run Dialogue Box will appear. Type `winiipcfg` in the window as shown then click OK.



**Step 3** The IP Configuration window will appear, displaying your Ethernet Adapter Information.

- Select your adapter from the drop-down menu.
- If you do not see your adapter in the drop-down menu, your adapter is not properly installed.

## Frequently Asked Questions (continued)

### Why can't I access the web based configuration? (continued)



**Step 4** After selecting your adapter, it will display your IP Address, subnet mask, and default gateway.

**Step 5** Click OK to close the IP Configuration window.

**Step 4 (continued)** Check your IP Address. Your computer must have an IP Address in the same range of the device you are attempting to configure. Most D-Link devices use either 10.0.0.1 or the 192.168.0.X range.

```
D:\WINNT\system32\CMD.EXE
Microsoft Windows 2000 [Version 5.00.2195]
(C) Copyright 1985-2000 Microsoft Corp.

D:\>ipconfig

Windows 2000 IP Configuration

Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix  . : 
    IP Address . . . . . : 192.
    Subnet Mask . . . . . : 255.
    Default Gateway . . . . . : 192.

D:\>_
```

Why can't I access the web based configuration? (continued)

How can I find my IP Address in Windows 2000/XP?

Step 1 Click on Start and select Run.

Step 2 Type cmd then click OK.



Step 3 From the Command Prompt, enter ipconfig. It will return your IP Address, subnet mask, and default gateway

Step 4 Type exit to close the command prompt.

## Frequently Asked Questions (continued)

### Why can't I access the web based configuration? (continued)

**Step 4 (continued)** Check your IP Address. Your computer must have an IP Address in the same range of the device you are attempting to configure. Your D-Link device uses 10.1.1.1.

Make sure you take note of your computer's Default Gateway IP Address. The Default Gateway is the IP Address of the D-Link VoIP Terminal Adapter. By default, it should be 10.1.1.1.

## How can I assign a Static IP Address in Windows XP?

**Step 1** Click on Start > Control Panel > Network and Internet Connections > Network connections.



**Step 2** See [Step 2](#) for Windows 2000 and continue from there.

## How can I assign a Static IP Address in Windows

2000? **Step 1** Right-click on My Network Places and select Properties.

**Step 2** Right-click on the Local Area Connection which represents your network card and select Properties.

Highlight Internet Protocol (TCP/ IP) and click Properties.

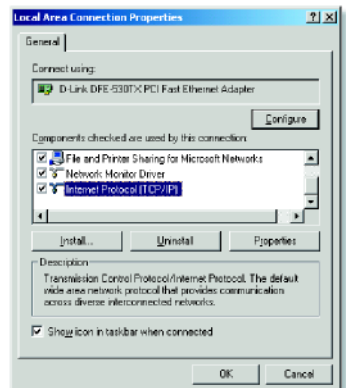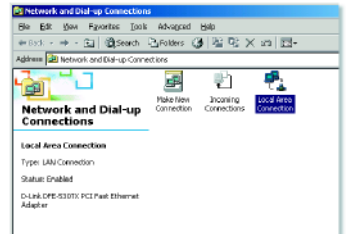

## Frequently Asked Questions (continued)

### Why can't I access the web based configuration? (continued)



## How can I assign a Static IP Address in Windows 2000? (continued)

Click "Use the following IP Address" and enter an IP Address that is on the same subnet as the LAN IP Address on your VoIP Terminal Adapter. Example: If the VoIP Terminal Adapter's LAN IP Address is 10.1.1.1, make your IP Address 10.x.x.x where x = 2-254. Make sure that the number you choose is not in use on the network.

Set the Default Gateway to be the same as the LAN IP Address of your VoIP Terminal Adapter (10.1.1.1).

Set the Primary DNS to be the same as the LAN IP address of your VoIP Terminal Adapter (10.1.1.1).

The Secondary DNS is not needed or enter a DNS server from your ISP. Click OK twice. You may be asked if you want to reboot your computer. Click Yes.

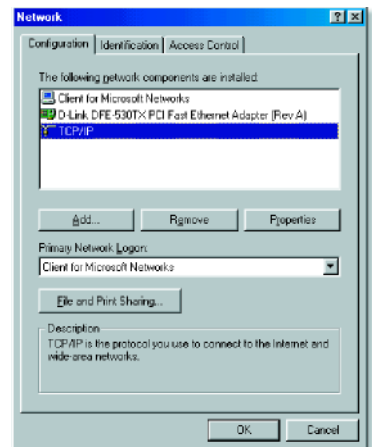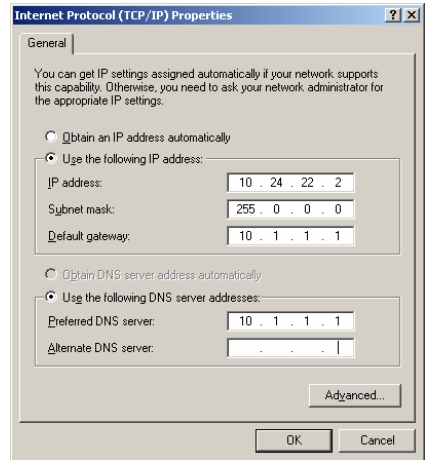



Why can't I access the web based configuration? (continued)

## How can I assign a Static IP Address in Windows 98/Me?

**Step 1** From the desktop, right-click on the Network Neighborhood icon (Win ME - My Network Places) and select Properties.


Highlight TCP/IP and click the Properties button. If you have more than one adapter, then there will be a TCP/IP "Binding" for each adapter. Highlight TCP/IP > (your network adapter) and then click Properties.

Why can't I access the web based configuration? (continued)

## How can I assign a Static IP Address in Windows 98/Me? (continued)

### Step 2 Click Specify an IP Address.

Enter in an IP Address that is on the same subnet as the LAN IP Address on your VoIP Terminal Adapter. Example: If the VoIP Terminal Adapter's LAN IP Address is 10.1.1.1, make your IP Address 10.x.x.x where x is between 2-254. Make sure that the number you choose is not in use on the network.

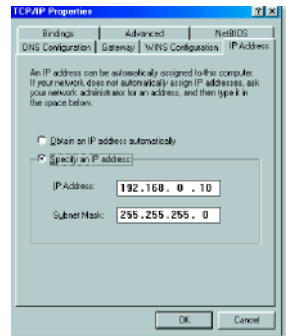

### Step 3 Click on the Gateway tab.

Enter the LAN IP Address of your VoIP Terminal Adapter here (10.1.1.1).

Click Add when finished.



### Step 4 Click on the DNS Configuration tab.

Click Enable DNS. Type in a Host (can be any word). Under DNS server search order, enter the LAN IP Address of your VoIP Terminal Adapter (10.1.1.1). Click Add.

### Step 5 Click OK twice.

When prompted to reboot your computer, click Yes.

After you reboot, the computer will now have a static, private IP Address.



## Frequently Asked Questions (continued)

### Why can't I access the web based configuration? (continued)

**Step 5** Access the web management. Open your web browser and enter the IP Address of your D-Link device in the address bar. This should open the login page for the web management. Follow instructions to login and complete the configuration.

## Frequently Asked Questions (continued)

### How can I setup my router to work with a Cable modem connection?

**Step 1** Power cycle the cable modem and router:

Turn the cable modem off (first). Turn the router off. Leave them off for 2 minutes.\*\* Turn the cable modem on (first). Wait until you get a solid cable light on the cable modem. Turn the router on. Wait 30 seconds.

\*\* If you have a Motorola (Surf Board) modem, leave off for at least 5 minutes.

**Step 2** Follow step 1 again and log back into the web configuration. Click the Status tab and click the Device Info button.

### Static Cable Connection

**Step 3** Log into the web based configuration by typing in the IP Address of the VoIP Terminal Adapter (default:10.1.1.1) in your web browser. The username is admin (all lowercase) and the password is admin (all lowercase).

**Step 4** Click the Home tab and click the WAN button. Select Static IP Address and enter your static settings obtained from the ISP in the fields provided.

If you do not know your settings, you must contact your ISP.

**Step 5** Click on Apply and then click Continue to save the changes.

**Step 6** Click the Status tab and click the Device Info button. Your IP Address information will be displayed under the WAN heading.

The screenshot displays the web configuration interface for a D-Link DVG-2001S VoIP Terminal Adapter. The interface is organized into a sidebar on the left and a main content area on the right. The sidebar contains a 'Wizard' button and a 'WAN' button. The main content area features a navigation bar with tabs for 'Home', 'Advanced', 'Tools', 'Status', and 'Help'. Below the navigation bar, the 'WAN Settings' section is active, showing three radio button options: 'Dynamic IP Address', 'Static IP Address' (which is selected), and 'PPPoE'. To the right of these options are explanatory text blocks. The 'Static IP Address' section includes several input fields: 'IP Address' (10.1.1.1), 'Subnet Mask' (255.0.0.0), 'Default Gateway' (0.0.0.0), 'Primary DNS Address' (0.0.0.0), and 'Secondary DNS Address' (0.0.0.0). At the bottom right of the configuration area, there are three buttons: 'Apply' (with a green checkmark), 'Cancel' (with a red X), and 'Help' (with a red plus sign).

## Frequently Asked Questions (continued)

### How can I setup my router to work with Earthlink DSL or any PPPoE connection?

Make sure you disable or uninstall any PPPoE software such as WinPoet or Enternet 300 from your computer or you will not be able to connect to the Internet.

**Step 1** Upgrade Firmware if needed.

(Please visit the D-Link tech support website at: <http://support.dlink.com> for the latest firmware upgrade information.)

**Step 2** Take a paperclip and perform a hard reset. With the unit on, use a paperclip and hold down the reset button on the back of the unit for 10 seconds. Release it and the router will recycle, the lights will blink, and then stabilize.

**Step 3** After the VoIP Terminal Adapter stabilizes, open your browser and enter 10.1.1.1 into the address window and hit the Enter key. When the password dialog box appears, enter the username admin and leave the password blank. Click OK.

If the password dialog box does not come up repeat Step 2.

**Note: Do not run Wizard.**

**Step 4** Click on the WAN button on left-hand side of the Home WAN screen. Select PPPoE.

**Step 5** In the username field enter ELN/[username@earthlink.net](mailto:username@earthlink.net) and your password, where username is your own username.

For SBC Global users, enter [username@sbcglobal.net](mailto:username@sbcglobal.net).

For Ameritech users, enter [username@ameritech.net](mailto:username@ameritech.net). For

BellSouth users, enter [username@bellsouth.net](mailto:username@bellsouth.net).

For Mindspring users, enter [username@mindspring.com](mailto:username@mindspring.com).

For most other ISPs, enter username.

Note: If you experience problems accessing certain websites and/or email issues, please set the MTU to a lower number such as 1472, 1452, etc. Contact your ISP for more information and the proper MTU setting for your connection.

**Step 6** Click Apply. When prompted, click Continue. Once the screen refreshes, unplug the power to the D-Link VoIP Terminal Adapter.

## Frequently Asked Questions (continued)

### How can I setup my router to work with Earthlink DSL or any PPPoE connection? (continued)

**Step 7** Turn off your DSL modem for 2-3 minutes. Turn back on. Once the modem has established a link to your ISP, plug the power back into the D-Link VoIP Terminal Adapter. Wait about 30 seconds and log back into the router.

**Step 8** Click on the Status tab in the web configuration where you can view the device info. You should now see that the device info will show an IP Address, verifying that the device has connected to a server and has been assigned an IP Address.

### Can I use my D-Link VoIP Terminal Adapter to share my Internet connection provided by AOL DSL Plus?

In most cases, the answer is yes. AOL DSL+ may use PPPoE for authentication bypassing the client software. If this is the case, then our routers will work with this service. Please contact AOL if you are not sure.

To set up your VoIP Terminal Adapter:

**Step 1** Log into the web-based configuration (10.1.1.1) and configure the WAN side to use PPPoE.

**Step 2** Enter your screen name followed by @[aol.com](http://aol.com) for the user name. Enter your AOL password in the password box.

**Step 3** You will have to set the MTU to 1400. AOL DSL does not allow for anything higher than 1400.

**Step 4** Apply settings.

**Step 5** Recycle the power to the modem for 1 minute and then recycle power to the router. Allow 1 to 2 minutes to connect.

If you connect to the Internet with a different Internet service provider and want to use the AOL software, you can do that without configuring the VoIP Terminal Adapter's firewall settings. You need to configure the AOL software to connect using TCP/IP.

Go to <http://www.aol.com> for more specific configuration information of their software.

# Technical Support

You can find software updates and user documentation on the D-Link website.

D-Link provides free technical support for customers within the United States and within Canada for the duration of the warranty period on this product.

U.S. and Canadian customers can contact D-Link technical support through our website, or by phone.

## Tech Support for customers within the United States:

### ***D-Link Technical Support over the Telephone:***

(888) 843-6100

Hours of Operation: 8:00AM to 6:00PM PST

### ***D-Link Technical Support over the Internet:***

<http://support.dlink.com>

email:[support@dlink.com](mailto:support@dlink.com)

## Tech Support for customers within Canada:

### ***D-Link Technical Support over the Telephone:***

(800) 361-5265

Monday to Friday [7:30am](#) to [12:00am](#) EST

### ***D-Link Technical Support over the Internet:***

<http://support.dlink.ca>

email:[support@dlink.ca](mailto:support@dlink.ca)