



DHN-1000

*HomeLink PhoneLine
to Ethernet Bridge*
User's Manual

Table of Contents for the DHN-1000 HomeLink Phoneline to Ethernet Bridge

Introduction	i
Contents of Package	ii
Ethernet Technology	1
Networking with DHN-1000	2
Getting to Know your DHN-1000	3
Installation	4
Troubleshooting	10
Networking Basics	13
Technical Support	40
Specifications	41
Warranty	43
Registration	48

INTRODUCTION

Thank you for purchasing D-Link's **DHN-1000** HomeLink Phoneline to Ethernet Bridge.

The DHN-1000 simplifies Ethernet to Home phone line networking.

Being compatible with HPNA 2.0, Internet sharing has never been easier through your Broadband Cable/xDSL modems.

A stand-alone device, the DHN-1000 is completely independent of any Operating system.

The DHN-1000 has one RJ-45 10/100 NWay, and one RJ-11 HPNA 2.0 connection.


You simply connect both ends, and you're in business! There is no software to configure.

The DHN-1000 is targeted for the home or small office.


CONTENTS OF PACKAGE




C

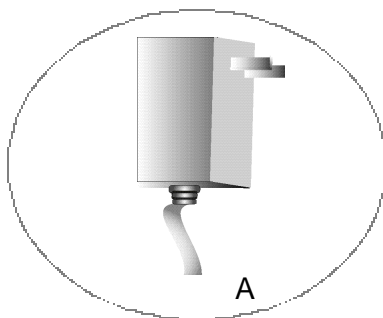

A

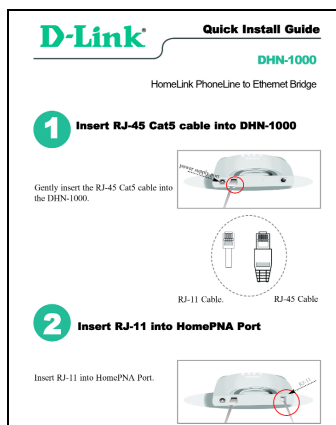

D

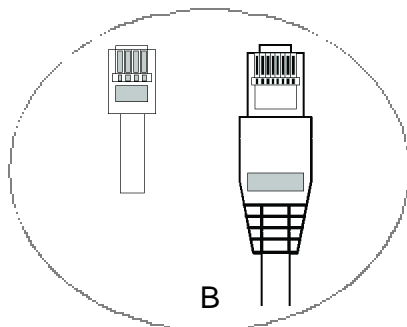

B

DHN-1000 HomeLink PhoneLine to Ethernet Bridge

A	Power Supply
B	Cables: RJ-45; RJ-11
C	User's Manual
D	Quick Install Guide

ETHERNET TECHNOLOGY

Networking today has opened a whole new world in data communications. Networking is simply connecting individual computers in a way so that they can share resources such as files, applications, and peripherals connected to the Local Area network (LAN). The most popular and cost efficient type of network is an "Ethernet" network, which has created a large abundance of Ethernet products on the market today.

A Local Area Network is the most convenient way to share information and resources. A LAN is a network that covers a "local" area, like a floor or building. It let's you easily transfer files between PCs, share printers, and share a Cable or DSL modem among several users.

The basic components of a network are: PC's, Cables, Network Interface Cards (NICs), Hubs or Switches, and Network Operating Systems (NOS).


Functions and Features:

One RJ-45 NWAY Auto sensing Ethernet port


One RJ-11 HomePNA port

Power Adapter

Networking with DHN-1000

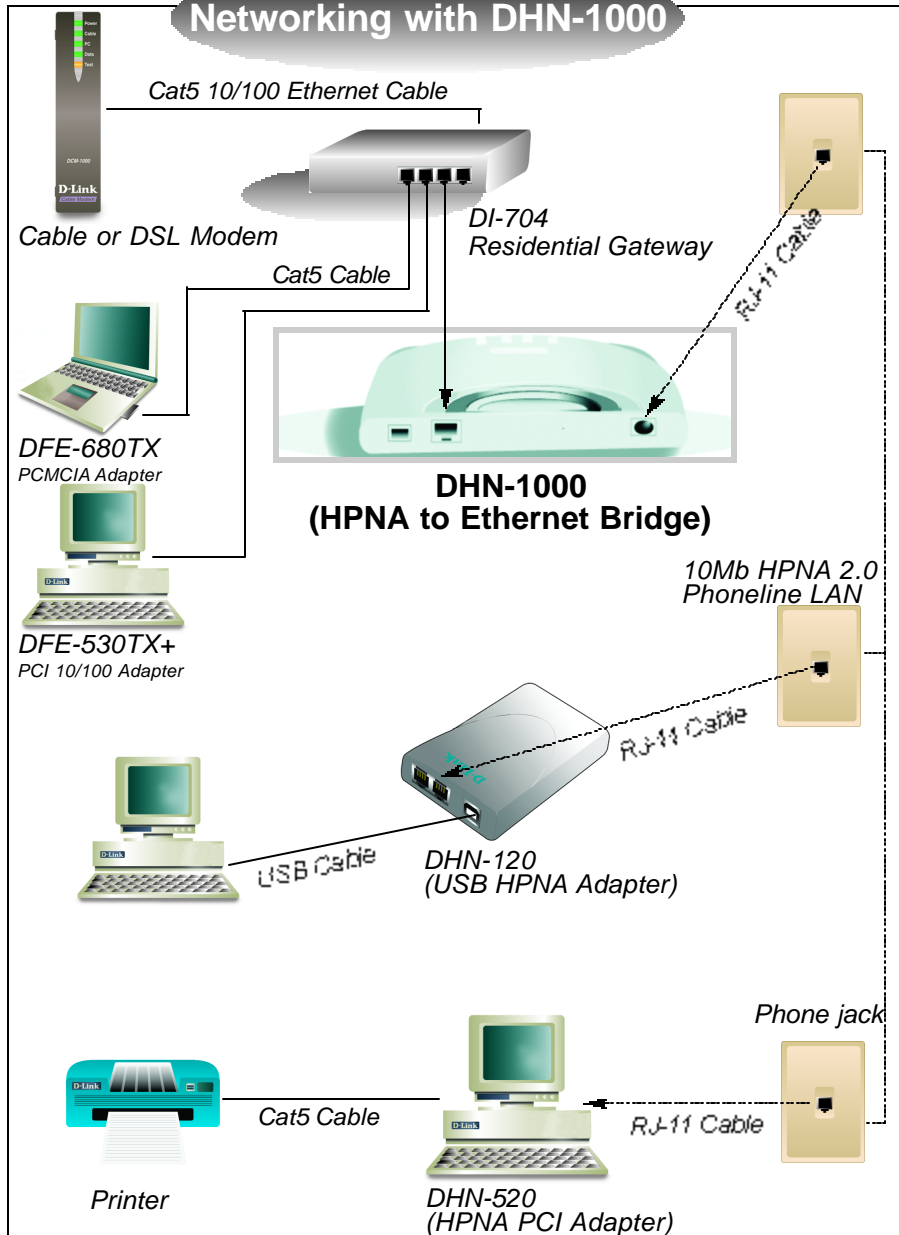


GETTING TO KNOW YOUR DHN-1000 HPNA 10 Mb BRIDGE

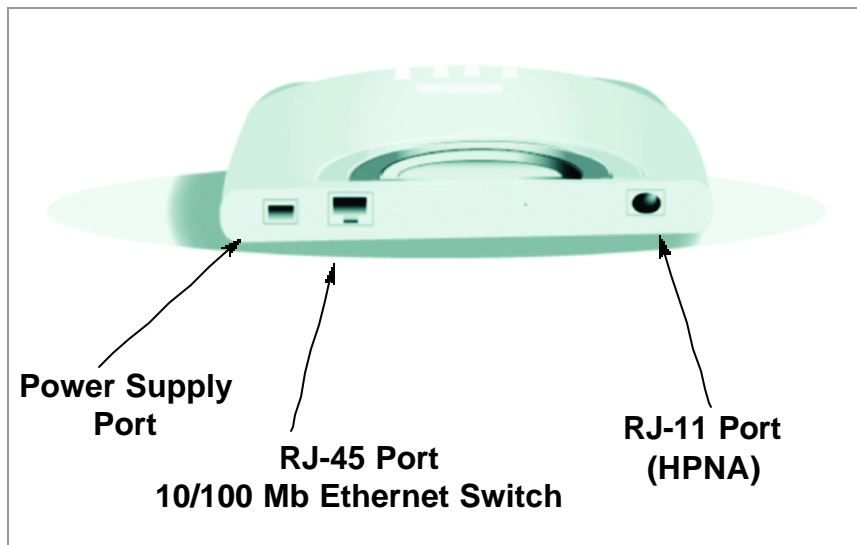

- HPNA 2.0** HPNA 2.0 RJ-11 port. Connect to your RJ-11 tele phone line outlet.
- LAN** Connect to an Ethernet PC or Residential Gateway 10/100Mb RJ-45 port.
- Power** Connect your power suply to your DHN-1000 Bridge

INSTALLATION

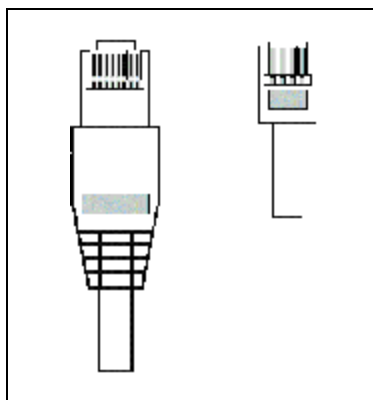

RJ-45 Cable **RJ-11 Cable**
(Ethernet) (telephone)

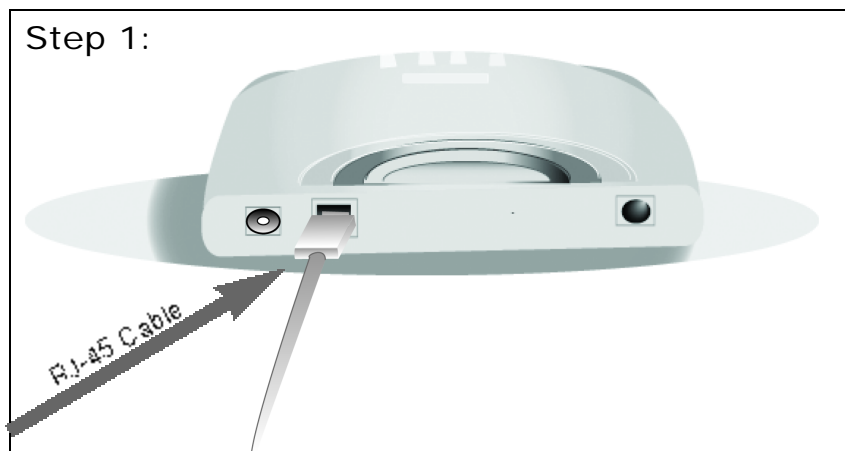


Figure 1 - Gently insert the RJ-45 Cat5 cable into DHN-1000

INSTALLATION continued

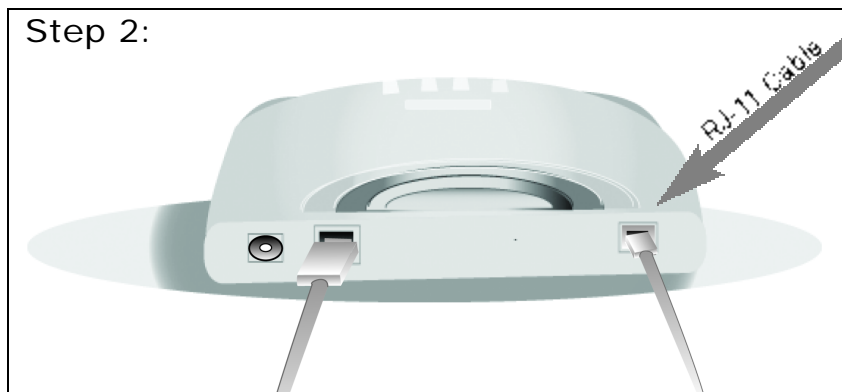


Figure 2 - Insert RJ-11 into HomePNA Port

INSTALLATION continued

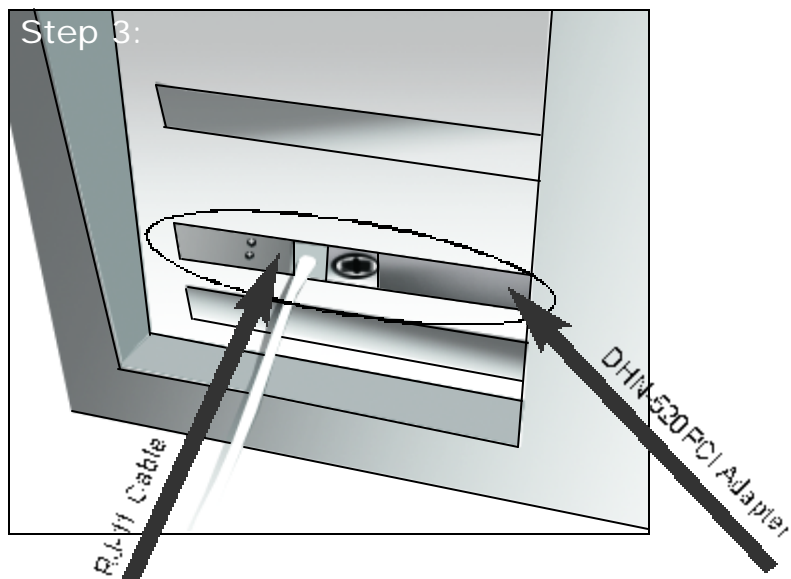


Figure 3 - Install DHN-520 HomePNA adapter into the PC and connect RJ-11

INSTALLATION continued

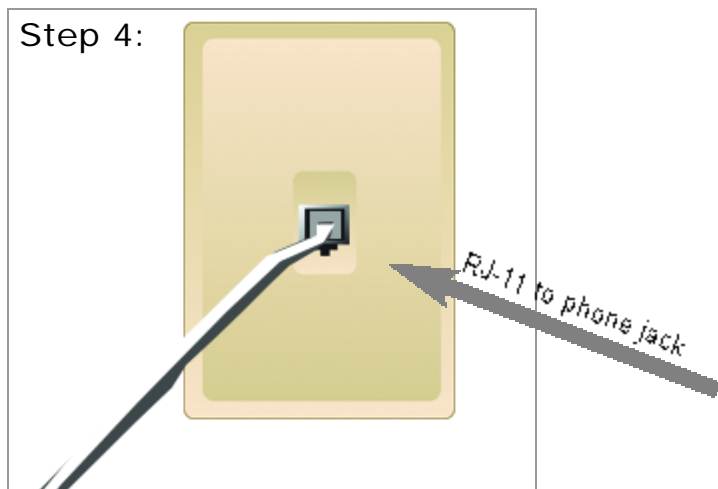


Figure 4 - Connect the RJ-11 phone line from your DHN-1000 to your existing phone line outlet.

INSTALLATION continued


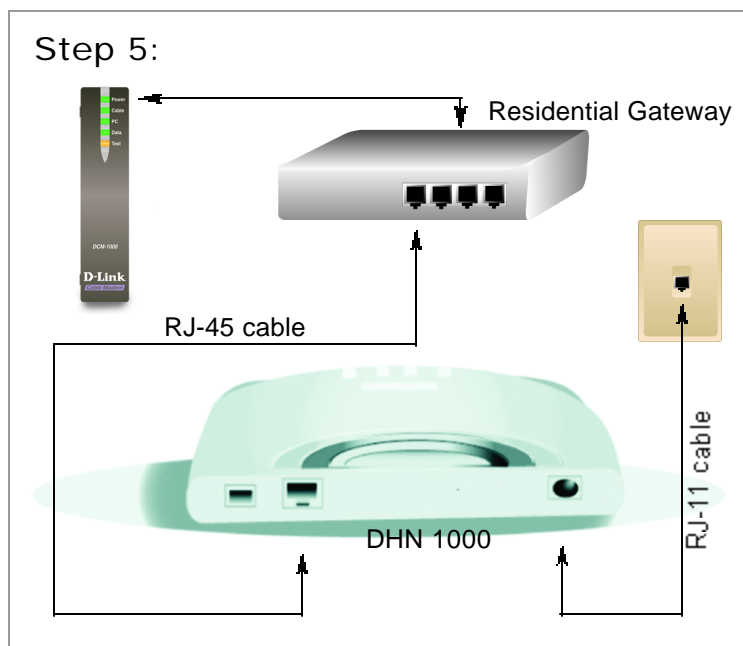


Figure 5- Connect the DHN-1000 Ethernet port to a DI-704 Residential Gateway.

INSTALLATION continued

Figure 6 - DHN-1000 Indicator lights

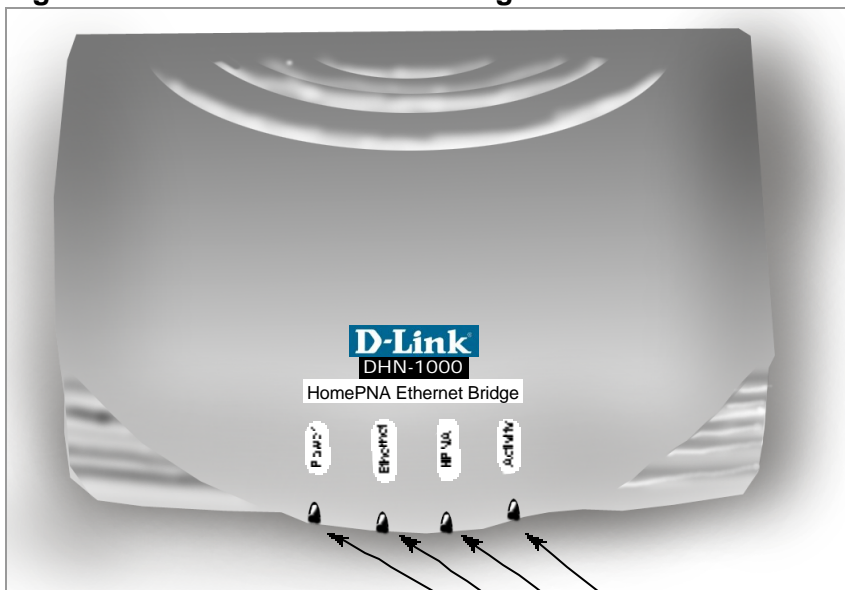


- Power indicator —
- Ethernet port indicator —
- HPNA HomePNA port —
- Activity indicator, *(when blinking it shows network activity)* —

TROUBLESHOOTING

Computer Networking can be easy to install and maintain, giving the user the ability to share and transfer files. Occasionally, network problems arise and the user is faced with having to troubleshoot the network problem. Taking the best approach to trouble shooting a network problem is to start at the very simplest level and work your way up.

On the following pages we have covered common troubleshooting situations. Please read the following section. (Please see the disclaimer on page 43).

UNDERSTANDING INDICATORS

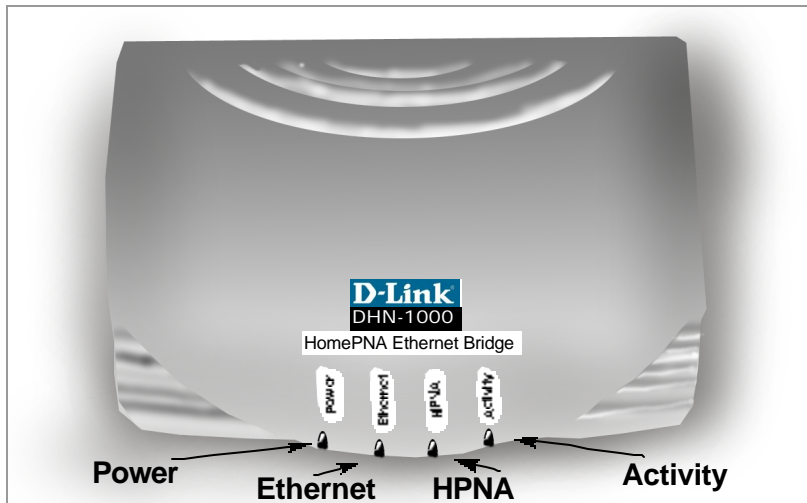

Indicator Lights:

- | | |
|-----------------|---|
| Power | The power LED will light up when DHN-1000 is powered up. |
| Ethernet | Will light up when corresponding port is sending data over the network. |
| HPNA | Will light when HPNA to Ethernet is being bridged. |
| Activity | Will light up when there is network activity. |

TROUBLESHOOTING

Problem 1: The LEDs on my DHN-1000 are not lighting up.

Solutions

- ● Make sure the DHN-1000 bridge is plugged into a power strip.
- ● Make sure that your HPNA network does not exceed 1,000 feet. If your HPNA PC's are more than 1,000 feet apart, your network performance may be diminished, which may result in data loss.
- ● Make sure that your RJ-45 cable is properly inserted into the DHN-1000's Ethernet port as well as your Gateway or Switch.

Problem 2: My DHN-1000 is not working.

Solutions

- ● Make sure the Cat5 cable from the Gateway to the DHN-1000 is in good condition.
- ● When connecting the bridge to your PC, Switch or Gateway, make sure all your network devices are powered down. Connect all cables to your devices, then power on.

Problem 3: Cannot get connected to the LAN network using only a 10/100Mb Ethernet NIC card and HPNA 2.0 PCI or USB adapters.

Solutions

- ● Make sure that your Cat5 cable is in good working order.
- ● Check for proper configuration of your 10/100 and DHN-520 adapters in your Network Neighborhood properties.

TROUBLESHOOTING

Problem 3:continued

Solutions

(Please refer to the Network basics for proper configuration)

- Refer to pages 14 & 15 under Computer Identification and Workgroup name.
- Refer to pages 27 thru 39 for configuring both dynamic and static addresses for TCP/IP.

Note: A “cross-over” or “straight-through” cable can be used on the DHN-1000 Ethernet port. The DHN-1000 will auto-detect a “straight-through” or “cross-over” cable, and make the appropriate connections.

Problem 4: What if I can't connect to the network and suspect a faulty RJ-11 cable.

Solution

- You may wish to plug a standard phone into an active phone jack to test both the line and the cable.

Note: Theoretically, 30 PC's are the maximum accommodated on the network, with the entire length of cable not exceeding 150 meters (500 feet). However, **due to phone line conditions, D-Link recommends 5 to 10 PC's on your HPNA network.**

Note: After installing a 10/100 NIC card, make sure that the card and hub both have “link lights” when connected.

Check for proper installation of HPNA PCI and HPNA USB adapters in your Operating System.

NETWORKING BASICS

You may have had some ideas about how to use your new network prior to installing this kit - sharing files, printing from an computer on the network, or accessing the Internet on multiple computers with one connection. This section will help you get started on those ideas or even give you some new ones. However, this section is not intended to be a comprehensive guide to networking, it is just an outline of a few networking basics.

If you are interested in learning more about networking, we have identified some Internet resources that may be of interest:

D-Link Systems, Inc.

<http://www.dlink.com>

D-Link is one of the largest manufacturers of Ethernet products in the world. D-Link's technological expertise and dedication to providing quality products at a low price makes D-Link a good place to watch for the newest in networking innovations. Or, you may want to get the newest drivers available for your Network Adapters.

NETWORKING BASICS


Computer Identification

If you had previously given your Windows 98 computers names or if you are using Windows 98, you may need to verify that each computer has a unique name and common workgroup name.

A. On your Desktop, right-click the icon "Network Places" and select "Properties" from the context menu.



B. Click the "Identification" tab on the top of the dialog box.

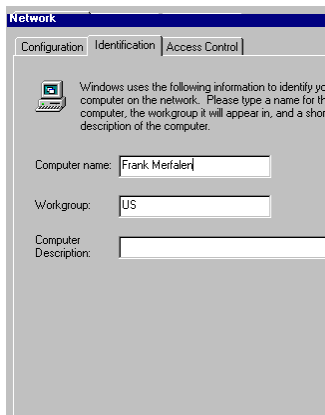

NETWORKING BASICS

Computer Identification

- C. Type a unique, identifying name for this particular computer in the "Computer name:" box. This will be the name that other computers on your network will use to communicate with this computer. Each computer's name must be unique on a particular network or confusion will result. (The computer's name should be 15 or fewer characters with no spaces.)
- D. Type the workgroup name this computer will be a part of in the "Workgroup:" box. All of the computers on your network should have an identical Workgroup name.
- E. The "Computer Description:" box is optional. You may enter a description that will help you identify this computer on your network. Then click "Close".
- F. Repeat this process for each computer on your network to ensure that they all have a unique "Computer Name" and identical "Workgroup".

NETWORKING BASICS


Sharing Files

With your computers connected together on a network, you may now open and save files on another computer. You will be able to specify particular folders or disk drives to "share" and even password protect them. The steps below will enable you to share specific files and folders with other computers on your network.

- A. On your Desktop, right-click the icon "Network Places" and select "Properties" from the context menu.



- B. This dialog box is where you will come to configure most of your computers network settings. It is also available through the "Network" icon in the Control Panel.

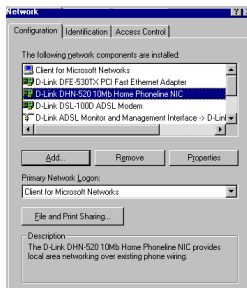


- C. Click the "File and Print Sharing-" button.

NETWORKING BASICS

Sharing Files

D. Click to place a check mark next to "I want to be able to give others access to my files."

E. Click "OK" on the "File and Print Sharing" dialog box.

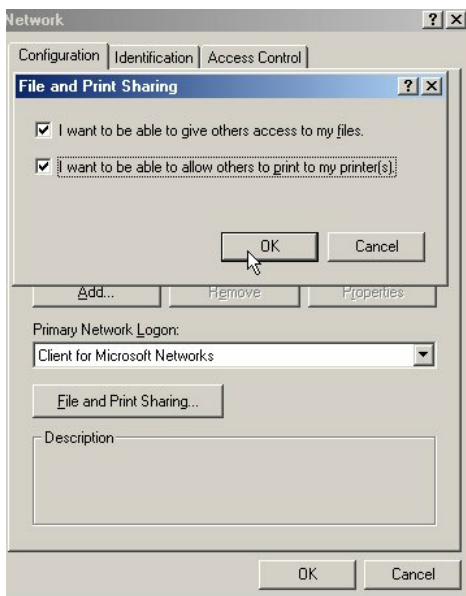


F. Click "OK" on the "Network" dialog box.

G. Provide the Windows 98 installation CD or diskette(s) if prompted or direct Windows to the proper location of the installation files. Reboot if prompted.

NETWORKING BASICS

Sharing Files


- H. You will now be able to identify a particular folder or disk drive to share. You may want to share a folder that both you and a colleague/family member needs to access occasionally. Or, maybe you want to share a CD-ROM drive so your other computer that does not have one can read CD's. Both of these processes are the same. Only the disk drives and folders that you specifically identify as shared will be accessible to other computers on your network.
- I. Find the disk drive or folder you want to share with Windows Explorer or the "My Computer" icon on your desktop.
- J. Right-click on the disk drive or folder icon and select "Sharing."

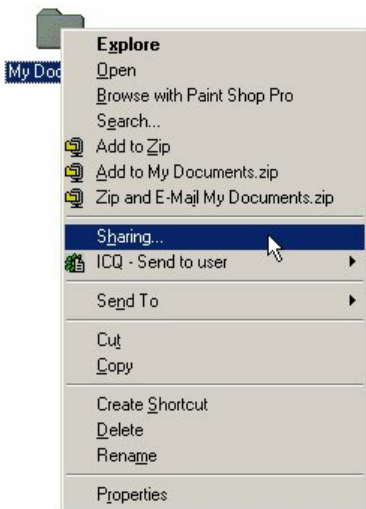

NETWORKING BASICS

Sharing Files

K. Select "Share As:" to set the parameters for sharing this particular disk drive or folder.

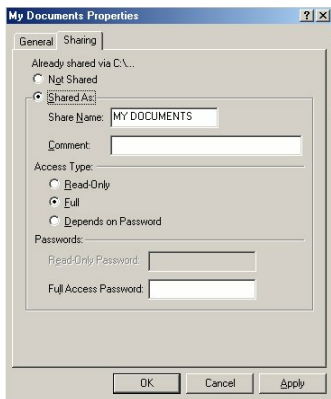

L. The "Share Name:" box is used to identify the disk drive or folder you are sharing to other computers on the network. You can give it any name you wish. However, a specific identification may help as more resources on your network are shared.

M. The "Comment:" box is optional. You can use this box to further describe the disk drive or folder for others on the network.

N. "Access Type:" allows you to designate how much someone else on the network can do with this disk drive or folder. "Read-Only" allow others to only look at or open the files on the disk drive or in the folder. "Full" allows other to read, write, open, save, copy, move, and delete files on the disk or in the folder. "Depends on Password" gives other computers access conditional upon the password they provide.

NETWORKING BASICS

Sharing Files

- O. "Passwords:" allow you to apply a level of security to your shared disk drives and folders. Another computer (user) will be required to enter the password you designate here before accessing the disk drive or folder. Two passwords are used to give two levels of security (or access) to others on the network using the "Depends on Password" setting. Leaving the "Password" boxes empty gives everyone on the network access to the disk drive or folder.
- P. Click "OK" to continue. You will be prompted to enter the password(s) you provided for verification. Retype the password(s) just as you entered them the first time.

NETWORKING BASICS

Sharing Files

- Q. You may now access this disk drive or folder from another computer on your network. Do so by double-clicking the "My Network Places" icon on your desktop or inside Windows Explorer.
- R. Navigate to the computer with the shared disk drive or folder (recognized by the "Computer Name" you provided), double-click. You should now see the disk drive or folder, double-click. If you specified a password when sharing this disk drive or folder, you will be prompted for the password.
- S. You can access a disk drive or folder shared over the network from most Windows applications. To make this process easier, Windows allows you to map these disk drives and folders to a drive letter on another computer. For example, on a computer where you are accessing a shared folder from another computer, inside Windows Explorer right-click and select "Map Network Drive." You will then be able to assign an available drive letter. Checking "Reconnect at logon" allows Windows to map this network drive each time you start your computer.

NETWORKING BASICS

Sharing Printers

"Sharing" a printer connected to one computer with other computers on your network can be very convenient - allowing you to print from any computer on the network. The steps below will enable you to print with other computers on your network.

- A. On your Desktop, right-click the icon "Network Places" and select "Properties" from the context menu.




NETWORKING BASICS

Sharing Printers

B. Click the "File and Print Sharing-" button.

C. Click to place a check mark next to "I want to be able to allow others to print to my printer(s)."

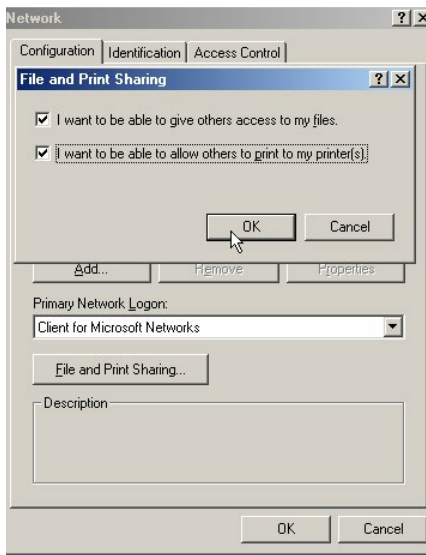


D. Click "OK" on the "File and Print Sharing" dialog box.

E. Click "OK" on the "Network" dialog box.

NETWORKING BASICS

Sharing Printers

F. You may now share any installed printers connected to this computer with other computers on your network.

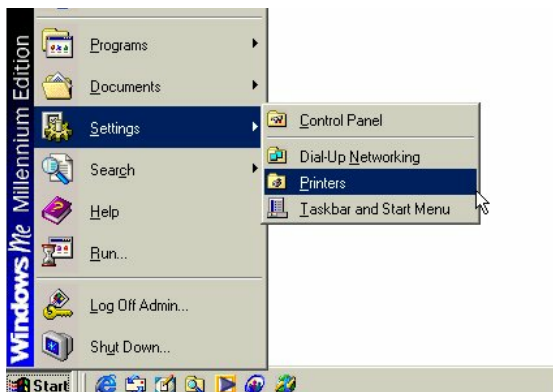

From the Start select Setting then select "Printers".

Right click on the printer you want to share with others on the network and select "Sharing."

G. Click "Share As:" and provide a "Share Name:" to identify the printer to other computers on the network. "Comment:" and "Password:" are optional. Then click "OK".

For a computer to access a Network Printer, the device driver or software for that printer must be installed and pointed to the proper location of the printer. This is done much the same way you installed the printer on the computer it is connected to.

H. Go to a computer that does not have the printer connected to it. From the "Start" button on the Task Bar select "Settings" and then "Printers".

I. Double click the "Add Printer" icon.

J. The "Add Printer Wizard" will appear. Click "Next >".


NETWORKING BASICS

Sharing Printers

K. Choose "Network printer" and click "Next >".

L. Now you will identify the location of the Network Printer.

If you know the name of the computer and the share name of the printer, you can type it into the "Network path or queue name:" box. However, it is easier to click the "Browse-" button and navigate to the location of the printer. Click "OK" when you have selected the desired printer. Finish the installation by continuing the "Add Printer Wizard" normally.

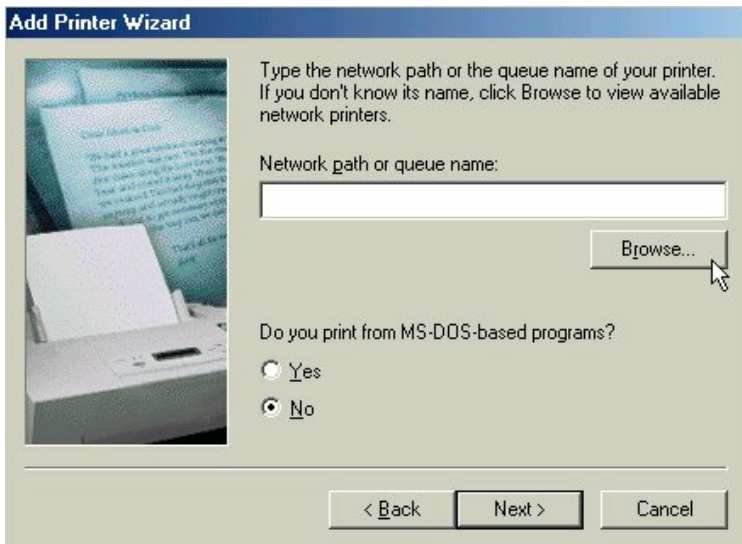


M. You may now use the Network Printer as if it was connected directly. Note: the computer that the printer is connected to must be on to use the printer. If you find this inconvenient, devices known as Network Print Servers are available from D-Link including the DP-301 and DP-101P. A Network Print Server would allow you to directly connect your printer to your network without worrying about which computer is 'on'.


NETWORKING BASICS

How to Install TCP/IP

Go to **START > Settings > Control Panel**

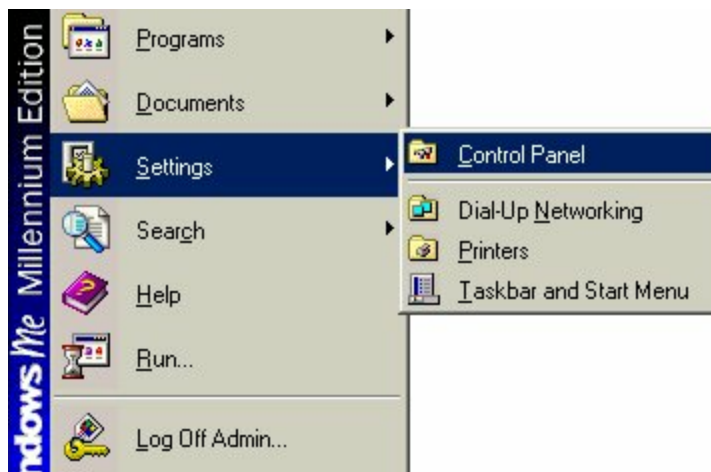

Double click on “Network”.

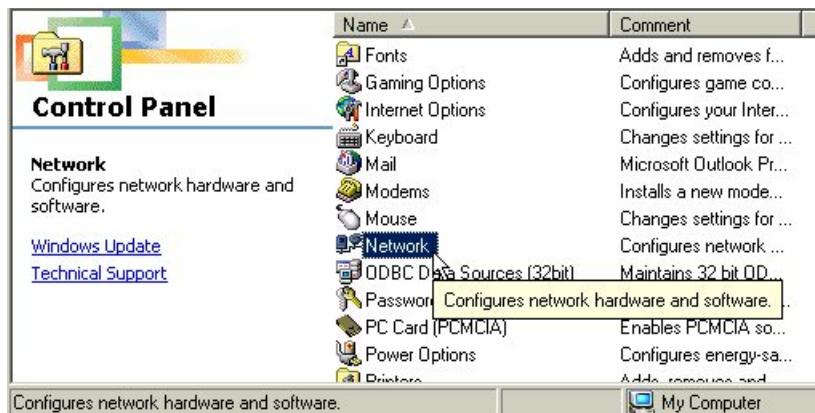


NETWORKING BASICS


How to Install TCP/IP

Select the “D-Link DHN-520 10Mb Home Phoneline NIC”

Click on “Add”

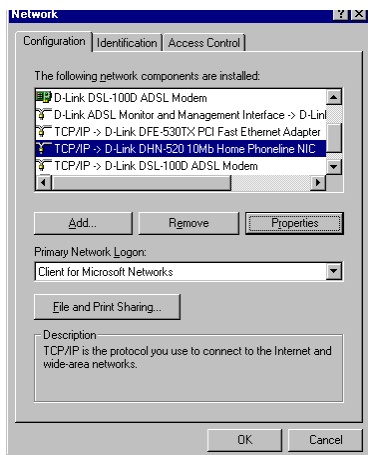

Select “Protocol”

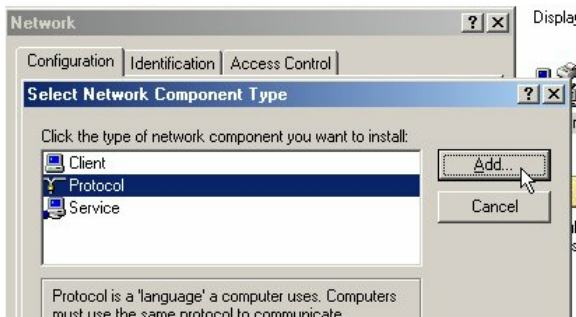

Click “Add”

NETWORKING BASICS

How to Install TCP/IP

Select “Microsoft”

Scroll down and Select “TCP/IP”



Click “Ok”

Now the “TCP/IP for D-Link DHN-520 HPNA Adapter” will be available.

The TCP/IP Installation is now complete.


NETWORKING BASICS

Configuring a Dynamic IP Address


When the drivers are installed, the default setting is set to obtain IP dynamically through a DHCP server.

If you need to check or change the settings, then do the following:

Go to **START > Settings > Control Panel**

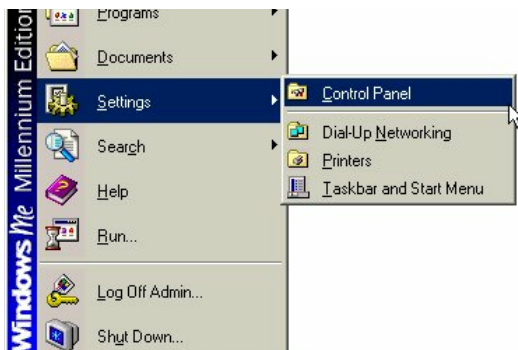

Double Click on “Network”

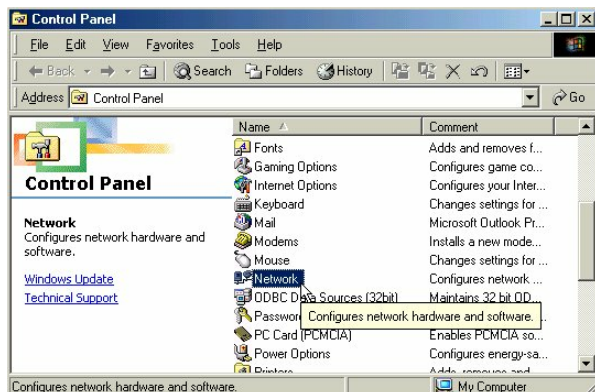


NETWORKING BASICS

Configuring a Dynamic IP Address

Highlight TCP/IP for the DHN-520

Click on “Properties”

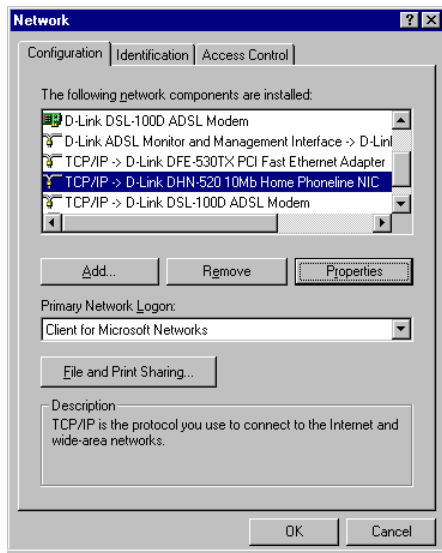


NOTE: *If TCP/IP is not present see Section 1: “How to Install TCP/IP”.*

NETWORKING BASICS

Configuring a Dynamic IP Address

When the TCP/IP window opens, choose “IP Address” tab.
Select “Obtain an IP Address Automatically”

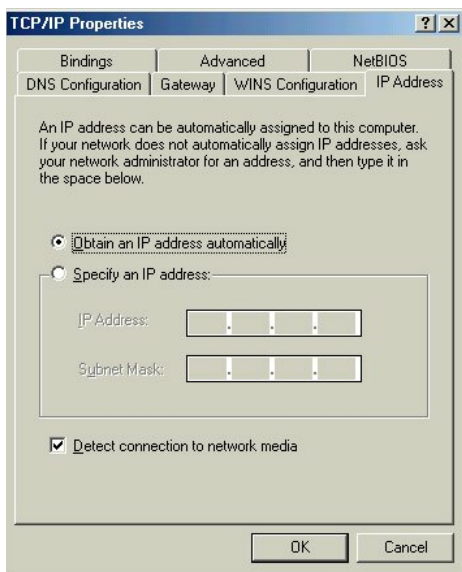

Click “OK”


When the network properties window comes back up, click “OK”.

Windows will ask you to reboot and click “Yes”.


NETWORKING BASICS

Configuring a Static IP Address

Go to **START > Settings > Control Panel**

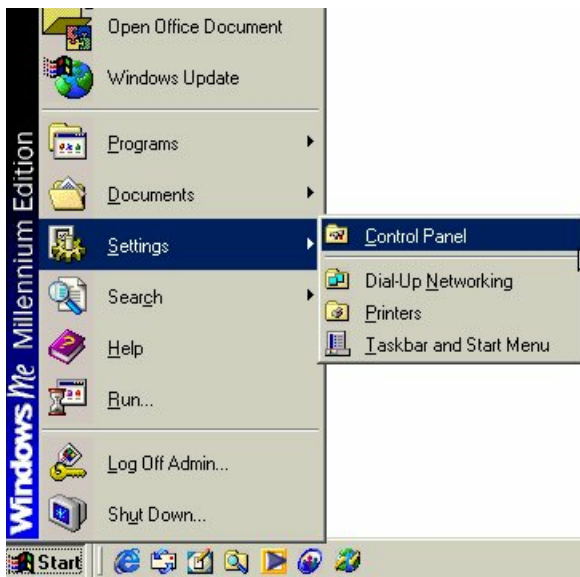

Double Click on “Network”

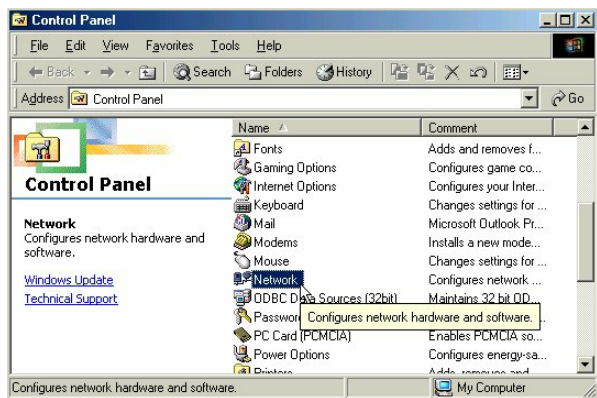


NETWORKING BASICS

Configuring a Static IP Address

Highlight TCP/IP for the DHN-520

Scroll down if you cannot see it

Click on “Properties”

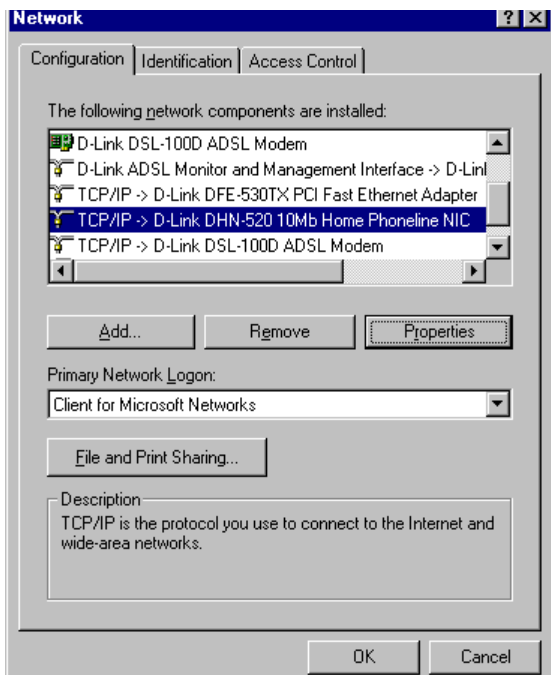


NOTE: If TCP/IP is not present see Section 1: “How to Install TCP/IP”.

NETWORKING BASICS

Configuring a Static IP Address

When the “TCP/IP Properties” window opens,
choose “IP Address” tab

Select “Specify an IP address”

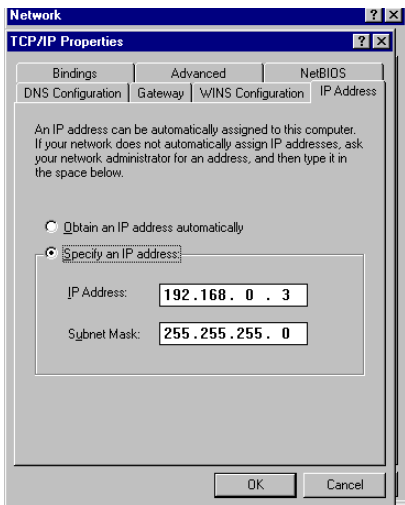

Enter an IP address into the empty field.

NOTE: *IP Addresses must be assigned sequentially to each computer.*

Suggested Subnet Mask of 255.255.255.0

Click “OK”.

When the “Network Properties” window comes back up click “OK”.

Insert Windows CD if prompted.


Windows will ask you to reboot and click “Yes”.

NETWORKING BASICS

Checking TCP/IP Address of the Wireless Adapter

Click on the Start button and click "Run".


Figure 11 - Start > Run

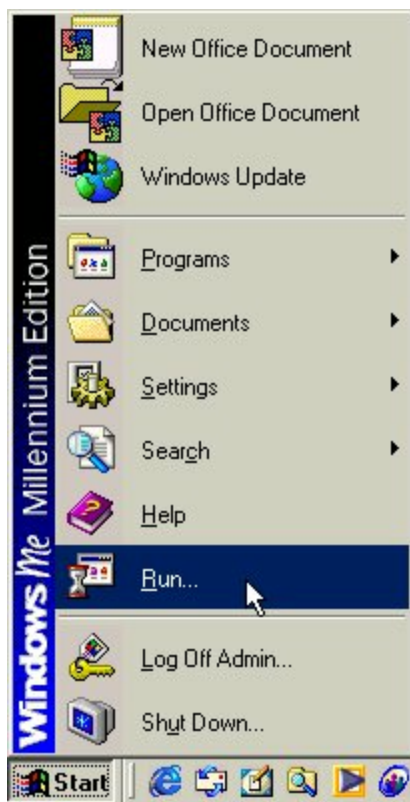


NETWORKING BASICS

Checking TCP/IP Address of the Wireless Adapter

Type "winipcfg" in the "Open" box.

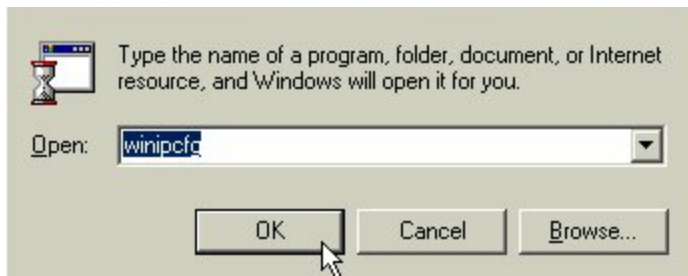


Click "OK". The IP Configuration screen will be displayed. The IP address will be displayed in the IP Address box.

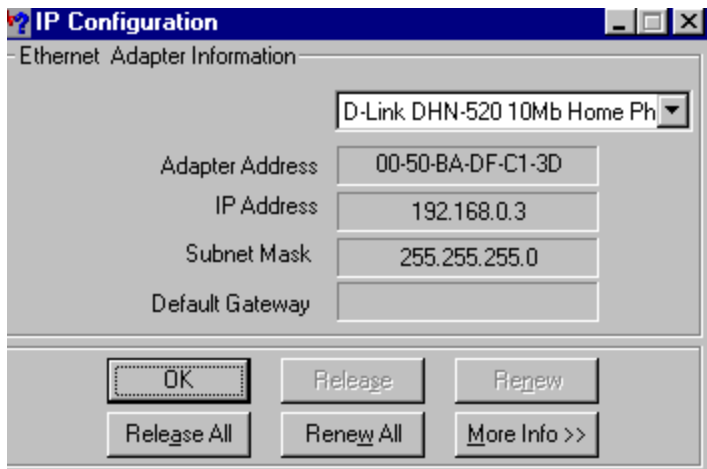

NETWORKING BASICS

Checking TCP/IP Address


Click on "More Info" to display additional IP information.

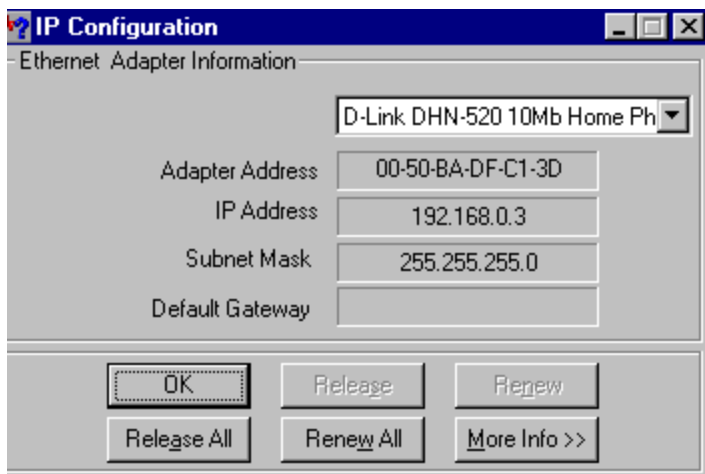


NETWORKING BASICS

Checking the Connection by Ping

Click on the Start button and click "Run".

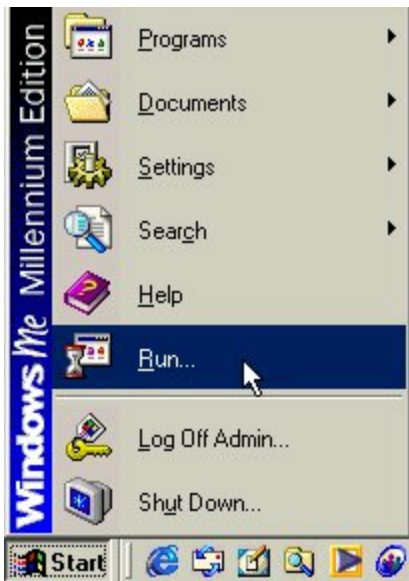

Type "command" in the "Open" box.

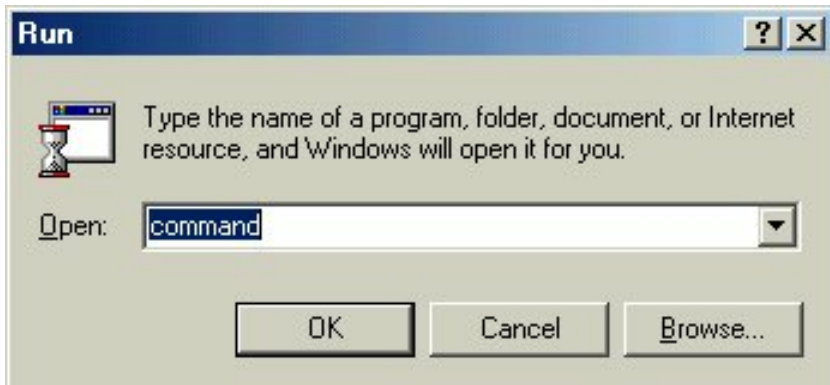


Click "OK" to get to a DOS prompt.

NETWORKING BASICS

Checking the Connection by Ping

Type "ping 192.168.0.3", which is the IP address of the Gateway in this case, and hit the "Enter" key.

A successful ping will show four replies

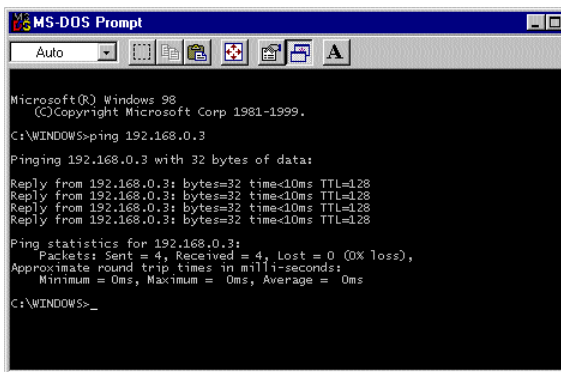

```
Microsoft(R) Windows 98
(C)Copyright Microsoft Corp 1981-1999.
C:\WINDOWS>ping 192.168.0.3
Pinging 192.168.0.3 with 32 bytes of data:
Reply from 192.168.0.3: bytes=32 time<10ms TTL=128
Reply from 192.168.0.3: bytes=32 time<10ms TTL=128
Reply from 192.168.0.3: bytes=32 time<10ms TTL=128
Reply from 192.168.0.3: bytes=32 time<10ms TTL=128
Ping statistics for 192.168.0.3:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms
C:\WINDOWS>_
```

CONTACTING TECHNICAL SUPPORT

D-Link provides free technical support. North American customers can contact D-Link technical support through our web site, e-mail, or by phone. North American technical support is available Monday through Friday from 6:00 a.m. to 6:00 p.m. (PST).

Web:

<http://www.dlink.com>

E-mail:

support@dlink.com

Phone:

949-788-0805 (option #4)

Thank you for purchasing the D-Link DHN-1000. We like to receive feedback from our customers concerning our products. Please take a moment to visit our web site. You can register your purchase on-line, learn more about the newest net working products, and let us know the things your new net work has empowered you to do.

TECHNICAL SPECIFICATIONS

Product Name: **D-Link DHN-1000**

Standards:

- HomePNA 1.0
- HomePNA 2.0
- IEEE 802.3; IEEE 802.3u

:

Ports:

- RJ-11
- RJ-45

Speed:

- 1MB HomePNA 1.0
- 10MB HomePNA 2.0
- 10BaseT 10 or 20 Mbps
- 100BaseTX 100 or 200 Mbps

Power Consumption:

- 1.1 watts (Maximum)

LEDs:

- Power Indicator
- Ethernet
- Link
- TX/RX

PCB Layers:

- 2 layers

Temperatures:

- Storage: -25degrees to 55 degreesC(-13 to 131 degrees F)
- Operating: 0 degrees to 55 degrees (32 to 122 degrees F)

Humidity:

- 10% to 90%

EMI Compliance:

- FCC Class B
- VCCI Class B
- CISPR B
- Canada ICES-003, Class B
- C-Tick

Copyright ©2000 D-Link, all rights reserved. D-Link, DWL-1000AP, DWL-500, and DWL-650 are registered trademarks of D-Link. Microsoft Windows 98, Windows 2000, and Windows NT are trademarks of the Microsoft Corporation. All other trademarks are registered trademarks or trademarks of their respective holders. All specifications are subject to change without notice.

LIMITED WARRANTY

D-Link Systems, Inc. ("D-Link") provides this limited warranty for its product only to the person or entity who originally purchased the product from D-Link or its authorized reseller or distributor.

Limited Hardware Warranty: D-Link warrants that the hardware portion of the D-Link products described below ("Hardware") will be free from material defects in workmanship and materials from the date of original retail purchase of the Hardware, for the period set forth below applicable to the product type ("Warranty Period") if the Hardware is used and serviced in accordance with applicable documentation; provided that a completed Registration Card is returned to an Authorized D-Link Service Office within ninety (90) days after the date of original retail purchase of the Hardware. If a completed Registration Card is not received by an authorized D-Link Service Office within such ninety (90) day period, then the Warranty Period shall be ninety (90) days from the date of purchase.

<i>Product Type</i>	<i>Warranty Period</i>
Product (excluding power supplies and fans), if purchased and delivered in the fifty (50) United States, or the District of Columbia ("USA")	Standard (1) Year Warranty
Product purchased or delivered outside the USA	One (1) Year
Power Supplies and Fans	One (1) Year
Spare parts and spare kits	Ninety (90) days

D-Link's sole obligation shall be to repair or replace the defective Hardware at no charge to the original owner. Such repair or replacement will be rendered by D-Link at an Authorized D-Link Service Office. The replacement Hardware need not be new or of an identical make, model or part; D-Link may in its discretion may replace the defective Hardware (or any part thereof) with any reconditioned product that D-Link reasonably determines is substantially equivalent (or superior) in all material respects to the defective Hardware. The Warranty Period shall extend for an additional ninety (90) days after any repaired or replaced Hardware is delivered. If a material defect is incapable of correction, or if D-Link determines in its sole discretion that it is

not practical to repair or replace the defective Hardware, the price paid by the original purchaser for the defective Hardware will be refunded by D-Link upon return to D-Link of the defective Hardware. All Hardware (or part thereof) that is replaced by D-Link, or for which the purchase price is refunded, shall become the property of D-Link upon replacement or refund.

Limited Software Warranty: D-Link warrants that the software portion of the product ("Software") will substantially conform to D-Link's then current functional specifications for the Software, as set forth in the applicable documentation, from the date of original delivery of the Software for a period of ninety (90) days ("Warranty Period"), if the Software is properly installed on approved hardware and operated as contemplated in its documentation. D-Link further warrants that, during the Warranty Period, the magnetic media on which D-Link delivers the Software will be free of physical defects. D-Link's sole obligation shall be to replace the non-conforming Software (or defective media) with software that substantially conforms to D-Link's functional specifications for the Software. Except as otherwise agreed by D-Link in writing, the replacement Software is provided only to the original licensee, and is subject to the terms and conditions of the license granted by D-Link for the Software. The Warranty Period shall extend for an additional ninety (90) days after any replacement Software is delivered. If a material non-conformance is incapable of correction, or if D-Link determines in its sole discretion that it is not practical to replace the non-conforming Software, the price paid by the original licensee for the non-conforming Software will be refunded by D-Link; provided that the non-conforming Software (and all copies thereof) is first returned to D-Link. The license granted respecting any Software for which a refund is given automatically terminates.

What You Must Do For Warranty Service:

Registration Card. The Registration Card provided at the back of this manual must be completed and returned to an Authorized D-Link Service Office for each D-Link product within ninety (90) days after the product is purchased and/or licensed. The addresses/telephone/fax list of the nearest Authorized D-Link Service Office is provided in the back of this manual. **FAILURE TO PROPERLY COMPLETE AND TIMELY RETURN THE REGISTRATION CARD MAY AFFECT THE WARRANTY FOR THIS PRODUCT.**

Submitting A Claim. Any claim under this limited warranty must be submitted in writing before the end of the Warranty Period to an Authorized D-Link Service Office. The claim must include a written description of the Hardware defect or Software nonconformance in sufficient detail to allow D-Link to confirm the same. The original product owner must obtain a Return Material Authorization (RMA) number from the Authorized D-Link Service Office and, if requested, provide written proof of purchase of the product (such as a copy of the dated purchase invoice for the product) before the warranty service is provided. After an RMA number is issued, the defective product must be packaged securely in the original or other suitable shipping package to ensure that it will not be damaged in transit, and the RMA number must be prominently marked on the outside of the package. The packaged product shall be insured and shipped to D-Link, 53 Discovery Drive, Irvine CA 92618, with all shipping costs prepaid. D-Link may reject or return any product that is not packaged and shipped in strict compliance with the foregoing requirements, or for which an RMA number is not visible from the outside of the package. The product owner agrees to pay D-Link's reasonable handling and return shipping charges for any product that is not packaged and shipped in accordance with the foregoing requirements, or that is determined by D-Link not to be defective or non-conforming.

What Is Not Covered:

This limited warranty provided by D-Link does not cover:

Products that have been subjected to abuse, accident, alteration, modification, tampering, negligence, misuse, faulty installation, lack of reasonable care, repair or service in any way that is not contemplated in the documentation for the product, or if the model or serial number has been altered, tampered with, defaced or removed;

Initial installation, installation and removal of the product for repair, and shipping costs;

Operational adjustments covered in the operating manual for the product, and normal maintenance;

Damage that occurs in shipment, due to act of God, failures due to power surge, and cosmetic damage; and

Any hardware, software, firmware or other products or services provided by anyone other than D-Link.

Disclaimer of Other Warranties: EXCEPT FOR THE LIMITED WARRANTY SPECIFIED HEREIN, THE PRODUCT IS PROVIDED "AS-IS" WITHOUT ANY WARRANTY OF ANY KIND INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT. IF ANY IMPLIED WARRANTY CANNOT BE DISCLAIMED IN ANY TERRITORY WHERE A PRODUCT IS SOLD, THE DURATION OF SUCH IMPLIED WARRANTY SHALL BE LIMITED TO NINETY (90) DAYS. EXCEPT AS EXPRESSLY COVERED UNDER THE LIMITED WARRANTY PROVIDED HEREIN, THE ENTIRE RISK AS TO THE QUALITY, SELECTION AND PERFORMANCE OF THE PRODUCT IS WITH THE PURCHASER OF THE PRODUCT.

Limitation of Liability: TO THE MAXIMUM EXTENT PERMITTED BY LAW, D-LINK IS NOT LIABLE UNDER ANY CONTRACT, NEGLIGENCE, STRICT LIABILITY OR OTHER LEGAL OR EQUITABLE THEORY FOR ANY LOSS OF USE OF THE PRODUCT, INCONVENIENCE OR DAMAGES OF ANY CHARACTER, WHETHER DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF GOODWILL, WORK STOPPAGE, COMPUTER FAILURE OR MALFUNCTION, LOSS OF INFORMATION OR DATA CONTAINED IN, STORED ON, OR INTEGRATED WITH ANY PRODUCT RETURNED TO D-LINK FOR WARRANTY SERVICE) RESULTING FROM THE USE OF THE PRODUCT, RELATING TO WARRANTY SERVICE, OR ARISING OUT OF ANY BREACH OF THIS LIMITED WARRANTY, EVEN IF D-LINK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE SOLE REMEDY FOR A BREACH OF THE FOREGOING LIMITED WARRANTY IS REPAIR, REPLACEMENT OR REFUND OF THE DEFECTIVE OR NON-CONFORMING PRODUCT.

GOVERNING LAW: This Limited Warranty shall be governed by the laws of the state of California. Some states do not allow exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the foregoing limitations and exclusions may not apply. This limited warranty provides specific legal rights and the product owner may also have other rights which vary from state to state.

Trademarks

Copyright ©1999 D-Link Corporation. Contents subject to change without prior notice. D-Link is a registered trademark of D-Link Corporation/D-Link Systems, Inc. All other trademarks belong to their respective proprietors.

Copyright Statement

No part of this publication may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from D-Link Corporation/D-Link Systems Inc., as stipulated by the United States Copyright Act of 1976.

CE Mark Warning

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures

Warnung!

Dies ist ein Produkt der Klasse B. Im Wohnbereich kann dieses Produkt Funkstörungen verursachen. In diesem Fall kann vom Benutzer verlangt werden, angemessene Massnahmen zu ergreifen.

Advertencia de Marca de la CE

Este es un producto de Clase B. En un entorno doméstico, puede causar interferencias de radio, en cuyo caso, puede requerirse al usuario para que adopte las medidas adecuadas.

Attention!

Ceci est un produit de classe B. Dans un environnement domestique, ce produit pourrait causer des interférences radio, auquel cas l'utilisateur devrait prendre les mesures adéquates.

Attenzione!

Il presente prodotto appartiene alla classe B. Se utilizzato in ambiente domestico il prodotto può causare interferenze radio, nel cui caso è possibile che l'utente debba assumere provvedimenti adeguati.

FCC Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off

and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

VCCI Warning

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。

取扱説明書に従って正しい取り扱いをして下さい。

Register by mail or online at <http://www.dlink.com/sales/reg/>

Registration Card

Print, type or use block letters.

Your name: Mr./Ms _____

Organization: _____

Dept. _____

Your title at organization: _____

Telephone: _____

Fax: _____

Organization's full address: _____

Country: _____

Date of purchase (Month/Day/Year): _____

Product Model	Product Serial No.	*Product installed in type of computer (e.g., Compaq 485)	*Product installed computer serial number

*Applies to adapters only.

Product was purchased from:

Reseller's name: _____

Telephone: _____

Fax: _____

Reseller's full address: _____

Answers to the following questions help us to support your product:

- Where and how will the product primarily be used?
☐Home ☐Office ☐Travel ☐Company Business☐Home Business ☐Personal Use
- How many employees work at installation site?
☐1 employee ☐2-9 ☐10-49 ☐50-99 ☐100-499
☐500-999 ☐1000 or more
- What network protocol(s) does your organization use ?
☐XNS/IPX ☐TCP/IP ☐DECnet
☐Others _____
- What network operating system(s) does your organization use ?
☐D-Link LANsmart ☐Novell NetWare ☐NetWare Lite
☐SCO Unix/Xenix ☐PC NFS ☐3Com 3+Open
☐Banyan Vines ☐DECnet Pathwork ☐Windows NT ☐Windows NTAS ☐Windows '95
☐Others _____
- What network management program does your organization use ?
☐D-View ☐HP OpenView/Windows
☐HPOpenView/Unix ☐SunNet Manager ☐Novell NMS☐NetView 6000 ☐Others _____
- What network medium/media does your organization use ?
☐Fiber-optics ☐Thick coax Ethernet ☐Thin coax Ethernet ☐10BASE-T UTP/STP
☐100BASE-TX ☐100BASE-T4 ☐100VGAnyLAN
☐Others _____
- What applications are used on your network?
☐Desktop publishing ☐Spreadsheet
☐Word processing☐CAD/CAM ☐Database management ☐Accounting
☐Others _____
- What category best describes your company?
☐Aerospace ☐Engineering ☐Education ☐Finance ☐Hospital
☐Legal ☐Insurance/Real Estate ☐Manufacturing☐Transportation/Utilities/Communication
☐VAR☐Retail/Chainstore/Wholesale ☐Government☐System house/company
☐Other _____
- Would you recommend your D-Link product to a friend?
☐Yes ☐No ☐Don't know yet
- Your comments ? _____

U.S. Postage
Required

TO:

D-Link®