

D-ViewCam

User Manual

Version 2.2

Business Class Networking

Table of Contents

Product Overview	4	Add Camera Wizard.....	28
System Requirements	4	System Backup Wizard	29
Introduction.....	5	Quick Settings.....	33
Features.....	5	Expert Mode	34
Installing Your IP Camera.....	6	Main Screen Interface.....	35
Software Installation	7	Wizard.....	36
Using D-ViewCam.....	10	Add Camera Wizard.....	36
Add Camera Wizard	11	System Backup Wizard	36
Using D-ViewCam Software	15	System.....	40
Main Display Area.....	16	Event Action.....	40
System Board Area.....	17	User	48
Select Device and Map Area	17	Administrator.....	48
Preview Window Area	18	Normal User.....	49
Split Screen Area.....	18	My Map	50
Manual Control Area.....	19	Device Setting.....	53
Snapshot Button	19	Information.....	53
Start/Stop Manual Recording Button	20	DI/DO Setting.....	54
Start/Stop 2-Way Audio Button	21	Playback	66
Freeze Video Display Button.....	22	Video Search and Playback Management.....	66
PTZF Control Area.....	23	Event Search and Playback Management.....	69
Program Control Area.....	24	Frequently Asked Questions.....	71
Setting and Search Area.....	25	D-Link D-ViewCam Features	71
Event Action Log Area	26	D-Link D-ViewCam Operation	74
Configuring D-ViewCam	27	Open Source Software Notification	80
Wizard Mode.....	28		

Contacting Technical Support..... 85

Warranty 86

Registration..... 91

System Requirements

To ensure your D-ViewCam system can maintain high video monitoring and recording performance, certain minimum system configurations are required. A higher performance system is required especially when the number of IP cameras exceeds nine.

Number of IP Cameras	1-4	5-9	10-16	16+
CPU	P4 2.8 GHz	P4 2.8 GHz	P4 3.0 GHz	P4 Dual Core 1.8 GHz or better
Memory	512 MB	512 MB	1GB	1-2 GB
Hard Disk Size (GB) *	40	60	80	120
Display Memory	32MB			
Display Resolution	1024x768; 1280x1024; 1600x1024			
Operating System	Windows XP Professional Service Pack 2 English/ Traditional Chinese/ Simplified Chinese version. Windows Vista English/ Traditional Chinese/ Simplified Chinese version.			
Network Interface	10/100 Mbps Ethernet			

* Recording video over a long period of time will consume large amounts of disk space. Make sure that you have enough disk space available if you want to use the recording function. You can still complete the installation even if you have less than the suggested free disk space.

Note: If a mega pixel camera is used with the D-ViewCam application, the minimum system requirement should be raised to CPU: Intel P-4 3.4GhZ or above with 1GB of memory due to the resources required to process and store large amounts of image data.

Introduction

Thank you for purchasing a D-Link IP camera, which provides state-of-the-art camera technology combined with IP network capabilities. You can build a home or small business surveillance system by using D-Link IP cameras and the latest features offered by the D-ViewCam application software.

Features

- D-ViewCam can automatically locate and add IP cameras in the local network.
- Storage management for recording files.
- Single and multiple video stream monitoring (up to 32 video channels).
- Two-way audio communication.
- Intelligent filter and search capabilities for scheduling recording and/or event recording.

Installing Your IP Camera

Before installing D-ViewCam, please make sure you have installed your D-Link IP camera(s) that will be managed by D-ViewCam.

Step 1 - Follow the installation procedures that came with your IP camera(s) to complete the camera installation process.

Step 2 - Verify that you are able to view the video images from the IP camera(s) by accessing the camera's built-in web configuration page. It is recommended that all IP cameras be installed in the same subnet as your management PC running the D-ViewCam software.

Step 3 - Please refer to page 11 to add IP camera(s) to the D-ViewCam system.

Note: *D-ViewCam is optimized for small-scale LAN environment. To protect the system and cameras from attack from the Internet, place D-ViewCam behind a firewall or an IP sharing device.*

Software Installation

Turn on the computer and insert the IP Camera Installation CD into the CD-ROM drive. Below step-by-step instructions will be shown if you are using Windows® XP. However, similar instructions and screens will also be provided for other Windows operating systems.


When the autorun screen starts, click **Install D-ViewCam**.

Note: If the Installation Wizard does not start automatically, you can manually start the wizard by double-clicking the *setup.exe* file from the CD.

Select a language and click **OK**.




Click **Next** to continue.

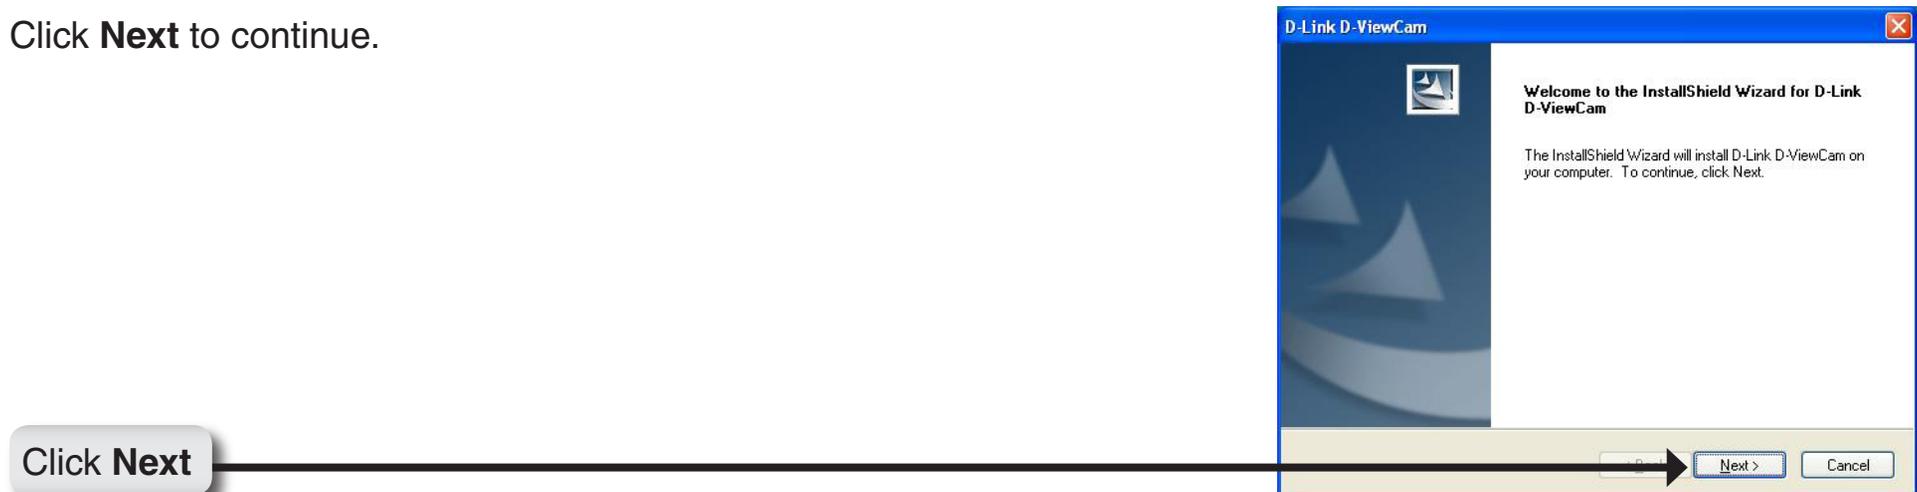

Click **Next** to install the software into the default folder. Otherwise, click **Browse** to select a folder.


Click **Next**

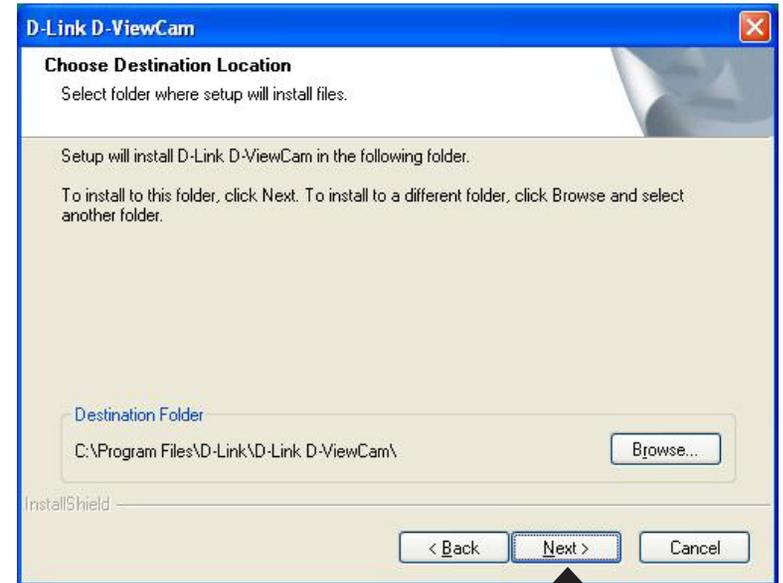


Click **Next** to start the installation process.

Note: The D-ViewCam installation may take several minutes to complete.

Click **Next**

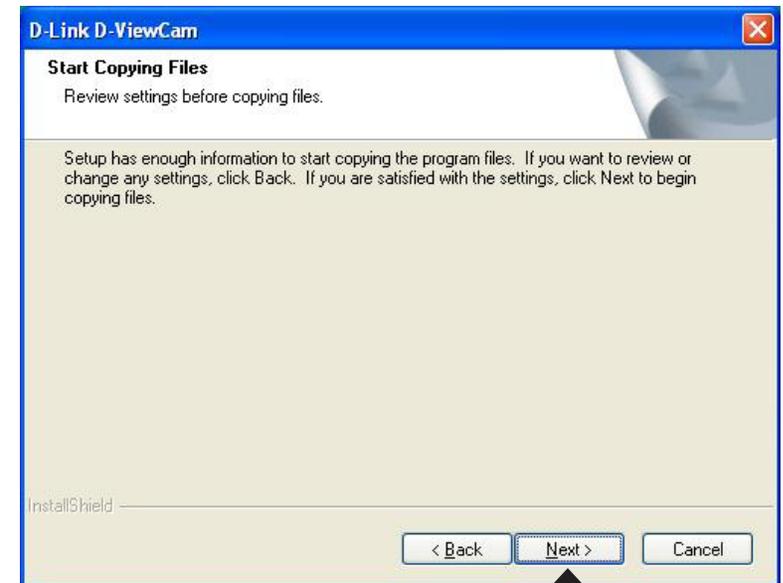

Click **Finish** to complete the installation.

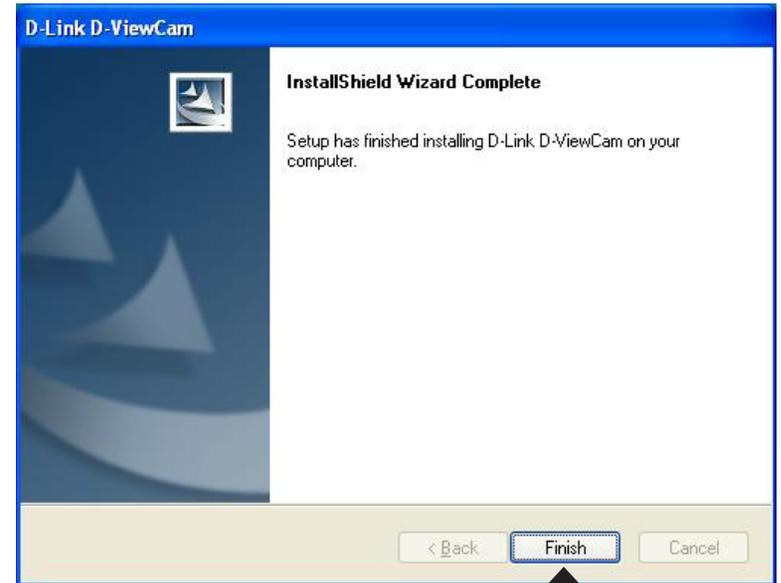


Click **Finish**

Using D-ViewCam


This section will show you how to start and configure D-ViewCam.

To start D-ViewCam, select **Start > All Programs > D-Link > D-Link D-ViewCam**.



Enter **Admin** as the default username and leave the password blank. Click **OK** to log into the system.

Note: You can change the admin password by clicking the **lock icon** or you can skip this step and change your password by following the steps on page 48.

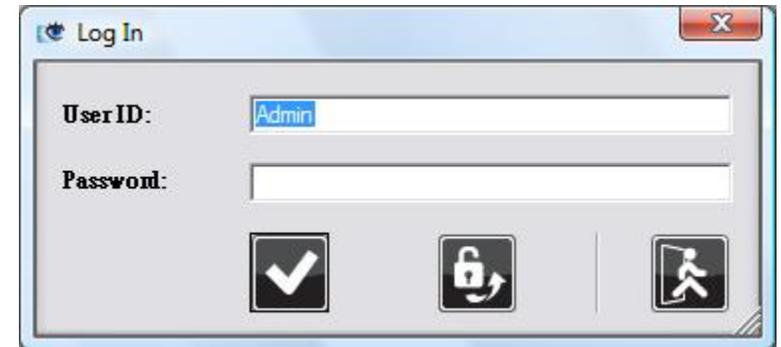

Add Camera Wizard

Welcome to the camera wizard. Use this wizard to add your cameras to the D-ViewCam system.

Note: Use the left or right arrow to navigate the wizard.

Click **Next** to continue.



Click **Next**


Choose which method to add your camera(s). You can choose **Auto Discovery** to automatically search for your camera(s), or choose **Add Manually** to add your camera(s) via the camera's IP address. Click **Next** to continue.

If you choose **Auto Discovery**, the system will search all cameras that are located in the same subnet within a LAN environment. The system will place all found cameras at the default map called **My Map**. Click **Next** to continue.

If you choose **Add Manually**, enter the IP address or domain name, http port, model name, camera ID and password.

Click the “?” button to auto detect the camera's model name, then the model name will appear in the **Model Name** box.

Click **Next** to continue.

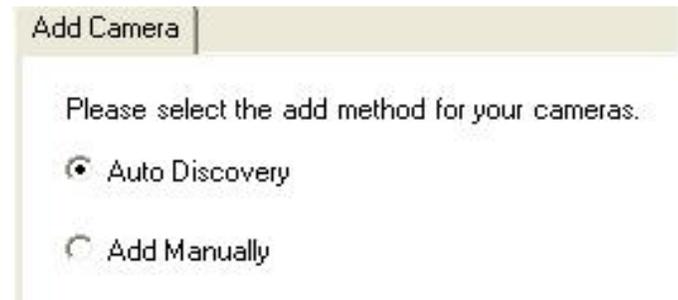


Add Camera

Please select the add method for your cameras.

Auto Discovery


Add Manually

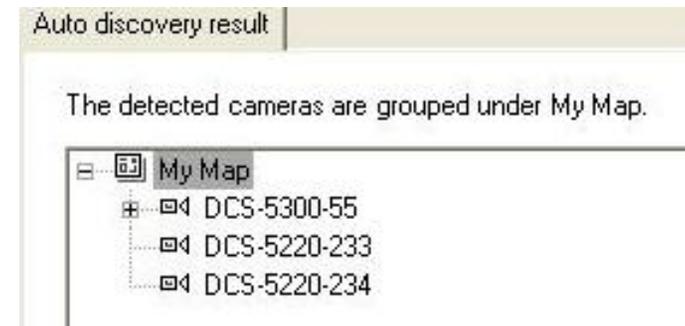

Auto discovery result

The detected cameras are grouped under My Map.

- My Map
 - DCS-5300-55
 - DCS-5220-233
 - DCS-5220-234

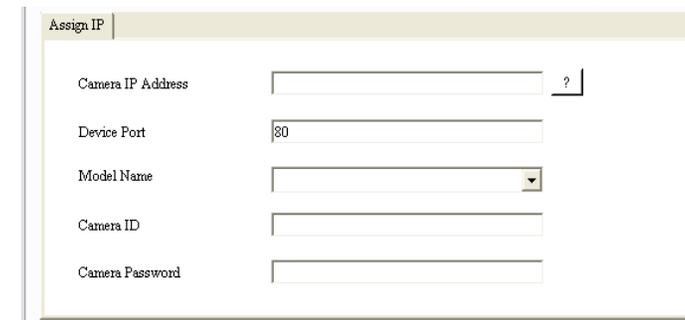

Assign IP

Camera IP Address ?

Device Port

Model Name

Camera ID

Camera Password

D-ViewCam shows the detected IP camera(s) information. You will be able to schedule which recording type you wish to set for each camera.

- **24/7 Continuous Recording:** Start scheduled recording 24 hours a day, 7 days a week.
- **24/7 Motion Detection Recording:** Continuously monitoring the videos but ONLY make recording when motion is detected.
- **Office Hours Only:** Continuously monitoring the videos during office hours (08:00 AM to 06.00 PM) and ONLY make recording when motion is detected.
- **Non-Office Hours Only:** Continuously monitoring the videos during non-office hours (06:00 PM to 08.00 AM) and ONLY make recording when motion is detected.

Note: Excluding 24/7 Continuous Recording, other schedule recording types can ONLY be activated when motion detection is configured on the camera. Please refer to page 56 in the users manual for more information.

Click **Next** to continue.

Quick Settings

The discovered cameras information showed as below:

Camera Name	Model	Schedule Recording Type	Status	IP Address	MAC Address
DCS-5300-55	DCS-5300	None	Active	10.129.1.55	000D887D6DC4
DCS-5220-233	DCS-5220	None	Active	10.129.1.233	001346DC3BC3
DCS-5220-234	DCS-5220	None	Active	10.129.1.234	001346DC3BEB


Select **Yes** to add other camera(s), or select **No** if you have no additional camera(s) to add. Click **Next** to continue.



Add another camera

Yes No

The Add Camera wizard is now complete. Click **Close** to access the D-ViewCam main screen interface.

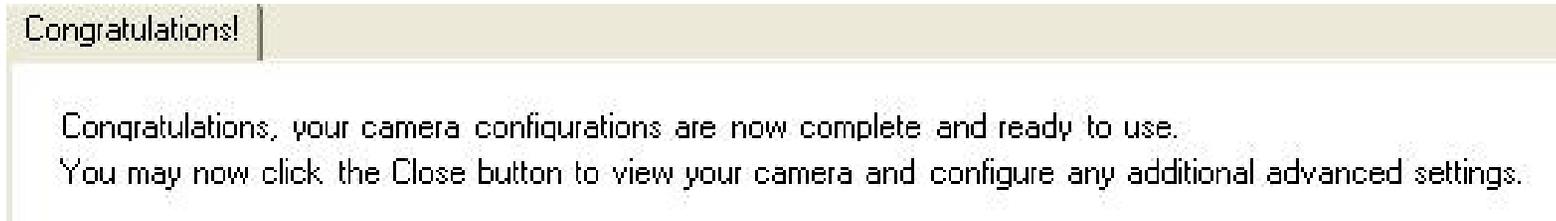


Congratulations!

Congratulations, your camera configurations are now complete and ready to use.
You may now click the Close button to view your camera and configure any additional advanced settings.

Using D-ViewCam Software

D-ViewCam software provides advanced security monitoring and device management functions when used in configuration with D-Link IP camera(s). D-ViewCam uses IP technology to provide comprehensive management functions, such as system controls, live video feeds, and archived recordings. The main user interface includes ten areas, refer to the table below for more descriptions.

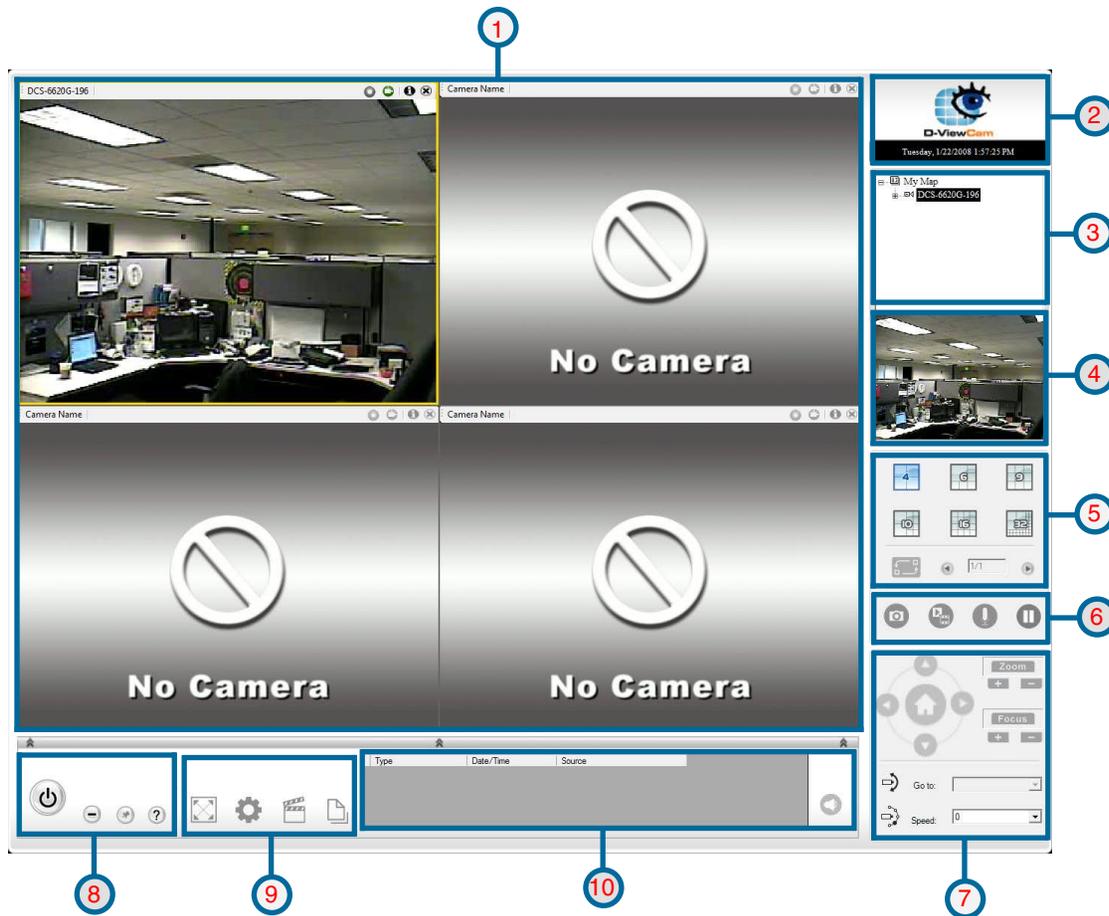

Area No.	Area Name	Description
1	Main Display Area	Video monitoring area. Number of screens displayed is determined by split-screen configuration
2	System Board Area	System date and time display
3	Select Device and Map Area	Tree structure display that shows maps and devices
4	Preview Window Area	Display map or current video image if an active camera is selected from the tree structure
5	Split Screen Area	Selected number of screen displayed at the main display area
6	Manual Control Area	Snapshot, manual recording, two-way audio controls and freeze video display
7	PTZF Control Area	Selectable when a camera selected has pan, tilt, zoom and focus function
8	Program Control Area	Minimize the main window, exit D-ViewCam, auto-hide and help page
9	Setting and Search Area	Full screen, system configuration, search and playback videos, search and playback events
10	Event Action Log	Event log list

Main Display Area


The main screen interface is where live images from the cameras or e-Map are displayed. For live images, depending on the split-screen configuration, this area can display images from multiple cameras. There is an information bar for each image that can be used to identify a camera and its current status. This bar will not be displayed in high split-screen configuration such as 10, 16 or 32.

The diagram shows a video window interface with a live camera feed of an office. The window title bar displays 'DCS-6620G-196'. Below the title bar is a control bar with five icons: a camera name icon, an event status icon, a video status icon, a configuration icon, and a remove icon. Five callout boxes provide detailed information for each icon.

- Camera Name**
Displays the camera name. If the video display is empty the camera name will not be displayed.
- Event Status**
This icon will display the event status. Grey indicates no event action setting, Green indicates event action setting is on, and if the icon is flashing red this indicates that an event is detected.
- Video Status**
This icon displays the status of your video. Gray indicates video is lost, Green is normal, and Red indicates video is recording.
- Config**
Click this thumbnail to access the configuration settings of the camera.
- Remove**
Click to remove the camera from the display window.

System Board Area


This area displays the D-ViewCam logo, system date and time, and version information.

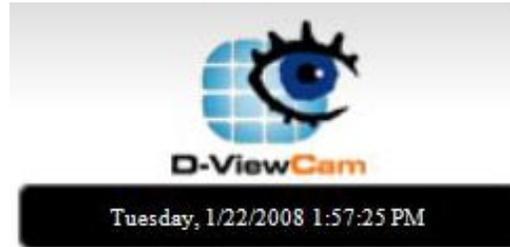

Select Device and Map Area

This area displays your map and camera(s) in a tree structure.

1. Left click the tree node of **My Map** or **New Map**, the e-map will appear on the Main Display area.
2. Right click the **My Map** or **New Map** tree node, the Main Display area will show all the cameras in split screen mode. The split screen mode selection (4, 6, 9, 10, 16 and 32) is according to the number of cameras allocated under the map.
3. Double-click the camera node in the tree list to bring up the expert mode configuration.

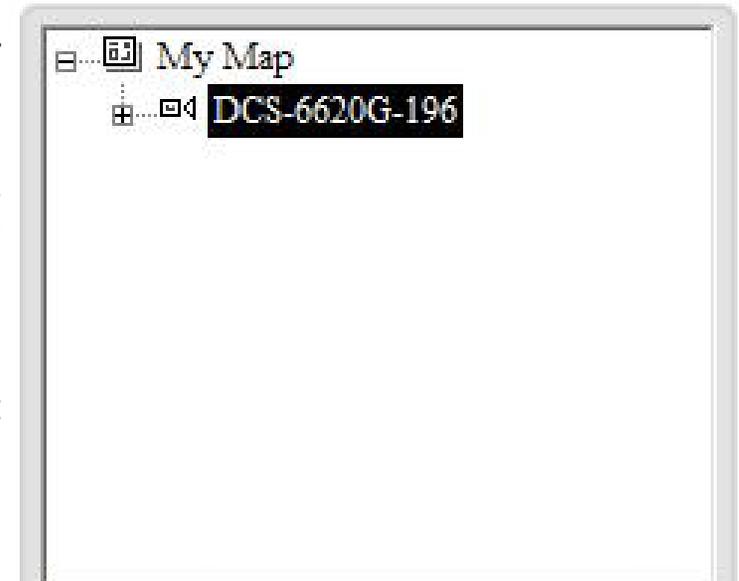

Preview Window Area


This area will display an image preview of a selected camera from **My Map**. If a map is selected (instead of a camera), this preview window will cycle through images (one after the other) from all of the available cameras.



Split Screen Area

Split Screen

Select a split-screen display layout by clicking on the desired layout icon. The system provides 4, 6, 9, 10, 16 and 32 split screen modes. To switch to single camera display, double-click the camera's image. To return to the previous configuration screen, press the **Esc** key or double-click on the screen again.

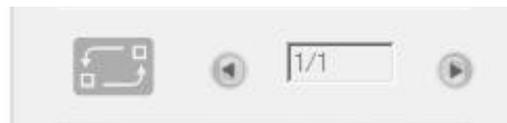


Rotation

Control the rotation of the video monitoring screen. The live video display will start to rotate from the upper left to the lower right. Click the rotation icon to start or stop the rotation. If the number of cameras is more than the current split screen configuration, the main display window will arrange in multiple pages. You can access all the cameras by using the paging mechanism.

Manual Control Area

Snapshot Button

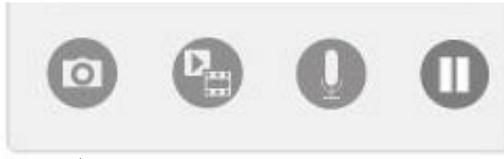


Snapshot Button

Click this button to capture a selected video image immediately.

When a camera is selected and live video image can be seen in the main display or preview area, you can take a snapshot using the snapshot button. When this button is pressed, the system will show a dialogue window with the snapshot image and options as shown below:

OSD Button

Click this button to change the content of the overlay information and select a text color.

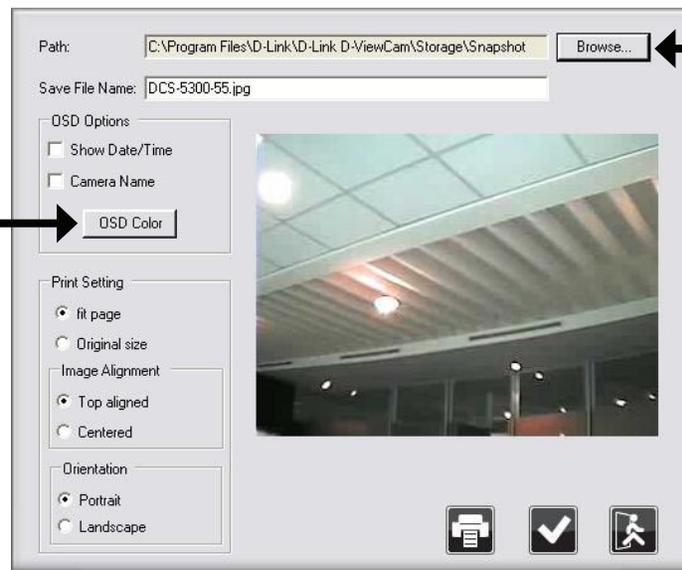


Browse Button

Click this button to select a folder where the image file will be saved, and then input a file name.

Note: You can save the file in a different format by typing the file format after the file name, such as: .png, .gif, .jpg.

Start/Stop Manual Recording Button

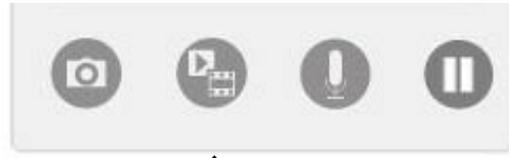

Start/Stop Manual Recording Button

By clicking this button you can start or stop manual recording of video.

When performing a manual recording, the video window will be marked red and the recording time information will be displayed red in the lower right hand corner of the screen.



If you want to manually record multiple videos, follow these three steps below.


1. Select a group of live videos by pressing and holding the **Ctrl** key on the keyboard, and then click on all of the camera images that you want recorded in the video display area.
2. To start recording, click the **Start Manual Recording** button.
3. To stop multiple recordings, select the cameras you wish to stop recording by repeating step 1, and then click the **Manual Record** button to stop recording. All video data is recorded in the QVGA or CIF format. The frame rate depends on the camera that you select and should be configured via the camera's web interface.

Start/Stop 2-Way Audio Button

For camera(s) that support audio, D-ViewCam provides two-way audio features, which enable a user to start an audio conversation with another person near the camera(s).

To start an audio conversation, first select a camera and then press the **Start/Stop 2-Way Audio** button. You can press the button again to stop the function.

Note: *If the two-way audio mode is on and you select another camera, the audio conversation session will automatically terminate.*

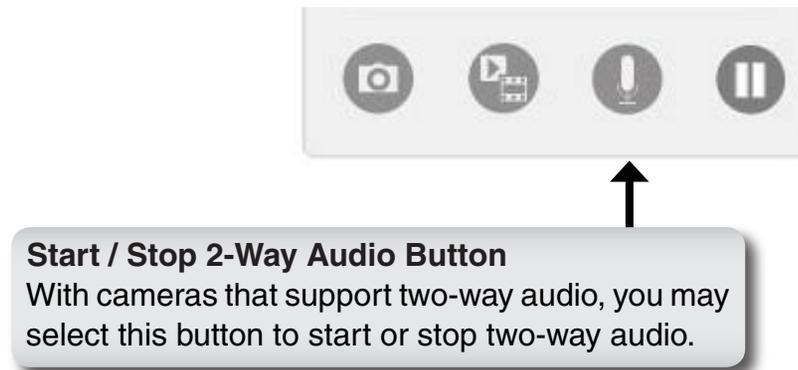

Freeze Video Display Button




Freeze Video Display Button

This button can be used to temporarily stop displaying all live images. If you press this button again, it will resume video display.

Note: *This feature only freezes the live image display; all other functions such as event and recording are not affected.*

PTZF Control Area

PTZF control area provides pan, tilt, zoom and focus functions to control the movement of PTZF capable cameras.

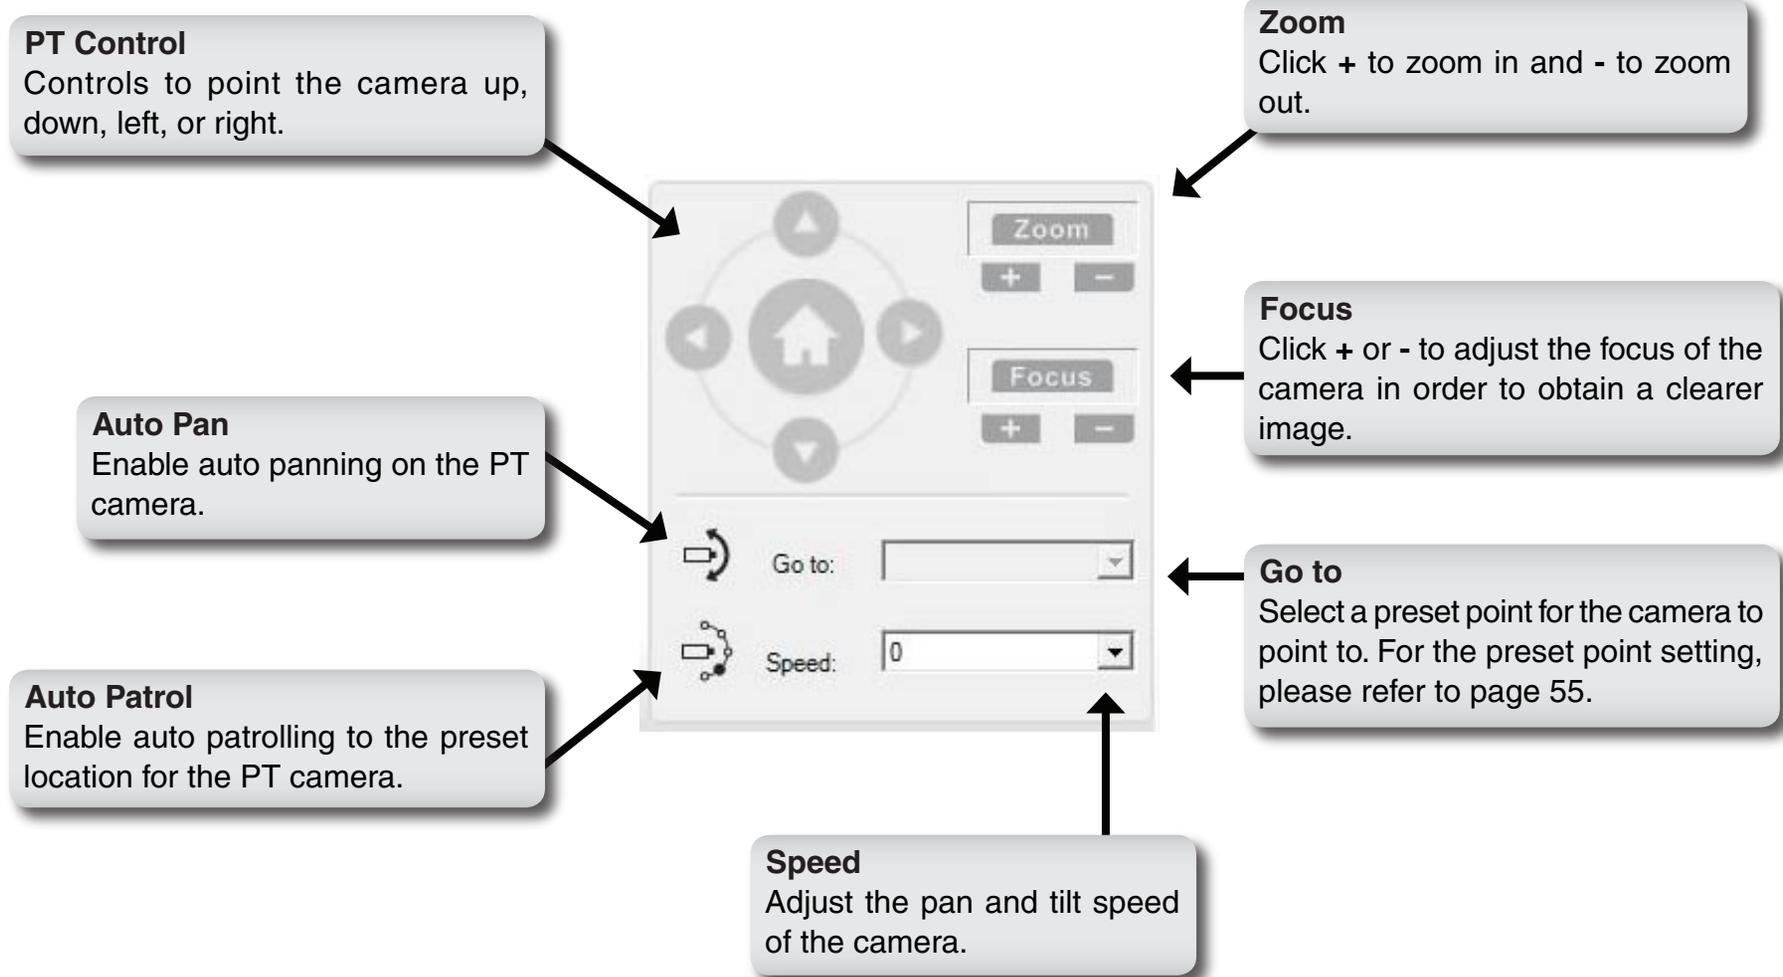

Program Control Area

This area provides you 4 buttons to control the program or obtain help information.

On/Off Button

Click this button to shut down D-ViewCam.

Help Button

Click this button for descriptions, definitions and details about D-ViewCam.



Minimize Button

Click this button to minimize D-ViewCam to the taskbar.

Auto-Hide Button

Click this button to enable or disable the auto-hide panel. With the auto-hide button enabled, this will make the panel disappear until you mouse over its location. With the Auto-hide button disabled, the panel will always show on the bottom.

Setting and Search Area

This area enables you to view the video in full screen mode by clicking the first button. The second button enables you to configure the system in two different modes. Last, the third and fourth button enable you to search and playback the video(s) and event(s).

Full Screen Button

Click this button to switch the video mode to full screen mode. To return to the previous screen, double-click the screen or press the **Esc** key on your keyboard.

Video Search and Playback Button

Click to search and watch the recorded video, such as scheduled recording, event recording and manual recording. Please refer to page 66 for details.



System Configuration Button

Clicking this button will provide the user with two configuration modes, wizard mode and expert mode.

Event Search and Playback Button

Click to search and watch the specific event and recorded system information. Please refer to page 69 for more information.

Event Action Log Area

Event Action Log Area

This area displays the 20 most recent events and starts with the most recently recorded event first. If you double-click an event item, the system will bring up the detail information of the event. If there is a recording, you can do playback immediately after the recording has completed. Event canceling will be handled according to your system setting.

Type	Date/Time	Source
ImageMotionDetected	2007-11-27 11:00:58 ...	DCS-5220-234
ImageMotionDetected	2007-11-27 11:00:28 ...	DCS-5220-234

Event Action Disabled

This icon indicates the event action setting is set to off. You can configure the event on/off in Expert mode.



Event Action Enabled

This icon indicates the event action setting is set to on.



Event Action Detected

This icon indicates that an event has been detected.



When event action is enabled, event canceling will be handled according to your system setting:

- **Automatic event canceling** - the cancel event button will be flashing for a pre-determined period of time and then the event will automatically cancel.
- **Manual event canceling** - the cancel event button will keep flashing until it is clicked. Click the cancel event button and then the system will cancel all active events

Configuring D-ViewCam


The D-ViewCam application is designed so that it can easily set up a simple home and/or small business surveillance application. It provides two modes of configuration, wizard mode and expert mode. Wizard mode is designed for basic configuration, including Add Camera, System Backup and Quick Recording Settings. Expert mode is for more advanced use with comprehensive configuration options. The user can switch between these two modes at any time.

To configure D-ViewCam, follow the instructions below:

Step 1 - Move your mouse pointer to the bottom of the screen if the **Setting and Search Area** is hidden.


Step 2 - The **Setting and Search Area** will raise automatically.

Step 3 - Click the **System Configuration** button. For **Wizard Mode**, please refer to page 28. For **Expert Mode**, please refer to page 34.

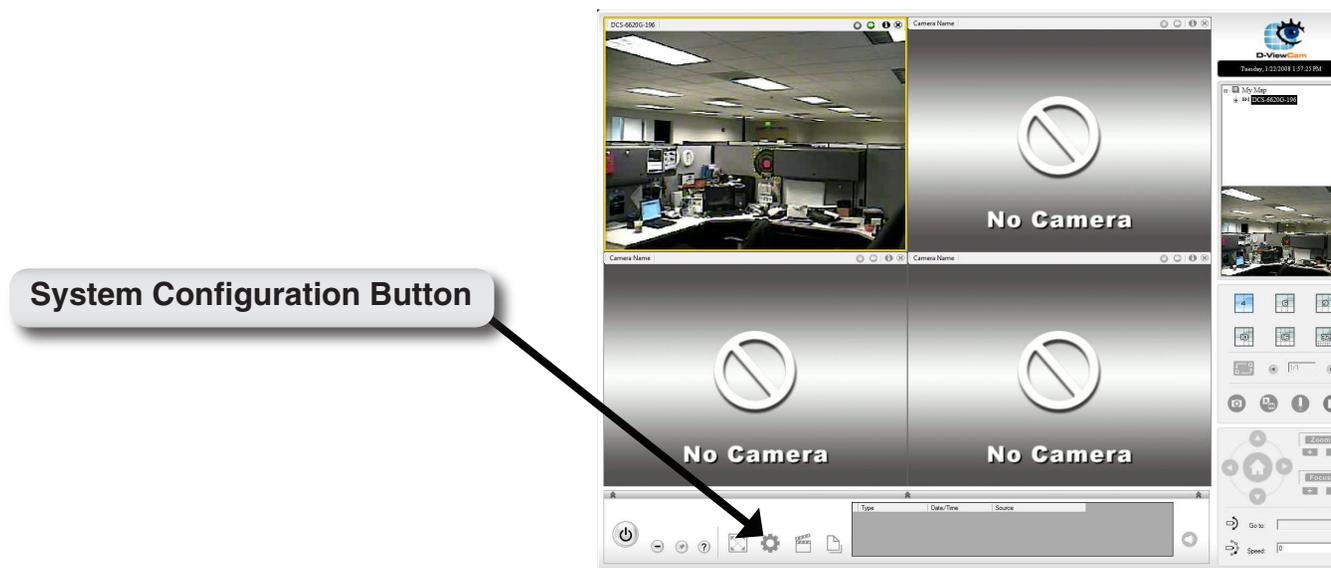

Wizard Mode

Wizard mode configuration is designed to allow a user to quickly set up a D-ViewCam system with just a few simple clicks. This mode is recommended to quickly set up a working D-ViewCam system. You can use expert mode configuration to fine-tune the system at a later time. Click a button of the wizard you wish to begin.

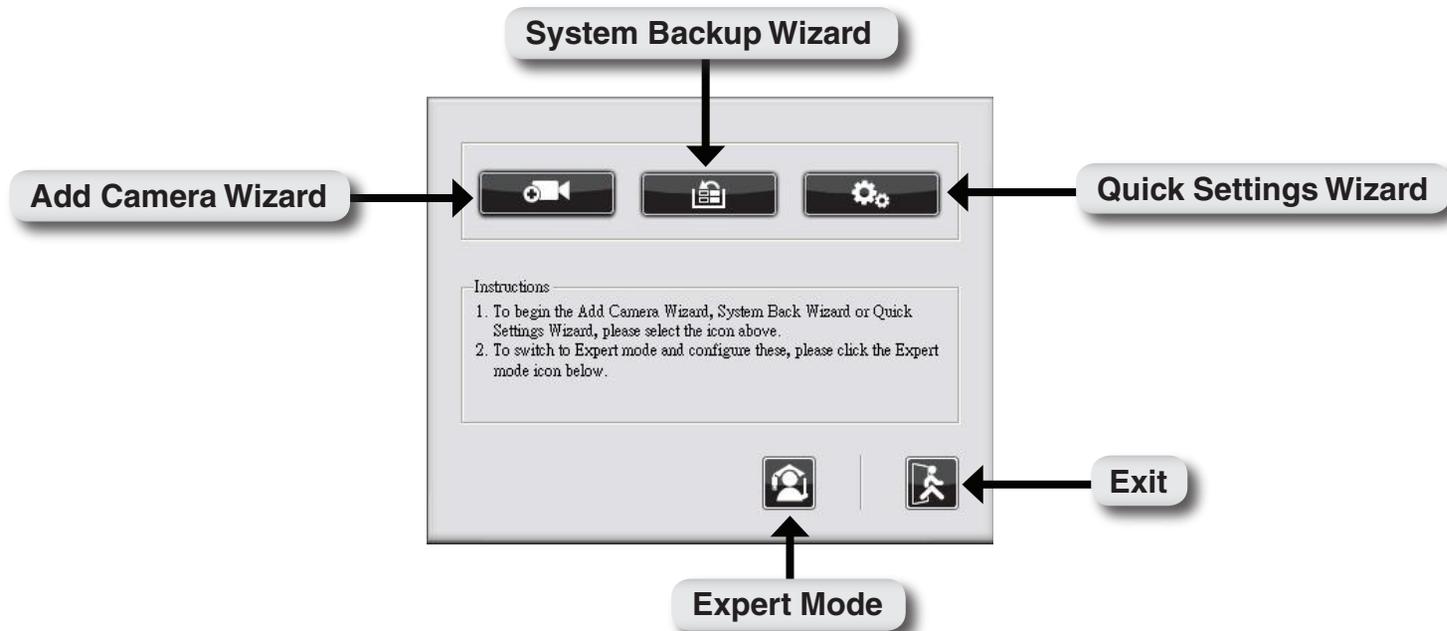


Add Camera Wizard


To add a new IP camera, please refer to page 11.

System Backup Wizard

There are two system backup types, **Video Recording Backup** and **System Database Backup**. Click **Next** to continue.

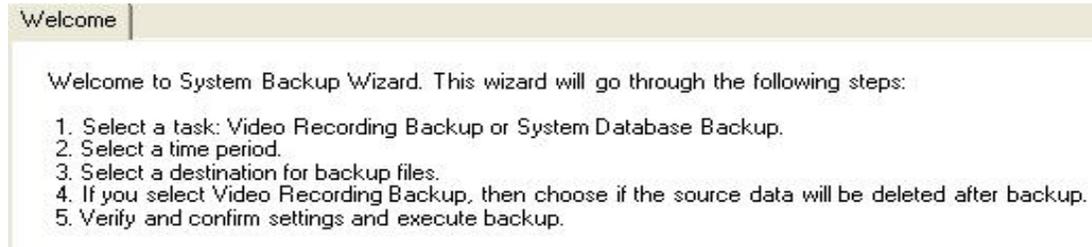


Select a task and click **Next** to continue.

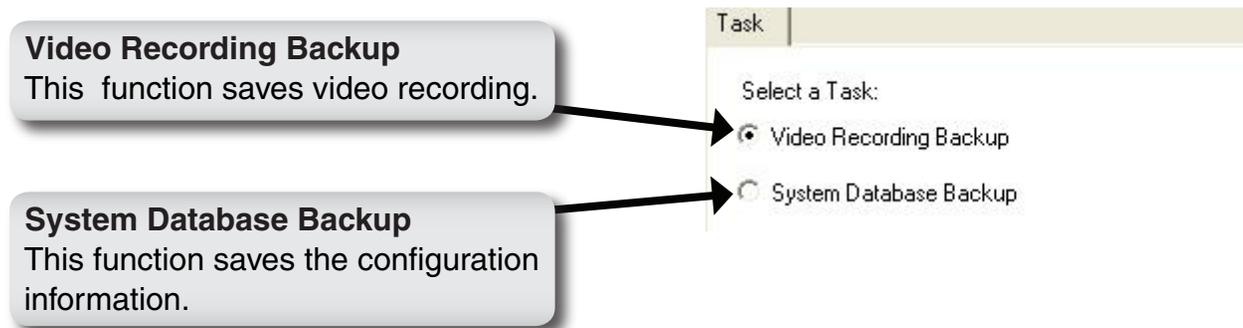


Video Recording Backup

Follow the steps below for Video Recording backup. Refer to page 45 to verify that your video recording path is correct.

Select an IP camera from the tree structure and select a recording type. Click **Next** to continue.

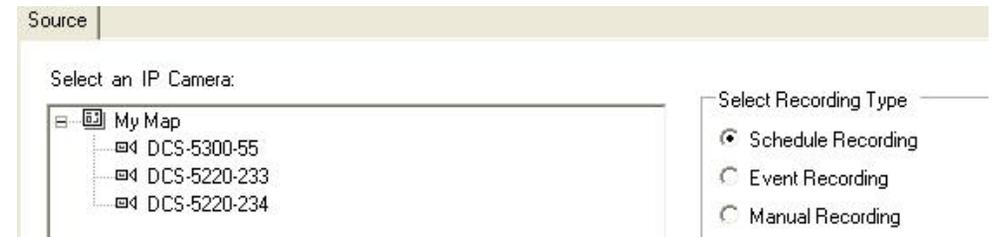


Choose a start and end date and time. Click **Next** to continue.

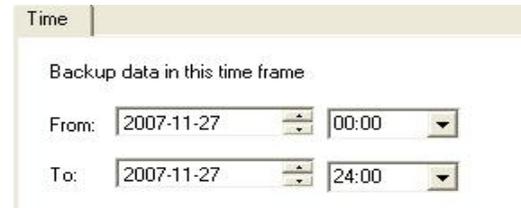


Click **Browse** to select a directory to save the backup files.




You can make a new folder by clicking **Make New Folder** or you can select an existing folder and click **OK** to continue.

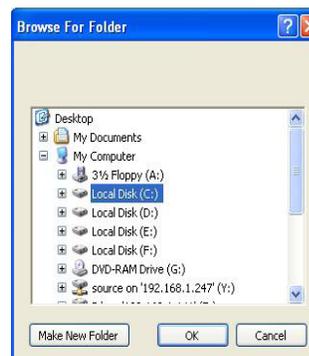

When the backup is complete, you can choose to **Keep the source** or **Delete the source after backup**. Click **Next** to continue.

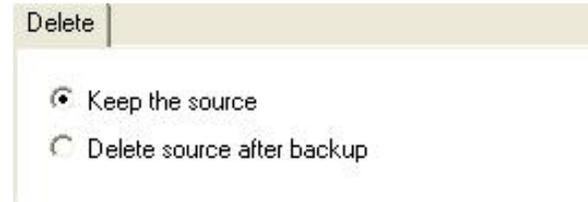

Verify that the information is correct and click **Yes** to start the backup process.

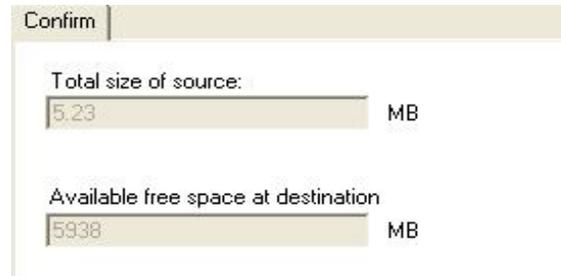

When backup is complete, click **OK** to return to the system configuration screen.



System Database Backup

Follow the steps below for the System Database backup.

Click **Browse** to select a directory to save the backup files. Click **Next** to continue.



You can make a new folder by clicking **Make New Folder** or you can select an existing folder and click **OK** to continue.



When backup is complete, click **OK** to return to the system configuration screen.



Quick Settings

This setting will apply to all cameras. For user convenience, the system provides four different recording methods for a user to choose.

24/7 Continuous Recording - This setting will record all IP cameras 24 hours a day and 7 days a week continuously. **Note:** *This recording arrangement will need larger disk space.*

24/7 Economic Recording - This setting will record anytime when motion is detected. **Note:** *This setting may consume a large amount of your CPU resources.*


Office Hours Only - The scheduled recording time is Monday through Friday from 8:00 AM to 6:00 PM and will start recording when motion is detected.

Non-Office Hours Only - The scheduled recording time is Monday through Friday from 6:00 PM to 8:00 AM and will start recording when motion is detected.

Notes:

If these quick settings do not meet your recording schedule, you may set up a custom schedule for each IP camera. Please refer to page 61 for more information.

Excluding 24/7 Continuous Recording, other schedule recording types can be activated ONLY when the image motion detection window is created on your cameras.

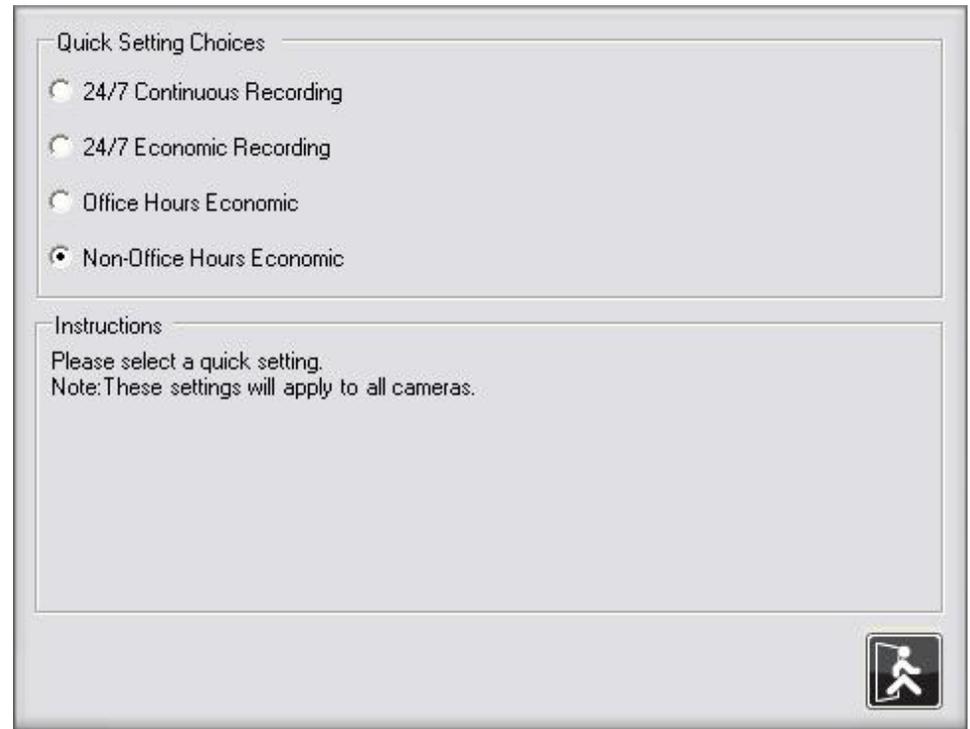

Quick Setting Choices

- 24/7 Continuous Recording
- 24/7 Economic Recording
- Office Hours Economic
- Non-Office Hours Economic

Instructions

Please select a quick setting.
Note: These settings will apply to all cameras.


Expert Mode

Expert mode is similar to wizard mode. These two modes differ in the amount of available settings. Wizard mode offers minimal amount of settings, while expert mode provides comprehensive options and settings that you can modify. To access Expert Mode, follow the steps below:

Step 1 - Move your mouse pointer to the bottom of the screen if the **Setting and Search Area** is hidden.


Step 2 - The **Setting and Search Area** will appear automatically.

Step 3 - Click the **System Configuration** button and select the **Expert Mode** button. The system will bring up the expert mode configuration panel.

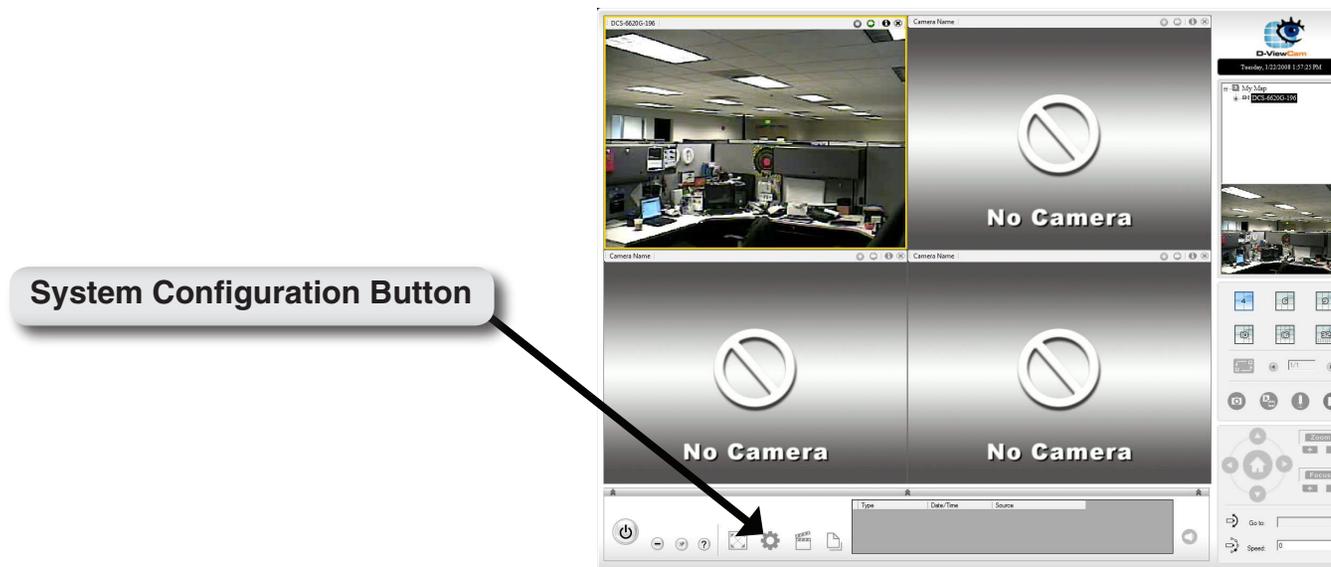

Main Screen Interface

Expert mode is for more advanced use with comprehensive configuration options.

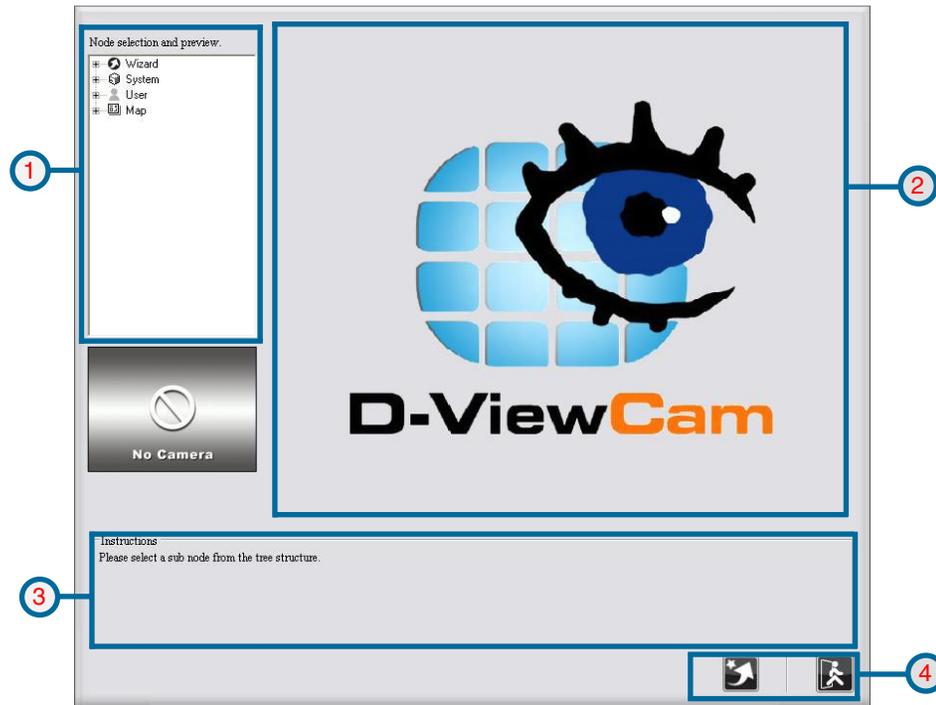

Area No.	Area Name	Description
1	Node selection and preview Area	<ol style="list-style-type: none"> Wizard: Provides access to the Wizard functions System: This setting is more concerned with the whole system management, such as <i>Event Action</i>, <i>Storage Setting</i>, <i>Email Server Setting</i> and <i>Database Backup</i> User: The system only provides five user accounts, one administrator account and four user accounts. Map: The default map is called My Map, you can build your own maps and assign devices to any map as you wish.
2	Operation Area	Display system configuration UI according to function selected in Area 1
3	Instruction Area	Display help information for operations in Area 2
4	Button Area	Change to "Wizard Mode" button, "Save" and "Exit" button

Follow these steps to configure Expert Mode.

STEP 1	STEP 2	STEP 3
Select a node in Area 1	Area 2 will change according your selection in Area 1	Use button in Area 4 to activate the setting

Wizard


This wizard is the same as Wizard Mode (explained previously), which is designed to allow a user to quickly set up a D-ViewCam system with few simple clicks. This wizard is recommended to quickly set up a working D-ViewCam system. Click on the button of the wizard you wish to begin.

Add Camera Wizard


To add a new IP camera, please refer to page 11.

System Backup Wizard

There are two system backup types, **Video Recording Backup** and **System Database Backup**. Click **Next** to continue.

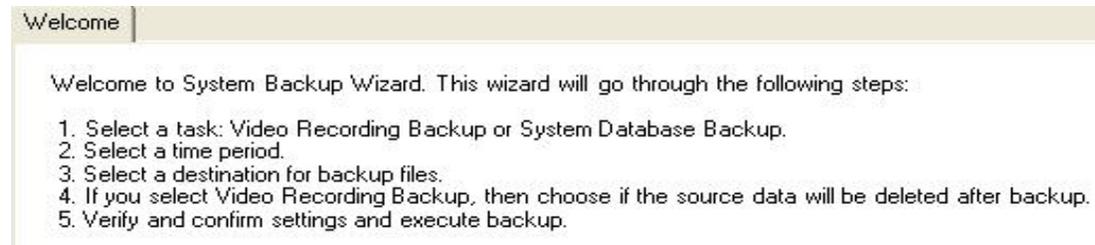

Select a task and click **Next** to continue.

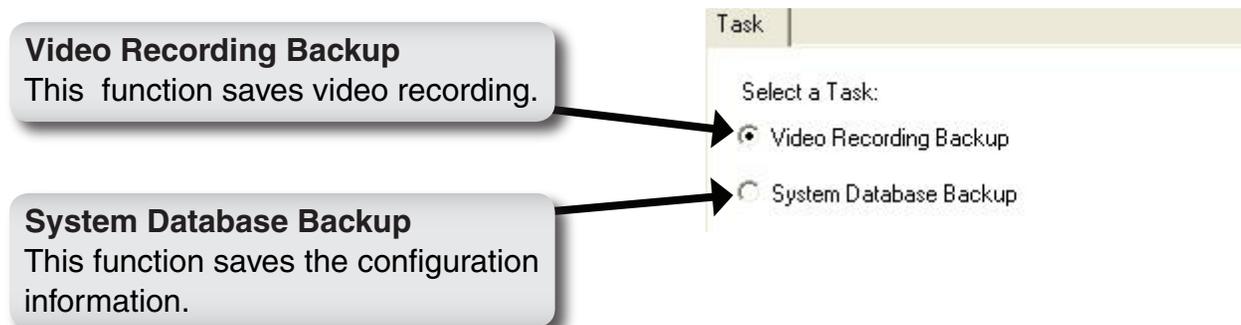


Video Recording Backup

Follow the steps below for Video Recording backup. Refer to page 45 to verify that your video recording path is correct.

Select an IP camera from the tree structure and select a recording type. Click **Next** to continue.




Choose a start and end date and time. Click **Next** to continue.

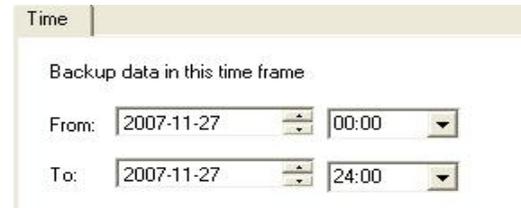


Click **Browse** to select a directory to save the backup files.




You can make a new folder by clicking **Make New Folder** or you can select an existing folder and click **OK** to continue.

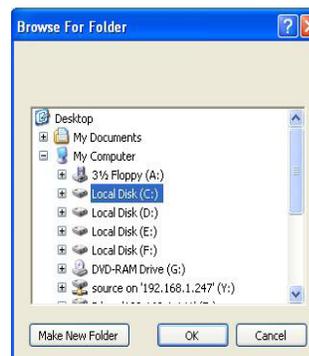


When the backup is complete, you can choose to **Keep the source** or **Delete the source after backup**. Click **Next** to continue.

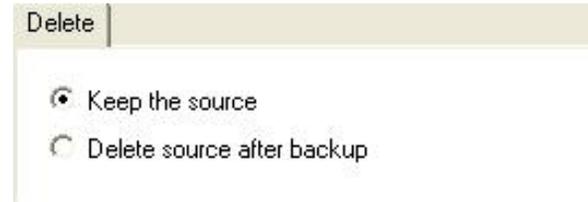

Verify that the information is correct and click **Yes** to start the backup process.

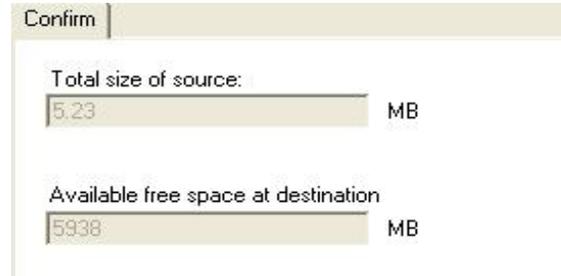

When backup is complete, click **OK** to return to the system configuration screen.

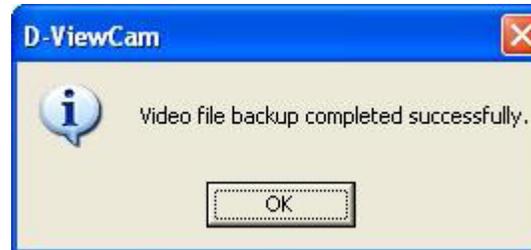

System Database Backup

Follow the steps below for System Database backup.


Click **Browse** to select a directory to save the backup files. Click **Next** to continue.



You can make a new folder by clicking **Make New Folder** or you can select an existing folder and click **OK** to continue.



When backup is complete, click **OK** to return to the system configuration screen.

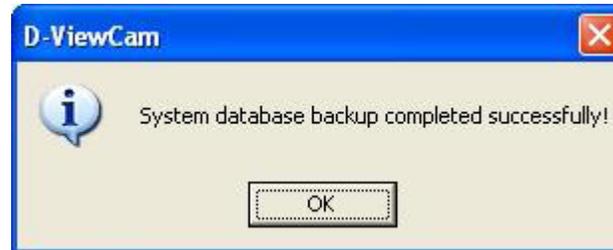

System

In system configuration, you can set the Event Action, Storage Setting, E-mail Server Setting and Database Backup.

Event Action

Follow these steps to set event actions for **Recording Path Error** or **Disk Full** system events. For device event actions, please refer to page 57.

Step 1 - Select the **Event Action** from the **Node selection and preview** area.

Step 2 - Choose an event from **Add Event**. The system will show the **Event Action List Table** window. For help with the settings, please refer to pages 42, 43, and 44.

Step 3 - After you have finished setting the event action, the action's configuration will be displayed on the **Action Table**. You can use the **Modify** or **Remove** button to modify or remove the settings.

Step 1

Node selection and preview.

- Wizard
- System
- Event Action**
- Basic Setting
- Email Server Setting
- Database Backup
- User
- Map

Step 2

Add Event

Recording Path Error Disk Full

Action Table

Item	Event Type	Action	Target	De

Modify

Event name: Recording Path Error

Select an action:

- Change Digital Output State
- Send Email
- Play Sound
- Show Live Video
- Start Recording
- Go to Preset Point

Set Digital Output

My Map

- ev DCS-5300-55

Output state

- On
- Off

Seconds before starting event action: 0

Remark:

Instructions

To change digital output (relay) on an event, please select a digital output (relay) and target status.

Step 3

For All Event Notification

- Automatic cancel after 30 seconds
- Manual cancel only

Event Action List Table


Change Digital Output State

This setting will trigger the devices that connect to the system, such as alarm lights and sirens. When an event occurs, you can change the device status (available for digital output only). Follow the steps below to configure the digital output state.

Step 1 - Select the action **Change Digital Output State** and set the digital output.

Step 2 - Change the output state to on or off.

Step 3 - **Seconds before starting event action** means the delayed time before the event action is executed. If you prefer NOT to start the event action immediately, you can set a wait time so that the action will start after the wait time has expired. Click /OK to activate the setting.

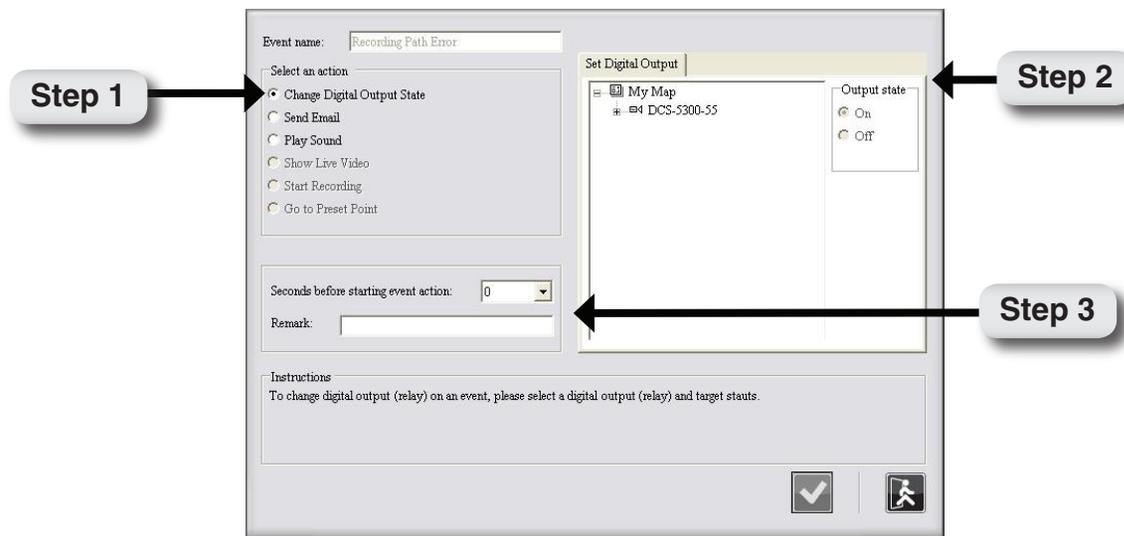


Send E-mail

This setting will send email to the specified accounts indicating the type of event, as well as attaching an image taken while the event occurred. Follow the steps below to configure **Send Email**.

Step 1 - Select the action **Send Email** and enter the email address. Check the **Attach image** if you want the system to send the image(s) taken from the selected IP camera.

Step 2 - **Seconds before starting event action** means the delayed time before the event action is executed. If you prefer NOT to start the event action immediately, you can set a wait time so that the action will start after the wait time has expired. Click /OK to activate this setting.

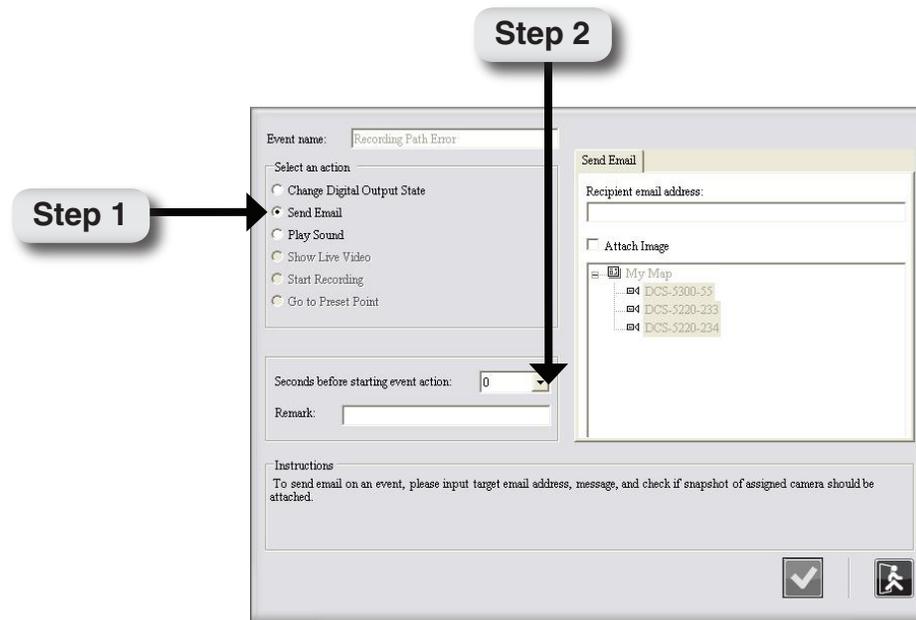


Play Sound

This setting will play a sound for the specified accounts indicating the type of event when the event occurred. Follow the steps below to configure **Play Sound**.

Step 1 - Select the action **Play Sound**.

Step 2 - You can select a sound from the drop-down menu or you can select your own sound file by clicking the **Browse** button and choosing a Wave file (.wav). You can test the sound file by clicking the **Play Sound** button.

Step 3 - **Seconds before starting event action** means the delayed time before the event action is executed. If you prefer NOT to start the event action immediately, you can set a wait time so that the action will start after the wait time has expired. Click /**OK** to activate the setting.

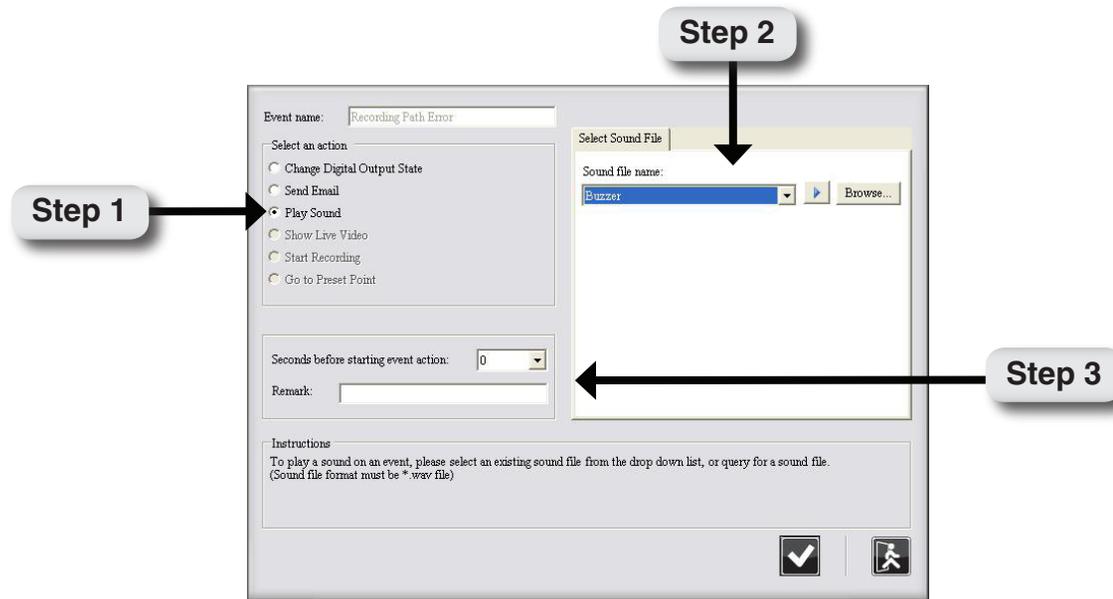

Basic Setting

Step 1 - Select **Basic Setting** from the tree menu.

Step 2 - Assign recording paths for schedule recording, event recording, manual recording, snapshot recording and backup.

Step 3 - You can change the system language to English, Chinese Traditional or Chinese Simplified.

Step 4 - Enable or Disable the event action function. Click **Save** to save your settings.

The system will detect whether the assigned recording path exists. If not, the system will inform you to change it to an appropriate path. Please follow the instructions below.

The screenshot shows the 'Basic Setting' configuration window. On the left, a tree menu is visible with 'Basic Setting' selected. The main area is divided into several sections: 'Recycle Recording', 'Path', 'Language', and 'Event Action'. Annotations point to specific elements: 'Step 1' points to 'Basic Setting' in the tree; 'Step 2' points to the recording paths and 'Available Space (GB)' field; 'Step 3' points to the 'Change Language' dropdown; and 'Step 4' points to the 'Event Action' radio buttons. A callout box explains the 'Available Space (GB)' field.

Step 1

Recycle
The system will automatically delete out-dated data to reclaim storage space. You can choose the recycle unit (in GB or days) from the drop-down list, and enter a value, or select from the list of data to define the recycle value.

Step 2

Available Space (GB)
The system will count and display the available space of your disk in this text box.

Step 3

Step 4

Note: Please configure the recording path for the scheduled event and manual recording options differently from D-ViewCam.

Note: It is recommended to leave enough work space (around one hour of schedule recording space) for the temporary file created by the schedule and event recording.

Note: D-ViewCam keeps the live video alive whether or not the video is being recorded.

1. This feature provides continuous video display, even if an external storage (such as NAS) stops working.

2. D-ViewCam won't check the available recording space when an external storage (such as NAS) stops working.

Email Server Setting

This function is used to configure your email sever settings, which will be used to send event notifications.

Step 1 - Select **Email Server Setting** from the tree menu.

Step 2 - Input the email server information.

Server Name/IP: Input your email server name of your email provider. Example: mail.test.com or an IP address, such as 192.168.1.1.


Username: Input your email account username.

Password: Input your email account password.

Send From: Insert sender email address. Example: sender@mail.test.com

Message Subject: Insert a subject for your email message. This message will send to your email once an event is detected. Example: An alarm occurs in the kitchen.

Step 3 - Click the **Test** button to test the setting, which will send an email using the current setting. Then click **Save** to activate this setup.

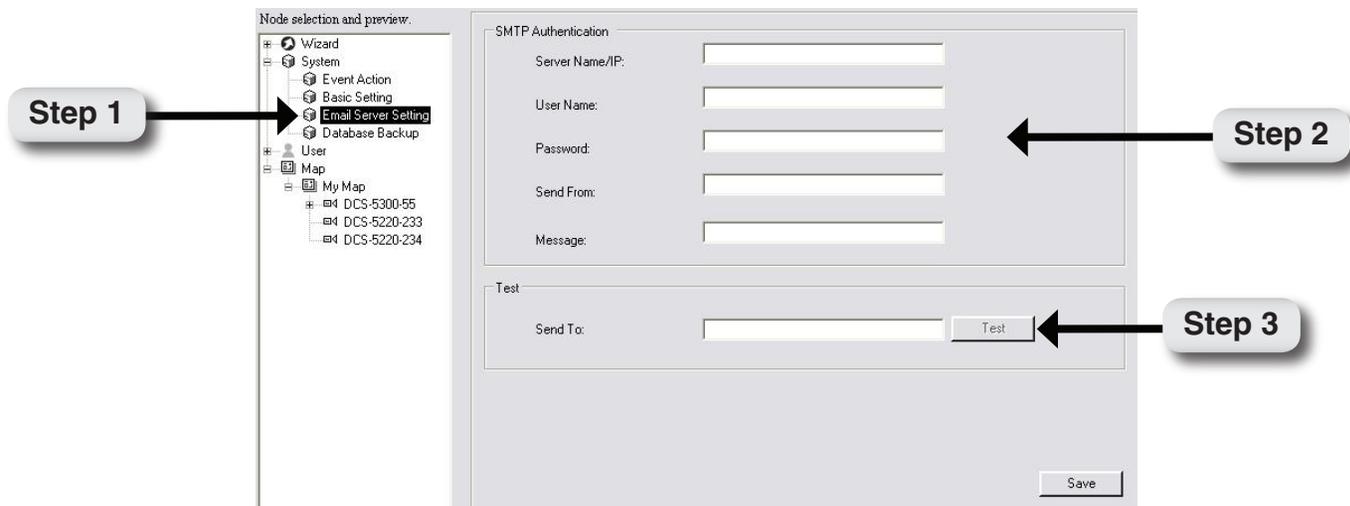


Database Backup

The database backup function saves all system settings and the event log. You can set a time when the system will execute a database backup automatically on a daily basis. Follow the steps below.

Step 1 - Select **Database Backup** from the tree menu.

Step 2 - You can click **Import** to restore predefined system settings, or **Export** to save or backup your current setting for future use.

Step 3 - Set the time by using the drop-down menu, for when the system will backup the system data on a daily basis. Click **Save** to activate this setup.

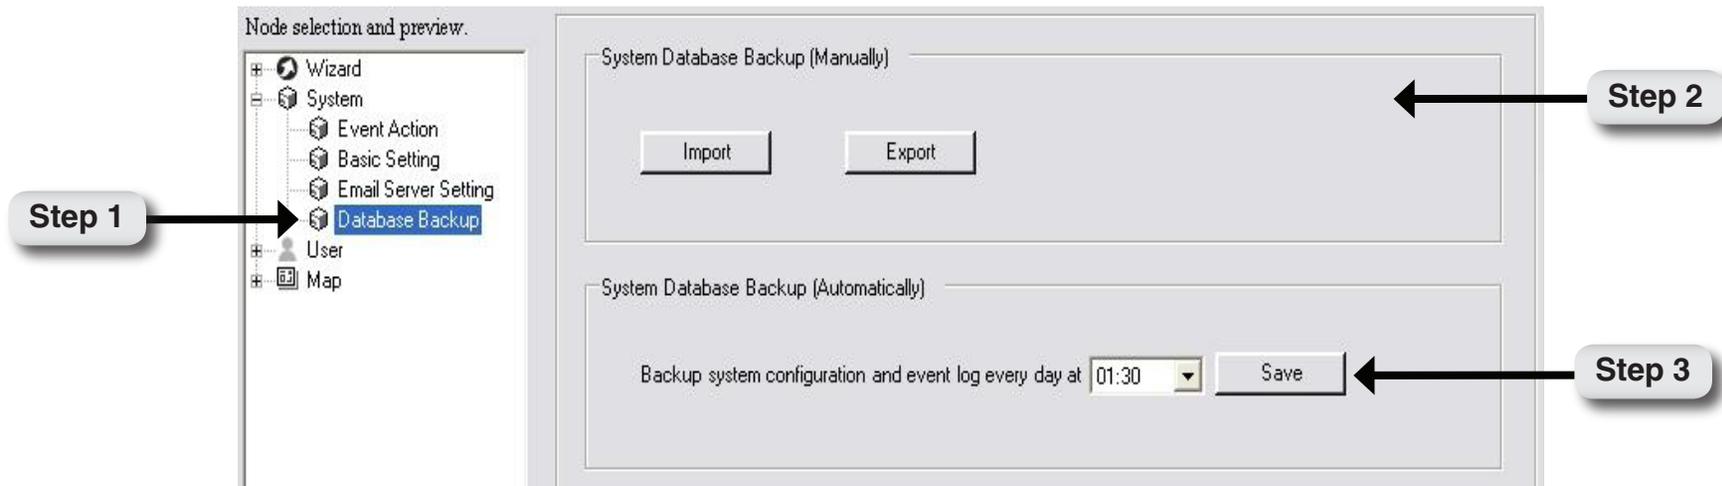

User

D-ViewCam provides five user accounts, one administrator account and four normal user accounts.

Administrator

Only an administrator can modify these settings. Follow the steps below to set up an administrator's account.

Step 1 - Select **Administrator** from the tree structured menu.

Step 2 - You can click the **Browse** button to upload a picture for the administrator.

Step 3 - Enter or change the user's **Basic Information**. Then click **Save** to activate this setup.



Normal User

The administrator may manage up to four normal user accounts. You can modify or remove all these accounts but can not add more than four accounts. To modify the user(s) accounts, follow the steps below.

Step 1 - Select **User1** from the tree structured menu.

Step 2 - You can upload a picture for the user, as well as enter or modify the user's **Basic Information** and privilege setting here. A normal user can be administrator if he/she receives administrator's privilege. You can adjust the user's valid time and then click **Save** to activate this setup.



My Map

My Map is the default map for the system. You can build your own map(s) by adding it into **My Map**, and assign it to your device(s). Follow below steps to add a map.


Add a Map

Step 1 - Click the  /**Add Map** button.

Step 2 - Input a map name or browse to locate the desired map filename.

Step 3 - Select an image file and click **Open**.

Step 4 - Click  /**OK** to save the setting. The new map will be added to the tree menu on the left.

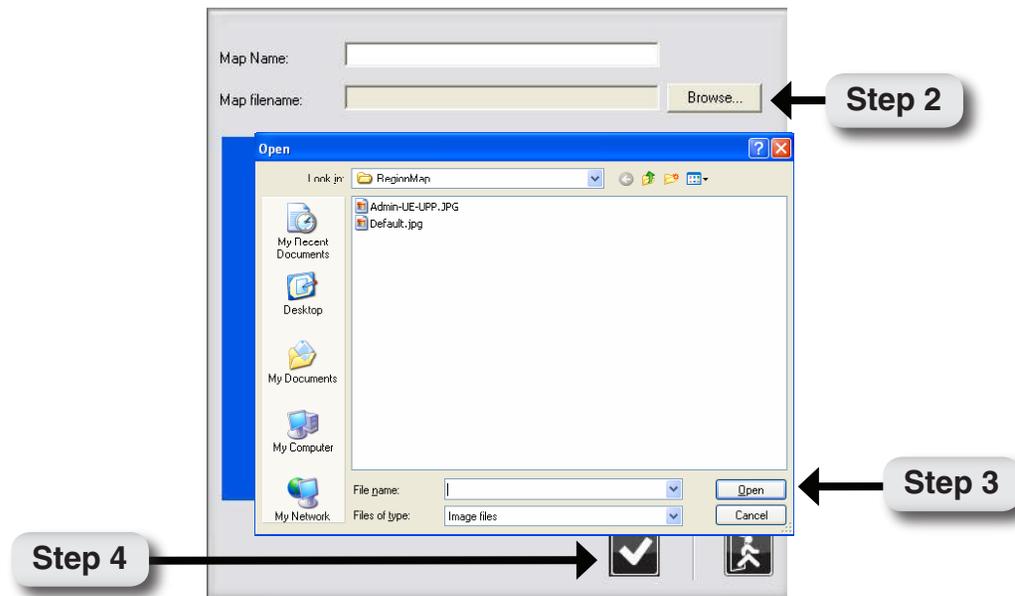


Modify Map

Step 1 - Click the  /**Modify Map** button

Step 2 - Click **Browse** to locate the desired image file or input the image filename directly.

Step 3 - Select an image file and click **Open**.

Step 4 - Click  /**OK** to save the setting. The modified map will be updated to the tree menu on the left.

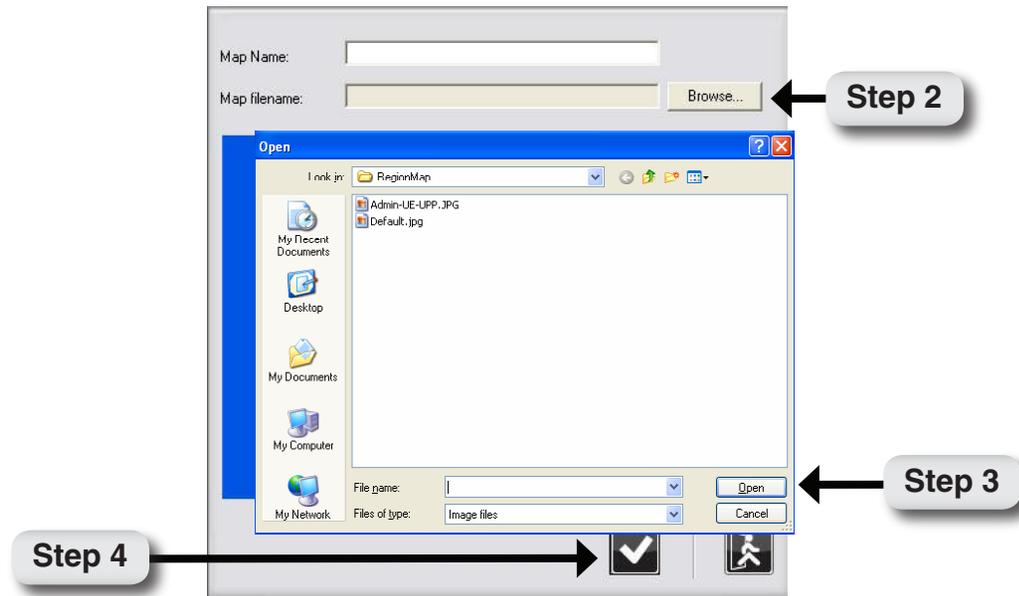


Placing Device to eMap

Step 1 - Select the **My Map** icon at the Node Selection and Preview Area. The selected eMap will be displayed in the Map Display area.

Step 2 - Drag the device icon (of the selected camera) from the Node Selection and Preview Area, and then drop it onto the eMap Display Area. Right click the device icon, a pop-up window will indicate the direction where the IP camera is facing.

Double-click the device icon placed in the e-Map interface to bring up the device web server.

Note: All devices can be deleted by right clicking the device icon in the eMap interface and then by clicking the **Delete** button.

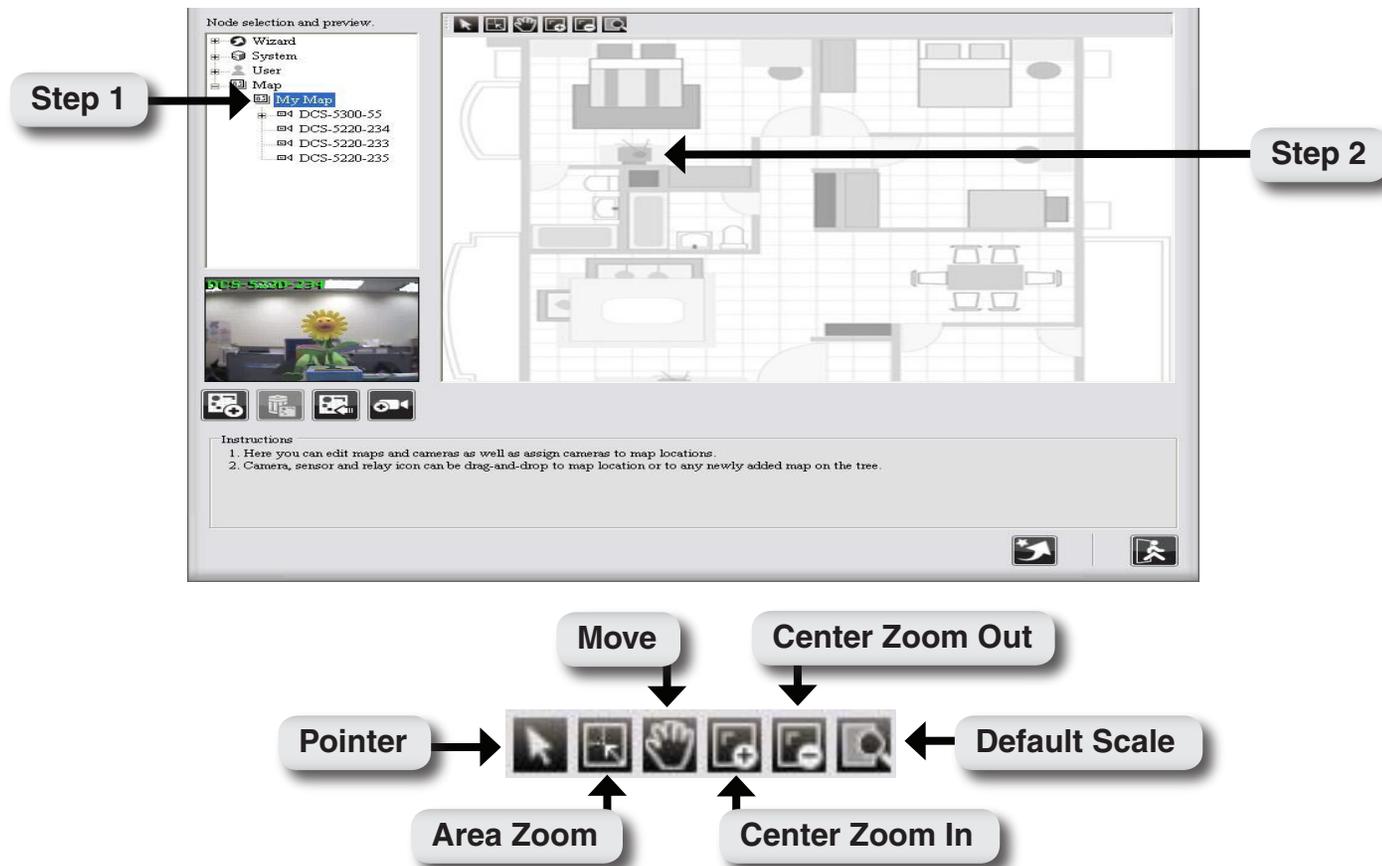

Device Setting

Device setting can be configured in Expert Mode. If the device is disconnected, the device settings such as preset, motion detection, and image quality will be disabled. The following section will explain the details of device setting.

Information

Camera Information

Camera Name, ID and Password: You can change this information.

Model name, MAC Address, and Status: The system will load this information automatically, and you can not modify this information.

Networking Information

IP Address, Device Port: You can change the camera IP address and its port number. If this information changed through the camera web server, please remember to update the information here as well.

Status: The system will load this information automatically, and you can not modify the status manually.

Select Orientation

If the camera is installed upside down, use the setting of **Vertical Flipped** to flip the image upside down, or mirror the image to flip it to the left, right or both.

Access to Device

By default, this option will connect and log on to the camera directly.

Note: However, if you change the camera's user name or password, a login prompt appears. Enter the user name and password to login.

Audio

Choose to Enable or Disable the two way audio function.

The screenshot shows the configuration interface for a D-Link camera. The 'Information' tab is active, displaying the following settings:

- Basic Information:** Camera Name: DCS-5220-191, MAC Address: 001346DBEA5D, Model Name: DCS-5220, Camera ID: admin, Camera Password: *****
- Networking Information:** IP Address: 192.168.1.191, Device Port: 80, Status: Connected
- Select Orientation:** Radio buttons for Normal (selected), Vertical Flipped, Mirror Image, and Inverted.
- Audio:** Radio buttons for Enable and Disable (selected).


At the bottom, there is an 'Access To Device' button and a 'Save' button. A small camera preview window is visible on the left side of the main settings area. Below the settings, there are instructions: '1. You can change camera basic information. 2. Select a preferred image orientation by checking one of the orientation settings to get a normal view. Mirror Image means flip the image to the left/right. Inverted means flipped and mirrored.'

Note: If you change the device information, it would result in short-term interruption of schedule recording.

DI/DO Setting

To configure the camera's sensor and relay, expand the camera node from the **Node selection and preview**, then select the **Sensor** or **Relay** node.

You can re-name the sensor/relay and define the normal status for the Sensor or Relay on the sensor/relay page. The Sensor and Relay will be triggered when the status is different from its normal state.

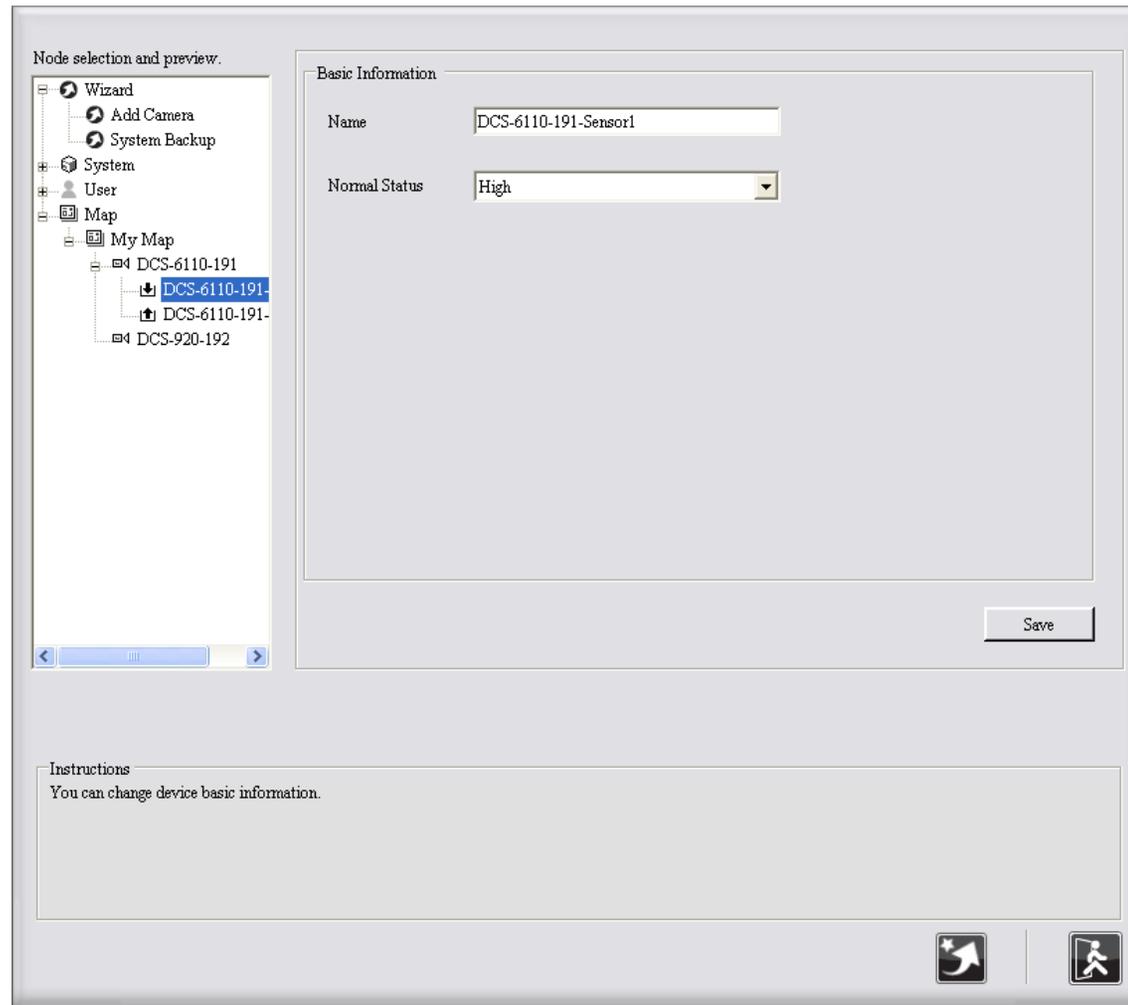


Preset Point

Preset Location specifies where the IP camera should point. Preset Name specifies the position name of the pointer. Follow the step below to set the Preset Point.

Step 1 - Use the PT Control interface to adjust the direction of the IP camera. Choose a number in the Preset Location field, and enter a name for this pointer in the Preset Name text box.

Step 2 - Click **Save** and the newly added preset name will show up in the Preset Location field (you can also add other preset points in the same way).

Note: To remove a preset, select the Preset Location and click **Remove**.

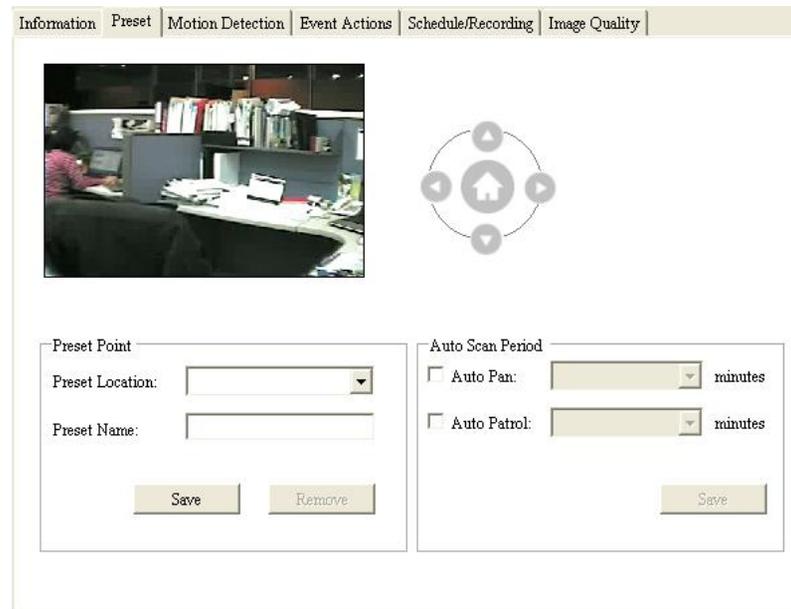

The screenshot shows the PT Control interface with the following elements:

- Navigation tabs: Information, Preset, Motion Detection, Event Actions, Schedule/Recording, Image Quality.
- Video feed: A live camera view of an office desk.
- PT Control diagram: A circular diagram with a central home icon and four directional arrows (up, down, left, right).
- Preset Point section:
 - Preset Location: A dropdown menu.
 - Preset Name: A text input field.
 - Buttons: Save and Remove.
- Auto Scan Period section:
 - Auto Pan: A checkbox and a dropdown menu followed by "minutes".
 - Auto Patrol: A checkbox and a dropdown menu followed by "minutes".
 - Button: Save.

Auto Scan Period

The IP camera will auto pan and auto patrol within this time interval. You may get service of Periodically Auto Pan and Periodically Auto Patrol by assigned interval, but this service will stop the alarm service of that IP camera, including Event Action of Go Preset.

Motion Detection

To detect specific area motion detection, you have to define at least one detection zone. Follow the steps below.

Step 1 - Click the **New** button and a small window will appear on the screen, you can drag the mouse to draw a detection zone. You may define more than one zone on the screen by repeating the same process.

Step 2 - Adjust the window to define the detection zone.

Step 3 - Input a window name, then click the **Save** button.

Enable Motion Detection
Check the box to activate.

Window Name
Give the detection zone a name.

Sensitivity
Modify the sensitivity setting by changing the slider control. Move toward right will increase the sensitivity level, which means a relatively small movement will trigger an action. Move the slider control toward left will reduce the sensitivity for movement detection.

Save
Save the settings.

New
Create a new window.

Percentage
Modify the percentage setting by changing the slider control.

Event Actions

These event actions are more related to the device events, such as Image Motion Detected, Sensor Alarm Detected, and Video Lost. For system event action setting, please refer to page 40. Follow the steps below.

Step 1 - Select the Device Icon from the **Node selection and preview** area.

Step 2 - Choose an event from **Add Event**. The system will show the Set Event Action window. For help with the settings, please may refer to pages 42, 43, 44, 58, 59 and 60.

Step 3 - After finishing setting the Event Action, the action's configuration will show on the **Action Table**. You can use the **Modify** and **Remove** buttons to modify or remove the settings.

Note: *Accept next event after (seconds)* means the time interval between the first event and next event that can be processed. Any event(s) that occurs during the interval will be ignored.

The screenshot displays the configuration interface for Event Actions. On the left, the 'Node selection and preview' tree shows a hierarchy: Wizard, System, User, Map, My Map, DCS-5300-55 (selected), DCS-5220-233, DCS-5220-234, and Map2. A video preview window is visible at the bottom left. The main interface has tabs for Information, Preset, Motion Detection, Event Actions (active), Schedule/Recording, and Image Quality. The 'Add Event' window is open, showing three event types: Image Motion Detected, Sensor Alarm Detected, and Video Lost. The 'Image Motion Detected' event is selected, and the 'Set Event Action' dialog is open, showing options for 'Select an action' (Change Digital Output State, Send Email, Play Sound, Show Live Video, Start Recording, Go to Preset Point) and 'Select Video Source' (My Map, DCS-5300-55, DCS-5220-233, DCS-5220-234, Map2). The 'Seconds before starting event action' is set to 0. The 'Action Table' contains one entry: Item 1, Event Type ImageMotionDetected, Action Recording. At the bottom, 'Accept next event after' is set to 30 seconds. 'Modify' and 'Remove' buttons are at the bottom right.

Item	Event Type	Action
1	ImageMotionDetected	Recording

Event Action List Table

Show Live Video


Follow the steps below to show live video.

Step 1 - Select **Show Live Video** action.

Step 2 - Select a video source. Then, Click  /OK to activate this setup.

1. If only one event is triggered, the camera images will be displayed on the four split screens. They are arranged starting from up-left to up-right, low-left, and low-right.
2. If multiple events are triggered, live video will be displayed accordingly. If more than four cameras are triggered, the live video will be displayed rotational.

Note: *Seconds before starting event action* means the delayed time before executing the event action. If you prefer **NOT** to start the event action immediately, you can set a wait time so that the action will start after the wait time has expired.

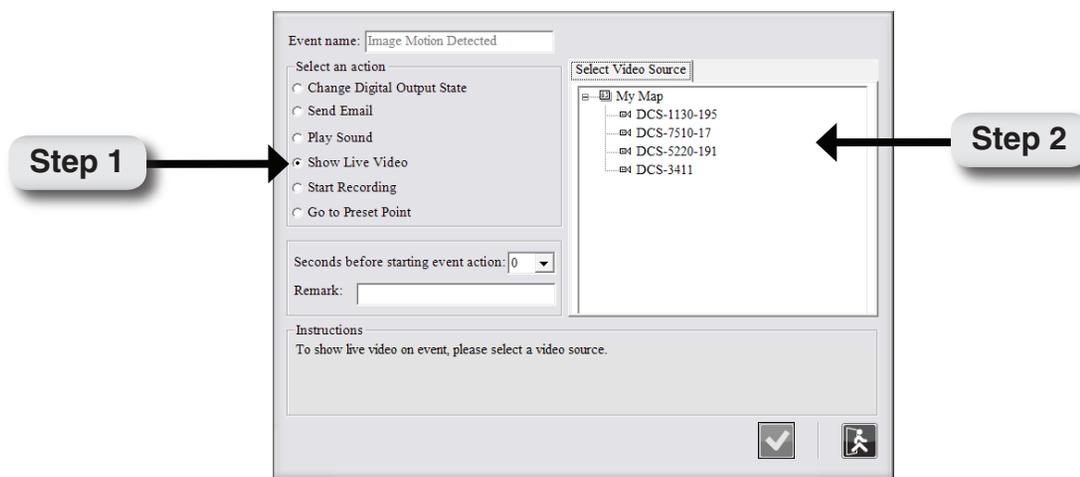


Start Recording

The event recording of a breached camera; event recording time is set by number of seconds.

Step 1 - Select the **Start Recording** action.

Step 2 - Select a video source. Click /OK to activate this setup.

Note: Seconds before starting event action means the delayed time before executing the event action. If you prefer **NOT** to start the event action immediately, you can set a wait time so that the action will start after the wait time has expired.

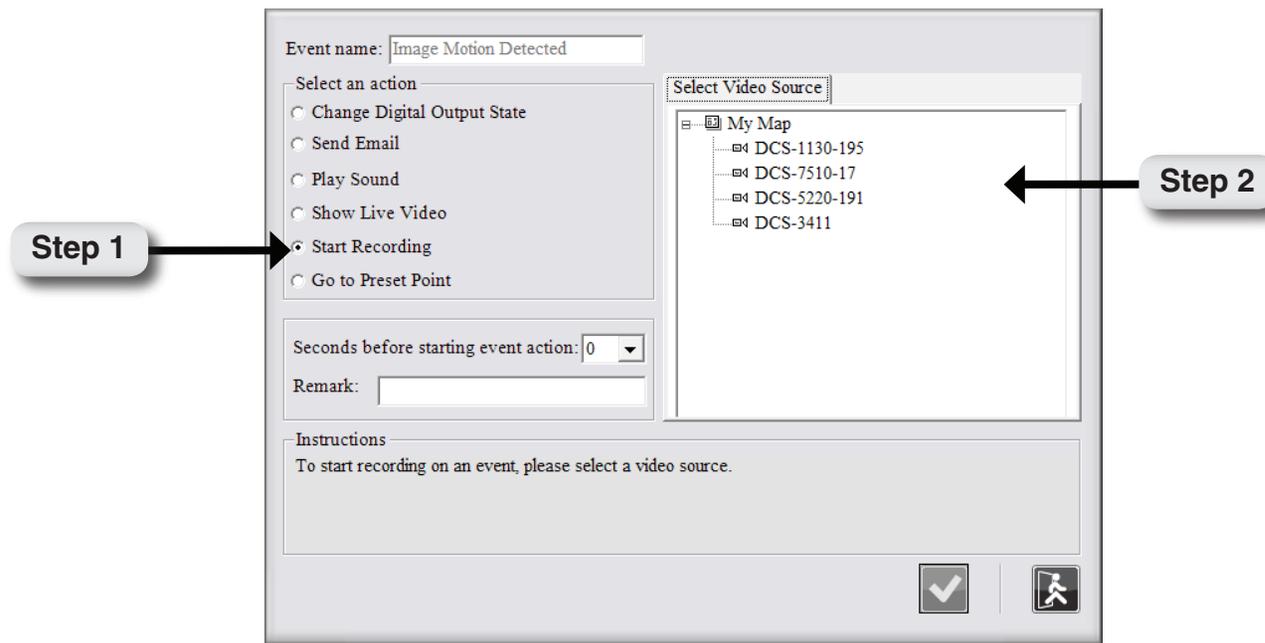


Go to Preset Point

Turn to the preset location upon the motion triggering.

Step 1 - Select the **Go to Preset Point** action.

Step 2 - Select from the Preset Point field. When event is detected, the system will turn PT camera to the specified preset location. Then, click /OK to activate this setup.

Note: *Seconds before starting event action* means the delayed time before executing the event action. If you prefer **NOT** to start the event action immediately, you can set a wait time so that the action will start after the wait time has expired.

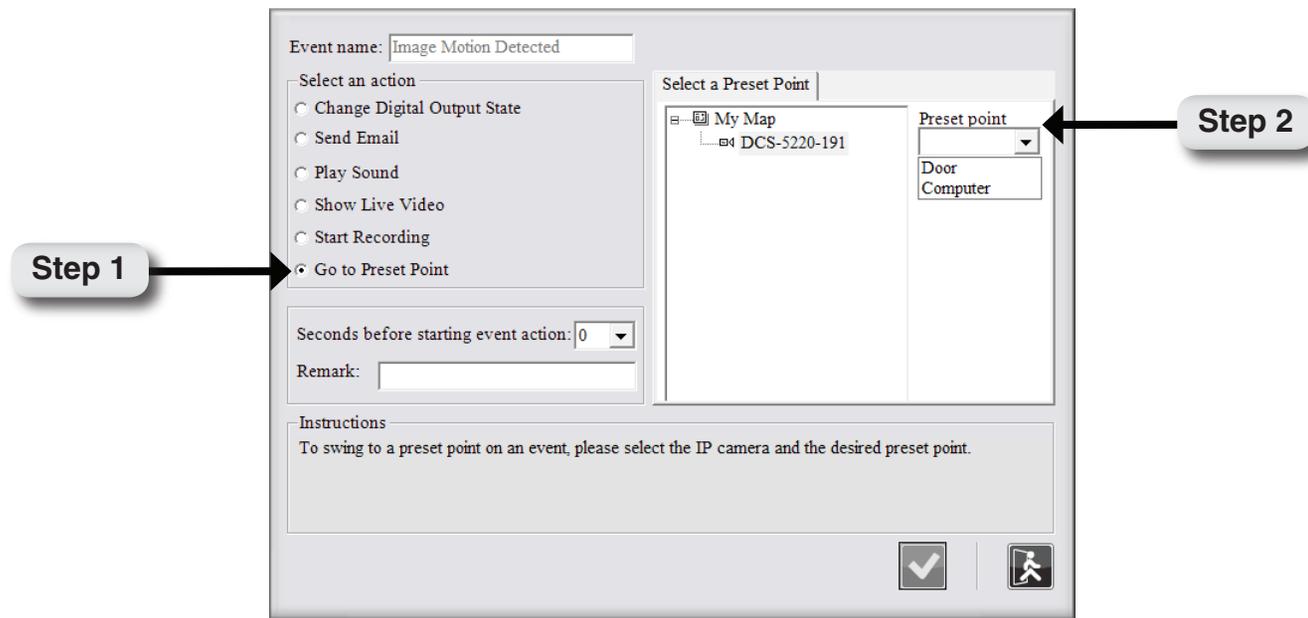

Schedule / Recording (Settings)

Node selection and preview.

- Wizard
- System
- User
- Map
 - My Map
 - DCS-5300-55
 - DCS-5220-233
 - DCS-5220-234
 - Map2

Information | Preset | Motion Detection | Event Actions | **Schedule/Recording** | Image Quality

Settings | Schedule | Specific Date

Recording Rate
FPS of Scheduled Recording: 10
FPS of Event Recording: 10

Event Recording Length
Pre-Event Length: 5 seconds
Post-Event Length: 20 seconds

Save

Recording Rate
Set the recording frame rate, in frames per second (FPS).

Event Recording Length
Define the time length of event recording for pre-event and post-event.

Schedule / Recording (Schedule)

Follow the steps below to set the schedule.

Step 1 - Select **Set Scheduled Recording** to schedule recording, or select **Set Scheduled Event** to schedule event recording.

Set Scheduled Recording

The system provides four **Scheduled Recording** types:

Disable: No video will be recorded for this schedule.

24/7: Video will always be recorded.

Select: Video will be recorded according to your schedule.

Economic: Video will only be recorded when motion is detected.


Set Scheduled Event Setting

Disable: When an event occurs, no video will be recorded.

24/7: When an event occurs, the video will always be recorded.

Select: When an event occurs, the video will be recorded according to your schedule.

Step 2 - Select the time or period when you want to schedule the recording. The activated block will be colored. To cancel or modify a schedule setting, click the colored block to deactivate it.

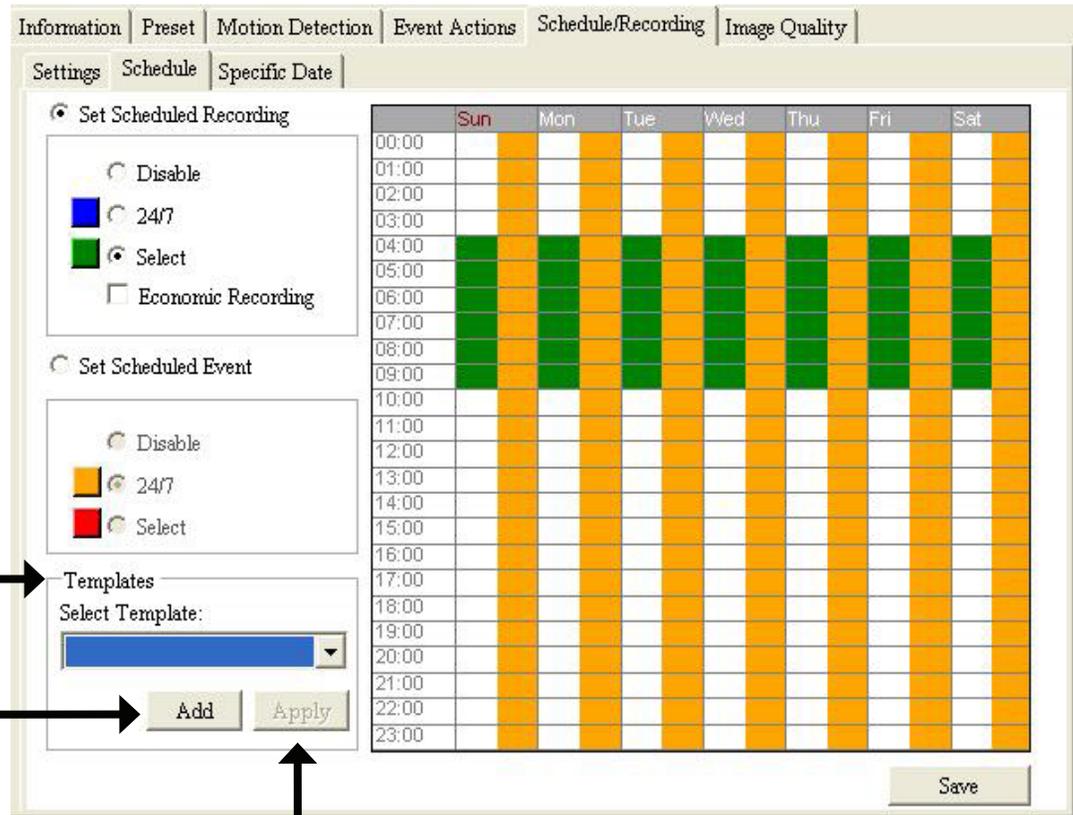

Templates

Provides a list of available templates for you to choose and apply. You must add/set a template first before apply it to other devices.

Add Template

You can add and save your setting for the scheduled recording into a template.

Apply Template

You can select an available template from the drop-down menu and then click **Apply**. This will save some efforts in scheduling the recording.

Schedule / Recording (Specific Date)

Follow the steps below to set a specific date.

Step 1 - Select the start date and end date.

Step 2 - Put a remark for the specific date.

Step 3 - Click **Add** to add your specific date to the table on the right.

Step 4 - If you want to modify the specific date, click a specific date from the table, then modify the date and remarks, and click **Modify**.

Step 5 - Click **Import/Export** button to load or output the specific date.

Step 6 - Select a specific date and click **Remove** to delete the specific date.

The screenshot shows the 'Schedule/Recording' configuration window. The 'Specific Date' tab is active. On the left, there is a 'Select Date' section with two date pickers (both set to 2007-11-27) and a 'Remarks' text field. Below this are 'Add' and 'Modify' buttons. On the right, there is a table with columns 'Item', 'Date', and 'Remarks'. Below the table are 'Remove', 'Import', 'Export', and 'Save' buttons. Callout boxes provide instructions for each of these elements.

Date
Select the specific date period.

Add
Click **Add** to add a specific date.

Modify
You can modify the specific date by selecting a specific date and click **Modify** button.

Remove
Remove the specific date.

Import
Click **Import** to import from a text file.

Export
Click **Export** to save your current setting into a text file for future use or backup.

Remarks
You can put a remark to describe the specific date.

Image Quality

Below is a description of the **Image Quality** screen.

The screenshot shows the 'Image Quality' configuration screen with a navigation bar at the top containing 'Information', 'Preset', 'Motion Detection', 'Event Actions', 'Schedule/Recording', and 'Image Quality'. The main area features a video preview window on the left and four sliders on the right, each labeled 'Brightness:', 'Contrast:', 'Saturation:', and 'Hue:'. Each slider has a central knob and a numerical value of '0' on the right. Below the sliders is a 'Default' button. Five callout boxes provide instructions: 'Brightness' (adjust between -5 and +5), 'Contrast' (adjust between -5 and +5), 'Saturation' (adjust between -5 and +5), 'Hue' (adjust between -5 and +5), and 'Default' (click to preset all settings to default values). Arrows point from each callout to its corresponding slider or button.

Brightness
Adjust the brightness between -5 and +5

Contrast
Adjust the contrast between -5 and +5.

Saturation
Adjust the saturation between -5 and +5.

Hue
Adjust the hue between -5 and +5.

Default
Click the "Default" button to preset all the setting to default values.

Playback

Video Search and Playback Management

The **Video search and playback** button allows you to playback recorded video through the schedule recording, event recording, manual recording, or all recordings. This function also provides additional features for exporting video files into AVI format. The playback speed can be specified with the control bar. Follow the steps below.

Step 1 - Select the video type, start and end date.



Step 2 - Select the device type, and then click **Query**.

Step 3 - Double-click the file you want to playback from the result list.

Step 4 - You can backup the video files by clicking the **Backup** button.

Step 5 - You can use the buttons in the Playback Control area to playback the video. The system allows you to rewind, fast backward, stop/pause, fast-forward, snapshot an image, and play the video in full screen mode by clicking the **Switch to full mode** button (you may click the **Switch to default mode** to go back to video search and playback page.)

Step 6 - Click /**Close** button to return to the main screen.

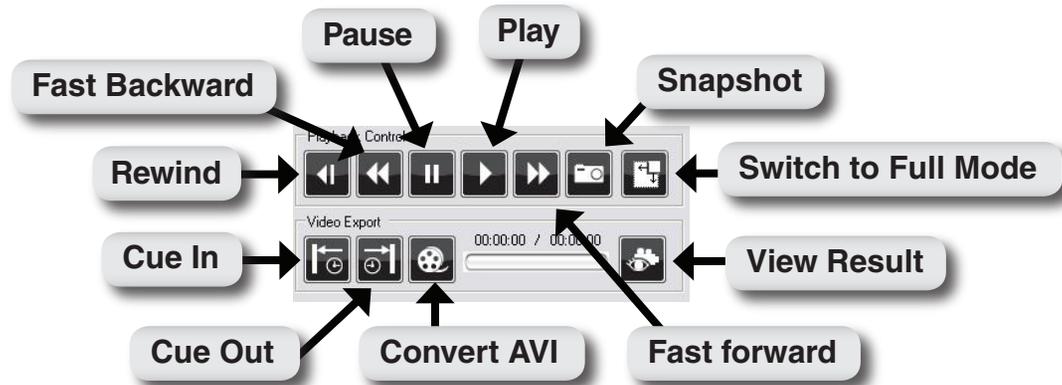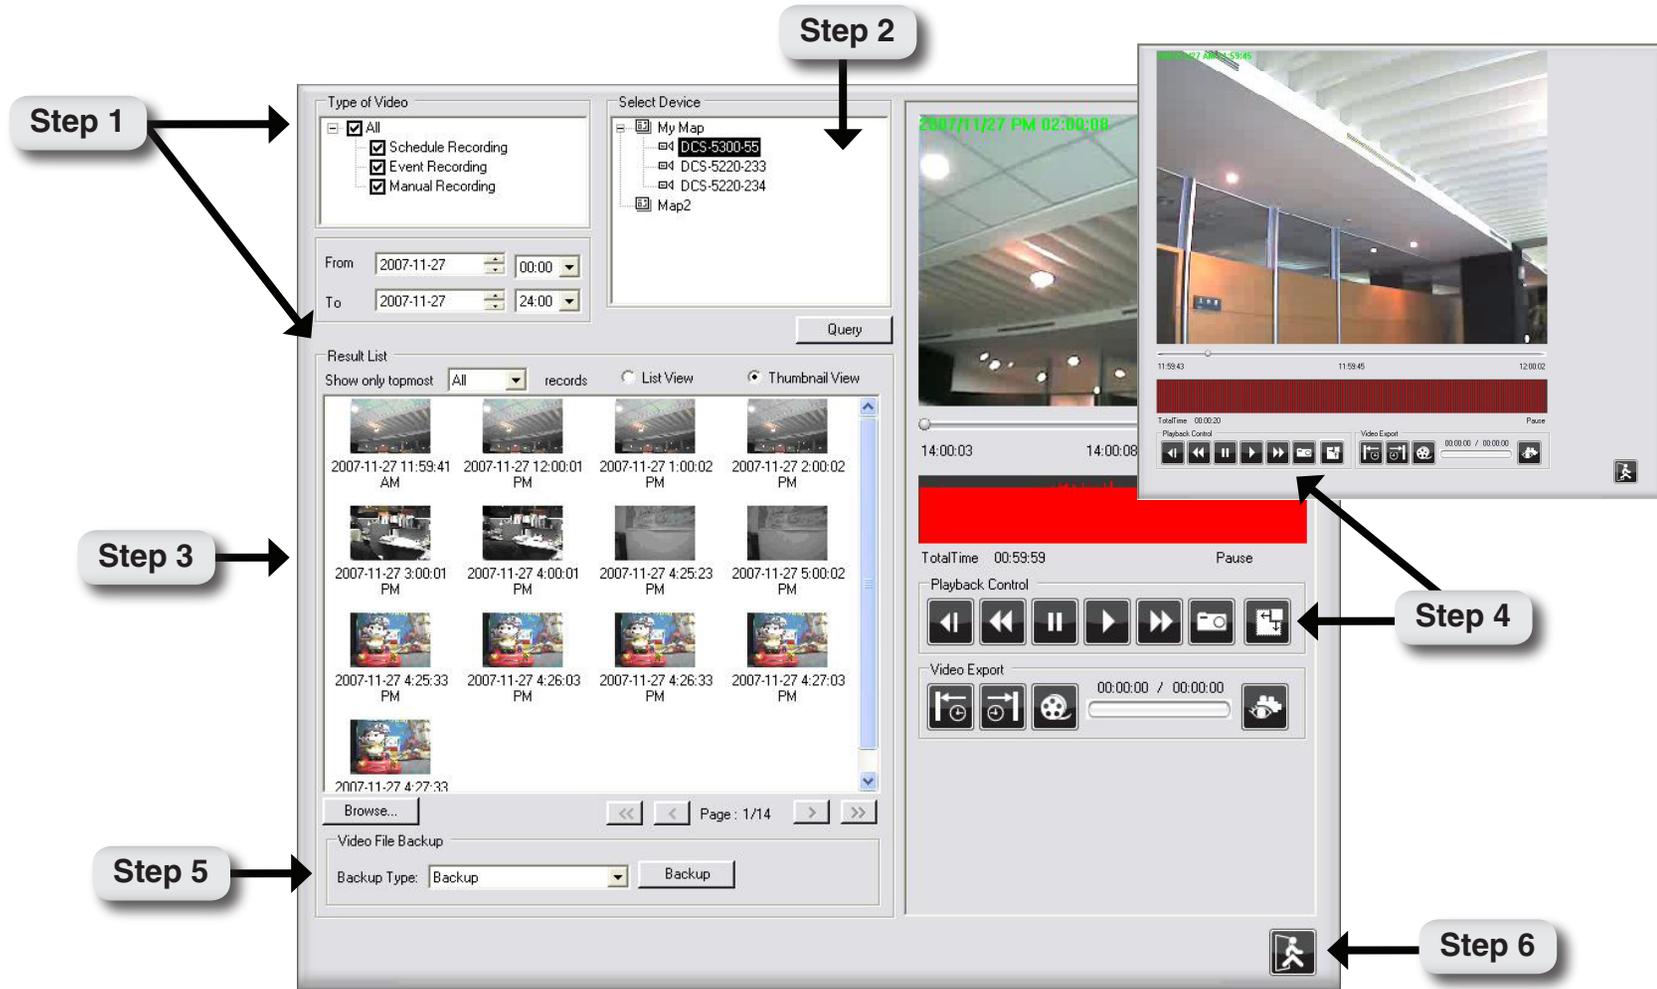

Select Device
The system lists all the devices attached on your system.

Type of Video
The system provides three types of video, schedule recording, event recording and manual recording.

From, To
You can assign the system to query particular date.

List View / Thumbnail View
Switch the result list to list view or thumbnail view.

Histogram
The red mark in the Histogram area helps you quickly locate the moment of motion video if the motion detection is setup. The histogram can be partially enlarged by dragging the mouse to show details.

Result List
A query result will appear in the spreadsheet. You can assign the system to print out how many records in a page and use the paging button to navigate the page of the spreadsheet.

Playback Control
You can use the button in the control area to operate the video.

Video File Backup
You can backup a video, backup then delete or delete without backup.

Video Export
Export the video files in AVI format.

Event Search and Playback Management

The **Event search and playback** button allows you to select and query both the event(s) and camera(s), and playback the event(s) which has been recorded by the system. This function also provides additional features for exporting video files in AVI format, and exporting the event log information (Date/Time, Source, Type, Action, Relation Source and Context information) in .txt file. The playback speed can be specified with the playback control bar.

Step 1 - Select the event type, start and end date.

Step 2 - Select device type, and then click **Query**.

Step 3 - If the result list has a recording file, double-click the list, then the system will pop up a video display page and playback the video. Click the **Close** button to return to the event search and playback page.

Step 4 - You can export the log lists by clicking the **Export** button.

Step 5 - Click /Close button to return to main screen.

Type of Event
The system provides several types of device event, and each device has different event action(s).

Select Device
The system lists all the devices attached on your system.

Step 1

From, To
You can schedule the system to query event.

Step 2

Log List
List the unusual event history that had been detected by the system.

Step 3

Export
Export the event log information in .txt file.

Step 4

Step 5

The screenshot shows the following interface elements:

- Type of Event:** A tree view with 'All' expanded, showing 'Camera' (checked) with sub-items 'Motion Detected' and 'Video Lost' (checked), and 'System Events' with sub-items 'Recording Path Error' and 'Disk Full'.
- Select Device:** A tree view with 'My Map' expanded, showing 'DCS-5300-55', 'DCS-5220-233', and 'DCS-5220-234' (highlighted), and 'Map2'.
- From, To:** Date and time pickers set to '2007-11-27' and '00:00' to '24:00'.
- Log List:** A table with columns 'Date/Time', 'Source', 'Type', and 'Action'. It contains 10 rows of 'ImageMotionDetected' events from 'DCS-5220-234' with the action 'Recording'.
- Export:** An 'Event Log Export' section with an 'Export Path' field, a 'Browse...' button, and an 'Export' button.
- Video Player:** A small window showing a video feed of a person at a desk.

Frequently Asked Questions

D-Link D-ViewCam Features

1. What is the difference between D-Link D-ViewCam and the traditional surveillance system?

D-Link D-ViewCam records video in MJPEG and MPEG4 formats, stores high quality image data on computer hard disks, and provides easy query and review of the stored video. Traditional surveillance systems use videotape for storage and review, which is hard to managed, time consuming and the recorded video will degrade over a period of time or usage.

2. Why use the D-Link D-ViewCam Intelligent Solution?

D-Link D-ViewCam is the bundled video surveillance system software that provides advanced security monitoring and device management functions to use with D-Link Internet cameras. This software uses IP technology to provide comprehensive management functions such as system controls, live video feeds and archived recordings.

3. We have security guards on duty 24 hours a day, 7 days a week. Do we still need D-Link D-ViewCam?

Security guards and camera surveillance systems can complement each other. Your security guards can catch thieves red-handed but not in other circumstances, such as if they are preoccupied with another task. D-Link's D-ViewCam can always automatically record events for review or to be used as evidence. Your surveillance cameras can connect to any I/O devices, and D-ViewCam can discreetly and timely alert your security guards of inadvertent events, allowing them to react to the situation in an effective manner.

4. What kind of network does D-Link D-ViewCam run on?

D-Link D-ViewCam runs on standard TCP/IP networks, such as a local area network (LAN), and over the Internet. If using Internet, a broadband DSL or cable modem connection is recommended to ensure good quality of video image is being transferred over the Internet.

5. How are multiple camera views displayed on the screen?

If you deploy several cameras and they are all displaying video at the same time, you have several options to arrange the display of these videos on your computer screen. One option is to reserve a major part of the screen to display the video from a single camera. Another option is to split the screen to show videos from multiple cameras. To switch the display from one camera to another, you can either manually select a camera, or have the system automatically display videos from all cameras in turn, called auto rotation.

6. Does D-Link D-ViewCam support cameras that have motion detection capability?

Yes. If the camera has motion detection function, D-ViewCam will take advantage of that. When the camera does not have motion detection capability, D-ViewCam will perform software motion detection for it, at the cost of system performance.

7. How do I estimate an adequate disk space to store the recorded video?

The Disk Space required can be calculated with these two formulas:

1. For MJPEG cameras: Frame Size x Frame per Second x Total Second, or
2. For MPEG4 cameras: Bit rate / 8 x Total second.

For example:

MJPEG cameras: Recording at medium quality CIF (10 Kbytes/frame) at 30 FPS for a week requires 173G Bytes/camera

MPEG4 cameras: Recording with bit rate at 64kbps (low quality CIF) for a week = 4.6 G Bytes/camera

Note: *The data revealed here is only for reference. The real recording capacity depends on the view and environment.*

8. Do I need a very powerful computer to run D-Link D-ViewCam?

Please refer to the System Requirements table on page 4. To monitor more than 16 cameras simultaneously, the quality of the live video display may depend on your hardware specification.

Note: *If a mega pixel camera is used with the D-ViewCam application, the minimum system requirement should be raised to CPU: Intel P-4 3.4GhZ or above with 1GB of memory due to the resources required to process and store large amounts of image data.*

9. Please describe the privilege-based access of D-Link D-ViewCam.

D-Link D-ViewCam uses a simple privilege control scheme to let users access the system and use different functions. A user can have administration privilege or normal user privilege.

10. Windows Vista operating system's user account control feature may interfere with the normal operation of the D-ViewCam application.

For Windows Vista users: please go to **User Accounts and Family Safety > User Accounts > Turn User Account Control on or off**, then uncheck the “**Use User Account Control (UAC) to help protect your computer**” checkbox. Restart your computer to validate the setting.

For additional information of User Account Control, please go to <http://www.microsoft.com/windows/products/windowsvista/features/details/useraccountcontrol.msp>.

D-Link D-ViewCam Operation

Video Image Configuration

1. How are video images stored?

Video images are compressed into MJPEG or MPEG4 format, and then stored on your computer hard disk or a designated network storage device.

2. What frame sizes does D-Link D-ViewCam use?

For MJPEG, each frame is approximately 14 to 15KB each. However, it also depends on your camera's specifications and setting.

3. What should I do when saving image configuration or image quality and the system pops up “Parameter setup error” message?

One of the following might cause this problem:

1. Camera is disconnected.
2. Network is unstable.
3. Firewall.

If you install D-ViewCam on a PC with firewall software running, the firewall software may reject some Internet packets, which are considered insecure. You need to turn off Internet Security or disable Personal Firewall in order to save image configure/ image quality of your camera. Remember to turn on Internet Security or enable Personal Firewall later to secure your system.

4. Can we change the FPS (frame per second) rate of a camera?

FPS is the number of image frames that a camera shoots in a video operation. For MJPEG file, you can set the FPS rate according to your requirement.

Note: *Not all setting of your camera is available in D-ViewCam. The FPS rate that you set cannot exceed the maximum FPS rate of your camera. For MPEG4 format, you can change bit rate instead of FPS. Please make detail configurations on camera's web interface.*

5. Which format could my recorded video file covert into?

D-Link D-ViewCam can convert the recorded video into AVI format with the available codec in your operating system.

Video Display

6. What should I do if there is no video display of the camera after I have just added it to D-ViewCam?

Please check to see if you correctly typed in the IP address of the camera. If you changed the default user name and password of the camera, you must input that information in D-ViewCam in Expert mode. The changed value will take effect after you re-login to D-ViewCam. Please refer to page 48 for changing the camera ID and Password.

7. Why isn't video displayed from the connected camera(s)?

The possible root causes:

1. The network is unstable
2. The workload is too heavy for your computer to handle.
3. Changing the camera's video parameters (by using the camera web server) in the middle of a D-ViewCam operation, can cause D-ViewCam to fail.

8. How do I record video in D-ViewCam?

D-Link D-ViewCam provides four different recording methods:

1. Manual recording (capture of video feed at the moment you command the system to).
2. Schedule recording (automatic recording according to the time periods that you set).
3. Event recording (automatic recording according to the event settings).
4. Motion detection recording in scheduled time. In the time periods you set, start recording only when motion is detected. This can make disk usage more economical.

9. Can I change the audio format at the camera web server while using two-way audio function?

No. Please make sure to complete all camera configurations at the camera web server before using the D-ViewCam application. Changing camera parameters using the camera web server in the middle of a D-ViewCam operation can cause D-ViewCam to fail.

10. Why does my computer screen always display Connecting or Disconnected?

For cameras determined to be offline, and when D-ViewCam is trying to reconnect, a “Connecting” status will appear on the display during the retry. If D-ViewCam fails to connect, a “Disconnected” status will appear on the display. If the connection is stable, but the video stream is non-existent, the reconnect interval will be within 30 seconds. If the connection fails, the reconnect interval will be within 60 seconds.

11. How to get a better image view in D-ViewCam?

D-ViewCam adopts drop frame to optimize the application performance. So if you want to get better image view, please consider below items:

1. Disable the rotation mechanism.
2. For viewing MJPEG video format in CIF resolution, the video FPS display in D-ViewCam is adjusted according to the number camera displayed in the main screen. The higher the FPS, the smoother the motion will appear. 1-split screen display 30 FPS, 4/6/9/10/16-split screen, display 5 - 15 FPS. 32-split screen, display 1 FPS.
3. For viewing MPEG4/H.264 video format, adjust the image resolution to 640*480 and showed in 4-split screen. For the camera with the resolution larger than 1024*640, D-ViewCam will decode I-frame only.

Firewall


10. What about firewalls? Do they affect D-Link D-ViewCam?

If you use D-Link D-ViewCam on computers with Windows XP SP2 or any other applications with personal firewalls, please configure the firewall to allow D-Link D-ViewCam to pass through. Most the personal firewalls will automatically prompt you to permit D-ViewCam program to be used in the network.

11. What about firewalls like Nod 32 which has to be manually input to permit D-ViewCam installation?

If you use D-Link D-ViewCam on computers with Nod32 personal firewall, please configure the firewall manually after you have installed D-ViewCam as following steps:


Click NOD32 antivirus system icon on the task bar to open it.

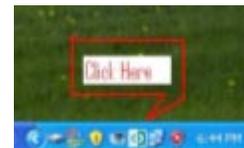

Select IMON > Setup > Miscellaneous > Exclusion > Edit > Add to C:\Program Files\D-Link D-ViewCam\Exes\Admin.exe, Control.exe, Monitor.exe, and VideoProxy.exe to the Exclude applications window.

Note: Paths depend on your software installation.

Note: D-ViewCam is not compatible with the ESET NOD32 anti virus version 2.7. Please upgrade your anti virus version to 3.0 and it is also recommended to stop the anti virus application while executing the D-ViewCam installation.

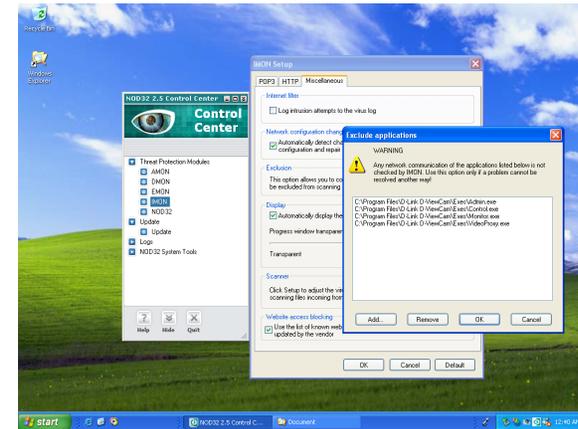


Click **OK** to exit **Exclude applications** window.

Click **OK** to exit **IMON Setup** window.

Click **Quit** to unload IMON.

Click **Start** to load IMON

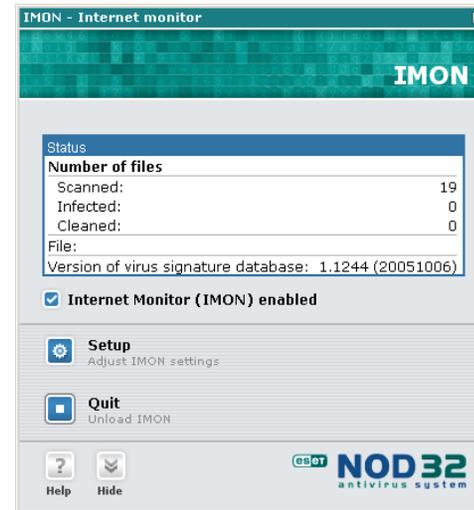

Event

12. How does the event management operate?

D-Link D-ViewCam can receive input from Motion Detection or Sensor (DI, or Device Input) to create an event. Then, the event can be used to trigger DO (Device Output), video recording, show live video, e-mail notification, play sound, and go to preset point (on cameras with Pan and Tilt functions).

13. How does event recording work?

It starts recording automatically according to your event settings.

14. In what format can I export the event report to?

D-ViewCam can export the event report in text format. Note that Microsoft Word 2000 is currently not supported.

15. When an event occurs, how do I know which camera it comes from?

Please look at the Event Notification Log in the main screen. The source column shows the event source.

16. How do I get event notifications?

D-Link D-ViewCam sends event messages in different ways, based on the event action setting of a camera. For example, if the event action is Email, the message will be sent by Email. For details, please refer to User's Manual of D-ViewCam

17. After I've changed the time or date of my computer system, the D-Link D-ViewCam event function does not seem to work anymore?

Please exit D-ViewCam then reboot your computer after you've changed your computer system's time and date. Then run D-ViewCam again. The event function should go back to normal.

Database

18. What's the purpose of database backup?

The configuration data, operating parameters and log data of D-ViewCam are stored in database. D-Link D-ViewCam can backup database periodically and automatically. So, you can restore it if the system is corrupted inadvertently.

19. What is the purpose of database restore function in D-Link D-ViewCam?

The database restore function is provided to safeguard your D-ViewCam program database in case if it is corrupted inadvertently. D-ViewCam can backup the database automatically but you have to restore the database manually. For details, please refer to D-ViewCam User's Manual.

Save and Copy to Setting

20. Why do we need to use “Save Setting” and “Copy to” functions in D-Link D-ViewCam?

These two functions are designed to let users configure cameras efficiently. Camera configurations such as: Area setting, map file, device ratio, configurations in Camera Setting, Image Alarm Setting, Preset, eMap location and sensor alarm setting can all be saved and copy to another camera. However, please remember to review the settings of the target camera after “copy to” to make sure all settings are correct and work as intended.

Storage Space Setting

21. What will happen when my hard disk or network storage device is running out of space?

When your hard disk or network storage device is approaching 90% full, and if you have enabled the Recycle function, the system will automatically start to delete the oldest recorded video on your hard disk or network storage to make space for the new files.

To prevent losing recorded video data, please remember to periodically back up your recorded video files and delete the unwanted ones.

For details on how to use this function, please refer to page 36.

22. How to configure the schedule recording, event recording, manual recording path?

To avoid system failure due to insufficient disk space, please configure the recording path for schedule, event and manual recording options differently from the D-ViewCam installation path.

Open Source Software Notification

D-ViewCam 2.x product makes use of the following software licensed under GPL (General Public License). Copies of the GPL licensed software are included in the software distribution CD of D-ViewCam 2.x product. You can also download the software from the official web site listed here.

1. Xvid MPEG-4 video codec version 1.1.3 (www.xvid.org, GPL v2)

© 1989, 1991 Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The “Program,” below, refers to any such program or work, and a “work based on the Program” means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term “modification.”) Each licensee is addressed as “you.”

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program’s source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.

b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.

c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,

b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code,

to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange;
or,

c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and “any later version,” you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Contacting Technical Support

U.S. and Canadian customers can contact D-Link technical support through our web site or by phone.

Before you contact technical support, please have the following ready:

- Model number of the product
- Hardware Revision (located on the label on the bottom of the unit (e.g. rev A1))
- Serial Number (s/n number located on the label on the bottom of the unit).

Please check the D-Link support site below for the latest product information including FAQ's, known issues, and other product-related updates.

For customers within the United States:

Phone Support:
(877) 354-6555

Internet Support:
<http://support.dlink.com>

For customers within Canada:

Phone Support:
(800) 361-5265

Internet Support:
<http://support.dlink.com>

Warranty

Subject to the terms and conditions set forth herein, D-Link Systems, Inc. (“D-Link”) provides this Limited Warranty:

- Only to the person or entity that originally purchased the product from D-Link or its authorized reseller or distributor, and
- Only for products purchased and delivered within the fifty states of the United States, the District of Columbia, U.S. Possessions or Protectorates, U.S. Military Installations, or addresses with an APO or FPO.

Limited Warranty:

D-Link warrants that the hardware portion of the D-Link product described below (“Hardware”) will be free from material defects in workmanship and materials under normal use from the date of original retail purchase of the product, for the period set forth below (“Warranty Period”), except as otherwise stated herein.

- Hardware (excluding power supplies and fans): One (1) year
- Power supplies and fans: One (1) year
- Spare parts and spare kits: Ninety (90) days

The customer’s sole and exclusive remedy and the entire liability of D-Link and its suppliers under this Limited Warranty will be, at D-Link’s option, to repair or replace the defective Hardware during the Warranty Period at no charge to the original owner or to refund the actual purchase price paid. Any repair or replacement will be rendered by D-Link at an Authorized D-Link Service Office. The replacement hardware need not be new or have an identical make, model or part. D-Link may, at its option, replace the defective Hardware or any part thereof with any reconditioned product that D-Link reasonably determines is substantially equivalent (or superior) in all material respects to the defective Hardware. Repaired or replacement hardware will be warranted for the remainder of the original Warranty Period or ninety (90) days, whichever is longer, and is subject to the same limitations and exclusions. If a material defect is incapable of correction, or if D-Link determines that it is not practical to repair or replace the defective Hardware, the actual price paid by the original purchaser for the defective Hardware will be refunded by D-Link upon return to D-Link of the defective Hardware. All Hardware or part thereof that is replaced by D-Link, or for which the purchase price is refunded, shall become the property of D-Link upon replacement or refund.

Limited Software Warranty:

D-Link warrants that the software portion of the product (“Software”) will substantially conform to D-Link’s then current functional specifications for the Software, as set forth in the applicable documentation, from the date of original retail purchase of the Software for a period of ninety (90) days (“Software Warranty Period”), provided that the Software is properly installed on approved hardware and operated as contemplated in its documentation. D-Link further warrants that, during the Software Warranty Period, the magnetic media on which D-Link delivers the Software will be free of physical defects. The customer’s sole and exclusive remedy and the entire liability of D-Link and its suppliers under this Limited Warranty will be, at D-Link’s option, to replace the non-conforming Software (or defective media) with software that substantially conforms to D-Link’s functional specifications for the Software or to refund the portion of the actual purchase price paid that is attributable to the Software. Except as otherwise agreed by DLink in writing, the replacement Software is provided only to the original licensee, and is subject to the terms and conditions of the license granted by D-Link for the Software. Replacement Software will be warranted for the remainder of the original Warranty Period and is subject to the same limitations and exclusions. If a material non-conformance is incapable of correction, or if D-Link determines in its sole discretion that it is not practical to replace the non-conforming Software, the price paid by the original licensee for the non-conforming Software will be refunded by D-Link; provided that the non-conforming Software (and all copies thereof) is first returned to D-Link. The license granted respecting any Software for which a refund is given automatically terminates.

Non-Applicability of Warranty:

The Limited Warranty provided hereunder for Hardware and Software portions of D-Link’s products will not be applied to and does not cover any refurbished product and any product purchased through the inventory clearance or liquidation sale or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product and in that case, the product is being sold “As-Is” without any warranty whatsoever including, without limitation, the Limited Warranty as described herein, notwithstanding anything stated herein to the contrary.

Submitting A Claim:

The customer shall return the product to the original purchase point based on its return policy. In case the return policy period has expired and the product is within warranty, the customer shall submit a claim to D-Link as outlined below:

- The customer must submit with the product as part of the claim a written description of the Hardware defect or Software nonconformance in sufficient detail to allow DLink to confirm the same, along with proof of purchase of the product (such as a copy of the dated purchase invoice for the product) if the product is not registered.
- The customer must obtain a Case ID Number from D-Link Technical Support at 1-877-453-5465, who will attempt to assist the customer in resolving any suspected defects with the product. If the product is considered defective, the customer must obtain a Return Material Authorization (“RMA”) number by completing the RMA form and entering the assigned Case ID Number at <https://rma.dlink.com/>.

- After an RMA number is issued, the defective product must be packaged securely in the original or other suitable shipping package to ensure that it will not be damaged in transit, and the RMA number must be prominently marked on the outside of the package. Do not include any manuals or accessories in the shipping package. DLink will only replace the defective portion of the product and will not ship back any accessories.
- The customer is responsible for all in-bound shipping charges to D-Link. No Cash on Delivery (“COD”) is allowed. Products sent COD will either be rejected by D-Link or become the property of D-Link. Products shall be fully insured by the customer and shipped to D-Link Systems, Inc., 17595 Mt. Herrmann, Fountain Valley, CA 92708. D-Link will not be held responsible for any packages that are lost in transit to D-Link. The repaired or replaced packages will be shipped to the customer via UPS Ground or any common carrier selected by D-Link. Return shipping charges shall be prepaid by D-Link if you use an address in the United States, otherwise we will ship the product to you freight collect. Expedited shipping is available upon request and provided shipping charges are prepaid by the customer. D-Link may reject or return any product that is not packaged and shipped in strict compliance with the foregoing requirements, or for which an RMA number is not visible from the outside of the package. The product owner agrees to pay D-Link’s reasonable handling and return shipping charges for any product that is not packaged and shipped in accordance with the foregoing requirements, or that is determined by D-Link not to be defective or non-conforming.

What Is Not Covered:

The Limited Warranty provided herein by D-Link does not cover:

Products that, in D-Link’s judgment, have been subjected to abuse, accident, alteration, modification, tampering, negligence, misuse, faulty installation, lack of reasonable care, repair or service in any way that is not contemplated in the documentation for the product, or if the model or serial number has been altered, tampered with, defaced or removed; Initial installation, installation and removal of the product for repair, and shipping costs; Operational adjustments covered in the operating manual for the product, and normal maintenance; Damage that occurs in shipment, due to act of God, failures due to power surge, and cosmetic damage; Any hardware, software, firmware or other products or services provided by anyone other than D-Link; and Products that have been purchased from inventory clearance or liquidation sales or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product.

While necessary maintenance or repairs on your Product can be performed by any company, we recommend that you use only an Authorized D-Link Service Office. Improper or incorrectly performed maintenance or repair voids this Limited Warranty.

Disclaimer of Other Warranties:

EXCEPT FOR THE LIMITED WARRANTY SPECIFIED HEREIN, THE PRODUCT IS PROVIDED “AS-IS” WITHOUT ANY WARRANTY OF ANY KIND WHATSOEVER INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT.

IF ANY IMPLIED WARRANTY CANNOT BE DISCLAIMED IN ANY TERRITORY WHERE A PRODUCT IS SOLD, THE DURATION OF SUCH IMPLIED WARRANTY SHALL BE LIMITED TO THE DURATION OF THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE. EXCEPT AS EXPRESSLY COVERED UNDER THE LIMITED WARRANTY PROVIDED HEREIN, THE ENTIRE RISK AS TO THE QUALITY, SELECTION AND PERFORMANCE OF THE PRODUCT IS WITH THE PURCHASER OF THE PRODUCT.

Limitation of Liability:

TO THE MAXIMUM EXTENT PERMITTED BY LAW, D-LINK IS NOT LIABLE UNDER ANY CONTRACT, NEGLIGENCE, STRICT LIABILITY OR OTHER LEGAL OR EQUITABLE THEORY FOR ANY LOSS OF USE OF THE PRODUCT, INCONVENIENCE OR DAMAGES OF ANY CHARACTER, WHETHER DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF GOODWILL, LOSS OF REVENUE OR PROFIT, WORK STOPPAGE, COMPUTER FAILURE OR MALFUNCTION, FAILURE OF OTHER EQUIPMENT OR COMPUTER PROGRAMS TO WHICH D-LINK'S PRODUCT IS CONNECTED WITH, LOSS OF INFORMATION OR DATA CONTAINED IN, STORED ON, OR INTEGRATED WITH ANY PRODUCT RETURNED TO D-LINK FOR WARRANTY SERVICE) RESULTING FROM THE USE OF THE PRODUCT, RELATING TO WARRANTY SERVICE, OR ARISING OUT OF ANY BREACH OF THIS LIMITED WARRANTY, EVEN IF D-LINK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE SOLE REMEDY FOR A BREACH OF THE FOREGOING LIMITED WARRANTY IS REPAIR, REPLACEMENT OR REFUND OF THE DEFECTIVE OR NONCONFORMING PRODUCT. THE MAXIMUM LIABILITY OF D-LINK UNDER THIS WARRANTY IS LIMITED TO THE PURCHASE PRICE OF THE PRODUCT COVERED BY THE WARRANTY. THE FOREGOING EXPRESS WRITTEN WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ANY OTHER WARRANTIES OR REMEDIES, EXPRESS, IMPLIED OR STATUTORY.

Governing Law:

This Limited Warranty shall be governed by the laws of the State of California. Some states do not allow exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the foregoing limitations and exclusions may not apply. This Limited Warranty provides specific legal rights and you may also have other rights which vary from state to state.

Trademarks:

D-Link is a registered trademark of D-Link Systems, Inc. Other trademarks or registered trademarks are the property of their respective owners.

Copyright Statement:

No part of this publication or documentation accompanying this product may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from D-Link Corporation/D-Link Systems, Inc., as stipulated by the United States Copyright Act of 1976 and any amendments thereto. Contents are subject to change without prior notice.

Copyright 2008 - 2009 by D-Link Corporation/D-Link Systems, Inc. All rights reserved.

CE Mark Warning:

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For detailed warranty information applicable to products purchased outside the United States, please contact the corresponding local D-Link office.

Registration



Product registration is entirely voluntary and failure to complete or return this form will not diminish your warranty rights.

Version 2.2
May 20, 2009