

D-Link®

ADSL2+ 4-PORT ETHERNET ROUTER



DSL-2540U

Quick Installation Guide+
Руководство по быстрой установке+

BROADBAND

Quick Installation Guide

DSL-2540U

ADSL2+ 4-PORT ETHERNET ROUTER

Package Contents

If any of the items are missing, please contact your reseller.



DSL-2540U
ADSL2+ 4-PORT
ETHERNET
ROUTER



CD-ROM
(D-Link Click'n
Connect. Manual and
Warranty)



Ethernet (CAT-5e)
Cable



Power Adapter



RJ-11 cable

Default IP: 192.168.1.1


Default Username: admin

Default Password: admin


⚠ Note :
Using a power supply with a different voltage rating will damage and void the warranty of this product.

Quick Installation

- 1** Remove the D-Link Click'n Connect CD.

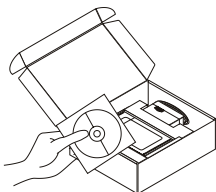

- 2** A. Be sure your Internet connection is active. DO NOT plug the router in yet.
B. Insert the D-Link Click'n Connect CD into your computer.

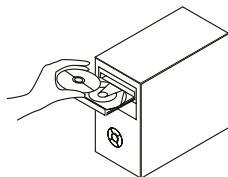

- 3** Click



Troubleshooting

1. How do I configure my DSL-2540U router without the CD ?

- Connect your PC to the router using an Ethernet cable.
- Open a web browser and enter the address <http://192.168.1.1>
- The default username is 'admin'. The default password is 'admin'.
- If you have changed the password and can not remember it, you will need to reset the router to the factory default setting (steps in question 2), which will set the password back to 'admin'.

2. How do I reset my router to factory default settings?

- Ensure the router is powered on.
- Press and hold the reset button on the rear of the device for 5-8 seconds.

3. What can I do if my router is not working correctly?

- The manual contains a full troubleshooting section and can be downloaded from the D-Link website (see below), however there are a few quick steps you can take to try and resolve any issues:
- Check the LED's on the front of the router. The Power LED should be on, the Status LED should flash, and the DSL and LAN LED should be on as well.
- Check that all the cables are firmly connected at both ends.
- Power the router off for 20 seconds, and then power it back on.

4. Why can I not get an Internet Connection?

- For ADSL ISP users please contact your ISP to make sure the service has been enabled/connected by your ISP and that your ISP username and password are correct.

Technical Support

You can find software updates and user documentation on the D-Link website.

Tech Support for customers in

Australia:

Tel: 1300-766-868

Monday to Friday 8:00am to 8:00pm EST

Saturday 9:00am to 1:00pm EST

<http://www.dlink.com.au>

e-mail: support@dlink.com.au

India:

Tel: 1800-222-002

Monday to Friday 9:30AM to 7:00PM

<http://www.dlink.co.in/support/productsupport.aspx>

Indonesia, Malaysia, Singapore and Thailand:

Tel: +62-21-5731610 (Indonesia)

Tel: 1800-882-880 (Malaysia)

Tel: +65 66229355 (Singapore)

Tel: +66-2-719-8978/9 (Thailand)

Monday to Friday 9:00am to 6:00pm

<http://www.dlink.com.sg/support/>

e-mail: support@dlink.com.sg

Korea:

Tel: +82-2-890-5496

Monday to Friday 9:00am to 6:00pm

<http://www.d-link.co.kr>

e-mail: lee@d-link.co.kr

New Zealand:

Tel: 0800-900-900

Monday to Friday 8:30am to 8:30pm

Saturday 9:00am to 5:00pm

<http://www.dlink.co.nz>

e-mail: support@dlink.co.nz

D-Link®

Building Networks for People

Technical Support

You can find software updates and user documentation on the D-Link website.

Tech Support for customers in

Egypt:

Tel: +202-2919035 or +202-2919047
Sunday to Thursday 9:00am to 5:00pm
<http://support.dlink-me.com>
e-mail: amostafa@dlink-me.com

Iran:

Tel: +98-21-88822613
Sunday to Thursday 9:00am to 6:00pm
<http://support.dlink-me.com>
e-mail: support.ir@dlink-me.com

Israel:

Tel: +972-9-9715701
Sunday to Thursday 9:00am to 5:00pm
<http://www.dlink.co.il/support/>
e-mail: support@dlink.co.il

Pakistan:

Tel: +92-21-4548158 or +92-21-4548310
Sunday to Thursday 9:00am to 6:00pm
<http://support.dlink-me.com>
e-mail: support.pk@dlink-me.com

South Africa and Sub Sahara Region:

Tel: +27-12-665-2165
08600 DLINK (for South Africa only)
Monday to Friday 8:30am to 9:00pm South Africa Time
<http://www.d-link.co.za>

Turkey:

Tel: +90-212-2895659
Monday to Friday 9:00am to 6:00pm
<http://www.dlink.com.tr>
e-mail: turkiye@dlink-me.com
e-mail: support@d-link.co.za

U.A.E and North Africa:

Tel: +971-4-391-6480 (U.A.E)
Sunday to Wednesday 9:00am to 6:00pm GMT+4
Thursday 9:00am to 1:00pm GMT+4
<http://support.dlink-me.com>
e-mail: support@dlink-me.com

D-Link®
Building Networks for People

Руководство по быстрой установке DSL-2540U

ADSL2+ 4-PORT ETHERNET ROUTER

Комплект поставки

Если какая-то позиция отсутствует или повреждена, пожалуйста, свяжитесь с реселлером D-Link.



DSL-2540U
ADSL2+ 4-PORT
ETHERNET
ROUTER

CD-ROM (с D-Link
Click'n Connect,
Руководством
пользователя и
гарантией)

Кабель Ethernet
категории 5е

Адаптер
питания


Кабель с
разъемом RJ

IP-адрес по умолчанию: 192.168.1.1
Имя пользователя по умолчанию: admin
Пароль по умолчанию: admin


⚠ Примечание:
Подключение маршрутизатора к розеткам,
показатели питания на которых не
соответствуют указанным на адаптере,
может привести к повреждению устройства
и потере гарантии на него.

Быстрая инсталляция

1 Извлеките из коробки CD-диск D-Link Click'n Connect.

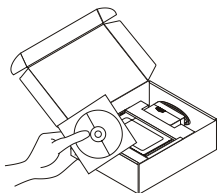

2 А. Убедитесь, что Ваше Интернет-соединение активно. НЕ подключайте пока Ваш маршрутизатор.
В. Вставьте в дисковод CD-диск D-Link Click'n Connect.

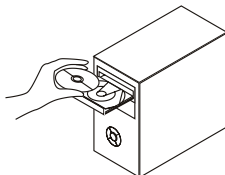

3 Кликните



Устранение неисправностей

1. Как настроить маршрутизатор DSL-2540U без CD-диска?

- Подключите персональный компьютер к маршрутизатору с помощью кабеля Ethernet.
- Запустите Web-браузер и введите адрес: <http://192.168.1.1>
- По умолчанию, задано Имя пользователя (username) - 'admin'. Пароль по умолчанию - 'admin'.
- Если Вы поменяли пароль и не можете его вспомнить, то Вам необходимо сбросить маршрутизатор к заводским настройкам по умолчанию (см. вопрос 2 данного Руководства по быстрой установке). В результате пароль также будет 'admin'.

2. Как вернуть маршрутизатор к заводским настройкам по умолчанию?

- Убедитесь, что питание маршрутизатора включено.
- Нажмите и удерживайте кнопку «reset» на задней панели устройства в течение 5-8 сек.

3. Что делать, если маршрутизатор не работает корректно?

- В Руководстве пользователя, представленном на ftp-сервере компании D-Link, содержится подробная информация по поиску и устранению неисправностей. Однако ниже приводится несколько основных шагов, которые позволяют разрешить некоторые распространенные проблемы:
- Проверьте светодиодные индикаторы на передней панели маршрутизатора. Индикатор Power (Питание) должен гореть, индикатор Status - мигать, индикаторы DSL и LAN также должны быть включены.
- Убедитесь, что все кабели надежно подключены.
- Выключите питание маршрутизатора на 20 секунд, а затем включите его вновь.

4. Почему не получается подключиться к Интернет?

- В этом случае пользователям необходимо связаться с ADSL-провайдером, чтобы убедиться, что сервис включен, и проверить правильность имени пользователя (username) и пароля (password).

Техническая поддержка

Обновления программного обеспечения и документация доступны на Интернет-сайте D-Link.

D-Link предоставляет бесплатную поддержку для клиентов в течение гарантийного срока.

Клиенты могут обратиться в группу технической поддержки D-Link по телефону или через Интернет.

Техническая поддержка D-Link:
(495) 744-00-99

Техническая поддержка через Интернет
<http://www.dlink.ru>
email: support@dlink.ru

D-Link®
Building Networks for People

Notes

Notes

D-Link[®]



Ver. 1.00(RU)
2008/08/15
2540U62401