



DSL-2640U

Wireless ADSL2+ Router with Ethernet WAN Support

Contents

Chapter 1. Introduction	4
Contents and Audience	4
Conventions	4
Document Structure	4
Chapter 2. Overview	5
General Information	5
Specifications	6
Product Appearance	9
Front Panel	9
Side Panel	11
Back Panel	12
Delivery Package	13
Chapter 3. Installation and Connection	14
Before You Begin	14
Connecting to PC	15
PC with Ethernet Adapter	15
Obtaining IP Address Automatically in OS Windows XP	16
Obtaining IP Address Automatically in OS Windows 7	19
PC with Wi-Fi Adapter	24
Configuring Wi-Fi Adapter in OS Windows XP	25
Configuring Wi-Fi Adapter in OS Windows 7	26
Connecting to Web-based Interface	28
Web-based Interface Structure	30
General Information Page	30
Menu Sections	31
Notifications and System Drop-down Menu	33
Chapter 4. Configuring via Web-based Interface	35
Monitoring	35
Click'n'Connect	39
Creating WAN Connection	41
PPPoE or PPPoA Connection	41
IPv6 PPPoE or PPPoE Dual Stack Connection	42
IPoA or Static IP Connection	43
Dynamic IP Connection	44
Static IPv6 Connection	45
Dynamic IPv6 Connection	46
Bridge Connection	47
Checking Internet Availability	48
Configuring Yandex.DNS Service	49
Configuring Wireless Connection	50
Wireless Network Settings Wizard	53
Virtual Server Settings Wizard	56
Status	58
Network Statistics	58
DSL Status	59
DHCP	60
Routing Table	61
Clients	62
Multicast groups	63

Net	64
WAN.....	64
<i>Creating ADSL WAN Connection</i>	65
<i>Creating Ethernet WAN Connection</i>	73
LAN.....	80
Wi-Fi	83
Basic Settings.....	83
Security Settings.....	85
MAC Filter.....	88
List of Wi-Fi Clients.....	90
WPS.....	91
<i>Using WPS Function via Web-based Interface</i>	93
<i>Using WPS Function without Web-based Interface</i>	93
Additional Settings.....	95
Advanced	97
UPnP IGD.....	98
Interface Grouping.....	99
EtherWAN.....	102
DDNS.....	103
Routing.....	105
IPv6 Routing.....	106
ADSL.....	108
Remote Access to Device.....	109
Miscellaneous.....	111
TR-069 Client.....	113
Firewall	115
IP Filters.....	115
Virtual Servers.....	118
DMZ.....	120
MAC Filter.....	121
Control	123
URL Filter.....	123
Yandex.DNS	125
Internet Protection Settings.....	125
System	128
Administrator Password.....	129
Configuration.....	130
System Log.....	132
Firmware Upgrade.....	134
<i>Local Update</i>	135
<i>Remote Update</i>	136
System Time.....	137
Ping.....	138
Telnet.....	139
Chapter 5. Operation Guidelines	140
Safety Instructions	140
Wireless Installation Considerations	141
Creating Two Connections on One Channel	142
ADSL WAN Connections.....	142
Ethernet WAN Connections.....	143
Chapter 6. Abbreviations and Acronyms	145


CHAPTER 1. INTRODUCTION

Contents and Audience

This manual describes the router DSL-2640U and explains how to configure and operate it.

This manual is intended for users familiar with basic networking concepts, who create an in-home local area network, and system administrators, who install and configure networks in offices.

Conventions

Example	Description
text	The body text of the manual.
<i>Before You Begin</i>	A reference to a chapter or section of this manual.
<i>“Quick Installation Guide”</i>	A reference to a document.
Change	A name of a menu, menu item, control (field, checkbox, drop-down list, button, etc.).
192.168.1.1	Data that you should enter in the specified field.
 <u>Information</u>	An important note.

Document Structure

Chapter 1 describes the purpose and structure of the document.

Chapter 2 gives an overview of the router's hardware and software features and describes its appearance and the package contents.

Chapter 3 explains how to install the wireless router DSL-2640U and configure a PC in order to access its web-based interface.

Chapter 4 describes all pages of the web-based interface in detail.

Chapter 5 includes safety instructions and tips for networking and configuring the device.

Chapter 6 introduces abbreviations and acronyms used in this manual.

CHAPTER 2. OVERVIEW

General Information

The DSL-2640U device is an affordable high-end ADSL/Ethernet router developed for home and SOHO (*Small Office/Home Office*) networks. It provides fast and simple broadband access to the Internet and a shared connection for multi users. The device allows accessing the Internet via ADSL technology and via Ethernet technology.

DSL-2640U provides all the essentials for creating a secure high-speed wireless and wired network: ADSL/ADSL2/ADSL2+ standards, Fast Ethernet standard, the built-in firewall, the QoS engine, and numerous additional features.

The router is equipped with an ADSL port to connect to an ADSL line and 4 Ethernet ports to connect workstations. Due to this feature, DSL-2640U represents a moderate-priced solution for creating wired networks without an additional switch. In addition, any Ethernet port of the device can be used to connect to a private Ethernet line.

Also DSL-2640U can operate as a base station for connecting wireless devices of the standards 802.11b, 802.11g, and 802.11n. The router supports multiple functions for the wireless interface: several security standards (WEP, WPA/WPA2), MAC address filtering, and the WPS function.

In addition, the device is equipped with a button for switching the Wi-Fi network off/on. If needed, for example, when you leave home, you can easily switch the router's WLAN by pressing the button, and devices connected to the LAN ports of the router will stay online.

The wireless router DSL-2640U includes a built-in firewall. The advanced security functions minimize threats of hacker attacks, prevent unwanted intrusions to your network, and block access to unwanted websites for users of your LAN.

You can configure and manage the settings of the wireless router DSL-2640U via the user-friendly web-based interface (the interface is available in several languages).

Now you can simply update the firmware: the router itself finds approved firmware on D-Link update server and notifies when ready to install it.

Specifications*

Hardware	
Interfaces	<ul style="list-style-type: none">· RJ-11 ADSL port· 4 10/100BASE-TX LAN ports
LEDs	<ul style="list-style-type: none">· POWER· DSL· INTERNET· WLAN· LAN 1-4· WPS
Buttons	<ul style="list-style-type: none">· ON/OFF button to power on/power off· RESET button to restore factory default settings· WPS/WLAN button to set up secure wireless connection and enable/disable wireless network
Antenna	<ul style="list-style-type: none">· Internal omnidirectional antenna (2dBi gain)
Power connector	<ul style="list-style-type: none">· Power input connector (DC)

DSL Parameters	
ADSL Standards	<ul style="list-style-type: none">· ADSL: Multi-mode, ANSI T1.413 Issue 2, ITU-T G.992.1 (G.dmt) Annex A, ITU-T G.992.2 (G.lite) Annex A, ITU-T G.994.1 (G.hs)· ADSL2: ITU-T G.992.3 (G.dmt.bis) Annex A/L/M, ITU-T G.992.4 (G.lite.bis) Annex A· ADSL2+: ITU-T G.992.5 Annex A/L/M
ATM/PPP Protocols	<ul style="list-style-type: none">· Bridged and routed Ethernet encapsulation· VC-based or LLC-based multiplexing· ATM Forum UNI3.1/4.0 PVC (up to 8 PVCs)· ATM Adaptation Layer Type 5 (AAL5)· ITU-T I.610 OAM F4/F5 loopback· ATM QoS· PPP over ATM (RFC 2364)· PPP over Ethernet (PPPoE)· Keep-alive for PPP connections

* The device features are subject to change without notice. For the latest versions of the firmware and relevant documentation, visit www.dlink.ru.

Software	
WAN connection types	<ul style="list-style-type: none"> · PPPoA · PPPoE · IPv6 PPPoE · PPPoE Dual Stack · IPoA · Static IP / Dynamic IP · Static IPv6 / Dynamic IPv6 · Bridge
Network functions	<ul style="list-style-type: none"> · DHCP server/relay · DHCPv6 server (Stateful/Stateless), IPv6 prefix delegation · DNS relay · Support of DNSv6 AAAA records · Dynamic DNS · Static IP routing · Static IPv6 routing · IGMP Proxy · IGMP snooping · RIP · Support of UPnP IGD · Support of VLAN · WAN ping respond · Support of SIP · Support of RTSP
Firewall functions	<ul style="list-style-type: none"> · Network Address Translation (NAT) · Stateful Packet Inspection (SPI) · IP filters · MAC filter · URL filter · DMZ · Prevention of ARP and DDoS attacks · Virtual servers · Built-in Yandex.DNS web content filtering service
VPN	<ul style="list-style-type: none"> · PPTP/L2TP/PPPoE pass-through
QoS	<ul style="list-style-type: none"> · Interface grouping · VLAN priority (802.1p)
Management	<ul style="list-style-type: none"> · Local and remote access to settings through TELNET/WEB (HTTP) · Multilingual web-based interface for configuration and management · Firmware update via web-based interface · Automatic notification on new firmware version · Saving/restoring configuration to/from file · Support of remote logging · Automatic synchronization of system time with NTP server and manual time/date setup · Ping function · TR-069 client

Wireless Module Parameters	
Standards	<ul style="list-style-type: none"> · IEEE 802.11b/g/n
Frequency range	<ul style="list-style-type: none"> · 2400 ~ 2483.5MHz
Wireless connection security	<ul style="list-style-type: none"> · WEP · WPA/WPA2 (Personal) · MAC filter · WPS (PBC/PIN)
Advanced functions	<ul style="list-style-type: none"> · Managing connected stations · Advanced settings
Wireless connection rate	<ul style="list-style-type: none"> · IEEE 802.11b: 1, 2, 5.5, and 11Mbps · IEEE 802.11g: 6, 9, 12, 18, 24, 36, 48, and 54Mbps · IEEE 802.11n: from 6.5 to 150Mbps (from MCS0 to MCS7)
Transmitter output power <i>The maximum value of the transmitter output power depends upon the radio frequency regulations applied in your country</i>	<ul style="list-style-type: none"> · 802.11b 16.5 ~ 18.5dBm · 802.11g 13.5 ~ 16.5dBm · 802.11n 13.5 ~ 16.5dBm
Modulation schemes	<ul style="list-style-type: none"> · 802.11b: CCK (11, 5.5Mbps), DQPSK (2Mbps), DBPSK (1Mbps), DSSS · 802.11g: PSK/CCK, DBPSK, DQPSK, OFDM, BPSK, QPSK, 16QAM, 64QAM · 802.11n: PSK/CCK, DBPSK, DQPSK, OFDM, etc.

Physical Parameters	
Dimensions	<ul style="list-style-type: none"> · 160 x 115 x 58 mm (6.3 x 4.5 x 2.3 in)
Weight	<ul style="list-style-type: none"> · 210 g (0.46 lb)

Operating Environment	
Power	<ul style="list-style-type: none"> · Output: 12V DC, 0.5A
Temperature	<ul style="list-style-type: none"> · Operating: from 0 to 40 °C · Storage: from -20 to 65 °C
Humidity	<ul style="list-style-type: none"> · From 5% to 95% (non-condensing)

Product Appearance

Front Panel



Figure 1. Front panel view.

LED	Mode	Description
POWER	<i>Solid green</i>	The router is powered on.
	<i>No light</i>	The router is powered off; after powering on: the router is in the crash recovery mode.
DSL	<i>Solid green</i>	DSL has been synchronized.
	<i>Blinking green</i>	Detecting a carrier signal and synchronizing DSL.
	<i>No light</i>	No carrier signal.
INTERNET	<i>Solid green</i>	A WAN connection (ADSL and/or Ethernet) is established.
	<i>Blinking green</i>	The WAN interface is active (upstream or downstream traffic).
	<i>Solid red</i>	After powering on: the router is being loaded; after loading: the router is in the crash recovery mode.
	<i>No light</i>	The router is in the bridge mode or no WAN connection (neither Ethernet nor ADSL) is established.

LED	Mode	Description
WLAN	<i>Blinking green</i>	The router's WLAN is on.
	<i>No light</i>	The router's WLAN is off.
LAN 1-4	<i>Solid green</i>	A device is connected to the port of the router (for the LAN port configured as the WAN port: the router is connected to an Ethernet line).
	<i>Blinking green</i>	The relevant LAN port is active (upstream or downstream traffic).
	<i>No light</i>	The cable is not connected to the relevant port.
WPS	<i>Blinking green</i>	Attempting to add a wireless device via the WPS function.
	<i>No light</i>	The WPS function is not in use.

Side Panel



Figure 2. Side panel view.

Name	Description
WPS WLAN	A button to enable/disable the router's wireless network and to quickly add wireless devices to the router's WLAN (the WPS function). To enable/disable the router's wireless network: with the device turned on, press the button, hold for 7 seconds, and then release it. To use the WPS function: with the device turned on, press the button, and immediately release it.

Back Panel



Figure 3. Back panel view.

Port	Description
DSL	A DSL port to connect the router to the telephone line.
LAN 1-4	4 Ethernet ports to connect Ethernet devices. One port can be used to connect to a private Ethernet line.
RESET	A button to restore the factory default settings. To restore the factory defaults, push the button (with the device turned on), hold it for 10 seconds, and then release the button.
12VDC IN	Power connector.
ON/OFF	A button to turn the router on/off.

Delivery Package

The following should be included:

- Router DSL-2640U
- Power adapter DC 12V/0.5A
- RJ-11 telephone cable
- Straight-through Ethernet cable (CAT 5E)
- Splitter
- “***Quick Installation Guide***” (brochure).

The “***User Manual***” and “***Quick Installation Guide***” documents are available on D-Link website (see www.dlink.ru, DSL-2640U/RA/U1 product page, the downloads tab).

- Using a power supply with a different voltage rating than the one included will cause damage and void the warranty for this product.

CHAPTER 3. INSTALLATION AND CONNECTION

Before You Begin

Please, read this manual prior to installing the device. Make sure that you have all the necessary information and equipment.

Operating System

Configuration of the multifunction wireless ADSL/Ethernet router DSL-2640U (hereinafter referred to as “the router”) is performed via the built-in web-based interface. The web-based interface is available from any operating system that supports a web browser.

Web Browser

The following web browsers are recommended:

- Apple Safari 5 and later
- Google Chrome 5 and later
- Microsoft Internet Explorer 8 and later
- Mozilla Firefox 5 and later
- Opera 10 and later.

For successful operation, JavaScript should be enabled on the web browser. Make sure that JavaScript has not been disabled by other software (such as virus protection or web user security packages) running on your computer.

Wired or Wireless NIC (Ethernet or Wi-Fi Adapter)

Any computer that uses the router should be equipped with an Ethernet or Wi-Fi adapter (NIC). If your computer is not equipped with such a device, install an Ethernet or Wi-Fi adapter prior to using the router.

Wireless Connection

Wireless workstations from your network should be equipped with a wireless 802.11b, g, or n NIC (Wi-Fi adapter). In addition, you should specify the values of SSID, channel number and security settings defined in the web-based interface of the router for all these wireless workstations.

Connecting to PC

PC with Ethernet Adapter

1. Make sure that your PC is powered off.
2. Connect an Ethernet cable between any of four Ethernet ports located on the back panel of the router and the Ethernet port of your PC.
3. **To connect the router to a DSL line:** connect a phone cable between the DSL port of the router and the **ADSL OUT** port of the splitter. Connect your phone to the **PHONE** port of the splitter. Then connect another phone cable between a phone jack and the **ADSL IN** port of the splitter.
4. **To connect the router to an Ethernet line:** in the web-based interface of the router, select the router's LAN port that will be used as the WAN port and create an Ethernet WAN connection. Then connect the Ethernet cable between the selected Ethernet port located on the back panel of the router and the Ethernet line.
5. Connect the power cord to the power connector port on the back panel of the router, then plug the power adapter into an electrical outlet or power strip.
6. Turn on the router by pressing the **ON/OFF** button on its back panel.
7. Turn on your PC and wait until your operating system is completely loaded.

Obtaining IP Address Automatically in OS Windows XP

1. Click the **Start** button and proceed to the **Control Panel > Network and Internet Connections > Network Connections** window.
2. In the **Network Connections** window, right-click the relevant **Local Area Connection** icon and select the **Properties** line in the menu displayed.

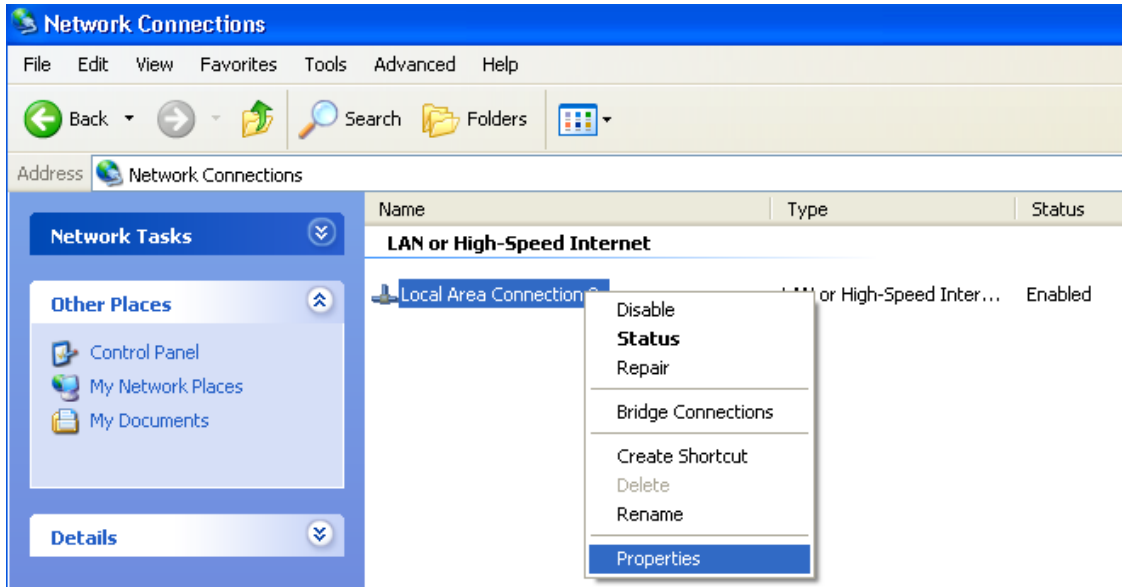


Figure 4. The **Network Connections** window.

3. In the **Local Area Connection Properties** window, on the **General** tab, select the **Internet Protocol (TCP/IP)** line. Click the **Properties** button.

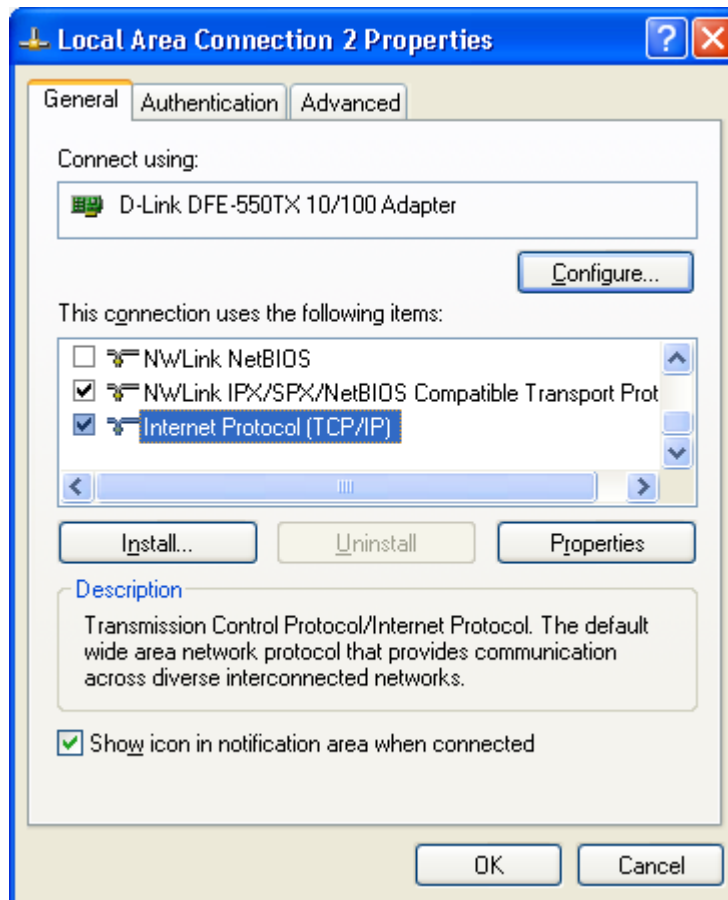


Figure 5. The **Local Area Connection Properties** window.

4. Select the **Obtain an IP address automatically** and **Obtain DNS server address automatically** radio buttons. Click the **OK** button.

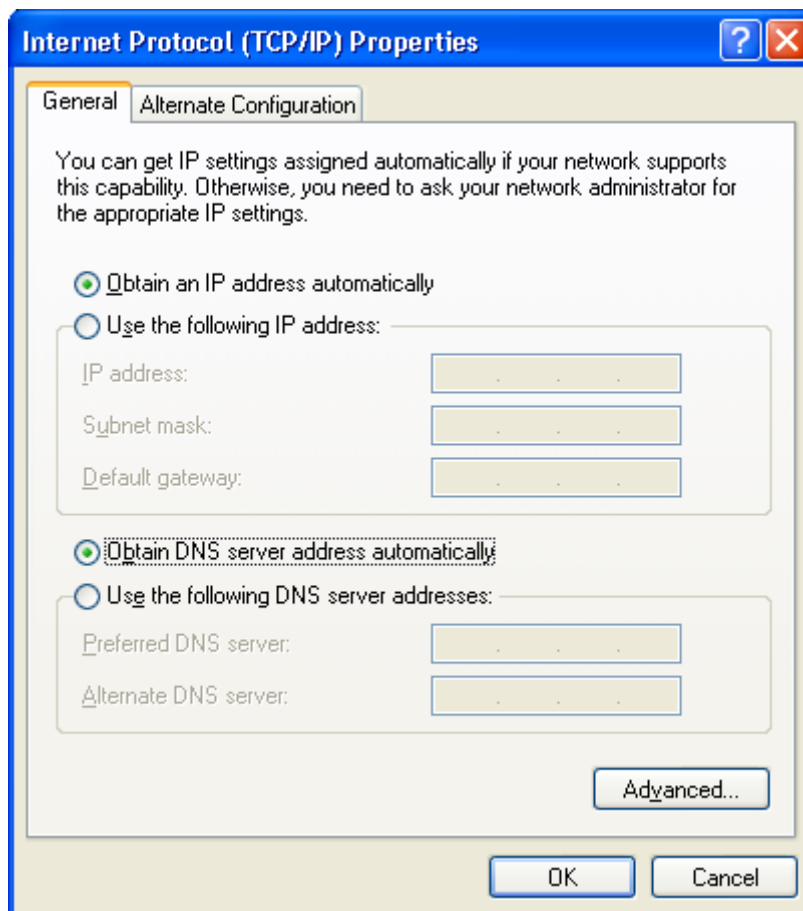


Figure 6. The **Internet Protocol (TCP/IP) Properties** window.

5. Click the **OK** button in the connection properties window.

Now your computer is configured to obtain an IP address automatically.

Obtaining IP Address Automatically in OS Windows 7

1. Click the **Start** button and proceed to the **Control Panel** window.
2. Select the **Network and Sharing Center** section. (If the Control Panel has the category view (the **Category** value is selected from the **View by** drop-down list in the top right corner of the window), choose the **View network status and tasks** line under the **Network and Internet** section.)

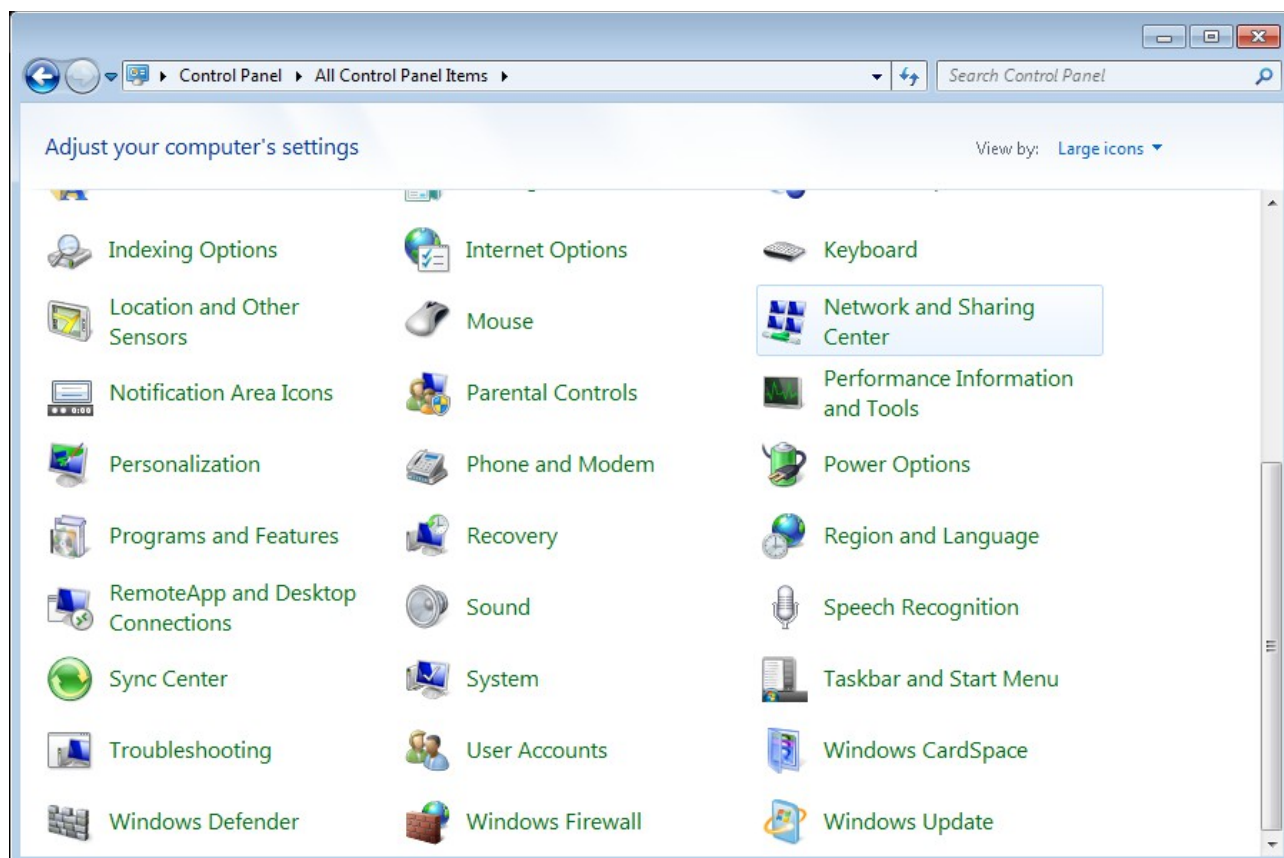


Figure 7. The **Control Panel** window.

3. In the menu located on the left part of the window, select the **Change adapter settings** line.

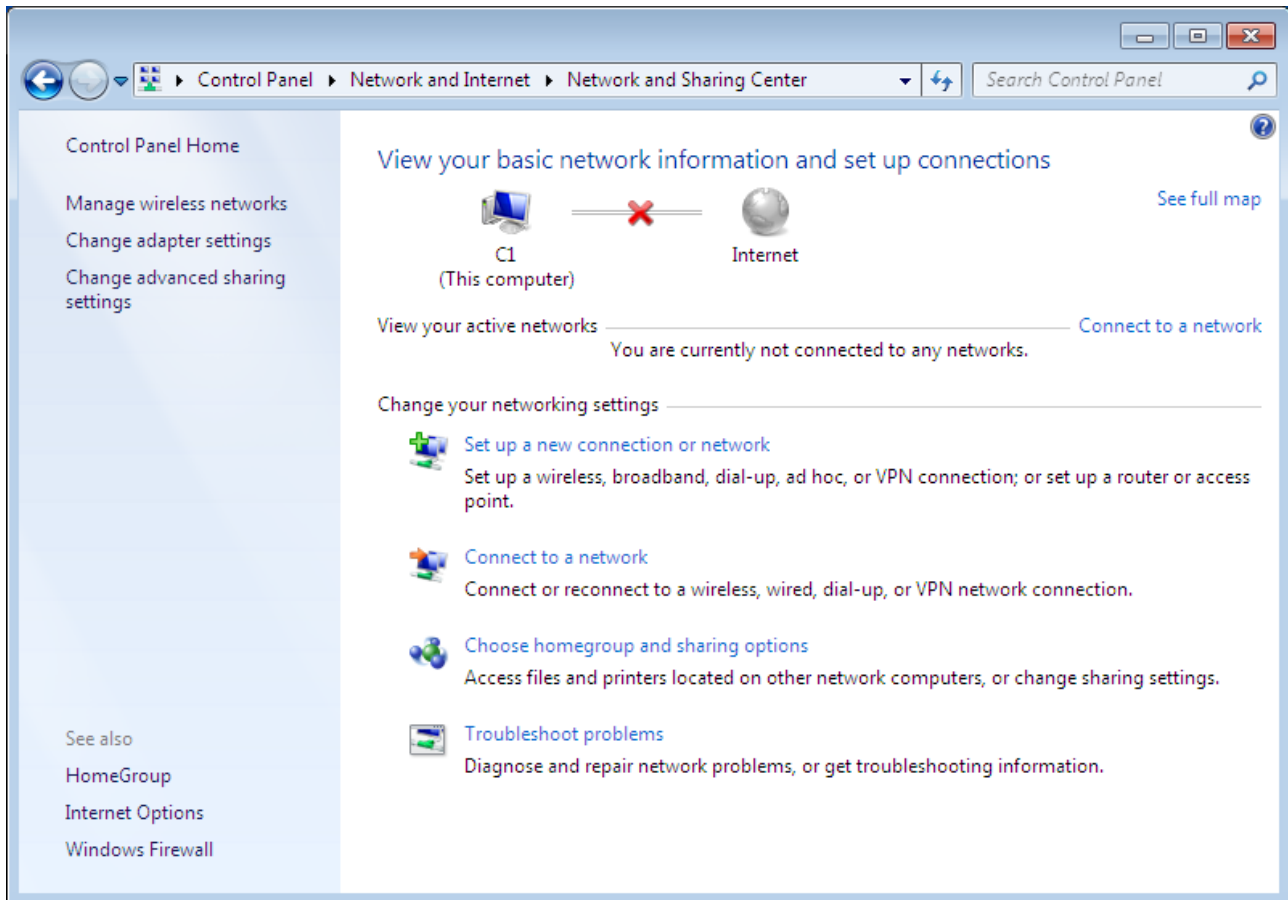


Figure 8. The **Network and Sharing Center** window.

4. In the opened window, right-click the relevant **Local Area Connection** icon and select the **Properties** line in the menu displayed.

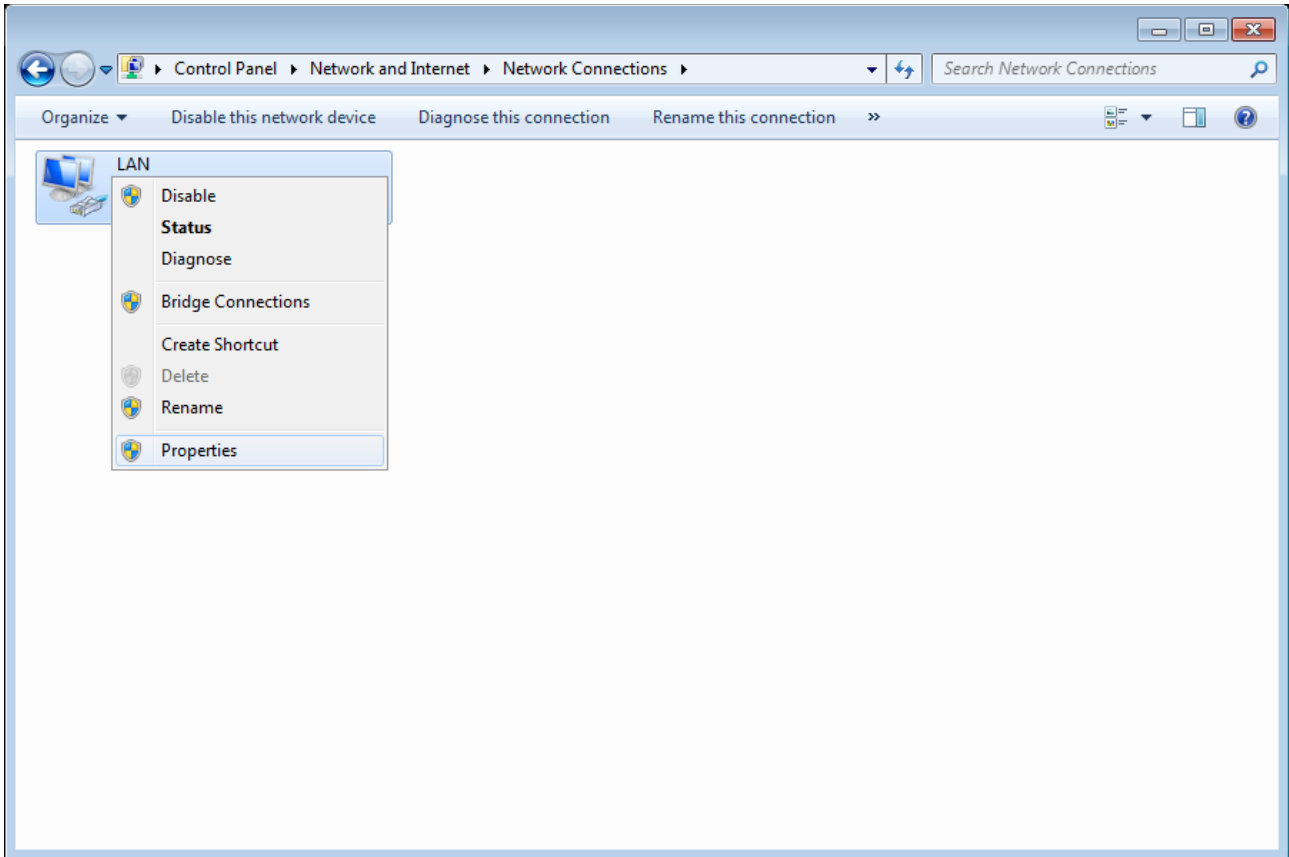


Figure 9. The **Network Connections** window.

5. In the **Local Area Connection Properties** window, on the **Networking** tab, select the **Internet Protocol Version 4 (TCP/IPv4)** line. Click the **Properties** button.

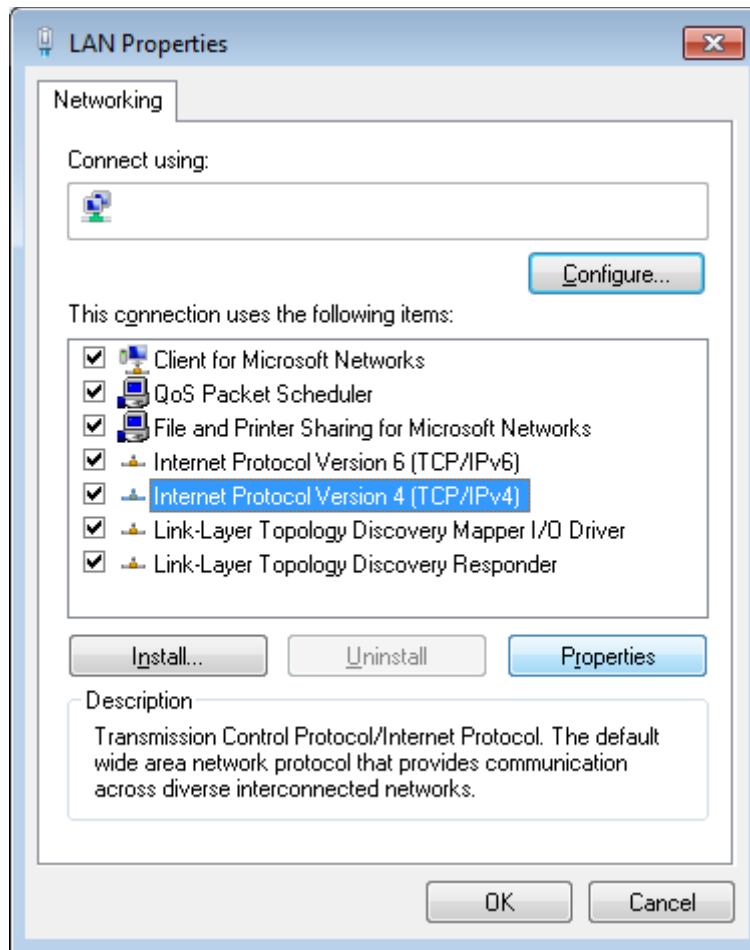


Figure 10. The **Local Area Connection Properties** window.

6. Select the **Obtain an IP address automatically** and **Obtain DNS server address automatically** radio buttons. Click the **OK** button.

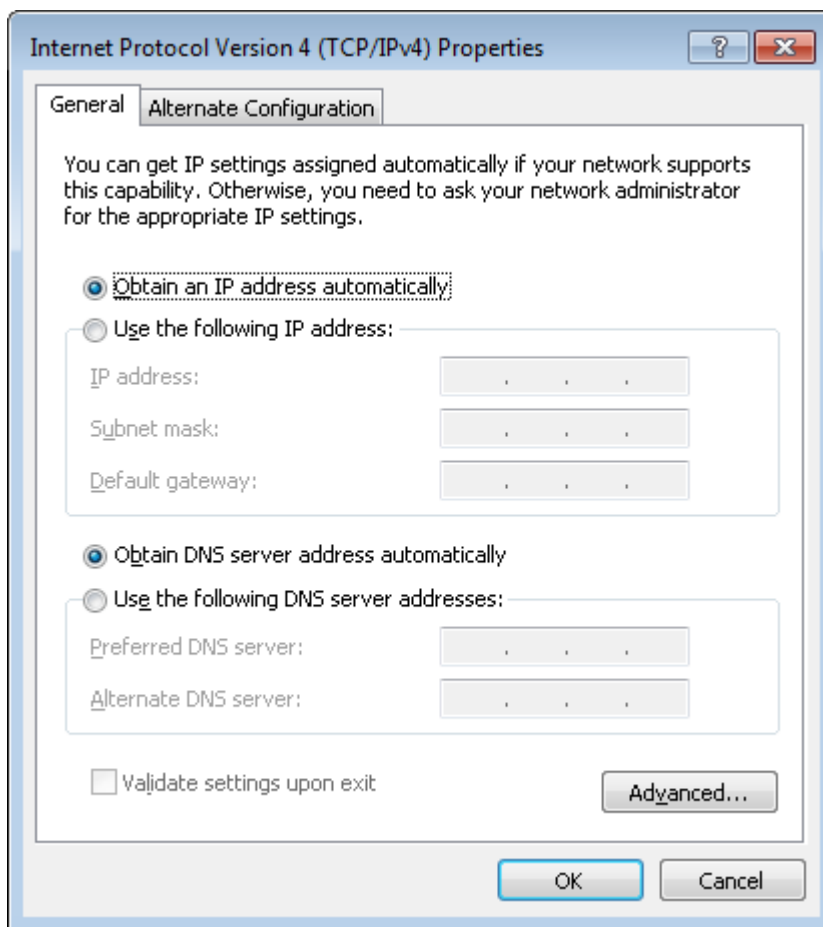


Figure 11. The **Internet Protocol Version 4 (TCP/IPv4) Properties** window.

7. Click the **OK** button in the connection properties window.

Now your computer is configured to obtain an IP address automatically.

PC with Wi-Fi Adapter

1. **To connect the router to a DSL line:** connect a phone cable between the DSL port of the router and the **ADSL OUT** port of the splitter. Connect your phone to the **PHONE** port of the splitter. Then connect another phone cable between a phone jack and the **ADSL IN** port of the splitter.
2. **To connect the router to an Ethernet line:** in the web-based interface of the router, select the router's LAN port that will be used as the WAN port and create an Ethernet WAN connection. Then connect the Ethernet cable between the selected Ethernet port located on the back panel of the router and the Ethernet line.
3. Connect the power cord to the power connector port on the back panel of the router, then plug the power adapter into an electrical outlet or power strip.
4. Turn on the router by pressing the **ON/OFF** button on its back panel.
5. Turn on your PC and wait until your operating system is completely loaded.
6. Turn on your Wi-Fi adapter. As a rule, modern notebooks with built-in wireless NICs are equipped with a button or switch that turns on/off the wireless adapter (refer to your PC documents). If your PC is equipped with a pluggable wireless NIC, install the software provided with your Wi-Fi adapter.

Configuring Wi-Fi Adapter in OS Windows XP

1. Click the **Start** button and proceed to the **Control Panel > Network and Internet Connections > Network Connections** window.
2. Select the icon of the wireless network connection and make sure that your Wi-Fi adapter is on.

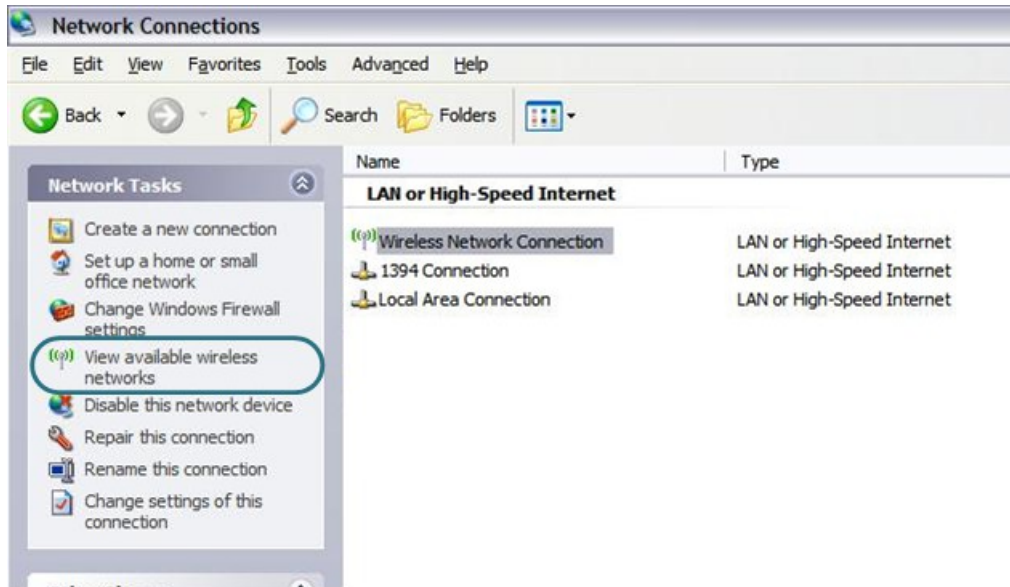


Figure 12. The **Network Connections** window.

3. Search for available wireless networks.
4. In the opened **Wireless Network Connection** window, select the wireless network **DSL-2640U** and click the **Connect** button.
5. In the opened window, enter the network key (see WPS PIN on the barcode label on the bottom panel of the device) in the **Network key** and **Confirm network key** fields and click the **Connect** button.

After that the **Wireless Network Connection Status** window appears.

! If you perform initial configuration of the router via Wi-Fi connection, note that immediately after changing the wireless default settings of the router you will need to reconfigure the wireless connection using the newly specified settings.

Configuring Wi-Fi Adapter in OS Windows 7

1. Click the **Start** button and proceed to the **Control Panel** window.
2. Select the **Network and Sharing Center** section. (If the Control Panel has the category view (the **Category** value is selected from the **View by** drop-down list in the top right corner of the window), choose the **View network status and tasks** line under the **Network and Internet** section.)

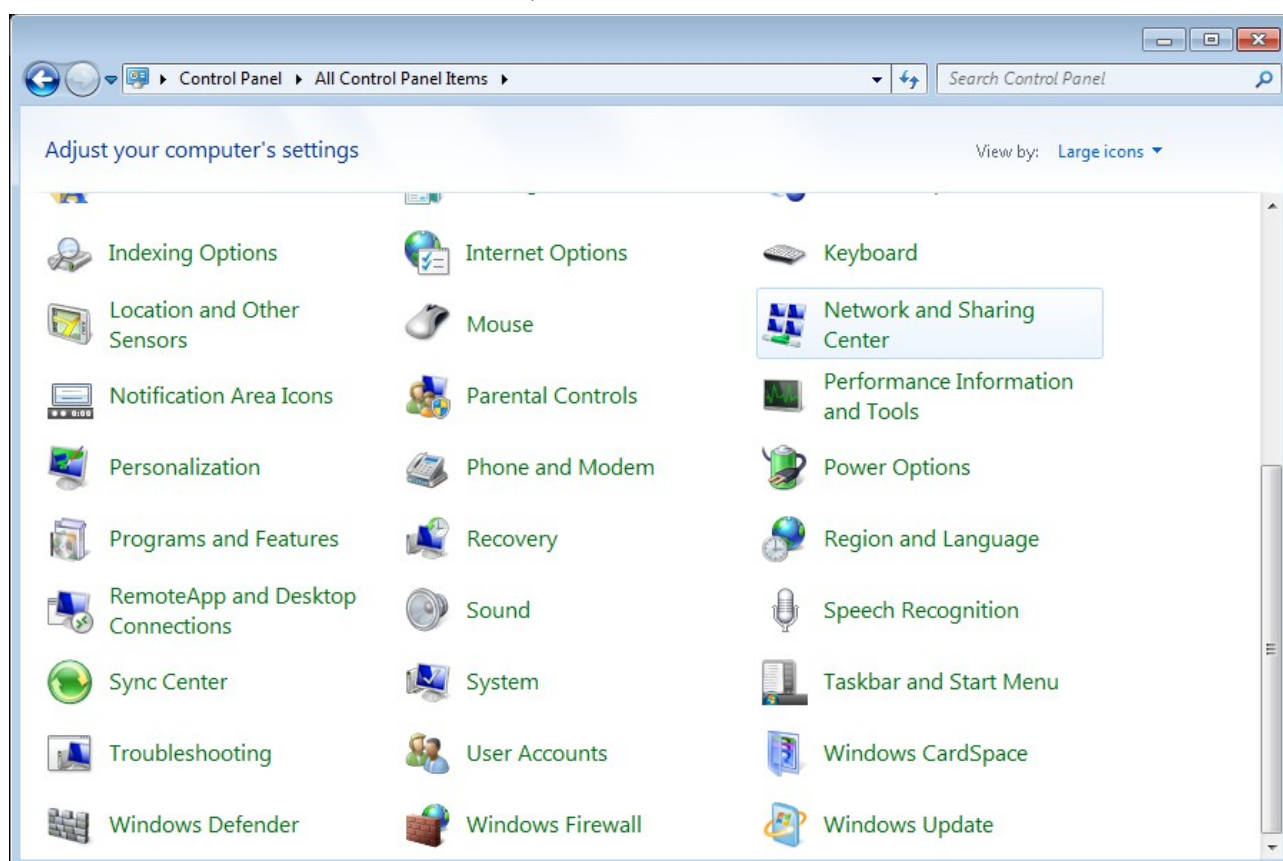


Figure 13. The **Control Panel** window.

3. In the menu located on the left part of the window, select the **Change adapter settings** line.
4. In the opened window, select the icon of the wireless network connection and make sure that your Wi-Fi adapter is on.
5. To open the list of available wireless networks, select the icon of the wireless network connection and click the **Connect To** button or left-click the network icon in the notification area located on the right side of the taskbar.




Figure 14. The notification area of the taskbar.

6. In the opened window, in the list of available wireless networks, select the wireless network **DSL-2640U** and click the **Connect** button.

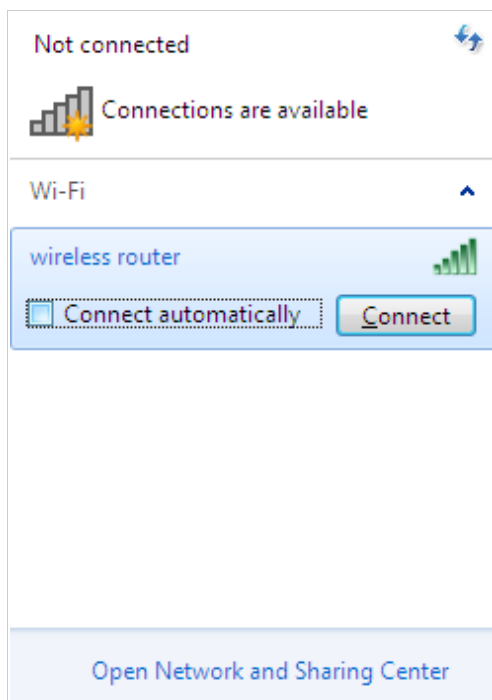


Figure 15. The list of available networks.

7. In the opened window, enter the network key (see WPS PIN on the barcode label on the bottom panel of the device) in the **Security key** field and click the **OK** button.
8. Wait for about 20-30 seconds. After the connection is established, the network icon will be displayed as the signal level scale.

! If you perform initial configuration of the router via Wi-Fi connection, note that immediately after changing the wireless default settings of the router you will need to reconfigure the wireless connection using the newly specified settings.

Connecting to Web-based Interface

When you have configured your computer, you can access the web-based interface and configure needed parameters (for example, create an interface to connect to the Internet, change the parameters of the wireless network, specify the settings of the firewall, edit the password for the administrator account, etc.)

Start a web browser (see the **Before You Begin** section, page 14). In the address bar of the web browser, enter the IP address of the router (by default, the following IP address is specified: **192.168.1.1**). Press the **Enter** key.



Figure 16. Connecting to the web-based interface of the DSL-2640U device.



If the error “The page cannot be displayed” (or “Unable to display the page”/“Could not connect to remote server”) occurs upon connecting to the web-based interface of the router, make sure that you have properly connected the router to your computer.

After the first access to the web-based interface you need to change the default administrator password. Enter the new password in the **Password** and **Confirmation** fields. You may set any password except **admin**. Use digits, Latin letters (uppercase and/or lowercase), and characters available on the keyboard. Then click the **Apply** button.


A screenshot of a web-based interface for changing the default administrator password. The page has a title "Please, change default password". Below the title are two input fields: "Password" and "Confirmation". Below these fields is an "Apply" button.

Figure 17. The page for changing the default administrator password.



Remember or write down the new password for the administrator account. In case of losing the new password, you can access the settings of the router only after restoring the factory default settings via the hardware **RESET** button. This procedure wipes out all settings that you have configured for your router.

When the web-based interface is accessed the next time and after, the login page opens. Enter the username (**admin**) in the **Login** field and the password you specified in the **Password** field, then click the **Enter** button.




The image shows a screenshot of a web-based login interface for a D-Link device. At the top, there is a grey header bar with the text "D-LINK DEVICE" in blue. Below the header, the page contains two input fields. The first field is labeled "Login" and the second is labeled "Password". At the bottom of the form, there are two buttons: "Clear" and "Enter".

Figure 18. The login page.

Web-based Interface Structure

General Information Page

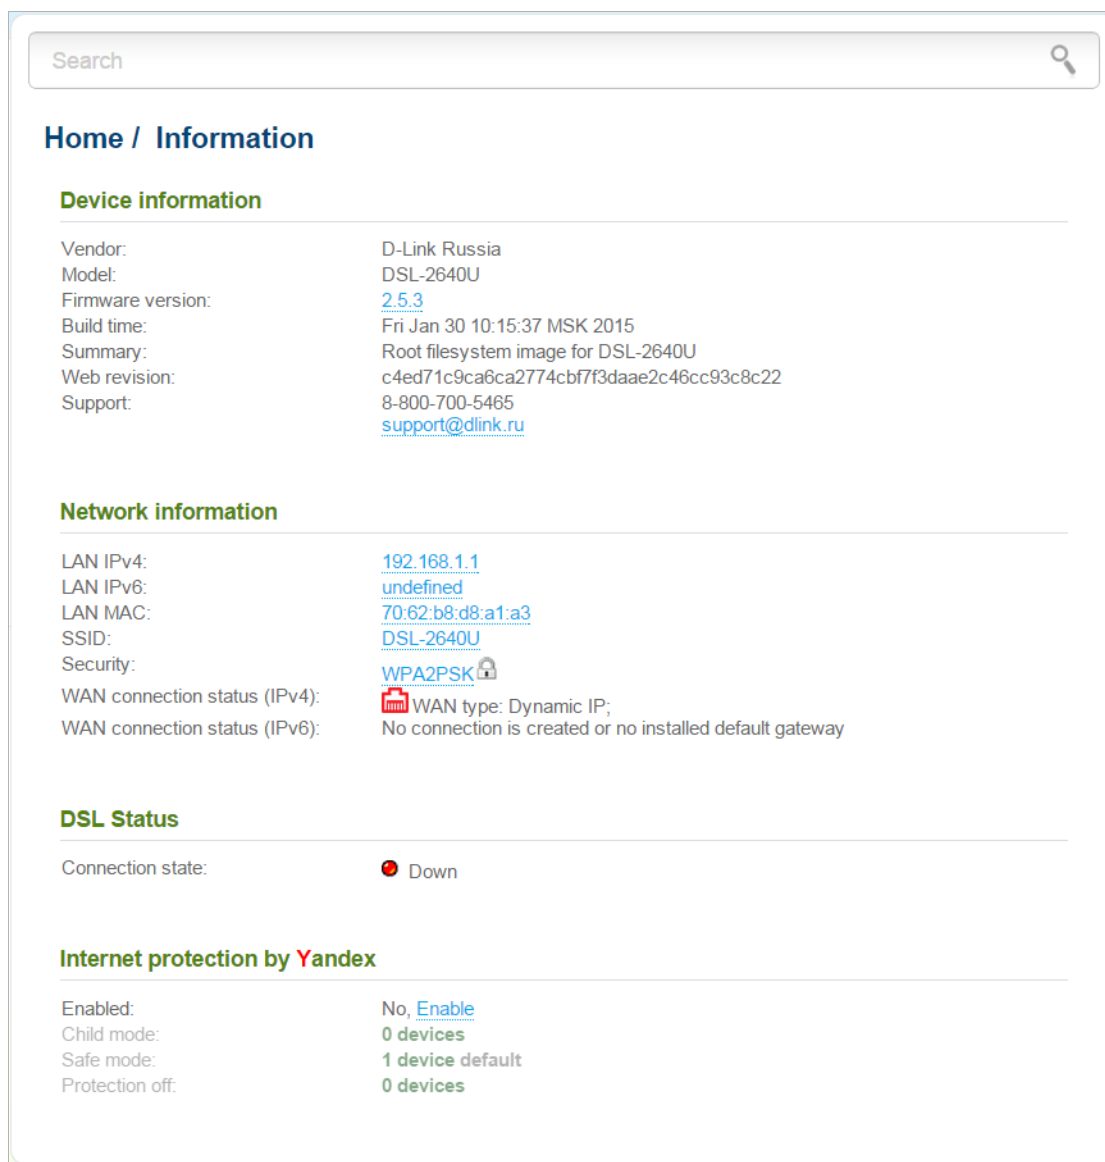After successful registration the **Home / Information** page opens.



The screenshot displays the 'Home / Information' page of the DSL-2640U router's web interface. At the top, there is a search bar. Below it, the page title 'Home / Information' is shown. The content is organized into four main sections:

- Device information:** Lists vendor (D-Link Russia), model (DSL-2640U), firmware version (2.5.3), build time (Fri Jan 30 10:15:37 MSK 2015), summary (Root filesystem image for DSL-2640U), web revision (c4ed71c9ca6ca2774cbf7f3daae2c46cc93c8c22), and support (8-800-700-5465, support@dlink.ru).
- Network information:** Shows LAN IPv4 (192.168.1.1), LAN IPv6 (undefined), LAN MAC (70:62:b8:d8:a1:a3), SSID (DSL-2640U), and Security (WPA2PSK). It also indicates WAN connection status (IPv4: Dynamic IP; IPv6: No connection is created or no installed default gateway).
- DSL Status:** Shows the connection state as 'Down' with a red indicator.
- Internet protection by Yandex:** Shows settings for enabled status (No, Enable), child mode (0 devices), safe mode (1 device default), and protection off (0 devices).

Figure 19. The general information page.

The web-based interface of the router is multilingual. If you need to select another language for the web-based interface, place the mouse pointer over the **English** caption in the top part of the page and select a language from the menu displayed.

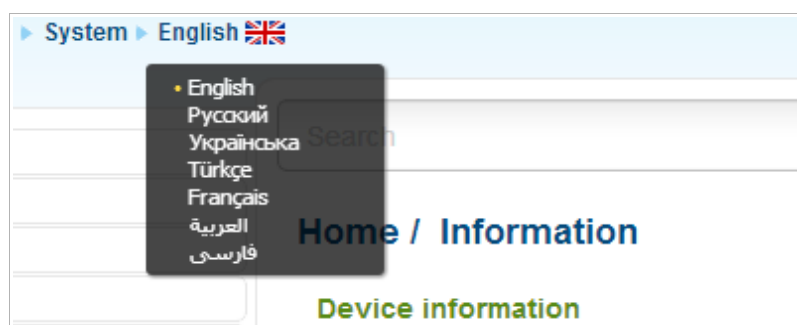


Figure 20. Changing the language of the web-based interface.

The **Home / Information** page displays general information on the router and its software, and data on the DSL connection state. From the page you can quickly get to some pages of the web-based interface.

To upgrade the firmware of the router, left-click the current firmware version (the right column of the **Firmware version** line) and follow the dialog box appeared.

To contact the technical support group (to send an e-mail), left-click the support e-mail address (the right column of the **Support** line). After clicking the line, the e-mail client window for sending a new letter to the specified address opens.

To edit the router's local interface parameters, left-click the IPv4, IPv6, or MAC address of the local interface (the right column of the lines **LAN IPv4**, **LAN IPv6**, or **LAN MAC** correspondingly). After clicking the line, the page for editing the LAN interface opens (for the detailed description of the page, see the *LAN* section, page 80).

To configure the router's WLAN basic parameters, left-click the SSID of the WLAN (the right column of the **SSID** line). After clicking the line, the **Wi-Fi / Basic settings** page opens (for the detailed description of the page, see the *Basic Settings* section, page 83).

To configure security settings of the WLAN, left-click the network authentication type (the right column of the **Security** line). After clicking the line, the **Wi-Fi / Security settings** page opens (for the detailed description of the page, see the *Security Settings* section, page 85).

In the **DSL Status** section, data on the DSL connection state is displayed.

To proceed to the page for configuring the Yandex.DNS web content filtering service, left-click the name of the **Internet protection by Yandex** section. Also you can enable/disable the service or change the default mode directly from the general information page.

Menu Sections

To configure the router use the menu in the left part of the page.

The **Monitoring** section provides an interactive scheme which illustrates the router's settings and the LAN structure.

In the **Home** section you can run the needed Wizard.

To configure connection to the Internet, go to the **Click'n'Connect** page (for the detailed description of the Wizard, see the *Click'n'Connect* section, page 39).

To configure the router's wireless network, go to the **Wireless network settings wizard** page (for the detailed description of the Wizard, see the *Wireless Network Settings Wizard* section, page 53).

To configure access from the Internet to a web server located in your LAN, go to the **Virtual server settings wizard** page (for the detailed description of the Wizard, see the *Virtual Server Settings Wizard* section, page 56).

The pages of the **Status** section display data on the current state of the router (for the description of the pages, see the *Status* section, page 58).

The pages of the **Net** section are designed for configuring basic parameters of the LAN interface of the router and creating a connection to the Internet (for the description of the pages, see the *Net* section, page 64).

The pages of the **Wi-Fi** section are designed for specifying all needed settings of the router's wireless network (for the description of the pages, see the *Wi-Fi* section, page 83).

The pages of the **Advanced** section are designed for configuring additional parameters of the router (for the description of the pages, see the *Advanced* section, page 97).

The pages of the **Firewall** section are designed for configuring the firewall of the router (for the description of the pages, see the *Firewall* section, page 115).

The pages of the **Control** section are designed for creating restrictions on access to the Internet (for the description of the page, see the *Control* section, page 123).

The pages of the **Yandex.DNS** section are designed for configuring the Yandex.DNS web content filtering service (for the description of the pages, see the *Yandex.DNS* section, page 125).

The pages of the **System** section provide functions for managing the internal system of the router (for the description of the pages, see the *System* section, page 128).

Also you can find a specific page via search. To do this, enter the name of the page, wholly or partly, in the search bar in the top part of the web-based interface page, and then select a needed link in the search results.

Notifications and System Drop-down Menu

The router's web-based interface displays the notifications in the top right part of the page.

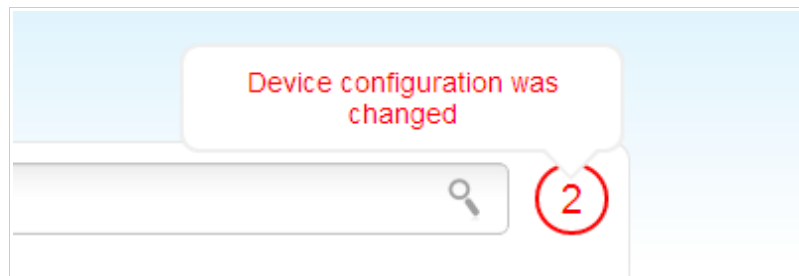


Figure 21. The web-based interface notifications.

Click the icon displaying the number of notifications to view the complete list and click the relevant link.

! Note that you should regularly save the changes of the router's settings to the non-volatile memory.

You can save the router's settings via the menu displayed when the mouse pointer is over the **System** caption in the top left part of the page. Also the **System** menu allows you to reboot the device, create and load the configuration backup, restore the factory defaults, update the firmware, disable/enable the WLAN.

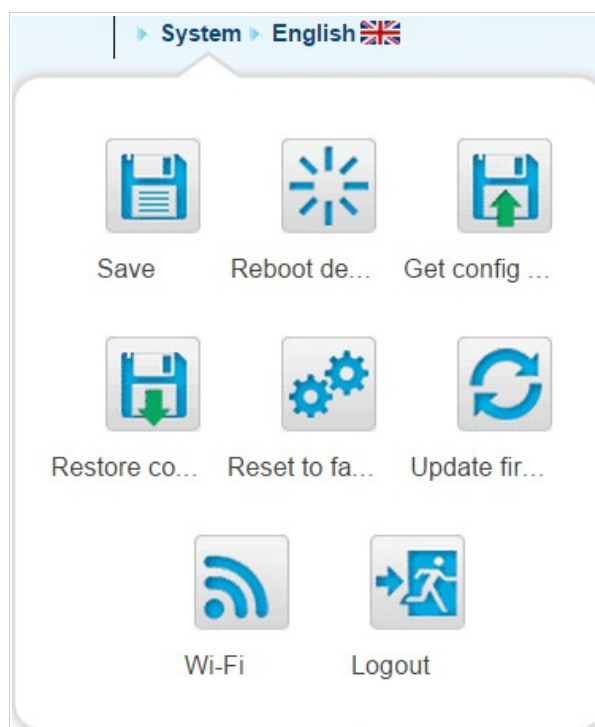










Figure 22. The **System** menu in the top part of the page.

Control	Description
 Save	<p>Click the icon to save new settings to the non-volatile memory.</p> <p>Also you can save the device's parameters via the Save button on the System / Configuration page.</p>
 Reboot device	<p>Click the icon to reboot the device. All unsaved changes will be lost after the device's reboot.</p>
 Get config backup	<p>Click the icon to save the configuration (all settings of the router) to your PC. The configuration backup will be stored in the download location of your web browser.</p> <p>Also you can create the configuration backup via the Backup button on the System / Configuration page.</p>
 Restore config	<p>Click the icon to go to the System / Configuration page.</p>
 Reset to factory	<p>Click the icon to restore the factory default settings. Also you can restore the factory defaults via the Factory button on the System / Configuration page.</p> <p>Also you can restore the factory default settings via the hardware RESET button. The button is located on the back panel of the router next to the power connector. Push the button (with the router powered on) and hold for 10 seconds. Then release the button.</p>
 Update firmware	<p>Click the icon to update the firmware of the router.</p> <p>Also you can update the firmware on the System / Firmware upgrade page.</p>
 Wi-Fi	<p>Click the icon to disable or enable the device's WLAN.</p> <p>Also you can disable/enable the router's WLAN on the Wi-Fi / Basic settings page.</p>
 Logout	<p>Click the icon to exit the web-based interface.</p>

CHAPTER 4. CONFIGURING VIA WEB-BASED INTERFACE

Monitoring

The page displays an interactive scheme which illustrates the router's settings and the LAN structure.

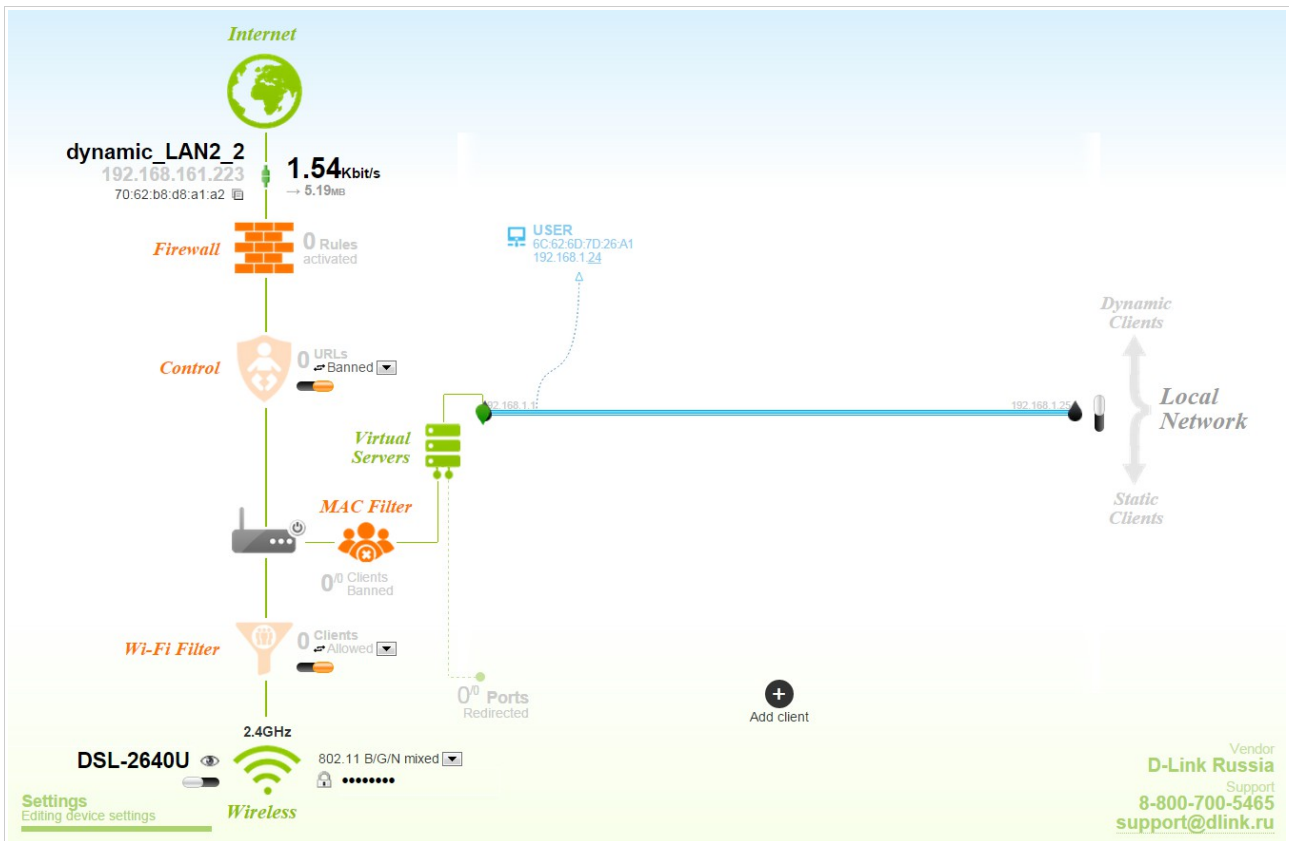


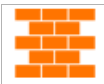







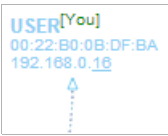
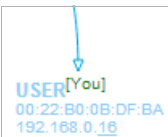










Figure 23. The Monitoring page.

Also you can modify the basic parameters of the router on the **Monitoring** page. To access the router's advanced settings, click the **Editing device settings** link in the bottom left corner of the page. For the detailed description of all the router's functions, see the relevant section of this manual.

The interactive scheme displays the following elements:

Control	Description
 <p>Internet</p>	<p>The Internet element displays information on the active connection. Place the mouse pointer over the icon to switch to another connection, remove existing connections, or add new ones.</p> <p>If the cable provided by your ISP is connected to the WAN port of the router, to the left, the name of the active connection, received or specified IP address, and the MAC address of this connection are displayed. For the Ethernet WAN connection, you can change the MAC address in the editing mode or clone the MAC address of a connected device by placing the mouse pointer over the Clone MAC address icon ().</p> <p>To the right, the approximate data transfer rate and the total value of the received data are displayed.</p>
 <p>Firewall</p>	<p>The Firewall element displays the number of the IP filter active rules. Place the mouse pointer over the icon to view the list of the IP filter rules, remove existing rules, add new ones, or quickly switch the filtering mode for a rule.</p>
 <p>Control</p>	<p>The Control element displays the number of blocked/allowed web sites. Place the mouse pointer over the icon to view the list of web sites, remove existing entries, or add new ones.</p> <p>Use the Enable/Disable URL-filter switch () to enable or disable the URL filter.</p> <p>Use the drop-down list to the right of the element to quickly change the operating mode: block access to web sites from the list or allow access to web sites from the list.</p>
 <p>Device</p>	<p>The Device element displays the layout of your device. Place the mouse pointer over the top right corner of this icon to display the system menu which helps you to reboot the device, save the configuration, restore the factory default settings, update the firmware, exit the web-based interface.</p>
 <p>MAC Filter</p>	<p>The MAC Filter element displays the total number of clients to which the filtering rules are applied and the number of blocked clients. Place the mouse pointer over the icon to view the list of filtered clients, remove existing clients, add new ones, or quickly switch the filtering mode for a client.</p>

Control	Description
 <p data-bbox="225 461 453 490">Virtual Servers</p>	<p>The Virtual Servers element is designed for redirecting incoming traffic to a specific IP address in the LAN. It displays the total number of rules for redirecting traffic and the number of rules active in this specific LAN. Place the mouse pointer over the icon to view the list of all rules for redirecting traffic, remove existing rules, or add new ones.</p>
 <p data-bbox="293 757 384 786">DHCP</p>	<p>The DHCP element is a scale where the range of the DHCP server addresses is placed. Dynamic clients receive IP addresses from this range.</p> <p>Use the Enable/Disable DHCP Server switch () to enable or disable DHCP server. If you want to change the range, enter a value from the keyboard in the editing mode or move the sliders. In the editing mode, you can specify the subnet mask.</p>
 <p data-bbox="213 1111 467 1140">Dynamic Clients</p>	<p>The Dynamic Clients area displays all connected dynamic clients. An icon of a client displays the name of a device, its MAC address, and received IP address. The list of actions available for each client is displayed when the mouse pointer is over an icon. If you want to assign the current IP address to the MAC address of the client, drag and drop its icon to the static clients area.</p>
 <p data-bbox="236 1413 443 1442">Static Clients</p>	<p>The Static Clients area displays all static clients. An icon of a client displays the name of a device, its MAC address, and received IP address. The list of actions available for each client is displayed when the mouse pointer is over an icon. If you want to break the binding between the MAC address of the client and its current IP address, drag and drop its icon to the dynamic clients area. Use the Add client button to add static clients.</p>

Control	Description
 <p>Wireless</p>	<p>The Wireless element displays information on Wi-Fi module operation. To the left, the name of the access point is displayed. You can change it in the editing mode.</p> <p>Use the Hide Access Point switch (/) to forbid or allow other users to see your wireless network.</p> <p>Use the Enable/Disable Wireless switch () to enable or disable your wireless network.</p> <p>To the right, the standards of devices which can connect to the access point are displayed. You can select other standards from the drop-down list.</p> <p>Use the Enable/Disable password protection switch (/) to modify security settings of your wireless network. If you want to view or change the password, switch to the editing mode of the relevant field.</p>
 <p>Wi-Fi Filter</p>	<p>The Wi-Fi Filter element displays the number of MAC addresses specified in the MAC filter. Place the mouse pointer over the icon to view the list of MAC addresses, remove existing addresses, or add new ones.</p> <p>Use the Enable/Disable Wi-Fi filter switch () to enable or disable the Wi-Fi filter.</p> <p>Use the drop-down list to the right of the element to quickly change the mode of the filter (allow or forbid access to your wireless network).</p>

In this section, you can contact the technical support group (to send an e-mail). To do this, left-click the support e-mail address in the bottom right corner of the page. After clicking the line, the e-mail client window for sending a new letter to the specified address opens.

Click'n'Connect

To configure connection to the Internet, click the **Click'n'Connect** link in the **Home** section.

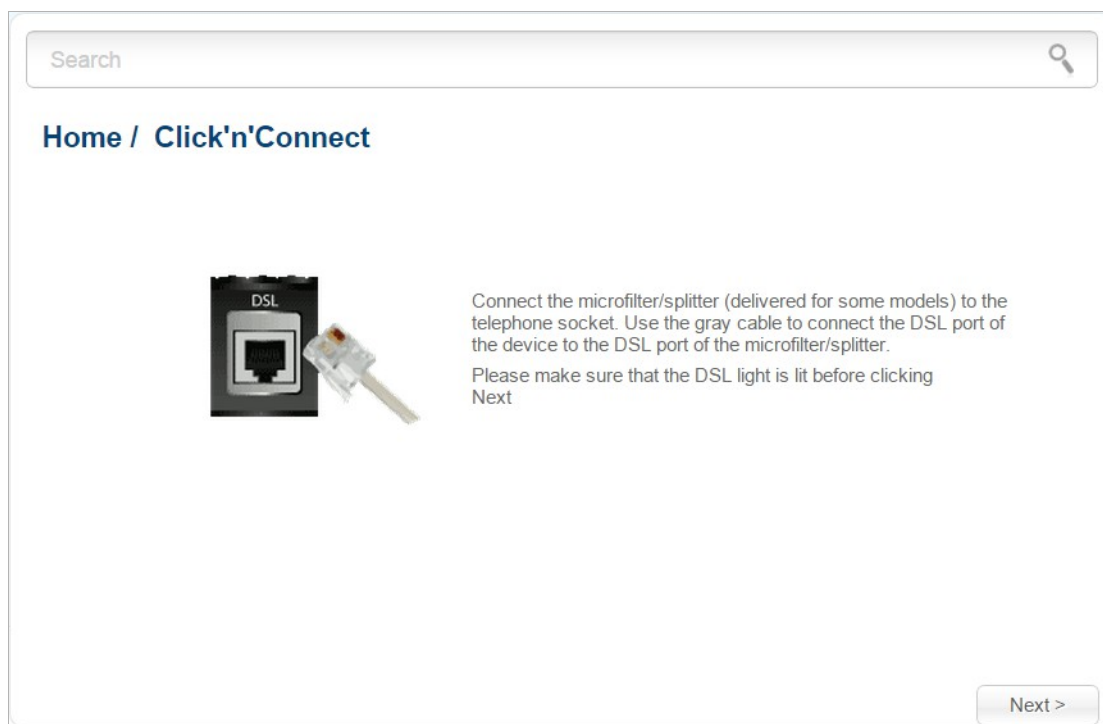


Figure 24. Configuring a WAN connection.

Click the **Next** button.

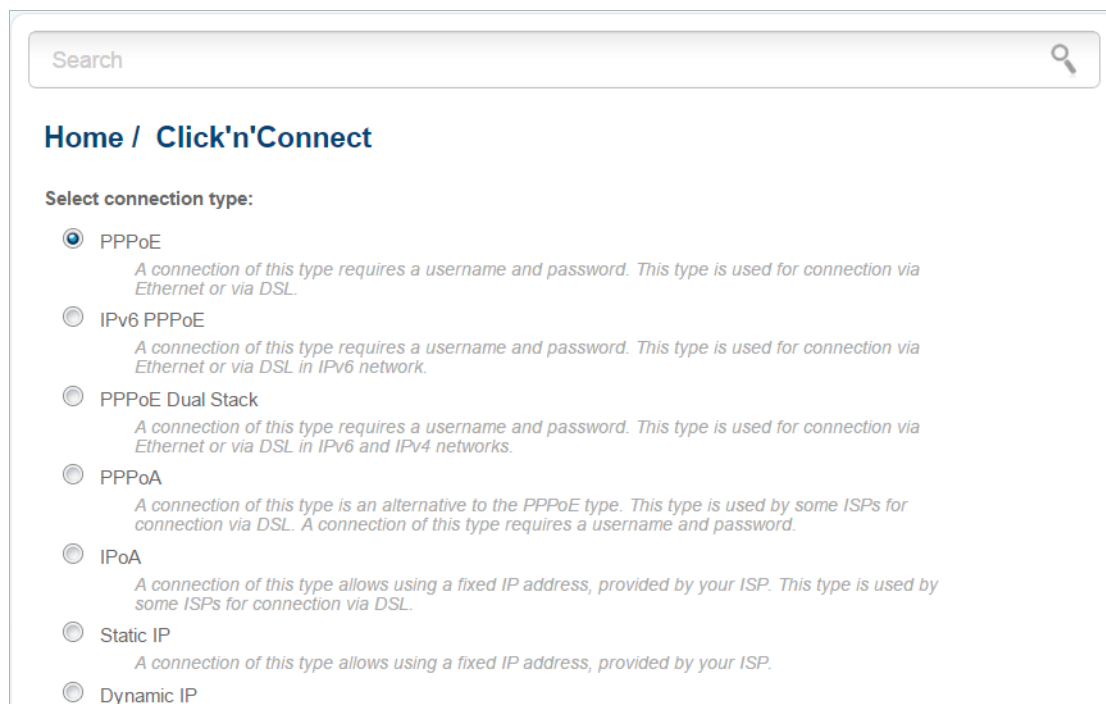


Figure 25. The page for selecting the connection type.

On the opened page, select the needed choice of the radio button and click the **Next** button.

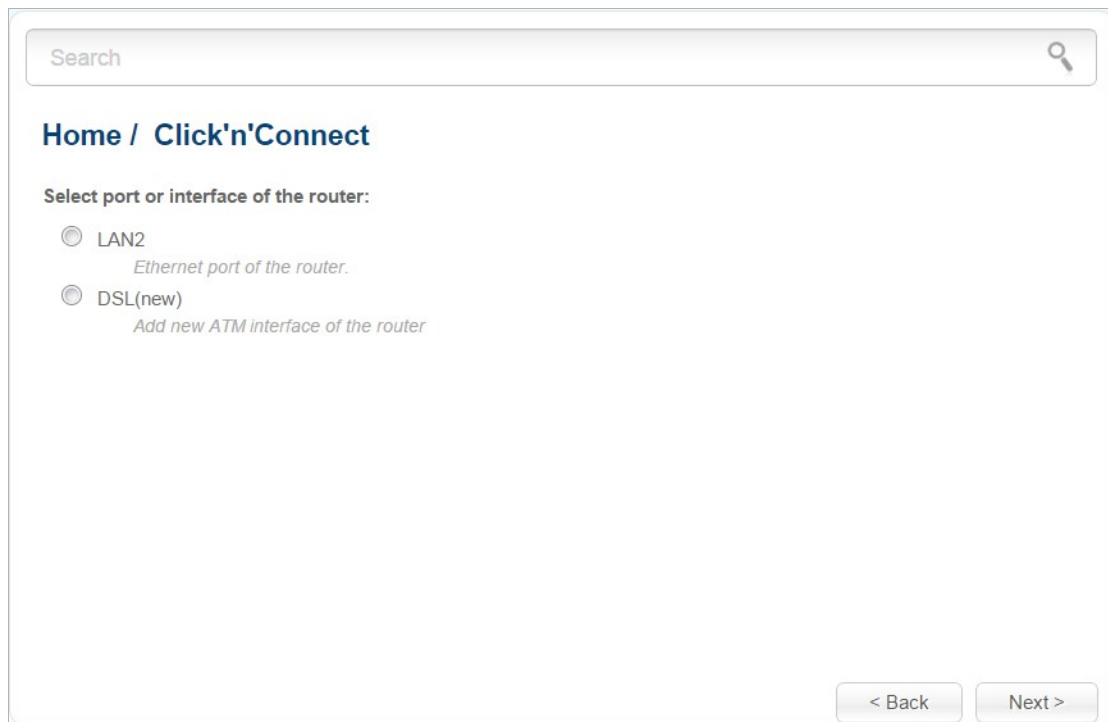


Figure 26. The page for selecting a port or interface.

On the opened page, select a port or interface to which the new connection will be assigned and click the **Next** button.

Creating WAN Connection

PPPoE or PPPoA Connection

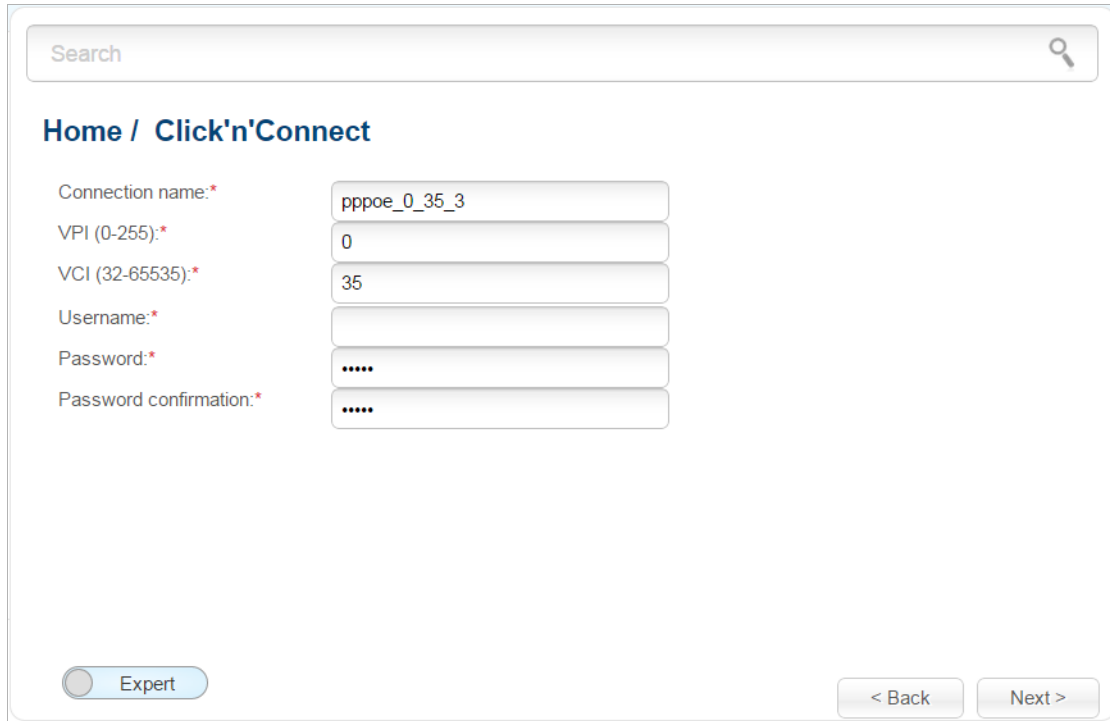


Figure 27. Configuring PPPoE WAN connection.

In the **Connection name** field, specify a name for the connection for easier identification.

For ADSL WAN connection, fill in the **VPI** and **VCI** fields.

In the **Username** field, enter your login, and in the **Password** and **Password confirmation** fields – the password provided by your ISP.

As a rule, the specified settings are enough to configure a connection of the selected type. If you need to specify additional settings, open the expert settings mode. To do this, use the switch in the bottom left corner of the page (for a detailed description of all the connection's parameters, see the **Creating ADSL WAN Connection** section, page 65 when creating ADSL WAN connection or the **Creating Ethernet WAN Connection** section, page 73 when creating Ethernet WAN connection).

Click the **Next** button to continue.

After that the page displaying all specified settings opens. Click the **Apply** button to create the connection or the **Back** button to specify other settings.

After clicking the **Apply** button, the page for checking the Internet availability opens (see the **Checking Internet Availability** section, page 48).

IPv6 PPPoE or PPPoE Dual Stack Connection

Search

Home / Click'n'Connect

Connection name:* pppoev6_0_35_3

VPI (0-255):* 0

VCI (32-65535):* 35

Username:*

Password:*

Password confirmation:*

Static IPv6 gateway address:

SLAAC:

Expert

< Back Next >

Figure 28. Configuring IPv6 PPPoE WAN connection.

In the **Connection name** field, specify a name for the connection for easier identification.

For ADSL WAN connection, fill in the **VPI** and **VCI** fields.

In the **Username** field, enter your login, and in the **Password** and **Password confirmation** fields – the password provided by your ISP.

If you need to specify the gateway address manually, deselect the **SLAAC** checkbox and fill in the **Static IPv6 gateway address** field.

As a rule, the specified settings are enough to configure a connection of the selected type. If you need to specify additional settings, open the expert settings mode. To do this, use the switch in the bottom left corner of the page (for a detailed description of all the connection's parameters, see the *Creating ADSL WAN Connection* section, page 65 when creating ADSL WAN connection or the *Creating Ethernet WAN Connection* section, page 73 when creating Ethernet WAN connection).

Click the **Next** button to continue.

After that the page displaying all specified settings opens. Click the **Apply** button to create the connection or the **Back** button to specify other settings.

After clicking the **Apply** button, the page for checking the Internet availability opens (see the *Checking Internet Availability* section, page 48).

IPoA or Static IP Connection

Search

Home / Click'n'Connect

Connection name:* static_0_35_3

VPI (0-255):* 0

VCI (32-65535):* 35

IP Address:*

Netmask:*

Gateway IP address:*

Primary DNS server:*

Expert

< Back Next >

Figure 29. Configuring Static IP WAN connection.

In the **Connection name** field, specify a name for the connection for easier identification.

For ADSL WAN connection, fill in the **VPI** and **VCI** fields.

Fill in the **IP Address** and **Netmask** fields.

In the **Gateway IP address** field, enter the IP address of the gateway used by this WAN connection.

In the **Primary DNS server** field, enter the address of the primary DNS server.

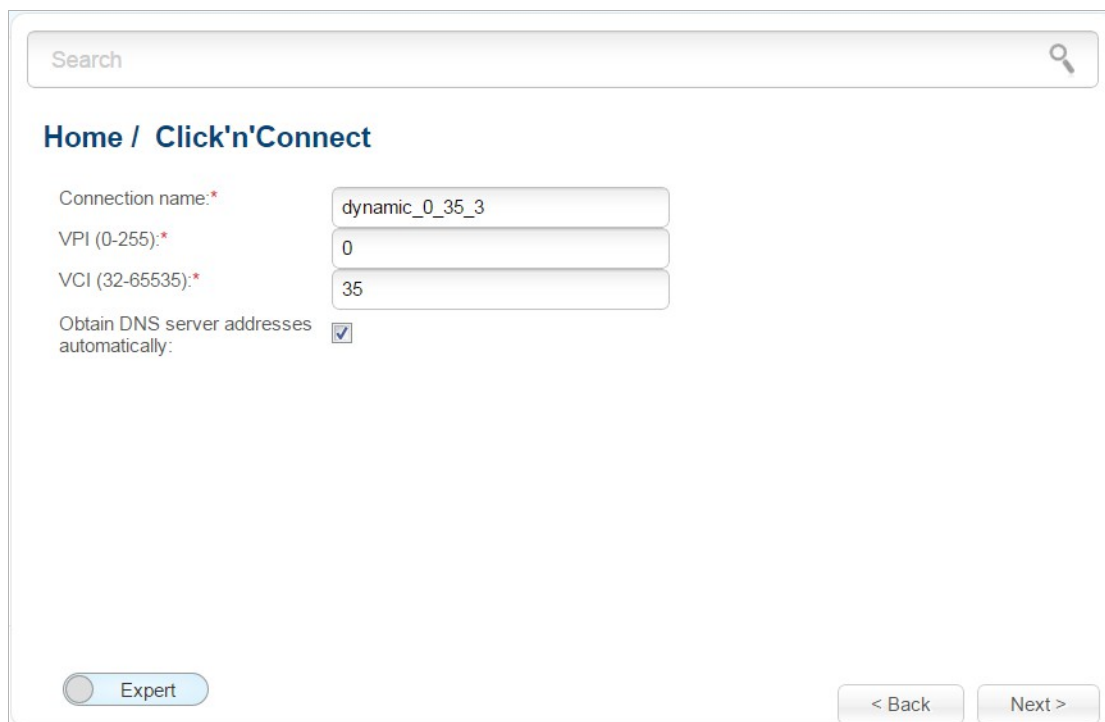
As a rule, the specified settings are enough to configure a connection of the selected type. If you need to specify additional settings, open the expert settings mode. To do this, use the switch in the bottom left corner of the page (for a detailed description of all the connection's parameters, see the *Creating ADSL WAN Connection* section, page 65 when creating ADSL WAN connection or the *Creating Ethernet WAN Connection* section, page 73 when creating Ethernet WAN connection).

Click the **Next** button to continue.

After that the page displaying all specified settings opens. Click the **Apply** button to create the connection or the **Back** button to specify other settings.

After clicking the **Apply** button, the page for checking the Internet availability opens (see the *Checking Internet Availability* section, page 48).

Dynamic IP Connection



The screenshot shows a web-based configuration interface for a Dynamic IP connection. At the top, there is a search bar. Below it, the breadcrumb "Home / Click'n'Connect" is displayed. The main configuration area includes the following fields and controls:

- Connection name:***: A text input field containing "dynamic_0_35_3".
- VPI (0-255):***: A text input field containing "0".
- VCI (32-65535):***: A text input field containing "35".
- Obtain DNS server addresses automatically:**: A checkbox that is checked.
- Expert:** A toggle switch currently set to "Off".
- Navigation:** "< Back" and "Next >" buttons at the bottom right.

Figure 30. Configuring Dynamic IP WAN connection.

In the **Connection name** field, specify a name for the connection for easier identification.

For ADSL WAN connection, fill in the **VPI** and **VCI** fields.

If your ISP has provided the addresses of the DNS servers, deselect the **Obtain DNS server addresses automatically** checkbox and fill in the **Primary DNS server** field.

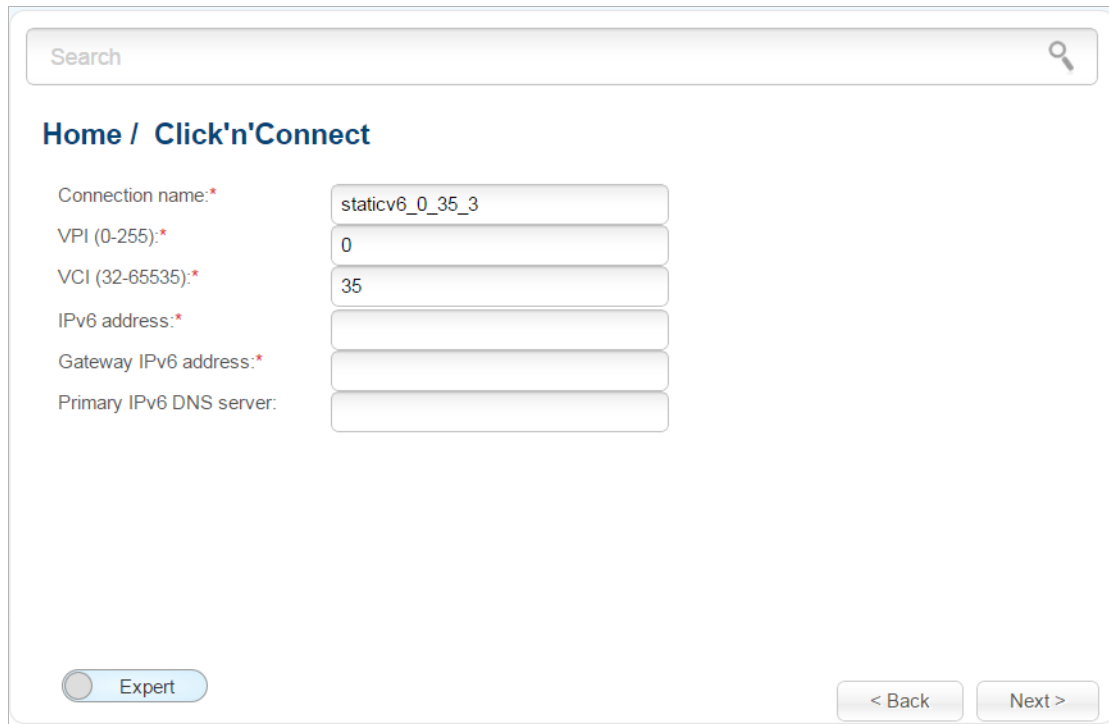
As a rule, the specified settings are enough to configure a connection of the selected type. If you need to specify additional settings, open the expert settings mode. To do this, use the switch in the bottom left corner of the page (for a detailed description of all the connection's parameters, see the *Creating ADSL WAN Connection* section, page 65 when creating ADSL WAN connection or the *Creating Ethernet WAN Connection* section, page 73 when creating Ethernet WAN connection).

Click the **Next** button to continue.

After that the page displaying all specified settings opens. Click the **Apply** button to create the connection or the **Back** button to specify other settings.

After clicking the **Apply** button, the page for checking the Internet availability opens (see the *Checking Internet Availability* section, page 48).

Static IPv6 Connection



The screenshot shows a web-based configuration interface for a Static IPv6 Connection. At the top, there is a search bar with the text "Search" and a magnifying glass icon. Below the search bar, the breadcrumb "Home / Click'n'Connect" is displayed. The main configuration area contains several input fields with labels and asterisks indicating required fields: "Connection name:*" with the value "staticv6_0_35_3", "VPI (0-255):*" with the value "0", "VCI (32-65535):*" with the value "35", "IPv6 address:*", "Gateway IPv6 address:*", and "Primary IPv6 DNS server:". At the bottom left, there is a toggle switch labeled "Expert" which is currently turned off. At the bottom right, there are two buttons: "< Back" and "Next >".

Figure 31. Configuring Static IPv6 WAN connection.

In the **Connection name** field, specify a name for the connection for easier identification.

For ADSL WAN connection, fill in the **VPI** and **VCI** fields.

Fill in the **IPv6 address** and **Gateway IPv6 address** fields.

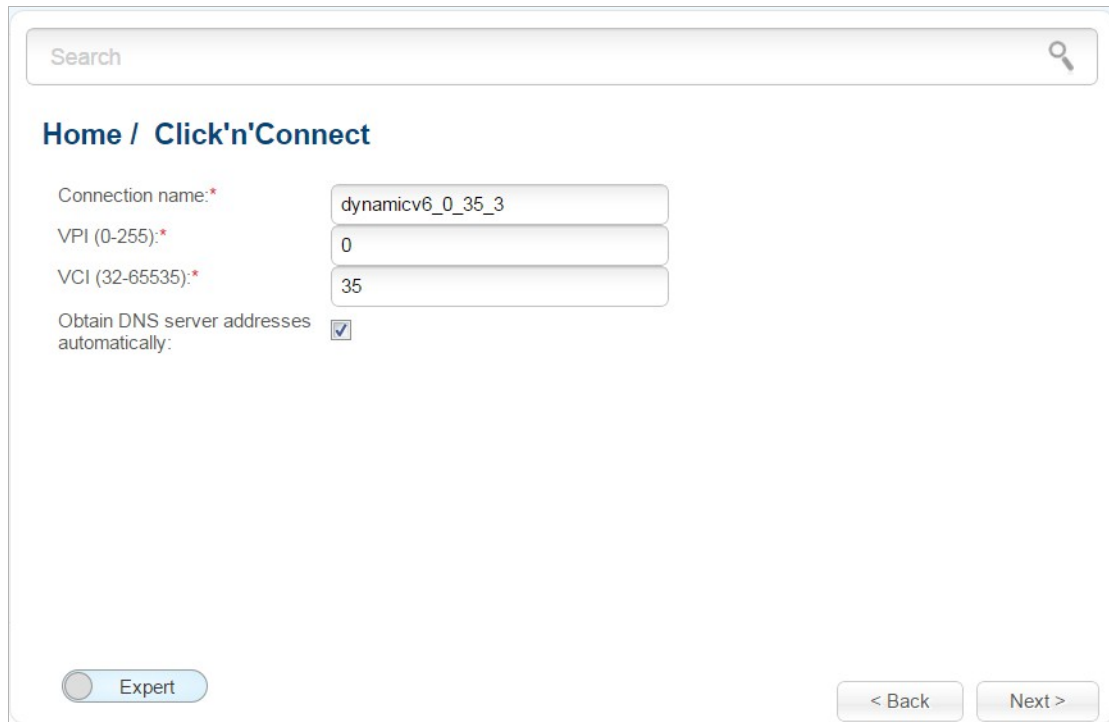
As a rule, the specified settings are enough to configure a connection of the selected type. If you need to specify additional settings, open the expert settings mode. To do this, use the switch in the bottom left corner of the page (for a detailed description of all the connection's parameters, see the **Creating ADSL WAN Connection** section, page 65 when creating ADSL WAN connection or the **Creating Ethernet WAN Connection** section, page 73 when creating Ethernet WAN connection).

Click the **Next** button to continue.

After that the page displaying all specified settings opens. Click the **Apply** button to create the connection or the **Back** button to specify other settings.

After clicking the **Apply** button, the page for checking the Internet availability opens (see the **Checking Internet Availability** section, page 48).

Dynamic IPv6 Connection



The screenshot shows a web interface for configuring a Dynamic IPv6 connection. At the top, there is a search bar. Below it, the breadcrumb 'Home / Click'n'Connect' is visible. The main configuration area includes the following fields and options:

- Connection name:***: A text input field containing 'dynamicv6_0_35_3'.
- VPI (0-255):***: A text input field containing '0'.
- VCI (32-65535):***: A text input field containing '35'.
- Obtain DNS server addresses automatically:**: A checkbox that is checked.

At the bottom left, there is a toggle switch labeled 'Expert' which is currently turned off. At the bottom right, there are two buttons: '< Back' and 'Next >'.

Figure 32. Configuring Dynamic IPv6 WAN connection.

In the **Connection name** field, specify a name for the connection for easier identification.

For ADSL WAN connection, fill in the **VPI** and **VCI** fields.

If your ISP has provided the addresses of the DNS servers, deselect the **Obtain DNS server addresses automatically** checkbox and fill in the **Static primary DNS server** field.

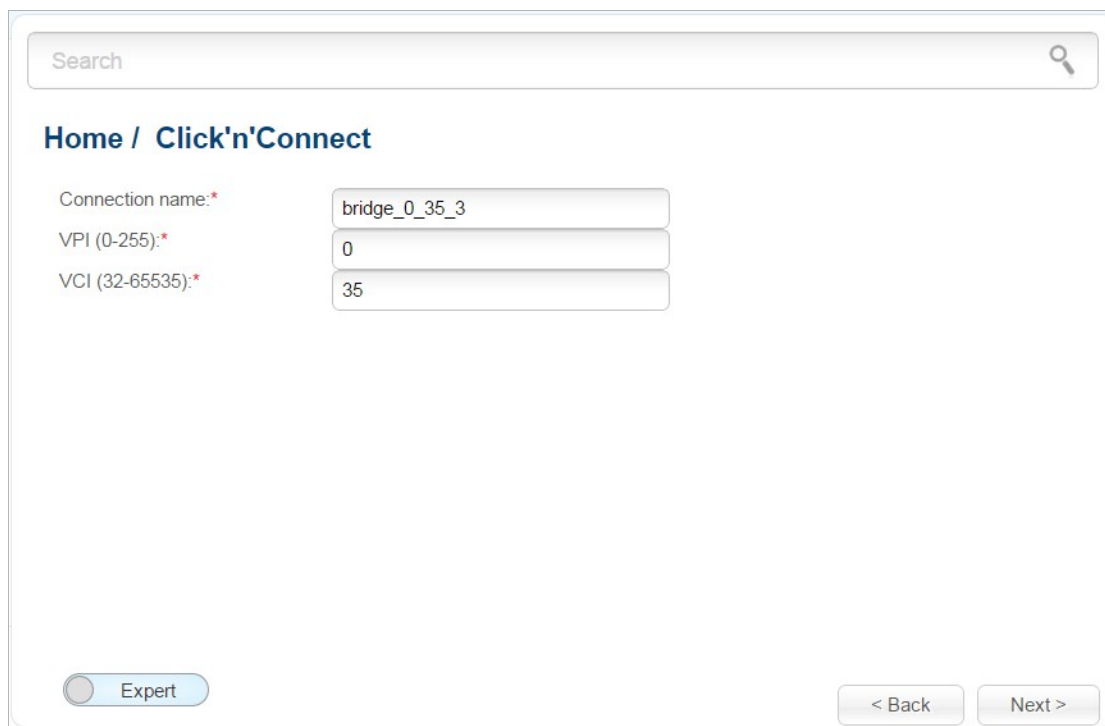
As a rule, the specified settings are enough to configure a connection of the selected type. If you need to specify additional settings, open the expert settings mode. To do this, use the switch in the bottom left corner of the page (for a detailed description of all the connection's parameters, see the *Creating ADSL WAN Connection* section, page 65 when creating ADSL WAN connection or the *Creating Ethernet WAN Connection* section, page 73 when creating Ethernet WAN connection).

Click the **Next** button to continue.

After that the page displaying all specified settings opens. Click the **Apply** button to create the connection or the **Back** button to specify other settings.

After clicking the **Apply** button, the page for checking the Internet availability opens (see the *Checking Internet Availability* section, page 48).

Bridge Connection



The screenshot shows a web-based configuration interface for a Bridge Connection. At the top, there is a search bar with the text "Search" and a magnifying glass icon. Below the search bar, the breadcrumb "Home / Click'n'Connect" is displayed. The main configuration area contains three input fields: "Connection name:*" with the value "bridge_0_35_3", "VPI (0-255):*" with the value "0", and "VCI (32-65535):*" with the value "35". At the bottom left, there is a toggle switch labeled "Expert" which is currently turned off. At the bottom right, there are two buttons: "< Back" and "Next >".

Figure 33. Configuring Bridge WAN connection.

In the **Connection name** field, specify a name for the connection for easier identification.

For ADSL WAN connection, fill in the **VPI** and **VCI** fields.

As a rule, the specified settings are enough to configure a connection of the selected type. If you need to specify additional settings, open the expert settings mode. To do this, use the switch in the bottom left corner of the page (for a detailed description of all the connection's parameters, see the *Creating ADSL WAN Connection* section, page 65 when creating ADSL WAN connection or the *Creating Ethernet WAN Connection* section, page 73 when creating Ethernet WAN connection).

Click the **Next** button to continue.

After that the page displaying all specified settings opens. Click the **Apply** button to create the connection or the **Back** button to specify other settings.

After clicking the **Apply** button, the page for checking the Internet availability opens (see the *Checking Internet Availability* section, page 48).

Checking Internet Availability

On the page, you can check the WAN connection you have created.

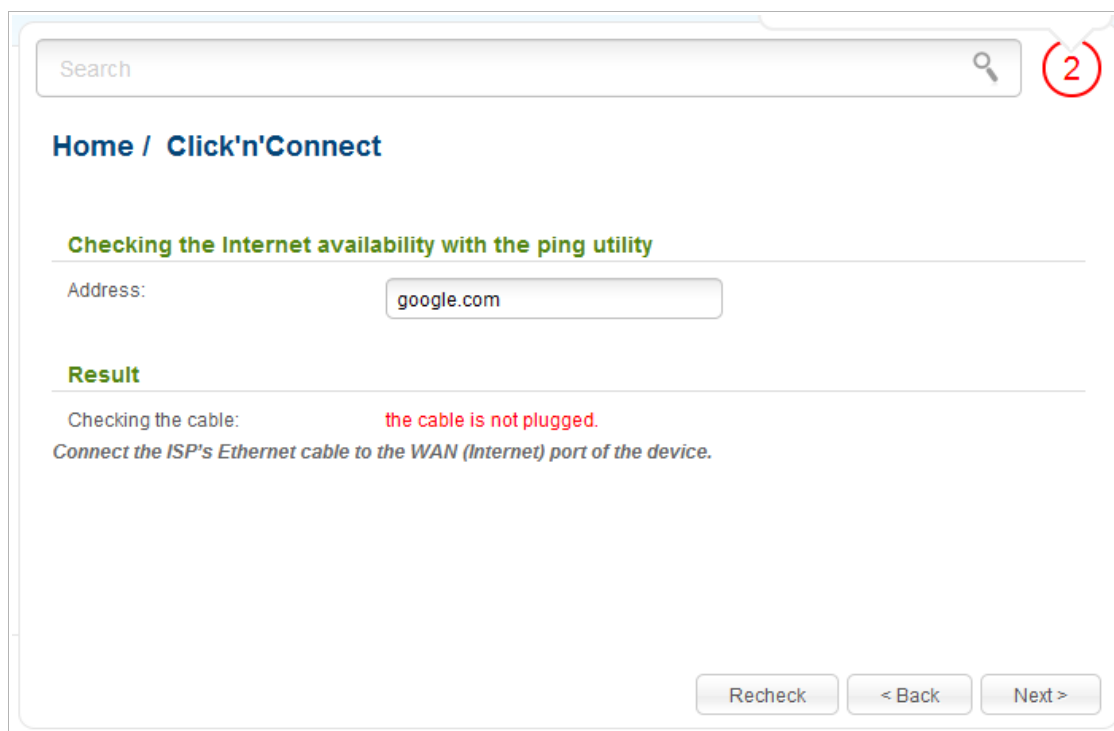


Figure 34. Checking the Internet availability.

In the **Result** section, the status of the WAN connection and possible causes of malfunctions are displayed. To recheck the status of the WAN connection, enter the IP address or name of a host in the **Address** field or leave the value specified by default (**google.com**). Then click the **Recheck** button.

Click the **Back** button to specify other settings.

Click the **Next** button to continue.

After clicking the **Next** button, the page for configuring the Yandex.DNS service opens (see the *Configuring Yandex.DNS Service* section, page 49).

Configuring Yandex.DNS Service

On the page, you can enable the Yandex.DNS service and configure its operating mode.

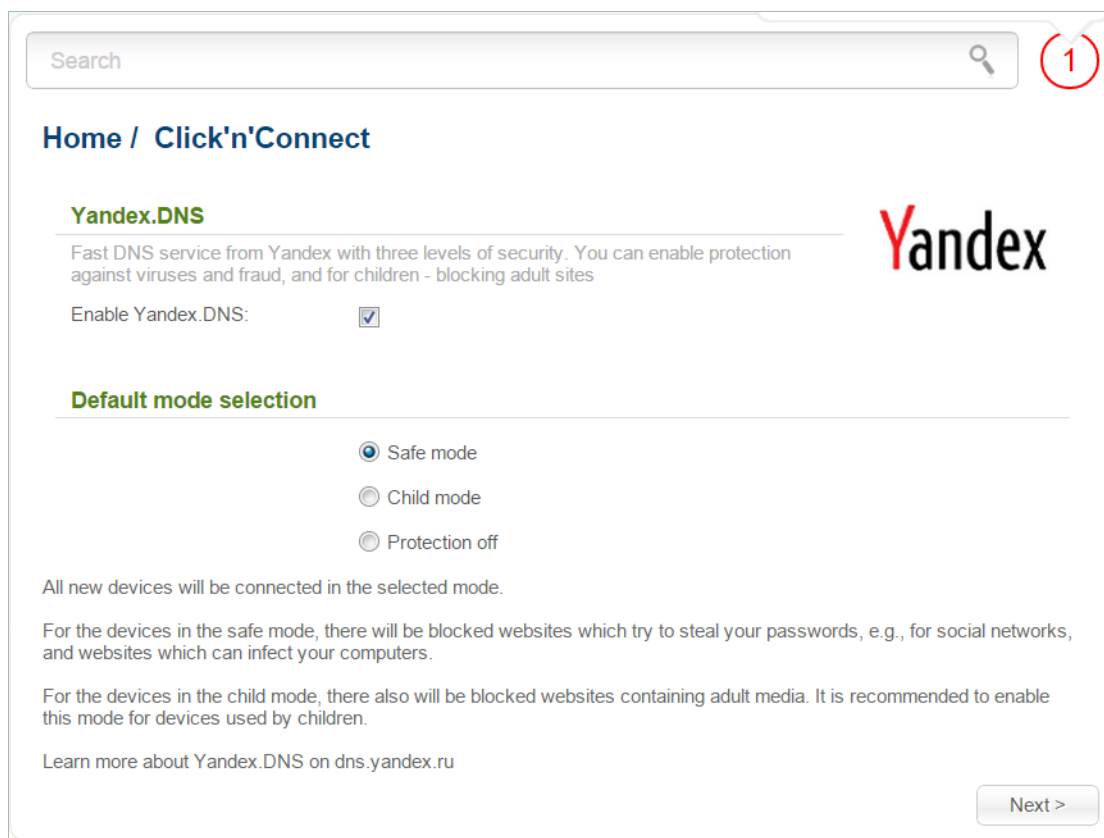


Figure 35. Configuring the Yandex.DNS service.

To enable the Yandex.DNS service, select the **Enable Yandex.DNS** checkbox. Then select the needed choice of the radio button to configure filtering for all devices of the router's network:

- **Safe mode:** when this value is selected, the service blocks access to malicious and fraudulent web sites;
- **Child mode:** when this value is selected, the service blocks access to malicious and fraudulent web sites and blocks access to adult content;
- **Protection off:** when this value is selected, the service provides the DNS server with no restrictions on access to unsafe web sites.

If you are not going to use the service, leave the **Enable Yandex.DNS** checkbox unselected.

Click the **Next** button to continue.

After clicking the **Next** button, the page for configuring wireless connection opens (see the *Configuring Wireless Connection* section, page 50).

Configuring Wireless Connection

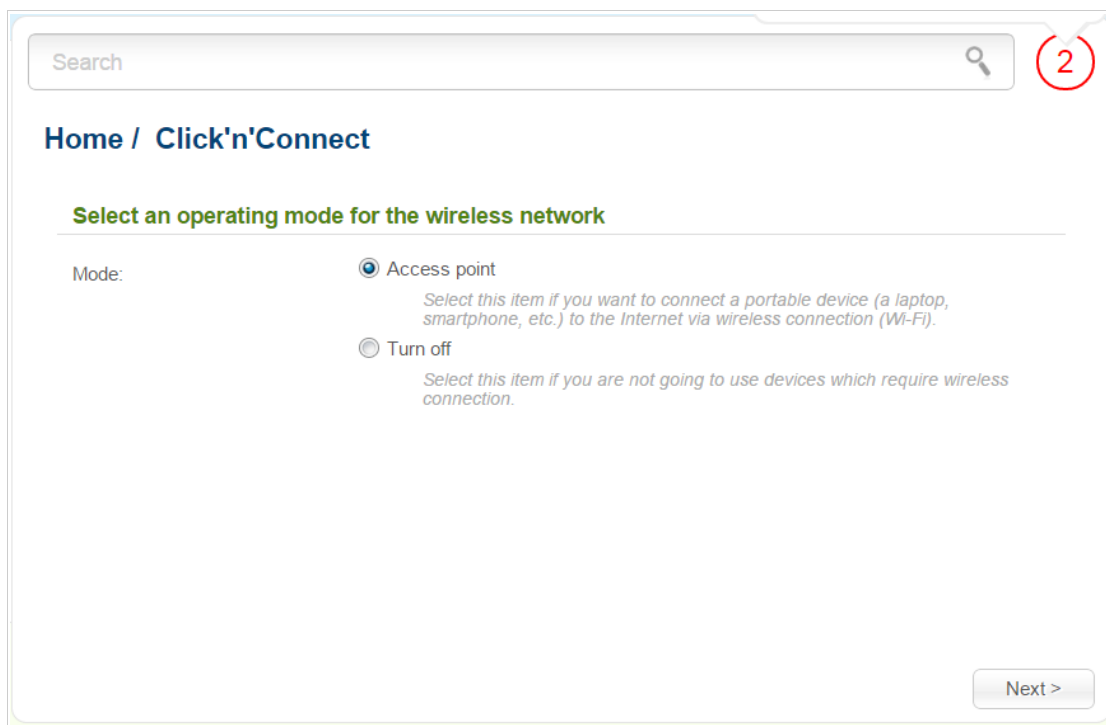


Figure 36. Selecting the operating mode for the wireless network.

If you are not going to use the wireless connection, select the **Turn off** choice of the **Mode** radio button. Click the **Next** button and then click the **Apply** button on the opened page. Save the settings and wait until the router is rebooted.

If you want to connect portable devices to the Internet via wireless connection, select the **Access point** choice of the **Mode** radio button. Click the **Next** button.

On the opened page, in the **SSID** field, specify a new name for the network (use digits and Latin characters).

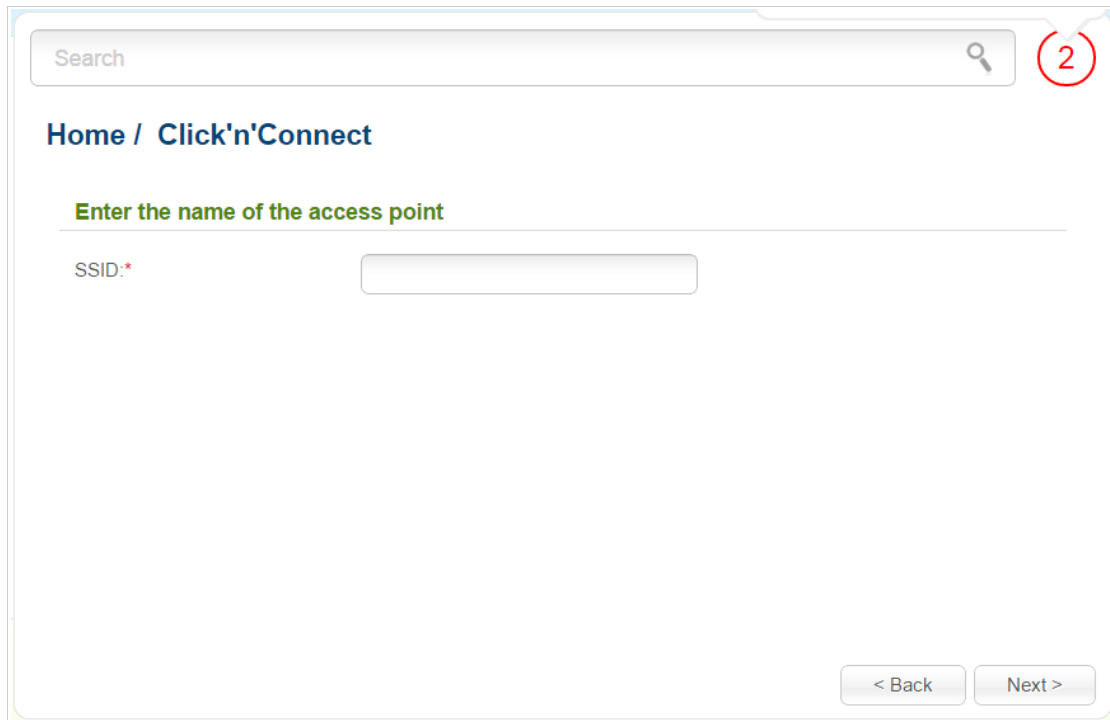


Figure 37. Changing the name of the wireless LAN.

Click the **Next** button to continue.

On the next page, you can modify security settings of the WLAN.

Select the **Protected** value from the **Network Authentication** drop-down list and enter a key (a password that will be used to access your wireless network) in the **Network key** field. Use digits and Latin characters. After applying this setting, the **WPA-PSK/WPA2-PSK mixed** authentication type is specified for the router's WLAN.

When the **Open** value is selected, the **Network key** field is unavailable. After applying this setting, the **Open** authentication type with no encryption is specified for the router's WLAN.

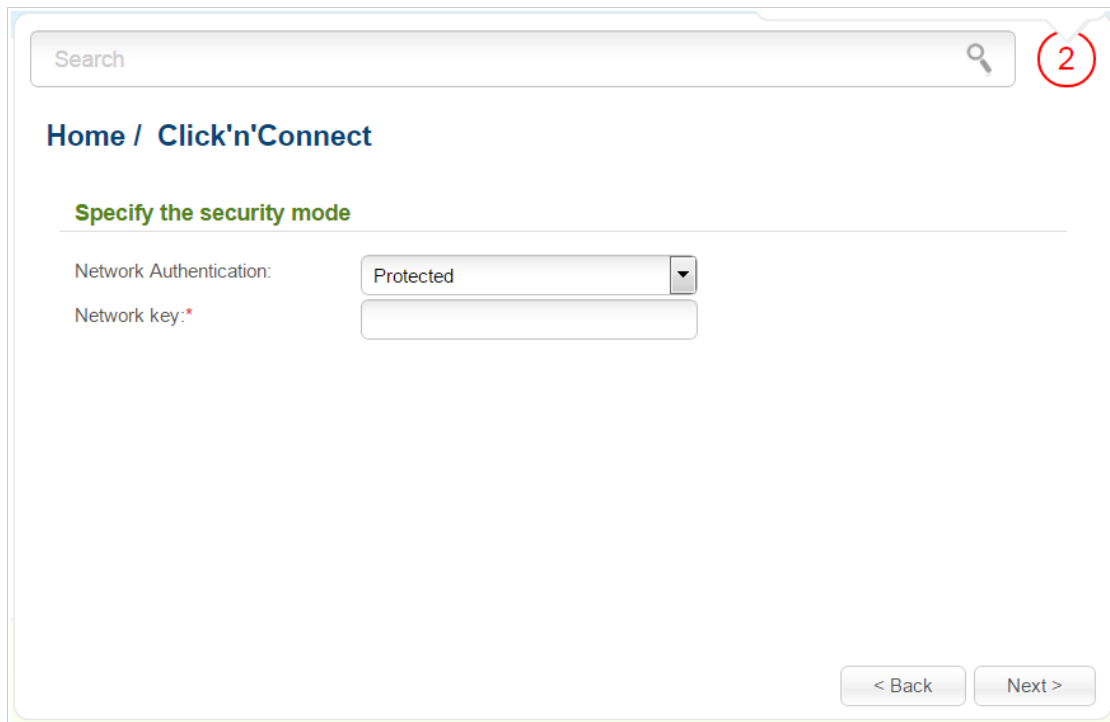



Figure 38. Selecting a security mode for the wireless network.

Click the **Next** button to continue.

On the next page, the specified settings are displayed. Make sure that they are correct and then click the **Apply** button. Save the settings and wait until the router is rebooted.

Wireless Network Settings Wizard

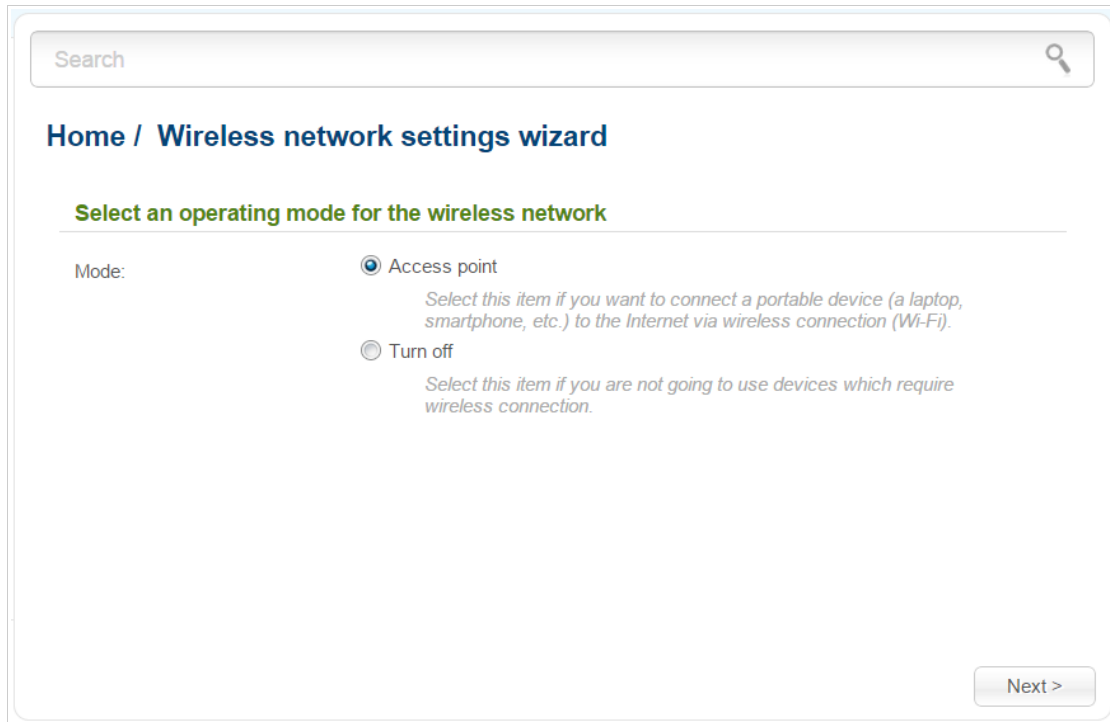To specify all needed settings for your wireless network, click the **Wireless network settings wizard** link in the **Home** section.



Search

Home / Wireless network settings wizard

Select an operating mode for the wireless network

Mode:

Access point
Select this item if you want to connect a portable device (a laptop, smartphone, etc.) to the Internet via wireless connection (Wi-Fi).

Turn off
Select this item if you are not going to use devices which require wireless connection.


Next >

Figure 39. The page for selecting the operating mode for the wireless network.

If you are not going to use the wireless connection, select the **Turn off** choice of the **Mode** radio button. Click the **Next** button and then click the **Apply** button on the opened page. After clicking the button, the **Home / Information** page opens.

If you want to connect portable devices to the Internet via wireless connection, select the **Access point** choice of the **Mode** radio button. Click the **Next** button.

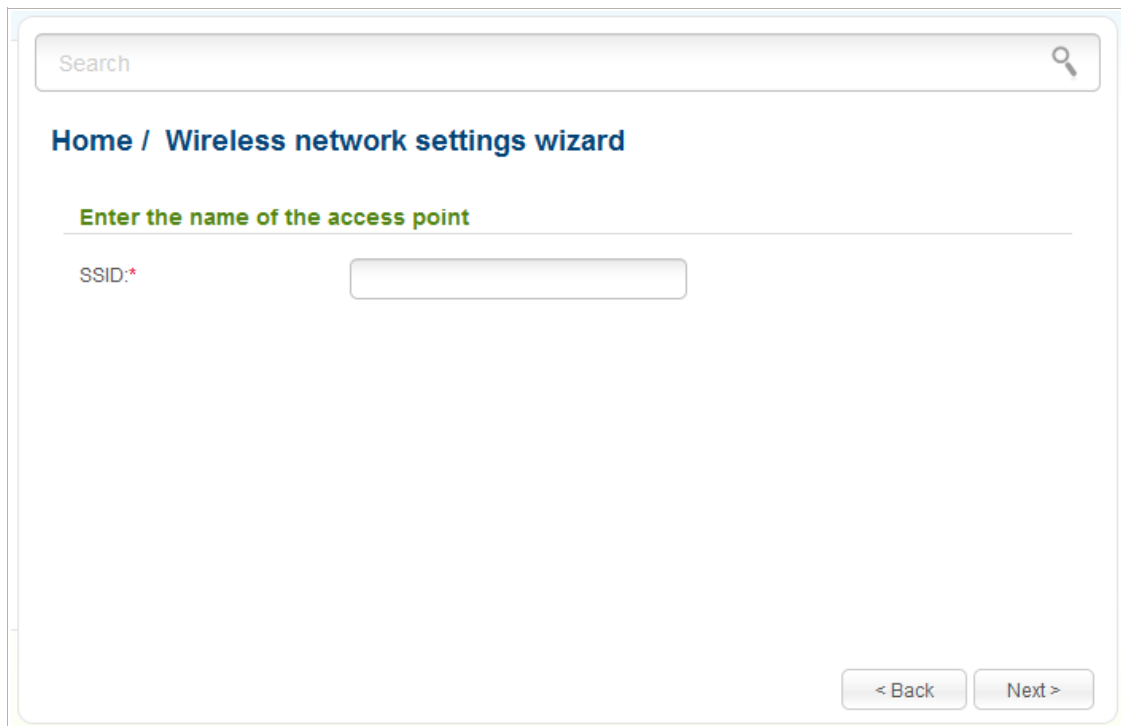On the opened page, in the **SSID** field, specify a new name for the network (use digits and Latin characters).



The screenshot shows a web-based configuration interface. At the top, there is a search bar with the text "Search" and a magnifying glass icon. Below the search bar, the breadcrumb "Home / Wireless network settings wizard" is displayed. A green heading "Enter the name of the access point" is followed by a horizontal line. Underneath, the label "SSID:*" is positioned to the left of an empty text input field. At the bottom right of the form, there are two buttons: "< Back" and "Next >".

Figure 40. Page for changing the name of the wireless LAN.

Click the **Next** button to continue.

On the next page, you can modify security settings of the WLAN.

Select the **Protected** value from the **Network Authentication** drop-down list and enter a key (a password that will be used to access your wireless network) in the **Network key** field. Use digits and Latin characters. After applying this setting, the **WPA-PSK/WPA2-PSK mixed** authentication type is specified for the router's WLAN.

When the **Open** value is selected, the **Network key** field is unavailable. After applying this setting, the **Open** authentication type with no encryption is specified for the router's WLAN.

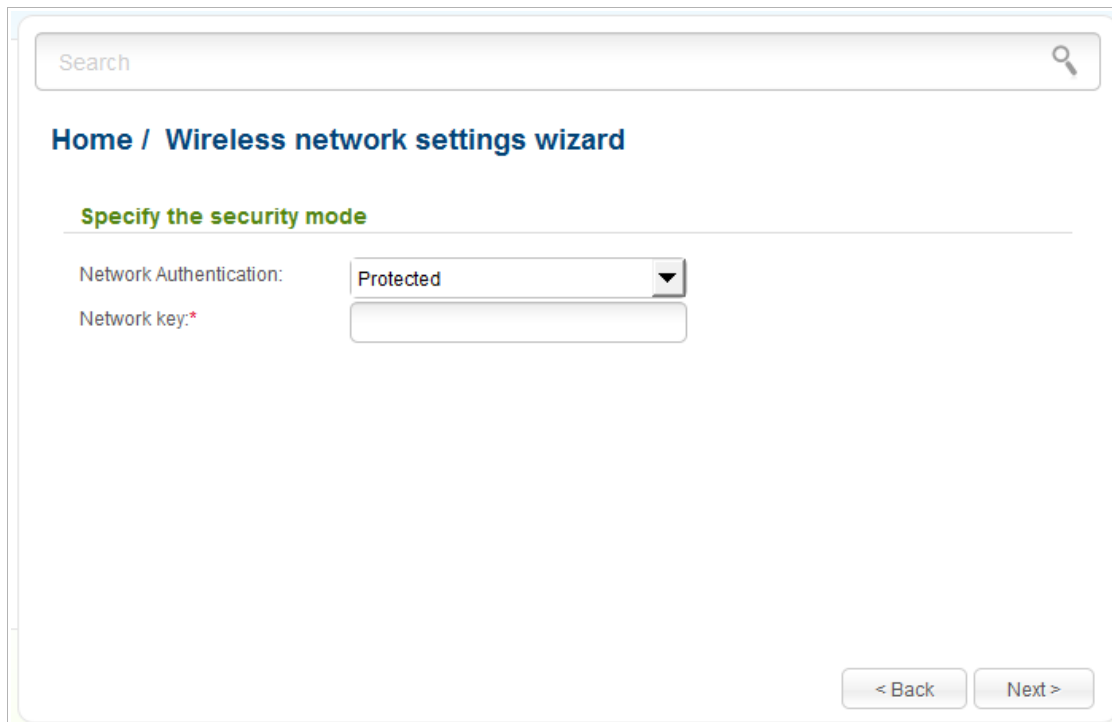


Figure 41. Page for selecting a security mode for the wireless network.

Click the **Next** button to continue.

On the next page, the specified settings are displayed. Make sure that they are correct and then click the **Apply** button. After clicking the button, the **Home / Information** page opens.

Virtual Server Settings Wizard

To create a virtual server for redirecting incoming Internet traffic to a specified IP address in the LAN, click the **Virtual server settings wizard** link in the **Home** section.

Figure 42. The page for adding a virtual server.

On the opened page, you can specify the following parameters:

Parameter	Description
Template	Select a virtual server template from the drop-down list, or select Custom to specify all parameters of the new virtual server manually.
Name	Enter a name for the virtual server for easier identification. You can specify any name.
Interface	Select a WAN connection to which this virtual server will be assigned.
Protocol	A protocol that will be used by the new virtual server. Select a value from the drop-down list.
Public port (begin)/ Public port (end)	A port of the router from which traffic is directed to the IP address specified in the Private IP field. Specify the start and the end value for the port range. If you need to specify one port, enter the needed value in the Public port (begin) field and leave the Public port (end) field blank.

Parameter	Description
Private port (begin)/ Private port (end)	A port of the IP address specified in the Private IP field to which traffic is directed from the Public port . Specify the start and the end value for the port range. If you need to specify one port, enter the needed value in the Private port (begin) field and leave the Private port (end) field blank.
Private IP	Enter the IP address of the server from the local area network. To choose a device connected to the router's LAN at the moment, select the relevant value from the drop-down list (the field will be filled in automatically).
Remote IP	Enter the IP address of the server from the external network.

When needed settings are configured, click the **Apply** button.

After clicking the **Apply** button, a dialog box appears.

If you are going to create a new virtual server, click the **OK** button. After clicking the button, the **Firewall / Virtual servers** page opens (see the *Virtual Servers* section, page 118, for a detailed description of the elements from the page).

If you are not going to create a new virtual server, click the **Cancel** button. After clicking the button, the **Home / Information** page opens.

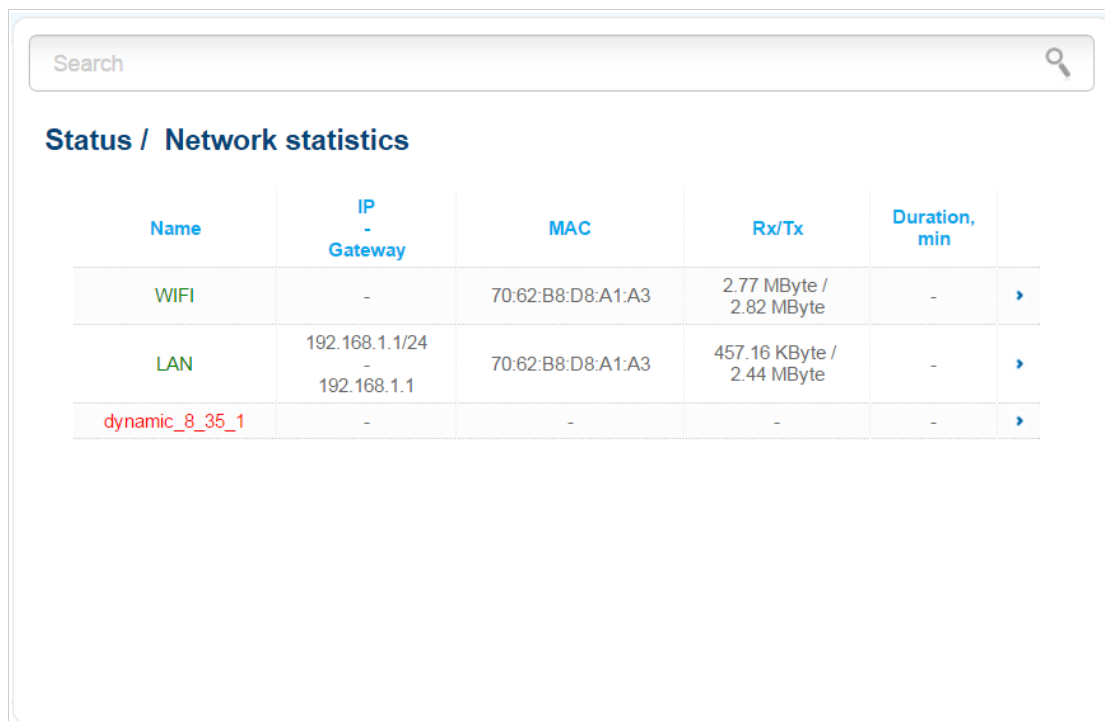
Status

The pages of this section display data on the current state of the router:

- network statistics
- DSL connection status
- IP addresses leased by the DHCP server
- the routing table
- data on devices connected to the router's network and its web-based interface
- addresses of active multicast groups.

Network Statistics

On the **Status / Network statistics** page, you can view statistics for all connections existing in the system (WAN connections, LAN, WLAN). For each connection the following data are displayed: name and state (when the connection is on, its name is highlighted in green, when the connection is off, its name is highlighted in red), IP address and subnet mask, gateway (if the connection is established), MAC address, MTU value, and volume of data received and transmitted (with increase of the volume the units of measurement are changed automatically: byte, Kbyte, Mbyte, Gbyte).



Name	IP - Gateway	MAC	Rx/Tx	Duration, min	
WIFI	-	70:62:B8:D8:A1:A3	2.77 MByte / 2.82 MByte	-	▶
LAN	192.168.1.1/24 - 192.168.1.1	70:62:B8:D8:A1:A3	457.16 KByte / 2.44 MByte	-	▶
dynamic_8_35_1	-	-	-	-	▶

Figure 43. The **Status / Network statistics** page.

DSL Status

The information shown on pages of the **Status / DSL status** section can be used for troubleshooting and diagnosing connection problems.

On the **DSL status** and **Line** pages you can view data on your DSL line: the connection state (when the connection is on, the green indicator appears, when the connection is off, the red indicator appears), actual data transfer rate (downstream/upstream traffic), DSL standard, the line state, using trellis coded modulation, and physical parameters of the line (SNR, output power). The **Framing** page displays information on transmitted DSL frames.


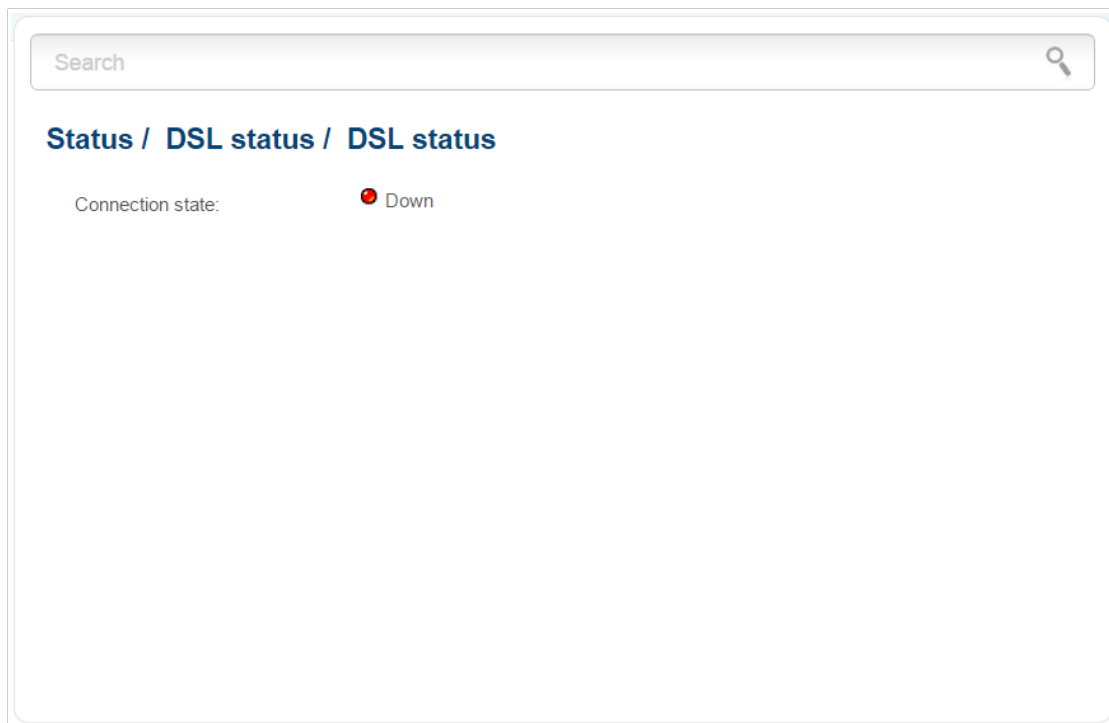


Figure 44. The **Status / DSL status** page.

DHCP

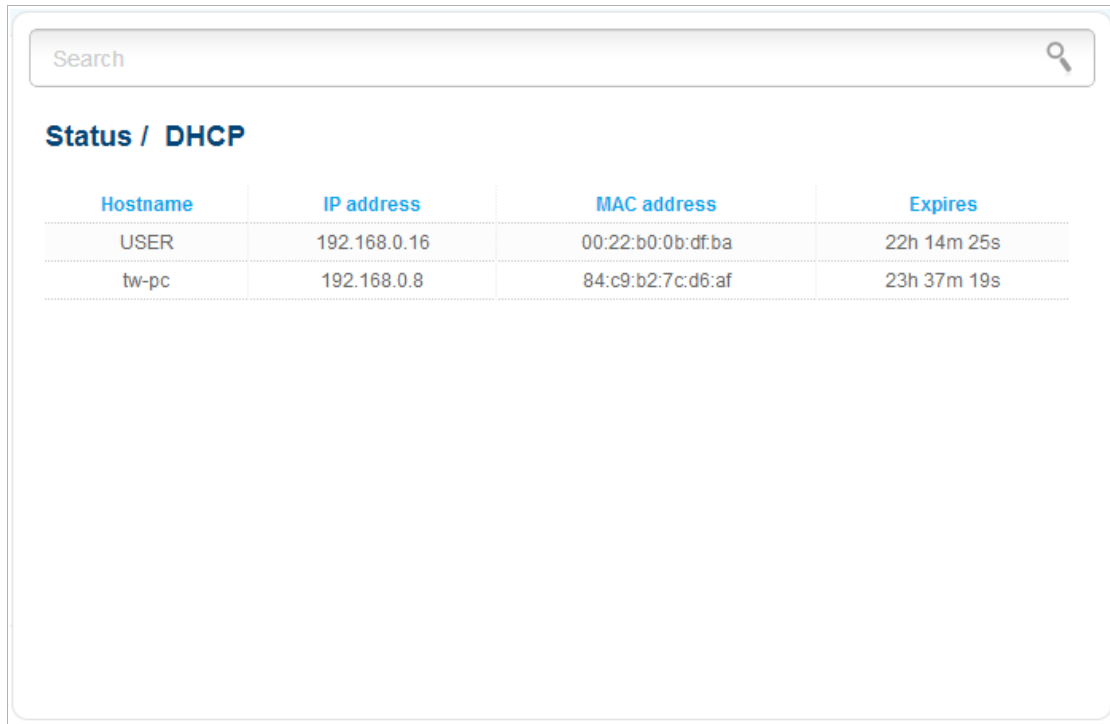The **Status / DHCP** page displays the information on computers that have been identified by hostnames and MAC addresses and have got IP addresses from the DHCP server of the device, as well as the IP address expiration periods (the lease time).




The screenshot shows a web interface for the DHCP status page. At the top, there is a search bar with the placeholder text "Search" and a magnifying glass icon. Below the search bar, the title "Status / DHCP" is displayed in blue. Underneath the title is a table with four columns: "Hostname", "IP address", "MAC address", and "Expires". The table contains two rows of data. The first row shows a hostname of "USER", an IP address of "192.168.0.16", a MAC address of "00:22:b0:0b:df:ba", and an expiration time of "22h 14m 25s". The second row shows a hostname of "tw-pc", an IP address of "192.168.0.8", a MAC address of "84:c9:b2:7c:d6:af", and an expiration time of "23h 37m 19s".

Hostname	IP address	MAC address	Expires
USER	192.168.0.16	00:22:b0:0b:df:ba	22h 14m 25s
tw-pc	192.168.0.8	84:c9:b2:7c:d6:af	23h 37m 19s

Figure 45. The **Status / DHCP** page.

Routing Table

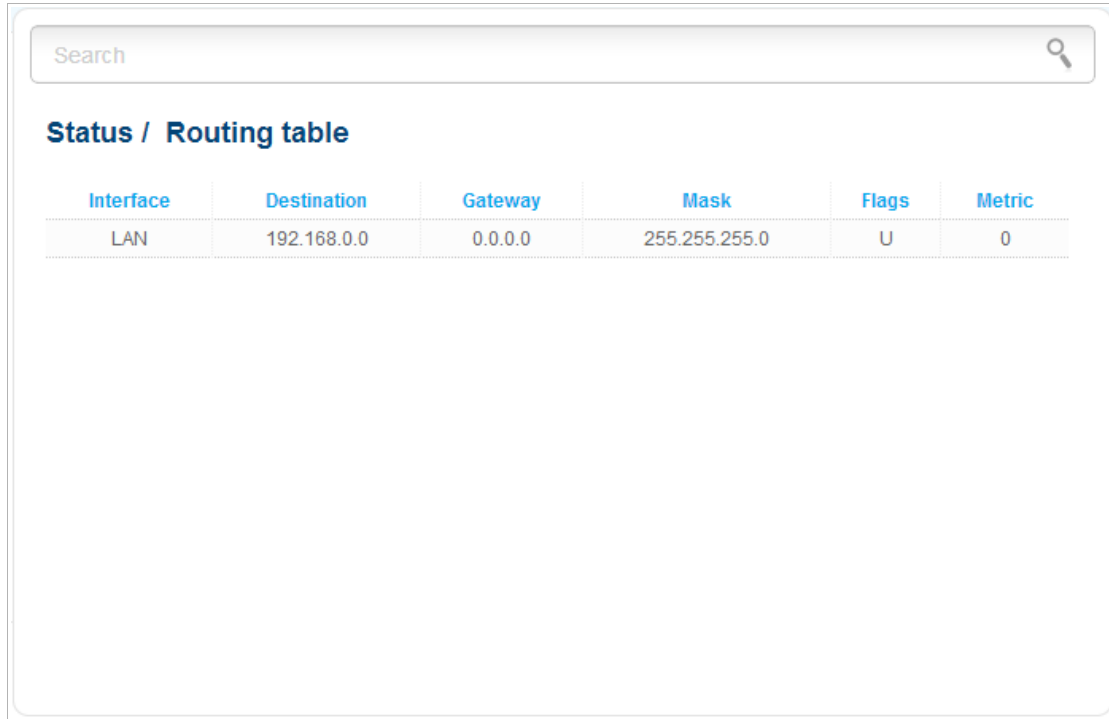The **Status / Routing table** page displays the information on routes. The table contains destination IP addresses, gateways, subnet masks, and other data.




The screenshot shows a web interface for the routing table. At the top, there is a search bar with the text "Search" and a magnifying glass icon. Below the search bar, the title "Status / Routing table" is displayed in blue. Underneath the title is a table with the following columns: Interface, Destination, Gateway, Mask, Flags, and Metric. The table contains one row of data: LAN, 192.168.0.0, 0.0.0.0, 255.255.255.0, U, and 0.

Interface	Destination	Gateway	Mask	Flags	Metric
LAN	192.168.0.0	0.0.0.0	255.255.255.0	U	0

Figure 46. The **Status / Routing table** page.

Clients

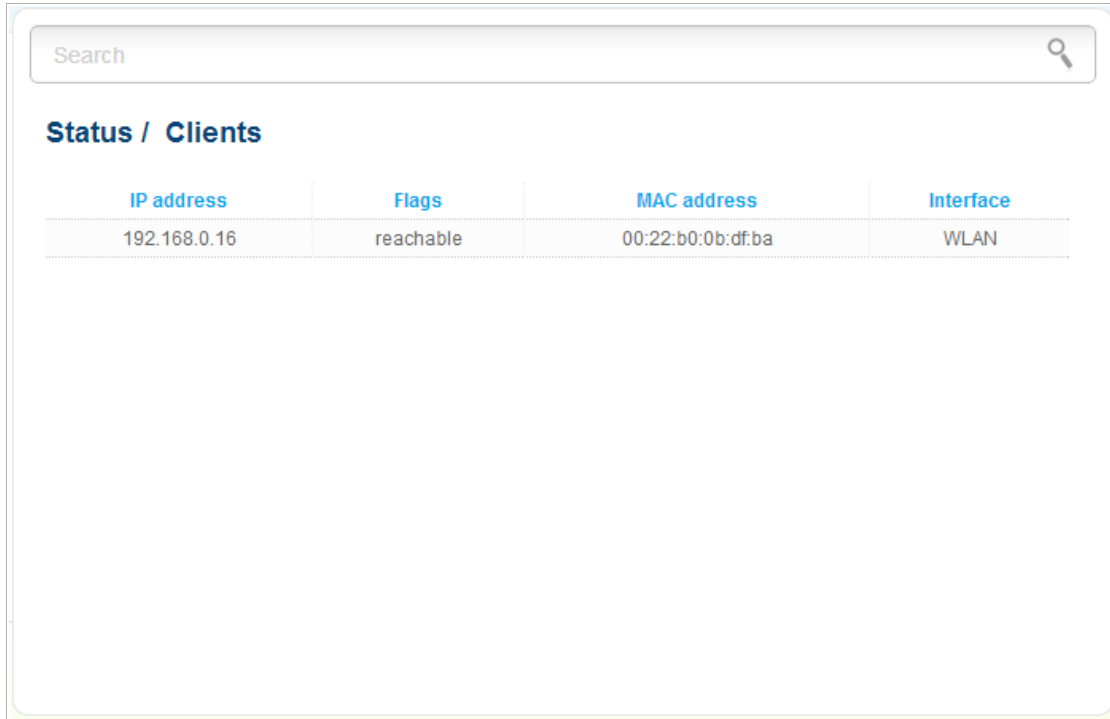On the **Status / Clients** page, you can view the list of devices connected to the router and devices accessing its web-based interface.



The screenshot shows the 'Status / Clients' page in a web interface. At the top, there is a search bar with the placeholder text 'Search' and a magnifying glass icon. Below the search bar, the title 'Status / Clients' is displayed. Underneath the title is a table with four columns: 'IP address', 'Flags', 'MAC address', and 'Interface'. The table contains one row of data.


IP address	Flags	MAC address	Interface
192.168.0.16	reachable	00:22:b0:0b:df:ba	WLAN

Figure 47. The **Status / Clients** page.

For each device the following data are displayed: the IP address, the MAC address, and the interface to which the device is connected.

Multicast groups

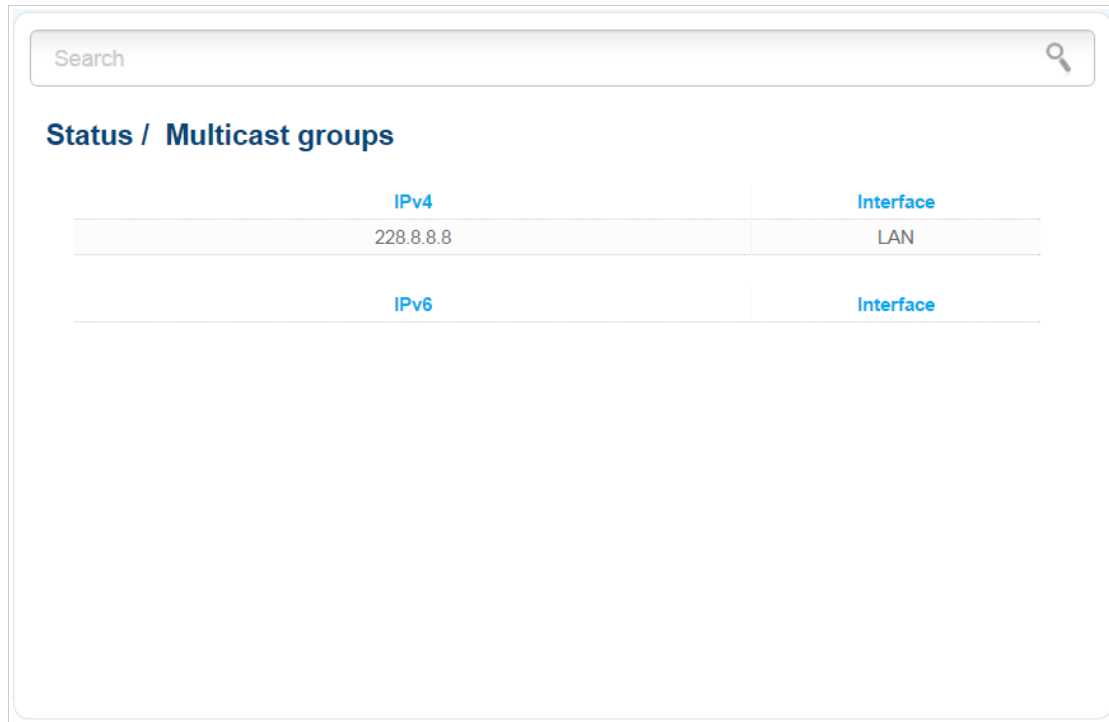The **Status / Multicast groups** page displays addresses of active multicast groups (including IPTV channels and groups for transferring service information) to which the device is subscribed, and the interface through which the device is subscribed.



The screenshot shows a web interface for 'Status / Multicast groups'. At the top is a search bar with the text 'Search' and a magnifying glass icon. Below the search bar is the title 'Status / Multicast groups'. The main content is a table with two columns: 'IPv4' and 'Interface'. The first row shows the IP address '228.8.8.8' under the 'IPv4' column and 'LAN' under the 'Interface' column. Below this, there is a section for 'IPv6' with a sub-column for 'Interface', but it is currently empty.

IPv4	Interface
228.8.8.8	LAN
IPv6	Interface

Figure 48. The **Status / Multicast groups** page.

Net

In this menu you can configure basic parameters of the router's local area network and configure connection to the Internet (a WAN connection).

WAN

On the **Net / WAN** page, you can create and edit connections used by the router.

By default, a **Dynamic IP** connection is configured in the system. It is assigned to the WAN port of the router. You can edit this connection or delete it.



Please reboot the router after creating, editing, or removing an ADSL WAN connection.

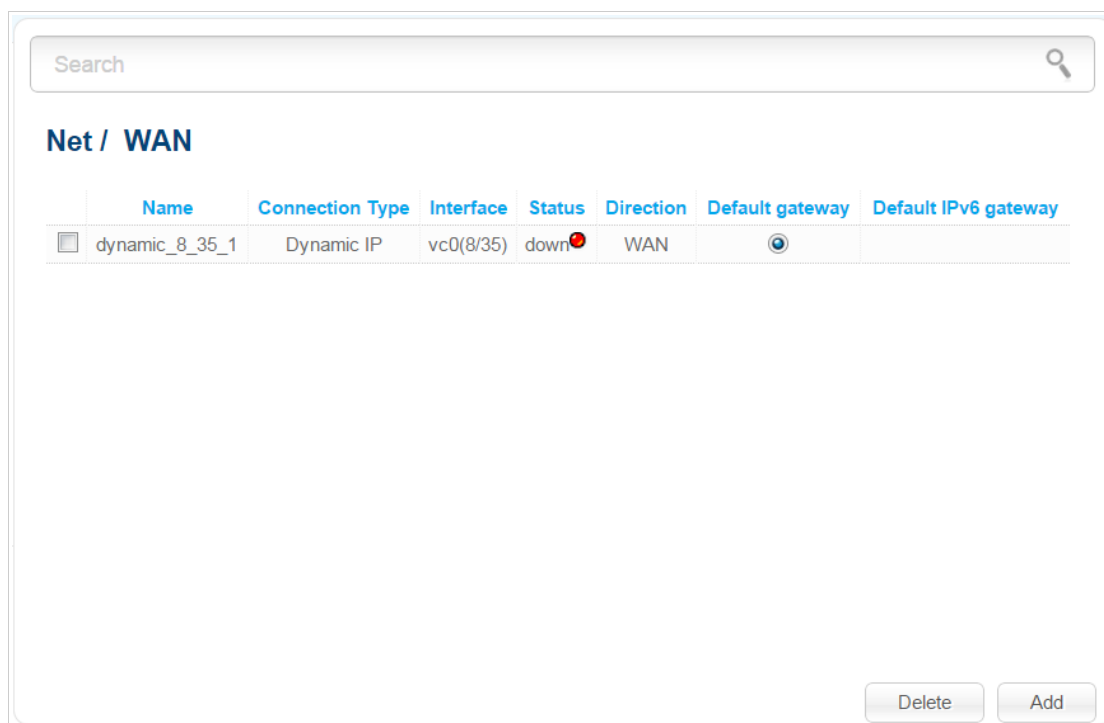


Figure 49. The **Net / WAN** page.

To create a new connection, click the **Add** button. On the page displayed, specify the relevant values.

To edit an existing connection, left-click the relevant line in the table. On the page displayed, change the parameters and click the **Apply** button.

To remove an existing connection, select the checkbox located to the left of the relevant line in the table and click the **Delete** button. Also you can remove a connection on the editing page.

To use one of existing WAN connections as a default gateway, select the choice of the **Default gateway** radio button located in the line corresponding to this connection.

See an example of creating several connections in the *Creating Two Connections on One Channel* section, page 142.

Creating ADSL WAN Connection

General settings

Connection Type:

Interface:

Name*:

Enable:

Direction:

ATM

VPI (0-255)*:

VCI (32-65535)*:

Encapsulation Mode:

QoS:

Figure 50. The page for creating a new connection. The **General settings** and **ATM** sections.

Parameter	Description
General settings	
Connection Type	A type of network protocol to be used by the connection. Available values: <ul style="list-style-type: none"> • PPPoA • PPPoE • IPv6 PPPoE • PPPoE Dual Stack • IPoA • Static IP / Dynamic IP • Static IPv6 / Dynamic IPv6 • Bridge.
Interface	A physical interface to which the new connection will be assigned. Leave the DSL(new) value to create a new interface at the physical layer.
Name	A name for connection for easier identification.
Enable	Select the checkbox to enable the connection.
Direction	The direction of this connection.
ATM	
VPI	Virtual Path Identifier. The valid range is from 0 to 255.

Parameter	Description
VCI	Virtual Circuit Identifier. The valid range is from 32 to 65535.
Encapsulation Mode	Select LLC or VC from the drop-down list.
QoS	<p>A class of traffic for this connection.</p> <p>UBR</p> <p><i>(Unspecified Bit Rate)</i>: The UBR service is used for applications that allow various delays and losses of packets. It is appropriate to use the UBR service for text/data/image transfer applications, as well as messaging, distribution, retrieval, and remote terminal applications.</p> <p>UBR with PCR</p> <p><i>(Unspecified Bit Rate with Peak Cell Rate)</i>: The UBR service is used for applications that allow various delays and losses of packets. The Peak Cell Rate is a determining factor in how often cells are sent in an effort to minimize lag or jitter caused by traffic inconsistencies. When you select this value from the drop-down list, the Peak Cell Rate field is displayed. Specify a required value (in cells per second).</p> <p>CBR</p> <p><i>(Constant Bit Rate)</i>: This service is used for applications that require a constant data rate. It is mostly used for transferring uncompressed audio and video, e.g. videoconferencing, interactive audio (telephony), audio/video distribution (television, distance education, e-shops), and retrieval (video-on demand, audio libraries). When you select this value from the drop-down list, the Peak Cell Rate field is displayed. Specify a required value (in cells per second).</p> <p>Non Realtime VBR</p> <p><i>(Non-Real-time Variable Bit Rate)</i>: This service can be used for transferring data that have critical response-time requirements, e.g. air ticket booking, bank transactions, and process monitoring. When you select this value from the drop-down list, the Peak Cell Rate, Sustainable Cell Rate, and Maximum Burst Size fields are displayed. Specify required values.</p> <p>Realtime VBR</p> <p><i>(Real-time Variable Bit Rate)</i>: This service is used for delay-sensitive applications such as real time video. The Rt-VBR provides higher network flexibility than the CBR service. When you select this value from the drop-down list, the Peak Cell Rate,</p>

Parameter	Description
	Sustainable Cell Rate , and Maximum Burst Size fields are displayed. Specify required values.

The **VLAN** section is displayed for the **PPPoE**, **IPv6 PPPoE**, **PPPoE Dual Stack**, **Static IP**, **Dynamic IP**, **Static IPv6**, **Dynamic IPv6** and **Bridge** connection types.

Figure 51. The page for creating a new connection. The **VLAN** section.

Parameter	Description
VLAN	
Allow to create several connections assigned to this port	Select the checkbox to allow the router to use several untagged connections.
Use VLAN	Select the checkbox to allow the router to use tagged VLAN connections.
VLAN ID	An identifier for the VLAN. The field is displayed when the Use VLAN checkbox is selected.
VLAN priority	A priority tag for the type of traffic transmitted. The field is displayed when the Use VLAN checkbox is selected.

The **Miscellaneous** section is displayed for all connection types except for **Bridge**.

Miscellaneous

Enable RIP:

Enable IGMP Multicast:

NAT:

Firewall:

Ping:

Figure 52. The page for creating a new connection. The **Miscellaneous** section.

Parameter	Description
Miscellaneous	
Enable RIP	Select the checkbox to allow using RIP for this connection.
Enable IGMP Multicast	<p><i>Displayed for the PPPoA, PPPoE, PPPoE Dual Stack, IPoA, Static IP, and Dynamic IP types only.</i></p> <p>Select the checkbox to allow multicast traffic from the external network (e.g. video streaming) to be received.</p>
NAT	<p><i>Displayed for the PPPoA, PPPoE, PPPoE Dual Stack, IPoA, Static IP, and Dynamic IP types only.</i></p> <p>Select the checkbox if you want one WAN IP address to be used for all computers of your LAN.</p>
Firewall	Select the checkbox to enable protection against ARP and DDoS attacks.
Ping	Select the checkbox to allow the router to answer ping requests from the external network through this connection. For security reasons, it is recommended not to select this checkbox.

The **PPP** section is displayed for the **PPPoA**, **PPPoE**, **IPv6 PPPoE**, and **PPPoE Dual Stack** connection types.

Figure 53. The page for creating a new connection. The **PPP** section.

Parameter	Description
PPP	
Username	A username (login) to access the Internet.
Without authorization	Select the checkbox if you don't need to enter a username and password to access the Internet.
Password	A password to access the Internet.
Password confirmation	The confirmation of the entered password (to avoid mistypes).
Service name	<i>Displayed for the PPPoE, IPv6 PPPoE, and PPPoE Dual Stack types only.</i> The name of the PPPoE authentication server.
Authentication algorithm	Select a required authentication method from the drop-down list or leave the AUTO value.
MTU	The maximum size of units transmitted by the interface.
Keep Alive	Select the checkbox if you want the router to keep you connected to your ISP even when the connection has been inactive for a specified period of time. When the checkbox is selected, the LCP interval and LCP fails fields are available. Specify the required values.

Parameter	Description
Dial on demand	Select the checkbox if you want the router to establish connection to the Internet on demand. In the Maximum idle time field, specify a period of inactivity (in seconds) after which the connection should be terminated.
PPP IP extension	This option is used by some ISPs. Contact your ISP to clarify if this checkbox needs to be enabled.
Static IP Address	<i>Displayed for the PPPoA, PPPoE, and PPPoE Dual Stack types only.</i> Fill in the field if you want to use a static IP address to access the Internet.
PPP debug	<i>Displayed for the PPPoA and PPPoE types only.</i> Select the checkbox if you want to log all data on PPP connection debugging.

The **IP** section is displayed for the **IPoA**, **Static IP**, **Dynamic IP**, **Static IPv6**, and **Dynamic IPv6** connection types.

IP

IP Address:*

Netmask:*

Gateway IP address:*

Primary DNS server:*

Secondary DNS server:

Figure 54. The page for creating a new connection. The **IP** section.

Parameter	Description
IP	
<i>For Static IP and IPoA types</i>	
IP Address	Enter an IP address for this WAN connection.
Netmask	Enter a subnet mask for this WAN connection.
Gateway IP address	Enter an IP address of the gateway used by this WAN connection.
Primary DNS server/ Secondary DNS server	Enter addresses of the primary and secondary DNS servers in the relevant fields.
<i>For Dynamic IP type</i>	

Parameter	Description
Obtain DNS server addresses automatically	Select the checkbox to configure automatic assignment of DNS server addresses. If the checkbox is selected, the Primary DNS server and Secondary DNS server fields are not displayed.
Primary DNS server/Secondary DNS server	Enter addresses of the primary and secondary DNS servers in the relevant fields.
Vendor ID	The identifier of your ISP. <i>Optional.</i>
Hostname	A name of the router specified by your ISP. <i>Optional.</i>
<i>For Static IPv6 type</i>	
IPv6 address	Enter an IPv6 address for this WAN connection.
Gateway IPv6 address	Enter an IPv6 address of the gateway used by this WAN connection.
Primary IPv6 DNS server/Secondary IPv6 DNS server	Enter addresses of the primary and secondary IPv6 DNS servers in the relevant fields.
<i>For Dynamic IPv6 type</i>	
Get IPv6	Select a method for IPv6 address assignment from the drop-down list or leave the Automatically value.
Gateway by SLAAC	Select the checkbox to automatically assign the IPv6 gateway address with help of SLAAC (<i>Stateless Address Autoconfiguration</i>).
Static IPv6 gateway address	The static address of the IPv6 gateway. The field is available for editing, if the Gateway by SLAAC checkbox is not selected.
Obtain DNS server addresses automatically	Select the checkbox to configure automatic assignment of IPv6 DNS server addresses. If the checkbox is selected, the Static primary DNS server and Static secondary DNS server fields are not available for editing.
Static primary DNS server/Static secondary DNS server	Enter addresses of the primary and secondary IPv6 DNS servers in the relevant fields.

The **IPv6**, **IPv6 gateway**, and **IPv6 DNS addresses** sections are displayed for the **IPv6 PPPoE** and **IPv6 Dual Stack** connection types.

The screenshot shows a web-based configuration interface for IPv6. It is divided into three main sections:

- IPv6:** Contains a 'Get IPv6:' label and a dropdown menu currently set to 'Automatically'.
- IPv6 gateway:** Contains a 'SLAAC:' label with a checked checkbox, and a 'Static IPv6 gateway address:' label followed by an empty text input field.
- IPv6 DNS addresses:** Contains 'Obtain DNS server addresses automatically:' with a checked checkbox, 'Static primary DNS server:' with an empty text input field, 'Static secondary DNS server:' with an empty text input field, and 'PPP debug:' with an unchecked checkbox.

Figure 55. The page for creating a new connection. The **IPv6**, **IPv6 gateway**, and **IPv6 DNS addresses** sections.

Parameter	Description
IPv6	
Get IPv6	Select a method for IPv6 address assignment from the drop-down list or leave the Automatically value.
IPv6 gateway	
SLAAC	Select the checkbox to automatically assign the IPv6 gateway address with help of SLAAC (<i>Stateless Address Autoconfiguration</i>).
Static IPv6 gateway address	The static address of the IPv6 gateway. The field is available for editing, if the SLAAC checkbox is not selected.
IPv6 DNS addresses	
Obtain DNS server addresses automatically	Select the checkbox to configure automatic assignment of IPv6 DNS server addresses. If the checkbox is selected, the Static primary DNS server and Static secondary DNS server fields are not available for editing.
Static primary DNS server/Static secondary DNS server	Enter addresses of the primary and secondary IPv6 DNS servers in the relevant fields.
PPP debug	Select a method for IPv6 address assignment from the drop-down list or leave the Automatically value.

When all needed settings are configured, click the **Apply** button.

Creating Ethernet WAN Connection



Prior to creating an Ethernet WAN connection, specify a LAN port that will be used as the WAN port (see the *EtherWAN* section, page 102).

The screenshot shows a web configuration page for creating a new connection. It is divided into three main sections: **General settings**, **Ethernet**, and **VLAN**.

- General settings:**
 - Connection Type: Bridge (dropdown)
 - Interface: LAN2 (dropdown)
 - Name: * bridge_LAN2_3 (text input)
 - Enable: (checkbox)
 - Direction: WAN (radio button)
- Ethernet:**
 - MTU: * 1500 (text input)
- VLAN:**
 - Allow to create several connections assigned to this port: (checkbox)
 - Use VLAN: (checkbox)
 - VLAN ID: (text input)
 - VLAN priority: (text input)

Figure 56. The page for creating a new connection. The **General settings**, **Ethernet**, and **VLAN** sections.

Parameter	Description
General settings	
Connection Type	A type of network protocol to be used by the connection. Available values: <ul style="list-style-type: none"> • PPPoE • IPv6 PPPoE • PPPoE Dual Stack • Static IP / Dynamic IP • Static IPv6 / Dynamic IPv6 • Bridge.
Interface	Select the value corresponding to the LAN port specified as the WAN port.
Name	A name for connection for easier identification.
Enable	Select the checkbox to enable the connection.
Direction	The direction of this connection.

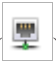Parameter	Description
Ethernet	
MTU	The maximum size of units transmitted by the interface.
MAC	<p><i>Displayed for the PPPoE, IPv6 PPPoE, PPPoE Dual Stack, Static IP, Dynamic IP, Static IPv6, and Dynamic IPv6 types only.</i></p> <p>A MAC address assigned to the interface. This parameter is mandatory if your ISP uses MAC address binding. In the field, enter the MAC address registered by your ISP upon concluding the agreement.</p> <p>You can click the Clone MAC address of your computer icon () to set the MAC address of the network interface card (of the computer that is being used to configure the router at the moment) as the MAC address of the WAN interface.</p> <p>Also you can set the address of a device connected to the router's LAN at the moment. To do this, select the relevant value from the drop-down list (the field will be filled in automatically).</p> <p>You can click the Restore default MAC address icon () to set the router's MAC address.</p>
VLAN	
Allow to create several connections assigned to this port	If the checkbox is selected, the router is able to use several untagged connections.
Use VLAN	If the checkbox selected, the router is able to use tagged VLAN connections.
VLAN ID	An identifier for the VLAN. The field is displayed when the Use VLAN checkbox is selected.
VLAN priority	A priority tag for the type of traffic transmitted. The field is displayed when the Use VLAN checkbox is selected.

The **Miscellaneous** section is displayed for all connection types except for **Bridge**.

Miscellaneous

Enable RIP:

Enable IGMP Multicast:

NAT:

Firewall:

Ping:

Figure 57. The page for creating a new connection. The **Miscellaneous** section.

Parameter	Description
Miscellaneous	
Enable RIP	Select the checkbox to allow using RIP for this connection.
Enable IGMP Multicast	<p><i>Displayed for the PPPoE, PPPoE Dual Stack, Static IP, and Dynamic IP types only.</i></p> <p>Select the checkbox to allow multicast traffic from the external network (e.g. video streaming) to be received.</p>
NAT	<p><i>Displayed for the PPPoE, PPPoE Dual Stack, Static IP, and Dynamic IP types only.</i></p> <p>Select the checkbox if you want one WAN IP address to be used for all computers of your LAN.</p>
Firewall	Select the checkbox to enable protection against ARP and DDoS attacks.
Ping	Select the checkbox to allow the router to answer ping requests from the external network through this connection. For security reasons, it is recommended not to select this checkbox.

The **PPP** section is displayed for the **PPPoE**, **IPv6 PPPoE**, or **PPPoE Dual Stack** connection types.

Figure 58. The page for creating a new connection. The **PPP** section.

Parameter	Description
PPP	
Username	A username (login) to access the Internet.
Without authorization	Select the checkbox if you don't need to enter a username and password to access the Internet.
Password	A password to access the Internet.
Password confirmation	The confirmation of the entered password (to avoid mistypes).
Service name	The name of the PPPoE authentication server.
Authentication algorithm	Select a required authentication method from the drop-down list or leave the AUTO value.
MTU	The maximum size of units transmitted by the interface.
Keep Alive	Select the checkbox if you want the router to keep you connected to your ISP even when the connection has been inactive for a specified period of time. When the checkbox is selected, the LCP interval and LCP fails fields are available. Specify the required values.
Dial on demand	Select the checkbox if you want the router to establish connection to the Internet on demand. In the Maximum idle time field, specify a period of inactivity (in seconds) after which the connection should be terminated.

Parameter	Description
PPP IP extension	This option is used by some ISPs. Contact your ISP to clarify if this checkbox needs to be enabled.
Static IP Address	<i>Displayed for the PPPoE and PPPoE Dual Stack types only.</i> Fill in the field if you want to use a static IP address to access the Internet.
PPP debug	<i>Displayed for the PPPoE type only.</i> Select the checkbox if you want to log all data on PPP connection debugging.

The **IP** section is displayed for the **Static IP**, **Dynamic IP**, **Static IPv6**, and **Dynamic IPv6** connection types.

IP

IP Address:*

Netmask:*

Gateway IP address:*

Primary DNS server:*

Secondary DNS server:

Figure 59. The page for creating a new connection. The **IP** section.

Parameter	Description
IP	
<i>For Static IP type</i>	
IP Address	Enter an IP address for this WAN connection.
Netmask	Enter a subnet mask for this WAN connection.
Gateway IP address	Enter an IP address of the gateway used by this WAN connection.
Primary DNS server/ Secondary DNS server	Enter addresses of the primary and secondary DNS servers in the relevant fields.
<i>For Dynamic IP type</i>	
Obtain DNS server addresses automatically	Select the checkbox to configure automatic assignment of DNS server addresses. If the checkbox is selected, the Primary DNS server and Secondary DNS server fields are not displayed.
Primary DNS server/ Secondary DNS server	Enter addresses of the primary and secondary DNS servers in the relevant fields.

Parameter	Description
Vendor ID	The identifier of your ISP. <i>Optional.</i>
Hostname	A name of the router specified by your ISP. <i>Optional.</i>
<i>For Static IPv6 type</i>	
IPv6 address	Enter an IPv6 address for this WAN connection.
Gateway IPv6 address	Enter an IPv6 address of the gateway used by this WAN connection.
Primary IPv6 DNS server/Secondary IPv6 DNS server	Enter addresses of the primary and secondary IPv6 DNS servers in the relevant fields.
<i>For Dynamic IPv6 type</i>	
Get IPv6	Select a method for IPv6 address assignment from the drop-down list or leave the Automatically value.
Gateway by SLAAC	Select the checkbox to automatically assign the IPv6 gateway address with help of SLAAC (<i>Stateless Address Autoconfiguration</i>).
Static IPv6 gateway address	The static address of the IPv6 gateway. The field is available for editing, if the Gateway by SLAAC checkbox is not selected.
Obtain DNS server addresses automatically	Select the checkbox to configure automatic assignment of IPv6 DNS server addresses. If the checkbox is selected, the Static primary DNS server and Static secondary DNS server fields are not available for editing.
Static primary DNS server/Static secondary DNS server	Enter addresses of the primary and secondary IPv6 DNS servers in the relevant fields.

The **IPv6**, **IPv6 gateway**, and **IPv6 DNS addresses** sections are displayed for the **IPv6 PPPoE** and **IPv6 Dual Stack** connection types.

The screenshot shows a web-based configuration interface for IPv6. It is divided into three main sections:

- IPv6:** Contains a 'Get IPv6:' label and a dropdown menu currently set to 'Automatically'.
- IPv6 gateway:** Contains a 'SLAAC:' label with a checked checkbox, and a 'Static IPv6 gateway address:' label followed by an empty text input field.
- IPv6 DNS addresses:** Contains 'Obtain DNS server addresses automatically:' with a checked checkbox, 'Static primary DNS server:' with an empty text input field, 'Static secondary DNS server:' with an empty text input field, and 'PPP debug:' with an unchecked checkbox.

Figure 60. The page for creating a new connection. The **IPv6**, **IPv6 gateway**, and **IPv6 DNS addresses** sections.

Parameter	Description
IPv6	
Get IPv6	Select a method for IPv6 address assignment from the drop-down list or leave the Automatically value.
IPv6 gateway	
SLAAC	Select the checkbox to automatically assign the IPv6 gateway address with help of SLAAC (<i>Stateless Address Autoconfiguration</i>).
Static IPv6 gateway address	The static address of the IPv6 gateway. The field is available for editing, if the SLAAC checkbox is not selected.
IPv6 DNS addresses	
Obtain DNS server addresses automatically	Select the checkbox to configure automatic assignment of IPv6 DNS server addresses. If the checkbox is selected, the Static primary DNS server and Static secondary DNS server fields are not available for editing.
Static primary DNS server/Static secondary DNS server	Enter addresses of the primary and secondary IPv6 DNS servers in the relevant fields.
PPP debug	Select a method for IPv6 address assignment from the drop-down list or leave the Automatically value.

When all needed settings are configured, click the **Apply** button.

LAN

To configure the router's local interface, proceed to the **Net / LAN** page.

The screenshot shows a configuration form for the LAN interface. It contains three input fields: 'IP Address:*' with the value '192.168.1.1', 'Netmask:*' with the value '255.255.255.0', and 'IPv6 address:' which is currently empty.

Figure 61. Basic settings of the local interface.

If needed, edit the basic settings of the local interface.

Parameter	Description
IP Address	The IP address of the router in the local subnet. By default, the following value is specified: 192.168.1.1 .
Netmask	The mask of the local subnet. By default, the following value is specified: 255.255.255.0 .
IPv6 address	The IPv6 address of the router in the local subnet. The field is available for editing, if the DHCP PD checkbox is not selected.

When needed settings are configured, click the **Apply** button.

In the **DHCP server** section, you can configure the built-in DHCP server of the router.

The screenshot shows the 'DHCP server' configuration section. It includes a 'Mode' dropdown menu set to 'Enable', a 'DNS Relay' checkbox that is checked, and three input fields: 'Start IP:*' with '192.168.1.2', 'End IP:*' with '192.168.1.254', and 'Lease time (min):*' with '1440'.

Figure 62. The section for configuring the DHCP server.

Parameter	Description
Mode	<p>An operating mode of the router's DHCP server.</p> <p>Enable: the router assigns IP addresses to clients automatically in accordance with the specified parameters. When this value is selected, the DNS Relay, Start IP, End IP, and the Lease time fields are displayed on the page.</p> <p>Disable: the router's DHCP server is disabled, clients' IP addresses are assigned manually.</p> <p>Relay: an external DHCP server is used to assign IP addresses to clients. When this value is selected, the External DHCP server IP field is displayed on the page.</p>

Parameter	Description
DNS Relay	Select the checkbox so that the devices connected to the router obtain the address of the router as the DNS server address. Deselect the checkbox so that the devices connected to the router obtain the address transmitted by the ISP as the DNS server address.
Start IP	The start IP address of the address pool used by the DHCP server to distribute IP addresses to clients.
End IP	The end IP address of the address pool used by the DHCP server to distribute IP addresses to clients.
Lease time	The lifetime of IP addresses leased by the DHCP server. At the end of this period the leased IP address is revoked and can be distributed to another device, unless the previous device has confirmed the need to keep the address.
External DHCP server IP	The IP address of the external DHCP server which assigns IP addresses to the router's clients.

When all needed settings are configured, click the **Apply** button.

In the **IPv6 address assignment** section, you can enable the DHCPv6 server of the router and select its operating mode.

Figure 63. The section for configuring the DHCPv6 server.

Parameter	Description
Enable DHCPv6 Server	Select the checkbox to enable the DHCPv6 server of the router. When the checkbox is selected, the Mode drop-down list and the Leased Time field are displayed on the page.
DHCP PD	Select the checkbox to activate the Prefix Delegation function. When the checkbox is selected, the router requests a prefix to configure IPv6 addresses for clients of the LAN from a delegating router.

Parameter	Description
Mode	Select an operating mode of the DHCPv6 server from the drop-down list. Stateless: clients themselves configure IPv6 addresses using the prefix. Stateful: clients receive IPv6 addresses from the range specified in the Start IP and End IP fields.
Start IP	The start IPv6 address of the address pool used by the DHCPv6 server to distribute addresses to clients.
End IP	The end IPv6 address of the address pool used by the DHCPv6 server to distribute addresses to clients.
Leased Time	The lifetime of IPv6 addresses leased by the DHCPv6 server. The field is available for editing, if the DHCP PD checkbox is not selected.

When all needed settings are configured, click the **Apply** button.

In the **Static DHCP** section, you can specify MAC address and IP address pairs (set a fixed IPv4 address in the local area network for a device with a certain MAC address). The router assigns IP addresses in accordance with the specified pairs only when the DHCP server is enabled (in the **DHCP server** section, in the **Mode** drop-down list, the **Enable** value is selected).

The screenshot shows the 'Static DHCP' configuration page. At the top, there's a title 'Static DHCP'. Below it, there's a label 'Known IP/MAC addresses:' followed by a dropdown menu with the text '<Select IP/MAC address>'. Underneath, there's a table with three columns: 'IP*' (with a red asterisk), 'MAC', and 'Host'. To the left of the table, there's a small square checkbox. At the bottom left of the table area, there are two buttons: 'Remove' and 'Add'. At the bottom right of the entire section, there is an 'Apply' button.

Figure 64. The section for creating MAC-IP pairs.

To create a MAC-IP pair, click the **Add** button. In the **IP** field, enter an IPv4 address which will be assigned to the device from the LAN, then in the **MAC** field, enter the MAC address of this device. In the **Host** field, specify a network name of the device for easier identification (*optional*).

Also you can create a MAC-IP pair for a device connected to the router's LAN at the moment. To do this, select the relevant value from the **Known IP/MAC addresses** drop-down list (the **IP** and **MAC** fields will be filled in automatically).

When all needed MAC-IP pairs are specified, click the **Apply** button.

Existing MAC-IP pairs are displayed in the table of the **Static DHCP** section. To remove a pair, select the checkbox in the relevant line in the table and click the **Remove** button. Then click the **Apply** button.

Wi-Fi

In this menu you can specify all needed settings for your wireless network.

Basic Settings

On the **Wi-Fi / Basic settings** page, you can enable your wireless local area network (WLAN) and configure its basic parameters.

Figure 65. Basic settings of the wireless LAN.

Parameter	Description
Enable Wireless	The checkbox enables Wi-Fi connections. If you want to disable your WLAN, deselect the checkbox.
BSSID	The unique identifier for your Wi-Fi network. You cannot change the value of this parameter, it is determined in the device's internal settings
Hide Access Point	If the checkbox is selected, other users cannot see your Wi-Fi network. (It is recommended not to select this checkbox in order to simplify initial configuration of your WLAN.)
SSID	A name for the WLAN. By default, the value DSL-2640U is specified. It is recommended to specify another name for the network upon initial configuration (use digits and Latin characters).

Parameter	Description
Country	The country you are in. Select a value from the drop-down list.
Channel	The wireless channel number. When the auto value is selected, the router itself chooses the channel with the least interference.
Wireless mode	Operating mode of the wireless network of the router. This parameter defines standards of the devices that will be able to use your wireless network. Select a value from the drop-down list.
Max Associated Clients	The maximum number of devices connected to the wireless network of the router. When the value 0 is specified, the device does not limit the number of connected clients.

When you have configured the parameters, click the **Apply** button.

Security Settings

On the **Wi-Fi / Security settings** page, you can modify security settings of the WLAN.

The screenshot shows the 'Wi-Fi / Security settings' page. At the top, there is a search bar. Below it, the title 'Wi-Fi / Security settings' is displayed. The 'Network Authentication' dropdown menu is set to 'WPA2-PSK'. The 'Encryption Key PSK' text input field contains '12345670'. A section titled 'WPA Encryption settings' is separated by a horizontal line. In this section, the 'WPA Encryption' dropdown menu is set to 'AES', and the 'WPA renewal' text input field contains '3600'. An 'Apply' button is located at the bottom right of the settings area.

Figure 66. The default security settings.

By default, the **WPA2-PSK** network authentication type is specified for the WLAN. WPS PIN from the barcode label is used as the network key.

The router supports the following authentication types:

Authentication type	Description
Open	Open authentication (with WEP encryption for wireless network modes not supporting 802.11n devices).
Shared	Shared key authentication with WEP encryption. This authentication type is not available when on the Wi-Fi / Basic settings page, in the Wireless mode drop-down list, a mode supporting 802.11n devices is selected.
WPA-PSK	WPA-based authentication using a PSK.
WPA2-PSK	WPA2-based authentication using a PSK.
WPA-PSK/WPA2-PSK mixed	A mixed type of authentication. When this value is selected, devices using the WPA-PSK authentication type and devices using the WPA2-PSK authentication type can connect to the WLAN of the router.

When the **Open** or **Shared** value is selected, the **WEP Encryption settings** section is displayed (the section is unavailable for the wireless network operating modes which support the standard 802.11n):

The screenshot shows a search bar at the top. Below it is the 'Wi-Fi / Security settings' section. Under 'Network Authentication', a dropdown menu is set to 'Open'. The 'WEP Encryption settings' section is expanded, showing:

- 'Enable Encryption WEP' with a checked checkbox.
- 'Default Key ID' dropdown set to '2'.
- 'Encryption Key WEP as HEX' with an unchecked checkbox.
- 'WEP key length' dropdown set to '64bit'.
- Four text input fields for 'Encryption Key WEP (1)*', '(2)*', '(3)*', and '(4)*'.
- An 'Apply' button at the bottom right.

Figure 67. The **Open** value is selected from the **Network Authentication** drop-down list.

Parameter	Description
Enable Encryption WEP	The checkbox activating WEP encryption. When the checkbox is selected, the Default Key ID field, the Encryption Key WEP as HEX checkbox, the WEP key length drop-down list, and four Encryption Key WEP fields are displayed on the page. For the Shared authentication type the checkbox is always selected.
Default Key ID	The number of the key (from first to fourth) which will be used for WEP encryption.
Encryption Key WEP as HEX	Select the checkbox to set a hexadecimal number as a key for encryption.
WEP key length	The length of WEP encryption key. Select the value 64bit to specify keys containing 5 ASCII symbols or 10 HEX symbols. Select the value 128bit to specify keys containing 13 ASCII symbols or 26 HEX symbols.
Encryption Key WEP (1-4)	Keys for WEP encryption. The router uses the key selected from the Default Key ID drop-down list. It is required to specify all the fields.

When the **WPA-PSK**, **WPA2-PSK**, or **WPA-PSK/WPA2-PSK mixed** value is selected, the **WPA Encryption settings** section is displayed:

The screenshot shows a web interface for configuring Wi-Fi security. At the top, there is a search bar. Below it, the section is titled "Wi-Fi / Security settings". Under "Network Authentication", a dropdown menu is set to "WPA-PSK/WPA2-PSK mixed". Below that, the "Encryption Key PSK" field contains the text "12345670". A sub-section titled "WPA Encryption settings" is separated by a horizontal line. In this section, "WPA Encryption" is set to "AES" and "WPA renewal" is set to "3600". An "Apply" button is located in the bottom right corner of the settings area.

Figure 68. The **WPA-PSK/WPA2-PSK mixed** value is selected from the **Network Authentication** drop-down list.

Parameter	Description
Encryption Key PSK	A key for WPA encryption. The key can contain digits and/or Latin characters.
WPA Encryption	An encryption method: TKIP , AES , or TKIP+AES . For the wireless network operating modes which support 802.11n standard (see the value of the Wireless mode drop-down list on the Wi-Fi / Basic settings page), the AES value is only available.
WPA renewal	The time period (in seconds), at the end of which a new key for WPA encryption is generated. When the value 0 is specified for this field, the key is not renewed.

When you have configured the parameters, click the **Apply** button.

MAC Filter

On pages of the **Wi-Fi / MAC Filter** section, you can define a set of MAC addresses of devices which will be allowed to access the WLAN, or define MAC addresses of devices which will not be allowed to access the WLAN.

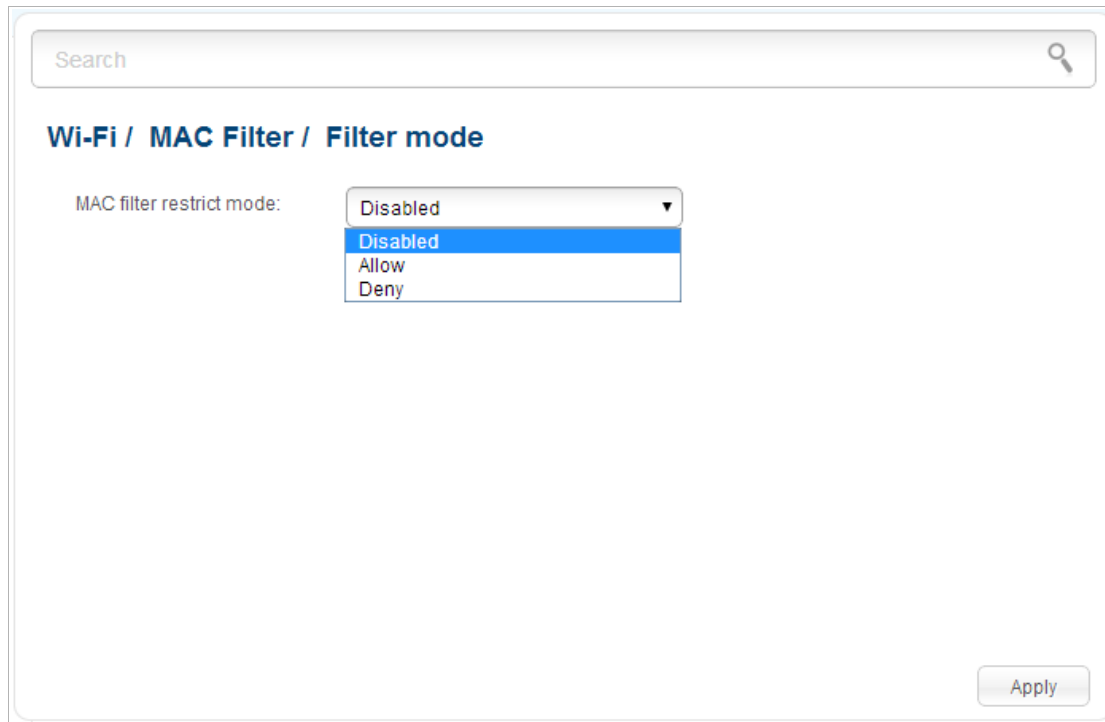


Figure 69. The page for configuring the MAC filter for the wireless network.

By default, MAC filtering is not active (the **Disabled** value is selected from the **MAC filter restrict mode** drop-down list on the **Wi-Fi / MAC Filter / Filter mode** page).

To open your wireless network for the devices which MAC addresses are specified on the **Wi-Fi / MAC Filter / MAC addresses** page and to close the wireless network for all other devices, select the **Allow** value from the **MAC filter restrict mode** drop-down list and click the **Apply** button.

To close your wireless network for the devices which MAC addresses are specified on the **Wi-Fi / MAC Filter / MAC addresses** page, select the **Deny** value from the **MAC filter restrict mode** drop-down list and click the **Apply** button.

To add a MAC address to which the selected filtering mode will be applied, proceed to the **Wi-Fi / MAC Filter / MAC addresses** page.

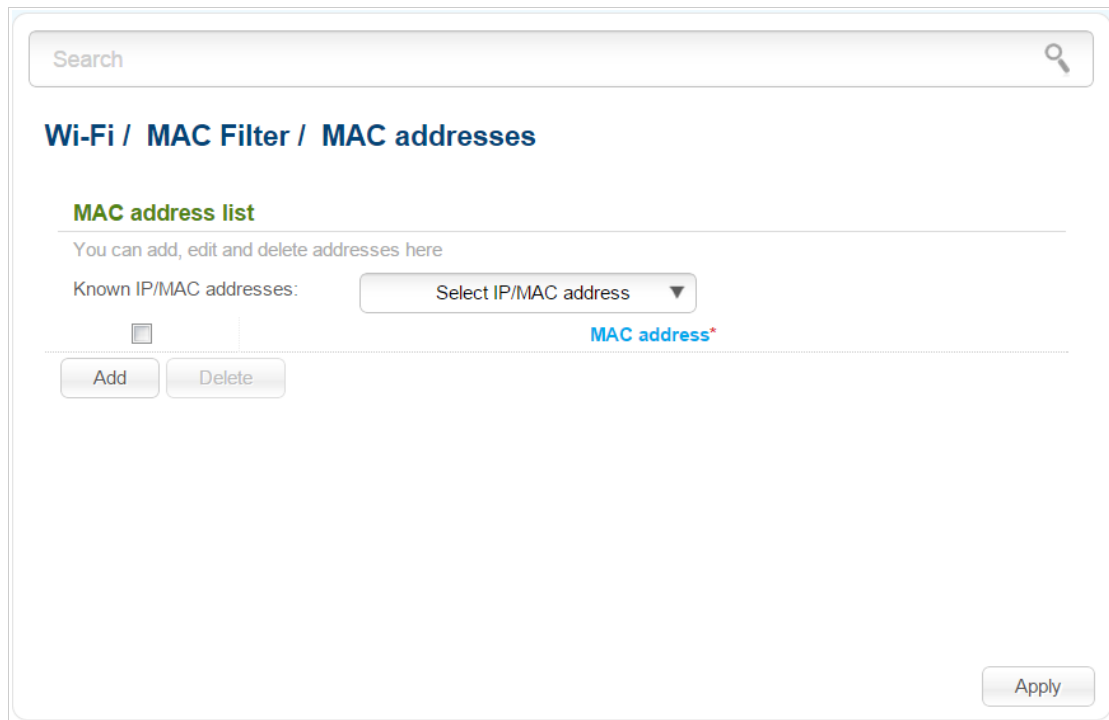



Figure 70. The page for adding a MAC address.

Click the **Add** button and enter an address in the field displayed. Also you can enter the MAC address of a device connected to the router's LAN at the moment. To do this, select the relevant device from the **Known IP/MAC addresses** drop-down list (the field will be filled in automatically). Then click the **Apply** button.

To remove a MAC address from the list of MAC addresses, select the checkbox located to the left of the relevant MAC address and click the **Delete** button. Then click the **Apply** button.

List of Wi-Fi Clients

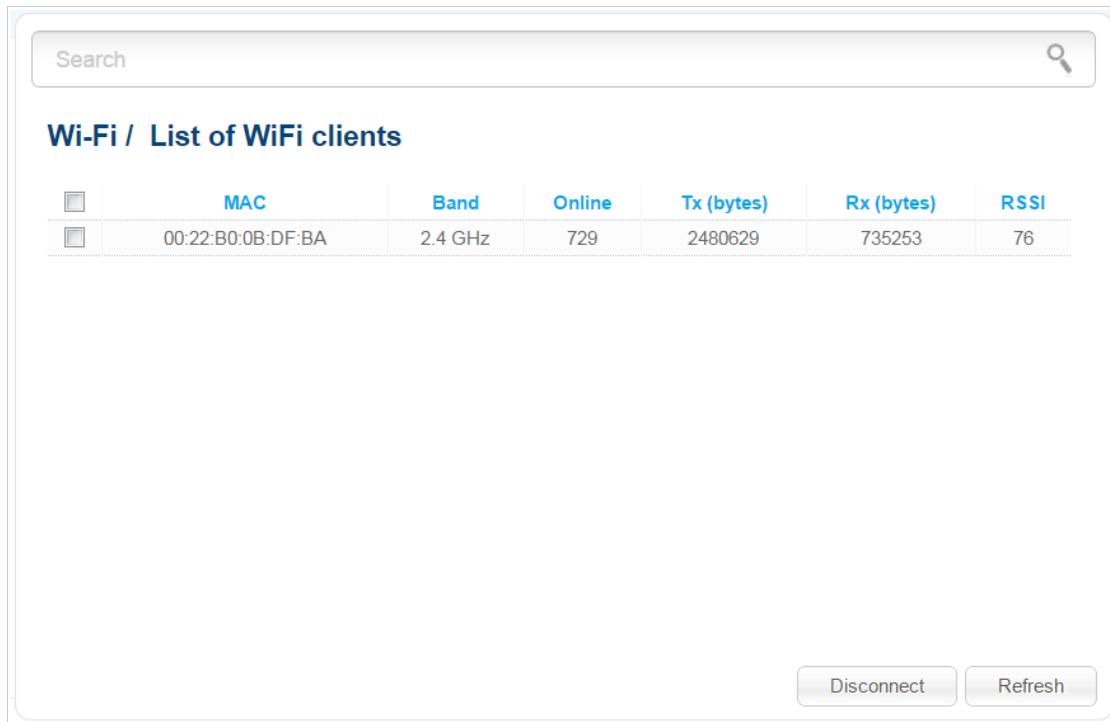On the **Wi-Fi / List of Wi-Fi clients** page, you can view the list of wireless clients connected to the router.



The screenshot shows a web interface for managing Wi-Fi clients. At the top, there is a search bar with a magnifying glass icon. Below it, the title 'Wi-Fi / List of WiFi clients' is displayed. A table lists the connected clients with the following columns: a checkbox, MAC, Band, Online, Tx (bytes), Rx (bytes), and RSSI. One client is listed with MAC address 00:22:B0:0B:DF:BA, Band 2.4 GHz, Online status 729, Tx (bytes) 2480629, Rx (bytes) 735253, and RSSI 76. At the bottom right of the table area, there are two buttons: 'Disconnect' and 'Refresh'.

<input type="checkbox"/>	MAC	Band	Online	Tx (bytes)	Rx (bytes)	RSSI
<input type="checkbox"/>	00:22:B0:0B:DF:BA	2.4 GHz	729	2480629	735253	76

Figure 71. The list of the wireless clients.

If you want to disconnect a wireless device from your WLAN, select the checkbox in the line containing the relevant MAC address, and click the **Disconnect** button.

To view the latest data on the devices connected to the WLAN, click the **Refresh** button.

WPS

On the **Wi-Fi / WPS** page, you can enable the function for secure configuration of the WLAN and select a method used to easily add wireless devices to the WLAN.

The WPS function helps to configure the protected wireless network automatically. Devices connecting to the wireless network via the WPS function must support the WPS function.

! Before using the function you need to configure one of the following authentication types: **Open** with no encryption, **WPA2-PSK** or **WPA-PSK/WPA2-PSK mixed** with the **AES** encryption method (on the **Wi-Fi / Security settings** page). When other security settings are specified, controls of the **Wi-Fi / WPS** page are not available.

Search

Wi-Fi / WPS

Enable/Disable WPS

WPS Enable:

Apply

Information

Default PIN code:	12345670
WPS Status:	Configured
SSID:	DSL-2640U
Network Authentication:	WPA2-PSK
Encryption:	AES
Encryption key:	12345670

Refresh Reset to unconfigured

Connection

WPS Method: PBC

Connect

Figure 72. The page for configuring the WPS function.

To activate the WPS function, select the **WPS Enable** checkbox and click the **Apply** button. When the checkbox is selected, the **Information** and **Connection** sections are available on the page.

Parameter	Description
Default PIN code	The PIN code of the router. This parameter is used when connecting the router to a registrar to set the parameters of the WPS function.
WPS Status	The state of the WPS function: <ul style="list-style-type: none"> • Configured (all needed settings are specified; these settings will be used upon establishing the wireless connection) • Unconfigured (after activating the WPS function, the SSID and the encryption key will be configured automatically, the network authentication type will be changed to WPA2-PSK).
SSID	The name of the router's WLAN.
Network Authentication	The network authentication type specified for the WLAN.
Encryption	The encryption type specified for the WLAN.
Encryption key	The encryption key specified for the WLAN.
Refresh	Click the button to refresh the data on the page.
Reset to unconfigured	Click the button to reset the parameters of the WPS function.
WPS Method	A method of the WPS function. Select a value from the drop-down list. PIN : Connecting the device via the PIN code. PBC : Connecting the device via the push button (actual or virtual).
PIN Code	The PIN code of the WPS-enabled device that needs to be connected to the wireless network of the router. The field is displayed only when the PIN value is selected from the WPS Method drop-down list.
Connect	Click the button to connect the wireless device to the router's WLAN via the WPS function.

Using WPS Function via Web-based Interface

To add a wireless device via the PIN method of the WPS function, follow the next steps:

1. Select the **WPS Enable** checkbox.
2. Click the **Apply** button.
3. Select the **PIN** value from the **WPS Method** drop-down list.
4. Select the PIN method in the software of the wireless device that you want to connect to the router's WLAN.
5. Click the relevant button in the software of the wireless device that you want to connect to the WLAN.
6. Right after that, enter the PIN code specified on the cover of the wireless device or in its software in the **PIN Code** field.
7. Click the **Connect** button in the web-based interface of the router.


To add a wireless device via the PBC method of the WPS function, follow the next steps:


1. Select the **WPS Enable** checkbox.
2. Click the **Apply** button.
3. Select the **PBC** value from the **WPS Method** drop-down list.
4. Select the PBC method in the software of the wireless device that you want to connect to the router's WLAN.
5. Click the relevant button in the software or press the WPS button on the cover of the wireless device that you want to connect to the WLAN.
6. Click the **Connect** button in the web-based interface of the router.

Using WPS Function without Web-based Interface

You can add a wireless device to the router's WLAN without accessing the web-based interface of the router. To do this, you need to configure the following router's settings:

1. Specify corresponding security settings for the wireless network of the router.
2. Select the **WPS Enable** checkbox.
3. Click the **Apply** button.

4. Save the settings and close the web-based interface (click the icon  (**Save**) in the menu displayed when the mouse pointer is over the **System** caption in the top left part of

the page, then click the icon  (**Logout**)).

Later you will be able to add wireless devices to the WLAN by pressing the **WPS/WLAN** button of the router.

1. Select the PBC method in the software of the wireless device that you want to connect to the router's WLAN.
2. Click the relevant button in the software or press the WPS button on the cover of the wireless device that you want to connect to the WLAN.
3. Press the **WPS/WLAN** button of the router and release. The **WPS** LED will start blinking.

Additional Settings

On the **Wi-Fi / Additional settings** page, you can define additional parameters for the WLAN of the router.

! Changing parameters presented on this page may negatively affect your WLAN!

Figure 73. Additional settings of the WLAN.

The following fields are available on the page:

Parameter	Description
Station Keep Alive	The time interval (in seconds) between keep alive checks of wireless devices from your WLAN. When the value 0 is specified, the checking is disabled.
Beacon Period	The time interval (in milliseconds) between packets sent to synchronize the wireless network.
RTS Threshold	The minimum size (in bites) of a packet for which an RTS frame is transmitted.
Frag Threshold	The maximum size (in bites) of a non-fragmented packet. Larger packets are fragmented (divided).
DTIM Period	The time period (in seconds) between sending a DTIM (a message notifying on broadcast or multicast transmission) and data transmission.

Parameter	Description
TX Power	The transmit power (in percentage terms) of the router.
Bandwidth	The channel bandwidth for 802.11n devices. 20MHz: 802.11n devices operate at 20MHz channels. 40MHz: 802.11n devices operate at 40MHz channels. 20/40MHz -: 802.11n devices operate at 20MHz and 40MHz channels (the channel is combined with the previous adjacent channel). 20/40MHz +: 802.11n devices operate at 20MHz and 40MHz channels (the channel is combined with the next adjacent channel).
Short GI	Guard interval (in nanoseconds). This parameter defines the interval between symbols transmitted when the router is communicating to wireless devices. Enable: the router uses the 400 ns short guard interval. For the wireless network operating modes which support 802.11n standard only (see the value of the Wireless mode drop-down list on the Wi-Fi / Basic settings page). Disable: the router uses the 800 ns standard guard interval.

When you have configured the parameters, click the **Apply** button.

Advanced

In this menu you can configure advanced settings of the router:

- enable the UPnP IGD protocol
- define interface groups
- allow the router to connect to a private Ethernet line
- configure a DDNS service
- define static routes
- edit the ADSL connection parameters
- create rules for remote access to the web-based interface
- allow the router to use IGMP, SIP, RTSP, and enable the PPPoE pass through, PPTP pass through, and L2TP pass through functions
- configure TR-069 client.

UPnP IGD

On the **Advanced / UPnP IGD** page, you can enable the UPnP IGD protocol. The router uses the UPnP IGD protocol for automatic configuration of its parameters for network applications requiring an incoming connection to the router.



Figure 74. The **Advanced / UPnP IGD** page.

If you want to manually specify all parameters needed for network applications, deselect the **Enabled** checkbox and click the **Apply** button.

If you want to enable the UPnP IGD protocol in the router, select the **Enabled** checkbox and click the **Apply** button.

When the protocol is enabled, the router's parameters configured automatically are displayed on the page:

Parameter	Description
Protocol	A protocol for network packet transmission.
IP	The IP address of a client from the local area network.
Private port	A port of a client's IP address to which traffic is directed from a public port of the router.
Public port	A public port of the router from which traffic is directed to a client's IP address.
Comments	Information transmitted by a client's network application.

Interface Grouping

On the **Advanced / Interface grouping** page, you can assign WAN connections to the router's ports (create groups of interfaces), which allows distinguishing different types of traffic. This function is mostly used in Triple-play networks.

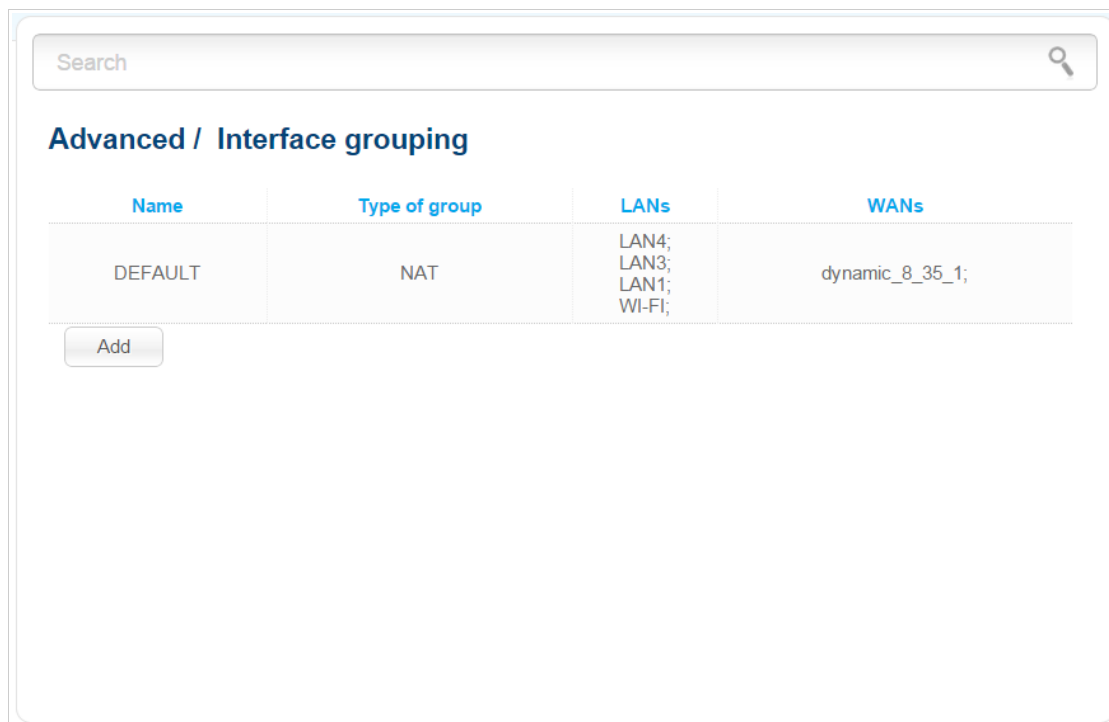


Figure 75. The **Advanced / Interface grouping** page.

To create a new rule for interface grouping (a group of ports), click the **Add** button.

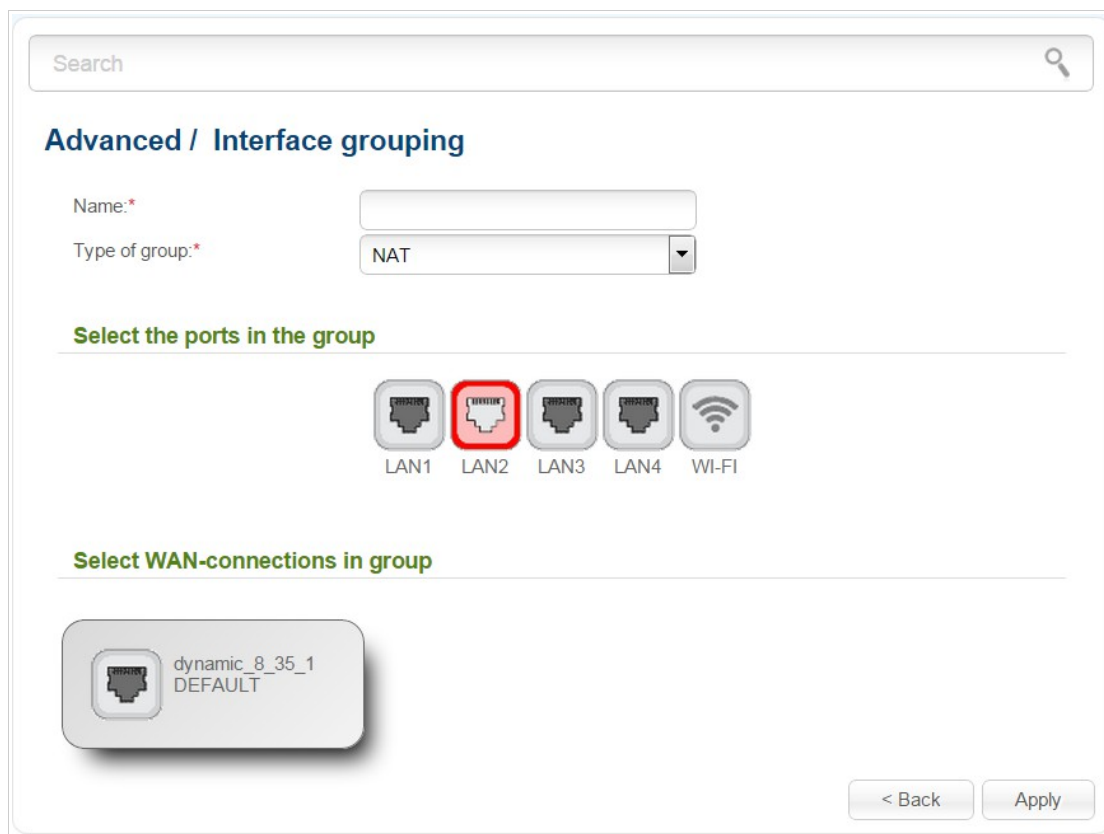


Figure 76. The page for adding a new group of ports.

You can specify the following parameters:

Parameter	Description
Name	A name for the group for easier identification. You can specify any name.
Type of group	<p>The type of the group.</p> <p>NAT. The group of this type is an external connection with address translation. It is mostly used to connect to the Internet. You can assign any WAN connection except for the Bridge WAN connection to the group of this type.</p> <p>Transparent bridge. The group of this type is a transparent connection between an internal port and an external connection. It is mostly used to connect IPTV set-top boxes. You can assign only the Bridge WAN connection to the group of this type.</p> <p>Local. The group of this type is a channel used to connect local clients to the router. It is mostly used to connect different types of clients, which require separate connection settings. You cannot assign WAN connections to the group of this type.</p>

Parameter	Description
Ports	<p>In this section the LAN ports and the WLAN interface of the router are displayed. Elements which cannot be added to the group are highlighted in red.</p> <p>To add an element to the group, click the icon corresponding to this element. Elements added to the group are highlighted in green.</p> <p>To remove an element from the group, click the icon corresponding to this element.</p>
WAN connections	<p>In this section WAN connections of the router are displayed. Connections which cannot be added to the group are highlighted in red.</p> <p>To add a connection to the group, click the icon corresponding to this connection. The connection added to the group is highlighted in green.</p> <p>To remove a connection from the group, click the icon corresponding to this connection.</p>

Click the **Apply** button.

To edit or remove an existing group, select the relevant group on the **Advanced / Interface grouping** page. On the page displayed, change the parameters and click the **Apply** button, or click the **Delete** button. When you delete a group, interfaces assigned to it are reassigned to the **DEFAULT** group.

EtherWAN

On the **Advanced / EtherWAN** page, you can configure the router to connect to a private Ethernet line.

! The Ethernet WAN function allows using any Ethernet port of the router to access the Internet via Ethernet technology. When the function is enabled, the router is still able to access the Internet via ADSL technology.

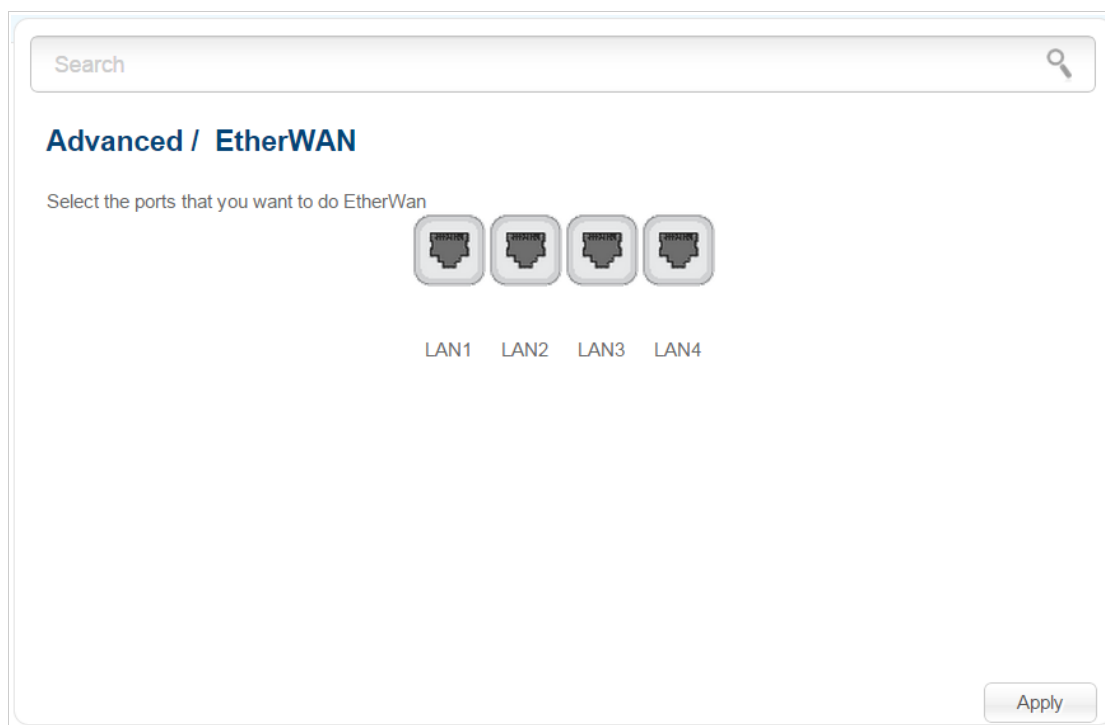


Figure 77. The **Advanced / EtherWAN** page.

To use one of the router's LAN port as the WAN port, click the icon corresponding to this port and click the **Apply** button. Port configured as the WAN port is highlighted in green.

If in the future you need to disconnect the LAN port from the private Ethernet line, click the icon highlighted in green and click the **Apply** button.

DDNS

On the **Advanced / DDNS page**, you can define parameters of the DDNS service, which allows associating a domain name with dynamic IP addresses.

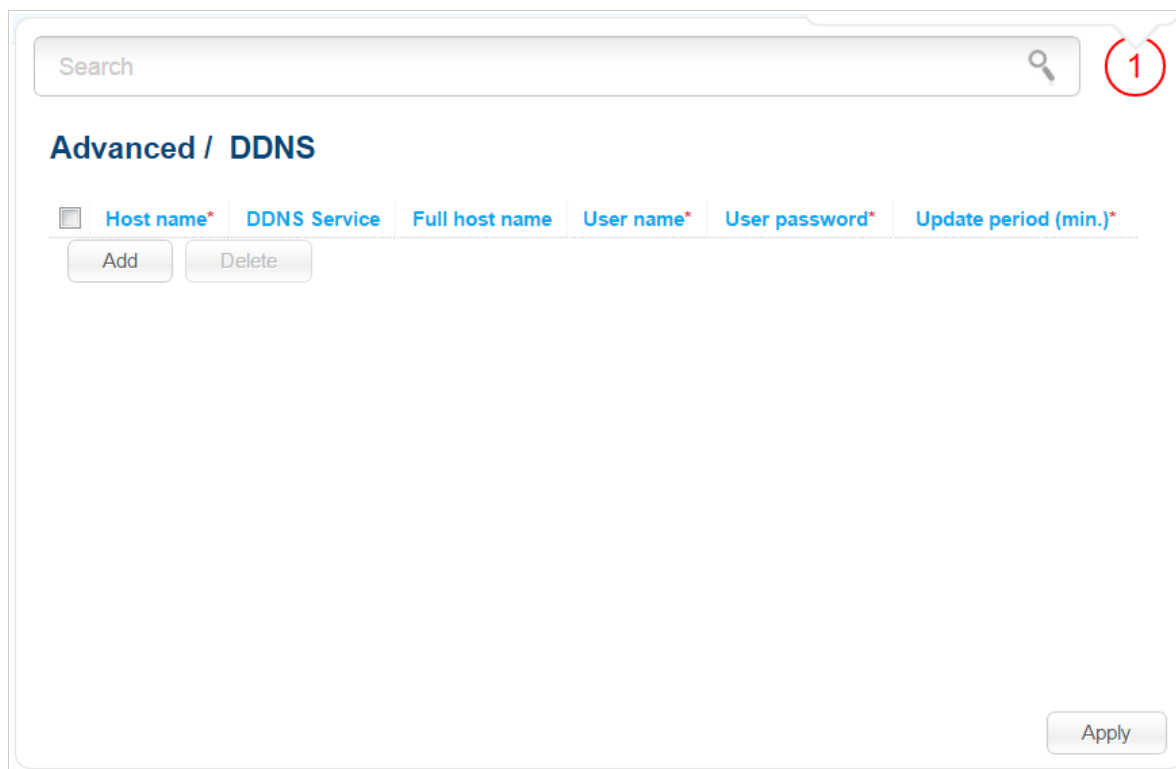


Figure 78. The **Advanced / DDNS** page.

To add a new DDNS service, click the **Add** button. In the line displayed, you can specify the following parameters:

Parameter	Description
Host name	The part of the domain name specified by a user while registering at a DDNS provider.
DDNS Service	Select a DDNS provider from the drop-down list.
Full host name	The domain name registered at your DDNS provider. The field will be filled in automatically.
User name	The username to authorize for your DDNS provider.
User password	The password to authorize for your DDNS provider.
Update period	An interval (in minutes) between sending data on the router's external IP address to the relevant DDNS service.

After specifying the needed parameters, click the **Apply** button.

To edit parameters of the existing DDNS service, select a needed field in the relevant line of the table, change its value, and click the **Apply** button.

To remove an existing DDNS service, select the checkbox located to the left of the relevant line in the table and click the **Delete** button. Then click the **Apply** button.

Routing

On the **Advanced / Routing** page, you can add static routes (routes for networks that are not connected directly to the device but are available through the interfaces of the device) into the system.

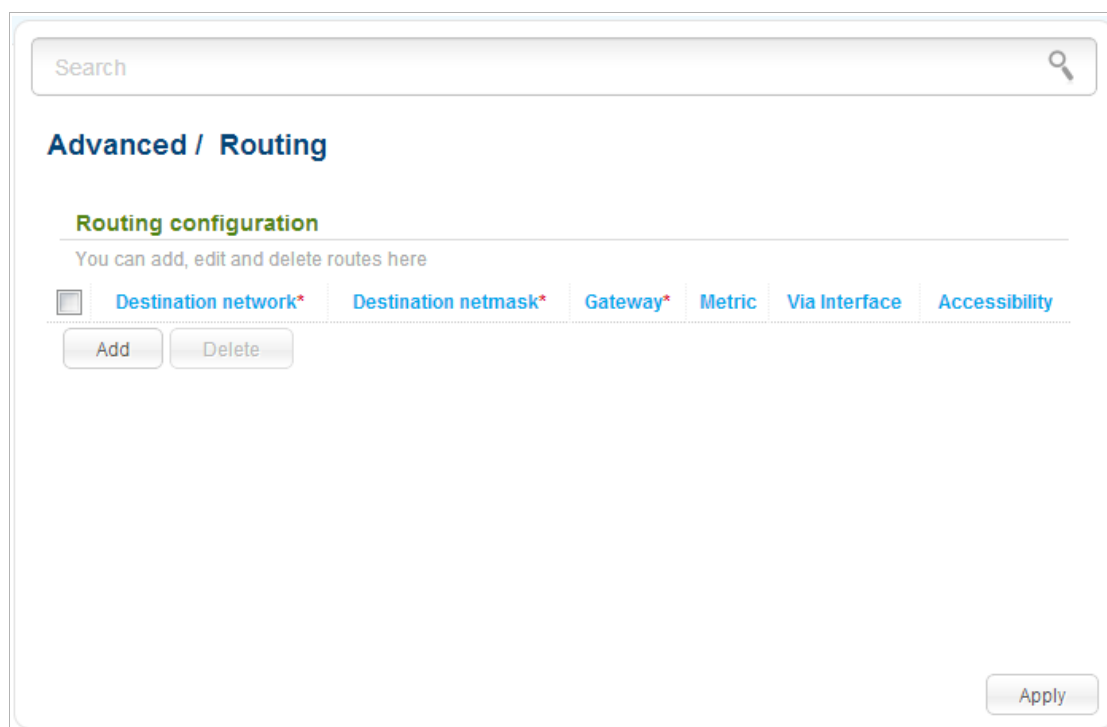


Figure 79. The **Advanced / Routing** page.

To create a new route, click the **Add** button. In the line displayed, you can specify the following parameters:

Parameter	Description
Destination network	A destination network to which this route is assigned.
Destination netmask	The destination network mask.
Gateway	An IP address through which the destination network can be accessed. The field is available when the <Auto> value is selected from the Via Interface drop-down list of this line.
Metric	A metric for the route. The lower the value, the higher is the route priority. <i>Optional.</i>
Via Interface	Select an interface through which the destination network can be accessed from the drop-down list. If you have selected the <Auto> value of this drop-down list, the router itself sets the interface on the basis of data on connected networks.

After specifying the needed parameters, click the **Apply** button.

To edit an existing route, select a needed field in the relevant line of the table, change its value, and click the **Apply** button.

To remove an existing route, select the checkbox located to the left of the relevant line in the table and click the **Delete** button. Then click the **Apply** button.

If you need to specify a host from the LAN as the default route, select the **<Auto>** value from the **Via Interface** drop-down list, enter **0.0.0.0** in the **Destination network** and **Destination netmask** fields, enter the IP address of the host from the LAN in the **Gateway** field, and then click the **Apply** button.

IPv6 Routing

On the **Advanced / IPv6 routing** page, you can add static routes (routes for networks that are not connected directly to the device but are available through the interfaces of the device) into the system.



Figure 80. The **Advanced / IPv6 routing** page.

To create a new route, click the **Add** button. In the line displayed, you can specify the following parameters:

Parameter	Description
Destination network	A destination network to which this route is assigned. You can specify an IPv6 address (2001:db8:1234::1) or an IPv6 address with a prefix (2001:db8:1234::/64).
Gateway	An IPv6 address through which the destination network can be accessed. The field is available when the <Auto> value is selected from the Via Interface drop-down list of this line.

Parameter	Description
Metric	A metric for the route. The lower the value, the higher is the route priority. <i>Optional.</i>
Via Interface	Select an interface through which the destination network can be accessed from the drop-down list. If you have selected the <Auto> value of this drop-down list, the router itself sets the interface on the basis of data on connected networks.

After specifying the needed parameters, click the **Apply** button.

To edit an existing route, select a needed field in the relevant line of the table, change its value, and click the **Apply** button.

To remove an existing route, select the checkbox located to the left of the relevant line in the table and click the **Apply** button.

ADSL

The **Advanced / ADSL** page includes the set of ADSL standards that should be defined by an ISP. Contact your ISP to set proper parameters. Select the relevant options and click the **Apply** button.

Search

Advanced / ADSL

Select the modulation below

G.Dmt Enabled:

G.lite Enabled:

T1.413 Enabled:

ADSL2 Enabled:

AnnexL Enabled:

ADSL2+ Enabled:

AnnexM Enabled:

Capability

Bitswap Enable:

SRA Enable:

Apply

Figure 81. The **Advanced / ADSL** page.

Remote Access to Device

On the **Advanced / Remote access to device** page, you can configure access to the web-based interface of the router. By default, the access from external networks to the router is closed. If you need to allow access to the router from the external network, create relevant rules.

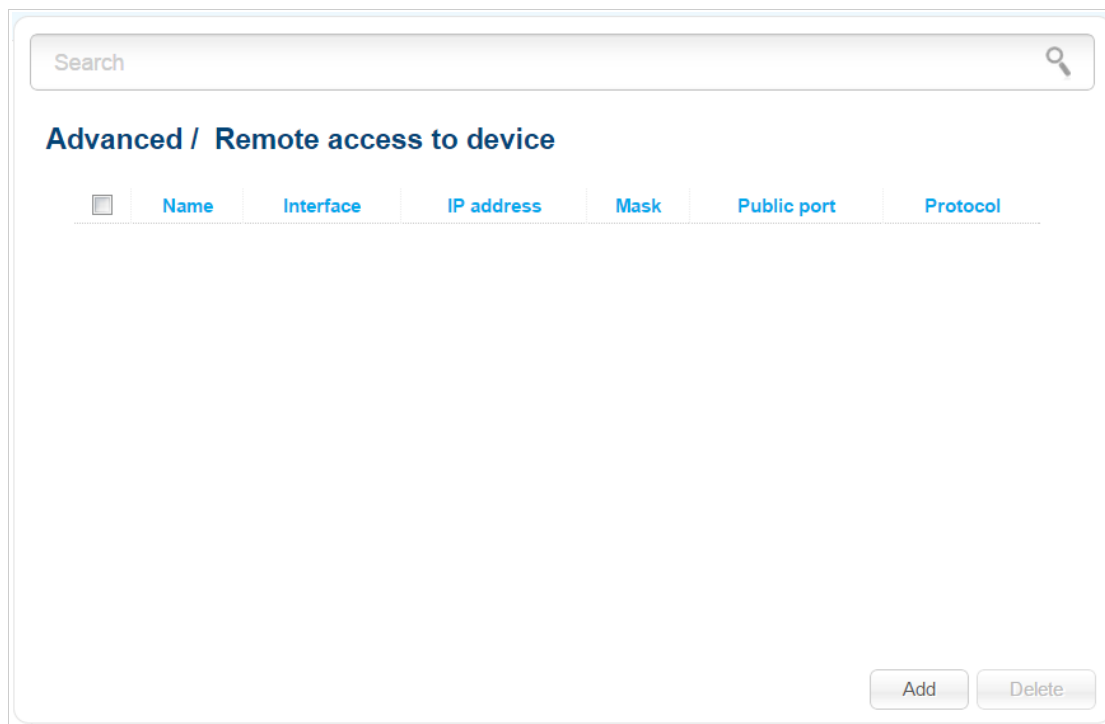


Figure 82. The **Advanced / Remote access to device** page.

To create a new rule, click the **Add** button.

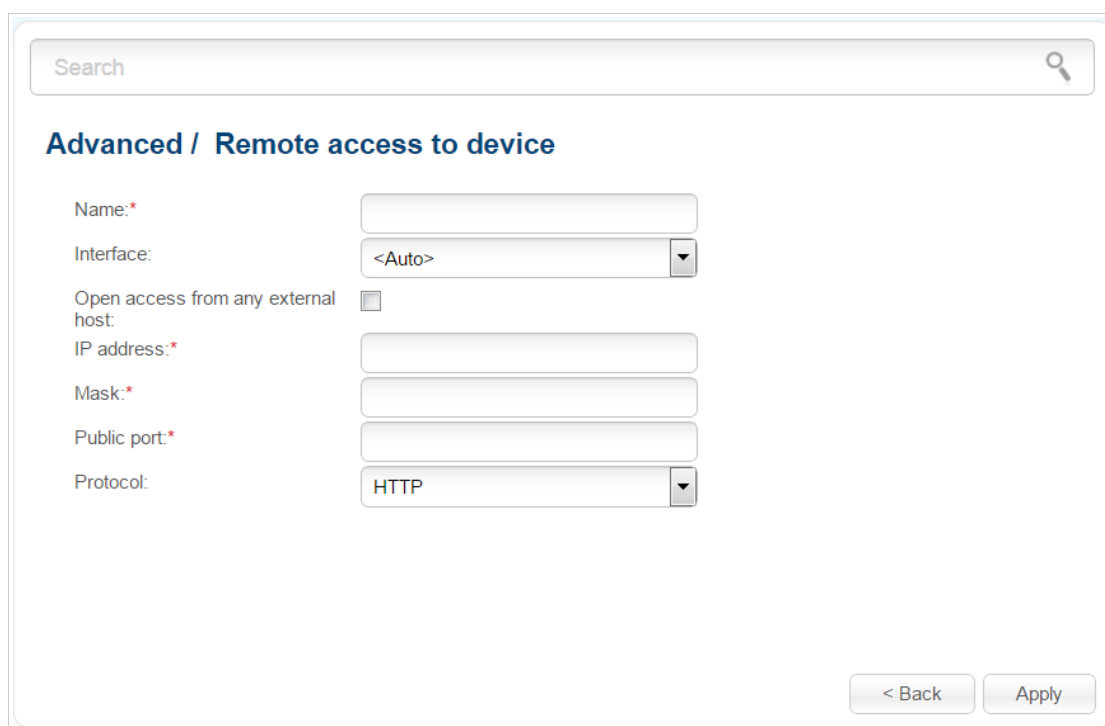


Figure 83. The page for adding a rule for remote management.

You can specify the following parameters:

Parameter	Description
Name	A name for the rule for easier identification. You can specify any name.
Interface	Select a WAN connection to which this rule will be assigned. When the <Auto> value is selected, the router uses the connection set as the default gateway.
Open access from any external host	Select the checkbox to allow access to the router for any host. When the checkbox is selected, the IP version drop-down list is displayed on the page, and the IP address and Mask fields are not available for editing.
IP version	An IP version to which the rule will be applied. Select the relevant value from the drop-down list.
IP address	A host or a subnet to which the rule is applied. You can specify an IPv4 or IPv6 address.
Mask	<i>For the IPv4-based network only.</i> The mask of the subnet.
Public port	<i>For the IPv4-based network only.</i> An external port of the router. You can specify only one port.
Protocol	The protocol available for remote management of the router.

After specifying the needed parameters, click the **Apply** button.

To edit a rule for remote access, click the link to the relevant rule. On the opened page, change the needed parameters and click the **Apply** button.

To remove a rule for remote access, select the checkbox located to the left of the relevant line in the table and click the **Delete** button. Also you can remove a rule on the editing page.

Miscellaneous

On the **Advanced / Miscellaneous** page, you can enable IGMP, SIP, RTSP, the PPPoE pass through, PPTP pass through, and L2TP pass through functions for the router.

IGMP is used for managing multicast traffic (transferring data to a group of destinations). This protocol allows using network resources for some applications, e.g., for streaming video, more efficiently.

SIP is used for creating, modifying, and terminating communication sessions. This protocol allows telephone calls via the Internet.

RTSP is used for real-time streaming multimedia data delivery. This protocol allows some applications to receive streaming audio/video from the Internet.

The PPPoE pass through function allows PPPoE clients of computers from your LAN to connect to the Internet through PPPoE connections of the router.

The PPTP pass through and L2TP pass through functions allow VPN PPTP and L2TP traffic to pass through the router so that clients from your LAN can establish relevant connections with remote networks.

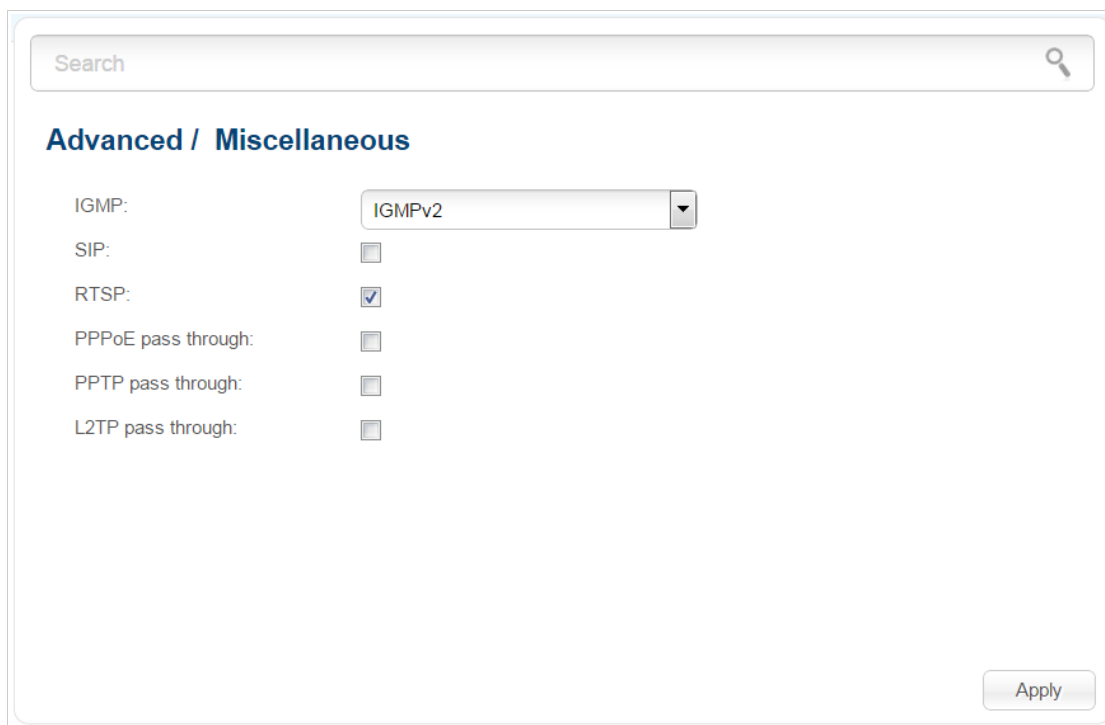


Figure 84. The **Advanced / Miscellaneous** page.

The following elements are available on the page:

Parameter	Description
IGMP	Select a version of IGMP from the drop-down list to enable IGMP. Such a setting allows using the IGMP Proxy function for all WAN connections for which the Enable IGMP Multicast checkbox is selected. To disable IGMP, select the Off value from the drop-down list.
SIP	Select the checkbox to enable SIP. Such a setting allows using the SIP ALG function. This function allows VoIP traffic to pass through the NAT-enabled router. ¹
RTSP	Select the checkbox to enable RTSP. Such a setting allows managing media stream: fast forward streaming audio/video, pause and start it.
PPPoE pass through	Select the checkbox to enable the PPPoE pass through function.
PPTP pass through	Select the checkbox to enable the PPTP pass through function.
L2TP pass through	Select the checkbox to enable the L2TP pass through function.

After specifying the needed parameters, click the **Apply** button.

¹ On the **Net / WAN** page, create a WAN connection, on the **Advanced / Miscellaneous** page, select the **SIP** checkbox, connect the phone cable between a LAN port of the router and the IP phone. Specify SIP parameters on the IP phone and configure it to obtain an IP address automatically (as DHCP client).

TR-069 Client

On the **Advanced / TR-069 Client** page, you can configure the router for communication with a remote Auto Configuration Server (ACS).

The TR-069 client is used for remote monitoring and management of the device.

Search

Advanced / TR-069 Client

TR-069 Client

On the **TR-069 Client** page, you can configure the router for communication with a remote Auto Configuration Server (ACS).

Interface:

Enable TR-069 Client:

Inform settings

Enable:

Interval:

Auto Configuration Server settings

URL address:

User name:

Password:

ConnectionRequest Settings

User name:

Password:

Request port:

Request path:

Apply

Figure 85. The page for configuring the TR-069 client.

You can specify the following parameters:

Parameter	Description
Interface	The interface which the router uses for communication with the ACS. Leave the automatic value to let the device select the interface basing on the routing table or select another value if required by your ISP.

Parameter	Description
Enable TR-069 Client	Select the checkbox to enable the TR-069 client.
Inform settings	
Enable	Select the checkbox so the router may send reports (data on the device and network statistics) to the ACS.
Interval	Specify the time period (in seconds) between sending reports.
Auto Configuration Server settings	
URL address	The URL address of the ACS provided by the ISP.
User name	The username to connect to the ACS. The username can contain digits, Latin letters (uppercase and/or lowercase), and characters available on the keyboard.
Password	The password to connect to the ACS. The password can contain digits, Latin letters (uppercase and/or lowercase), and characters available on the keyboard.
ConnectionRequest Settings	
User name	The username used by the ACS to transfer a connection request to the router. The username can contain digits, Latin letters (uppercase and/or lowercase), and characters available on the keyboard.
Password	The password used by the ACS. The password can contain digits, Latin letters (uppercase and/or lowercase), and characters available on the keyboard.
Request port	The port used by the ACS. By default, the port 8999 is specified.
Request path	The path used by the ACS.

When you have configured the parameters, click the **Apply** button.

Firewall

In this menu you can configure the firewall of the router:

- add rules for IP filtering
- create virtual servers
- define a DMZ
- configure the MAC filter.

IP Filters

On the **Firewall / IP filters** page, you can create new rules for filtering IP packets and edit or remove existing rules.

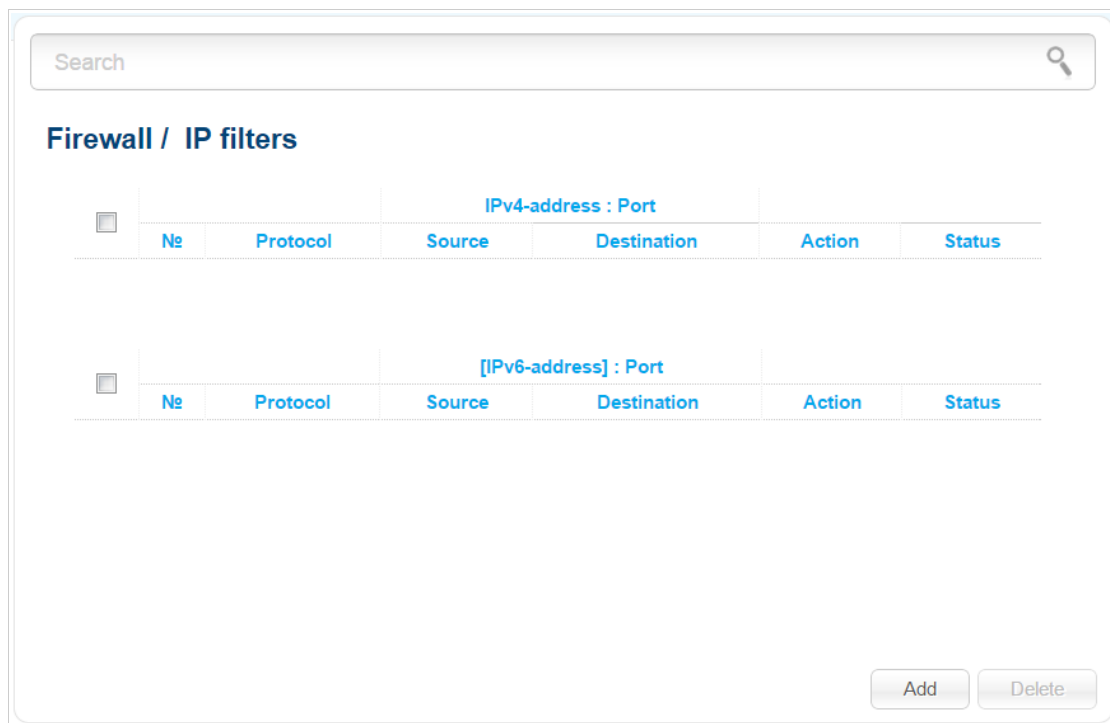


Figure 86. The **Firewall / IP filters** page.

To create a new rule, click the **Add** button.

🔍

Firewall / IP filters

General

Protocol: ▼

Action: ▼

Activate:

IP version: ▼

IP Addresses

You can specify a **range of IP addresses**, a **single IP address**, or a **subnet IP address** (for example, 10.10.10.10/24).

Source IP address:

Destination IP address:

Ports

You can specify **one port**, **several ports separated by a comma** (for example, 80,90), or a **range of ports separated by a colon** (for example, 80:90).



Source port:

Destination port:

Figure 87. The page for adding a rule for IP filtering.

You can specify the following parameters:

Parameter	Description
General	
Protocol	A protocol for network packet transmission. Select a value from the drop-down list.
Action	Select an action for the rule. Allow: Allows packet transmission in accordance with the criteria specified by the rule. Deny: Denies packet transmission in accordance with the criteria specified by the rule.
Activate	If the checkbox is selected, the rule is enabled. Deselect the checkbox to disable the rule.
IP version	An IP version to which the rule will be applied. Select the relevant value from the drop-down list.

Parameter	Description
IP Addresses	
Source IP address	<p>The source host/subnet IP address.</p> <p>To choose a device connected to the router's LAN at the moment, select the relevant IP address from the drop-down list (the field will be filled in automatically).</p> <p>If you want to specify a range of IP addresses, click the icon  (Range) and enter the starting and ending addresses in the left and right fields correspondingly.</p>
Destination IP address	<p>The destination host/subnet IP address.</p> <p>To choose a device connected to the router's LAN at the moment, select the relevant IP address from the drop-down list (the field will be filled in automatically).</p> <p>If you want to specify a range of IP addresses, click the icon  (Range) and enter the starting and ending addresses in the left and right fields correspondingly.</p>
Ports	
Source port	A port of the source IP address. You can specify one port, several ports separated by a comma, or a range of ports separated by a colon.
Destination port	A port of the destination IP address. You can specify one port, several ports separated by a comma, or a range of ports separated by a colon.

Click the **Apply** button.

To edit a rule for IP filtering, click the link to the relevant rule. On the opened page, change the needed parameters and click the **Apply** button.

To remove a rule, select the checkbox located to the left of the relevant line in the table and click the **Delete** button. Also you can remove a rule on the editing page.

Virtual Servers

On the **Firewall / Virtual servers** page, you can create virtual servers for redirecting incoming Internet traffic to a specified IP address in the local area network.

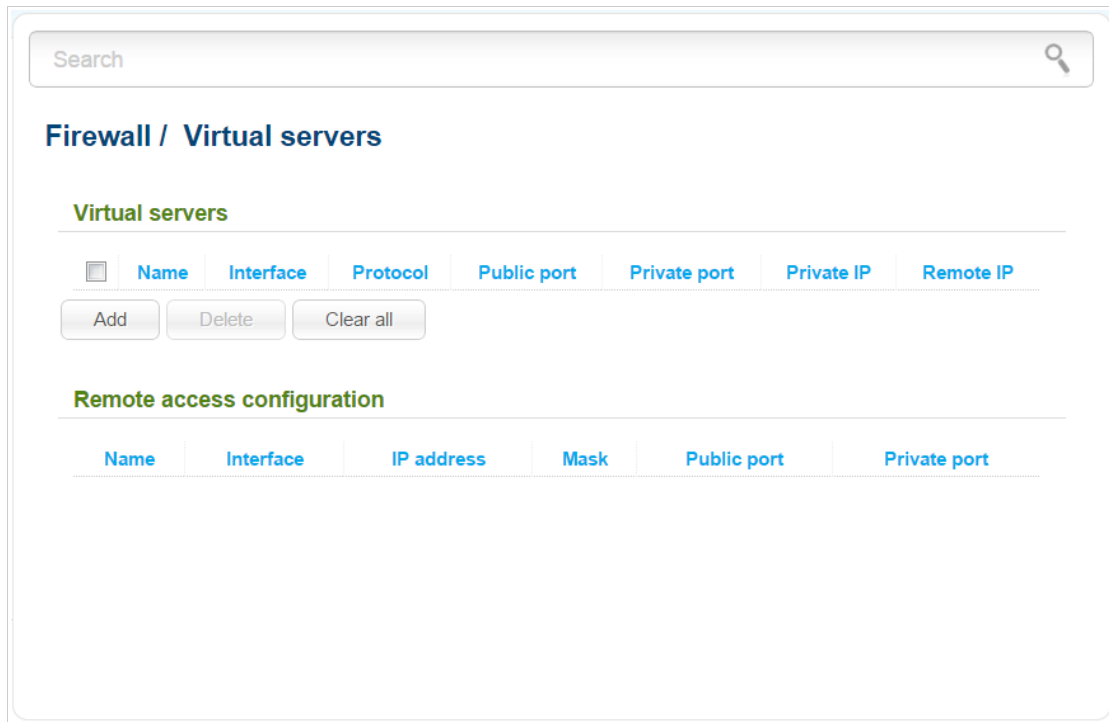


Figure 88. The **Firewall / Virtual servers** page.

To create a new virtual server, click the **Add** button.



Figure 89. The page for adding a virtual server.

You can specify the following parameters:

Parameter	Description
Template	Select a virtual server template from the drop-down list, or select Custom to specify all parameters of the new virtual server manually.
Name	A name for the virtual server for easier identification. You can specify any name.
Interface	A WAN connection to which this virtual server will be assigned.
Protocol	A protocol that will be used by the new virtual server. Select a value from the drop-down list.
Public port (begin)/ Public port (end)	A port of the router from which traffic is directed to the IP address specified in the Private IP field. Specify the start and the end value for the port range. If you need to specify one port, enter the needed value in the Public port (begin) field and leave the Public port (end) field blank.
Private port (begin)/ Private port (end)	A port of the IP address specified in the Private IP field to which traffic is directed from the Public port . Specify the start and the end value for the port range. If you need to specify one port, enter the needed value in the Private port (begin) field and leave the Private port (end) field blank.
Private IP	The IP address of the server from the local area network. To choose a device connected to the router's LAN at the moment, select the relevant value from the drop-down list (the field will be filled in automatically).
Remote IP	The IP address of the server from the external network.

Click the **Apply** button.

To edit the parameters of an existing server, select the relevant server in the table. On the opened page, change the needed parameters and click the **Apply** button.

To remove a server, select the checkbox located to the left of the relevant line in the table and click the **Delete** button. Also you can remove a server on the editing page.

To remove all servers from this page, click the **Clear all** button.

In the **Remote access configuration** section, rules created on the **Advanced / Remote access to device** page are displayed. If after creating virtual servers you need to edit rules for remote access, you can quickly get to the **Advanced / Remote access to device** page by clicking the link to the relevant rule.

DMZ

A DMZ is a host or network segment located “between” internal (local) and external (global) networks. In the router, the DMZ implements the capability to transfer a request coming to a port of the DSL router from the external network to a specified host of the internal network.

On the **Firewall / DMZ** page you can specify the IP address of the DMZ host.

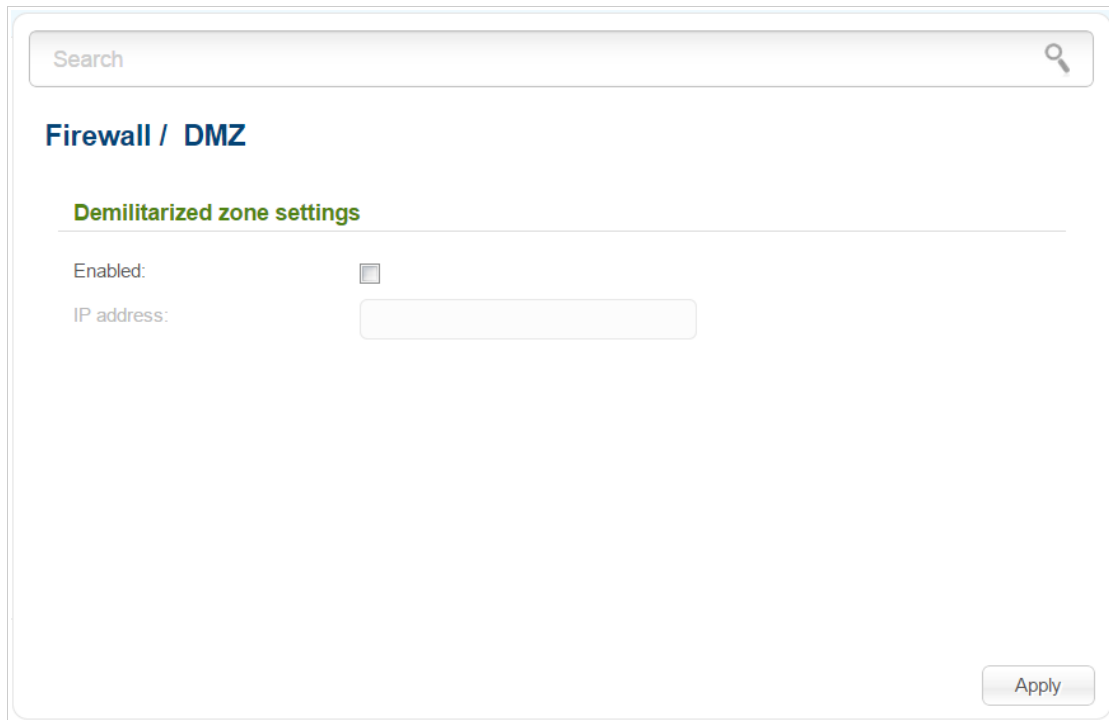


Figure 90. The **Firewall / DMZ** page.

To enable the DMZ, select the **Enabled** checkbox, enter the IP address of a host from your network in the **IP address** field, and click the **Apply** button. To choose a device connected to the router's LAN at the moment, select the relevant value from the drop-down list (the field will be filled in automatically).

Note that when the DMZ is enabled, all traffic coming to a port of the WAN interface of the router is directed to the same port of the specified IP address. Also note that virtual servers have higher priority than the DMZ host. In other words, if there has been created a virtual server that directs traffic from external port 80 to a port of the device from the router's local network, then entering **http://router_WAN_IP** in the address bar, users of the external network are directed to the specified port and IP address configured for the virtual server, but not to port 80 of the device with the IP address specified on the **Firewall / DMZ** page.

To disable the DMZ, deselect the **Enabled** checkbox and click the **Apply** button.

MAC Filter

On the **Firewall / MAC filter** page, you can configure MAC-address-based filtering for computers of the router's LAN.

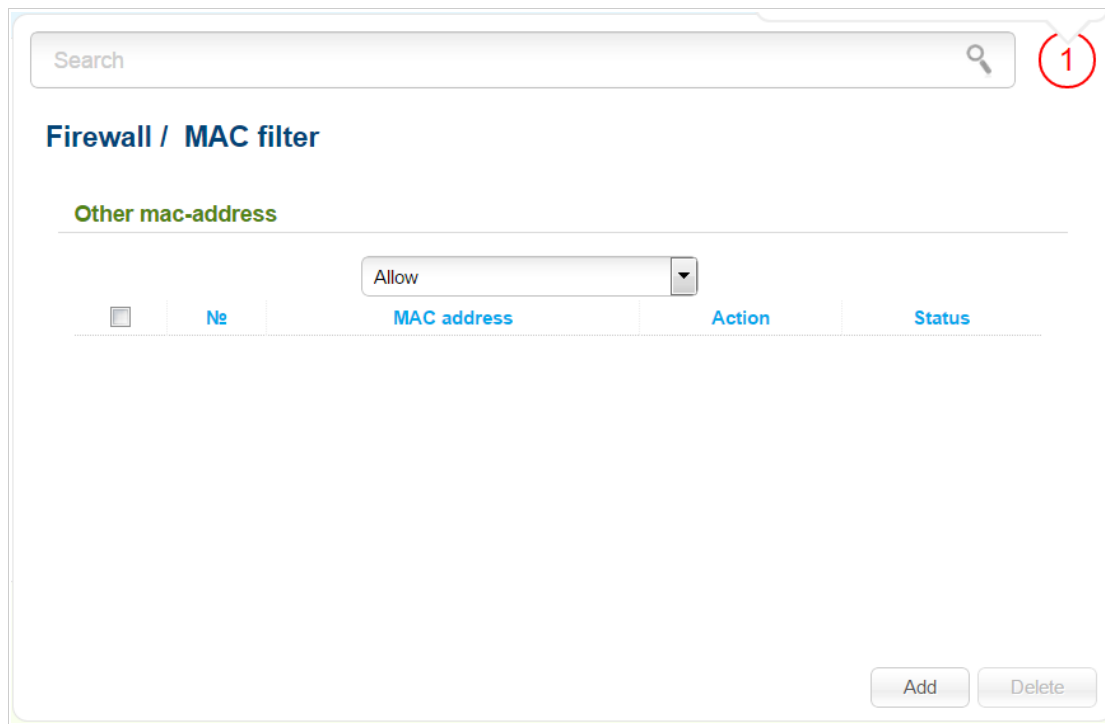


Figure 91. The **Firewall / MAC filter** page.

Select the needed action from the drop-down list to configure filtering for all devices of the router's network:

- **Allow**: Allows access to the router's network and to the Internet for devices (the value is specified by default);
- **Deny**: Blocks access to the router's network for devices.

If you need to specify a filtering mode for each device separately, create relevant rules. To do this, click the **Add** button.

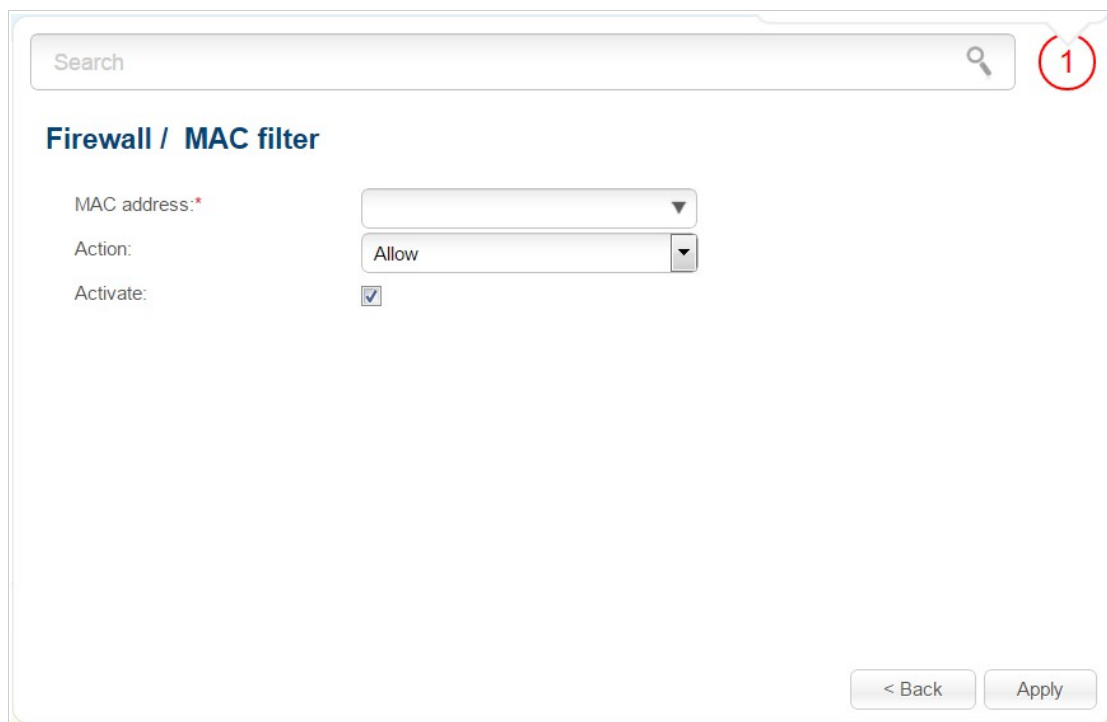


Figure 92. The page for adding a rule for the MAC filter.

You can specify the following parameters:

Parameter	Description
MAC address	The MAC address of a device from the router's LAN. You can enter the MAC address of a device connected to the router's LAN at the moment. To do this, select the relevant device from the drop-down list (the field will be filled in automatically).
Action	Select an action for the rule. Deny: Blocks access to the router's network for the device with the specified MAC address. Allow: Allows access to the router's network and to the Internet for the device with the specified MAC address when the rules on the Firewall / IP filters page block access for this device.
Activate	If the checkbox is selected, the rule is enabled. Deselect the checkbox to disable the rule.

After specifying the needed parameters, click the **Apply** button.

To edit a rule for filtering, click the link to the relevant rule. On the opened page, change the needed parameters and click the **Apply** button.

To remove a rule, select the checkbox located to the left of the relevant line in the table and click the **Delete** button. Also you can remove a rule on the editing page.

Control

This menu is designed to create restrictions on access to certain web sites.

URL Filter

On the pages of the **Control / URL filter** section, you can specify restrictions on access to certain web sites.

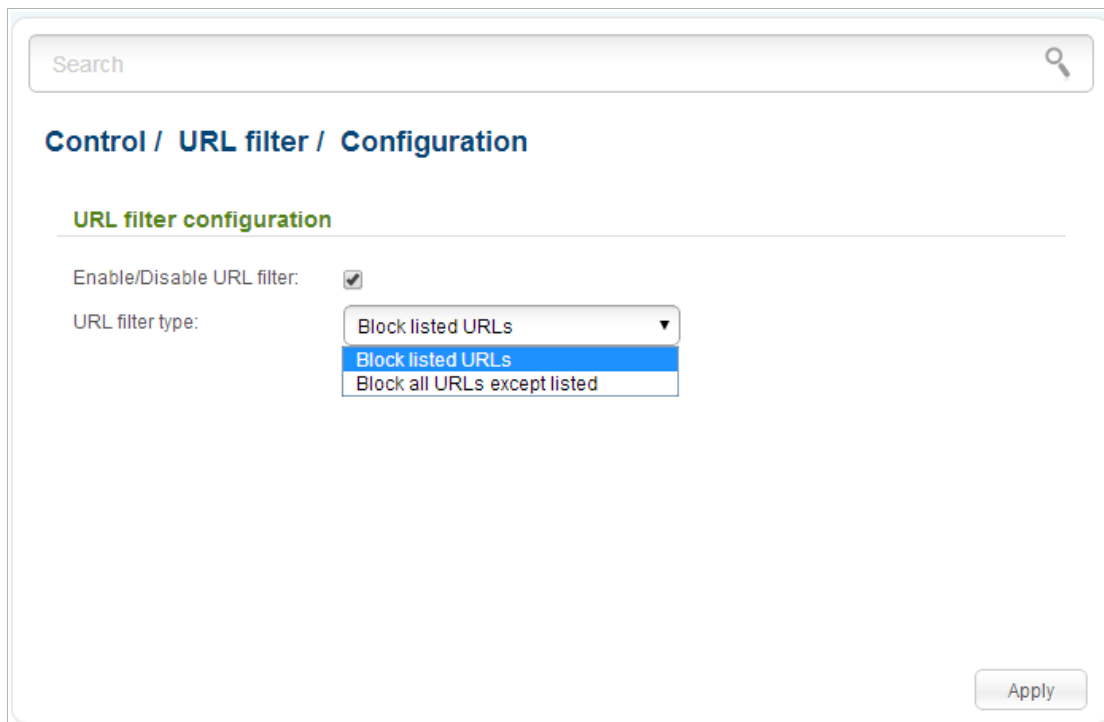


Figure 93. The **Control / URL filter / Configuration** page.

To enable the URL filter, select the **Enable/Disable URL filter** checkbox on the **Control / URL filter / Configuration** page, then select a needed mode from the **URL filter type** drop-down list:

- **Block listed URLs:** when this value is selected, the router blocks access to all addresses specified on the **Control / URL filter / Configuration** page;
- **Block all URLs except listed:** when this value is selected, the router allows access to addresses specified on the **Control / URL filter / Configuration** page and blocks access to all other web sites.

Click the **Apply** button.

To specify URL addresses to which the selected filtering will be applied, go to the **Control / URL filter / URL addresses** page.

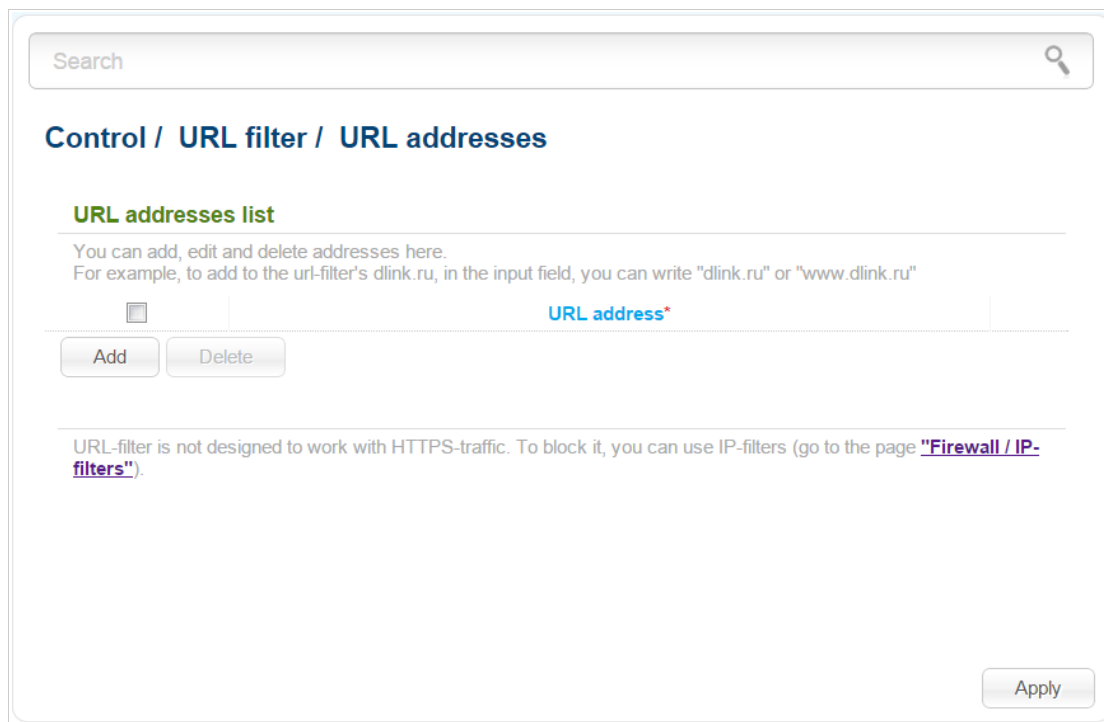


Figure 94. The **Control / URL filter / URL addresses** page.

Click the **Add** button and enter an address in the field displayed. Then click the **Apply** button.

To remove an address from the list of URL addresses, select the checkbox located to the left of the relevant URL address and click the **Delete** button. Then click the **Apply** button.

Yandex.DNS

This menu is designed to configure the Yandex.DNS service.

Yandex.DNS is a web content filtering service which provides the DNS server, protect a computer against malicious web sites, and block access to adult web sites. Click the **About yandex.DNS** link in the **Yandex.DNS** section to get detailed information on the service.

Internet Protection Settings

On the pages of the **Yandex.DNS / Internet protection settings** section, you can enable the Yandex.DNS service and configure its operating mode.

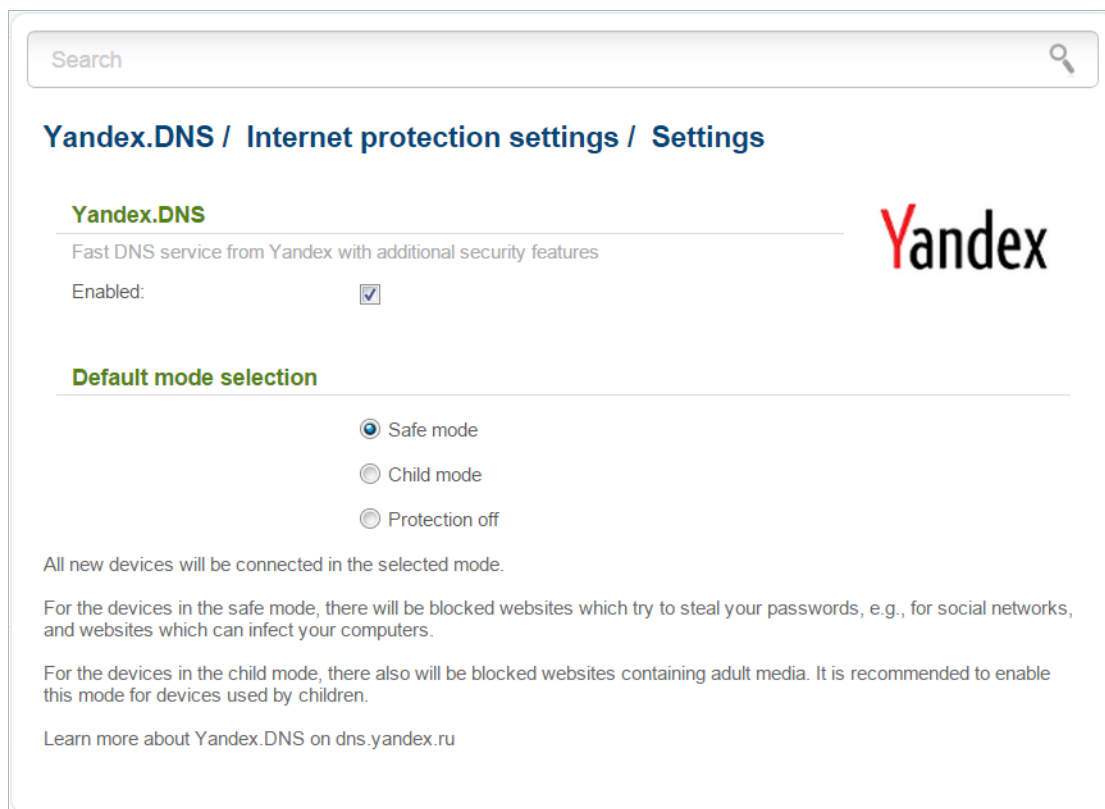


Figure 95. The **Yandex.DNS / Internet protection settings / Settings** page.

To enable the Yandex.DNS service, select the **Enabled** checkbox on the **Yandex.DNS / Internet protection settings / Settings** page.

When the checkbox is selected, the **Default mode selection** section is displayed on the page. Select the needed choice of the radio button to configure filtering for all devices of the router's network:

- **Safe mode:** when this value is selected, the service blocks access to malicious and fraudulent web sites;
- **Child mode:** when this value is selected, the service blocks access to malicious and fraudulent web sites and blocks access to adult content;
- **Protection off:** when this value is selected, the service provides the DNS server with no restrictions on access to unsafe web sites.

Also the selected filtering mode will be applied to all devices newly connected to the router's network.

If you need to specify a filtering mode for each device separately, create relevant rules. To do this, go to the **Yandex.DNS / Internet protection settings / Devices** page.

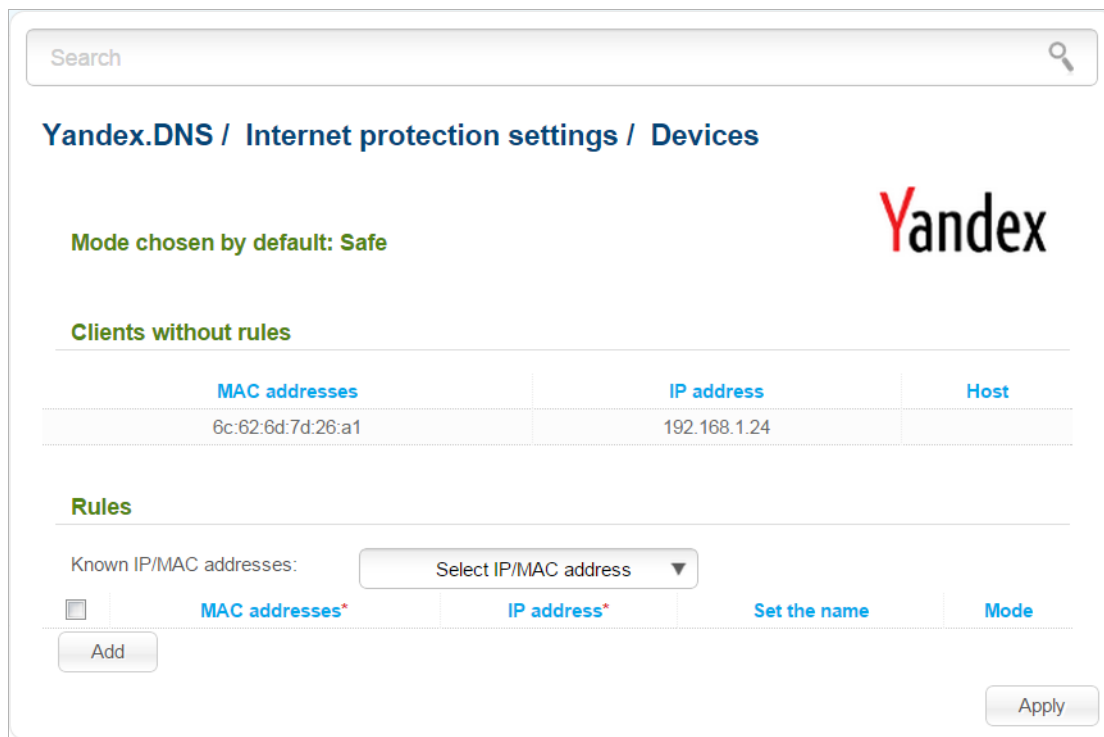


Figure 96. The **Yandex.DNS / Internet protection settings / Devices** page.

On the opened page, in the **Clients without rules** section, the devices which filtering mode is specified on the **Yandex.DNS / Internet protection settings / Settings** page are displayed. The name of the mode is displayed in the **Mode chosen by default** section.

To create² a new filtering rule for a device, click the **Add** button in the **Rules** section. In the line displayed, you can specify the following parameters:

Parameter	Description
MAC addresses	The MAC address of a device from the router's LAN. You can enter the MAC address of a device connected to the router's LAN at the moment. To do this, select the relevant device from the Known IP/MAC addresses drop-down list (the field will be filled in automatically).
IP address	The IP address of a device from the router's LAN. You can enter the IP address of a device connected to the router's LAN at the moment. To do this, select the relevant device from the Known IP/MAC addresses drop-down list (the field will be filled in automatically).
Set the name	Enter a name for the rule for easier identification. You can specify any name.
Mode	Select an operating mode of the Yandex.DNS service for this rule. Child: when this value is selected, the service blocks access to malicious and fraudulent web sites and blocks access to adult content. Safe: when this value is selected, the service blocks access to malicious and fraudulent web sites. Protection off: when this value is selected, the service provides the DNS server with no restrictions on access to unsafe web sites.

After specifying the needed parameters, click the **Apply** button.

To edit a rule for filtering, select a needed field in the relevant line of the table, change its value, and click the **Apply** button.

To remove a rule for filtering, select the checkbox located to the left of the relevant rule and click the **Apply** button.

To disable the Yandex.DNS service, deselect the **Enabled** checkbox on the **Yandex.DNS / Internet protection settings / Settings** page.

² When a new rule for filtering is created, a MAC address and IP address pair is displayed on the **Net / LAN** page. The created pair will be deleted with the relevant rule.

System

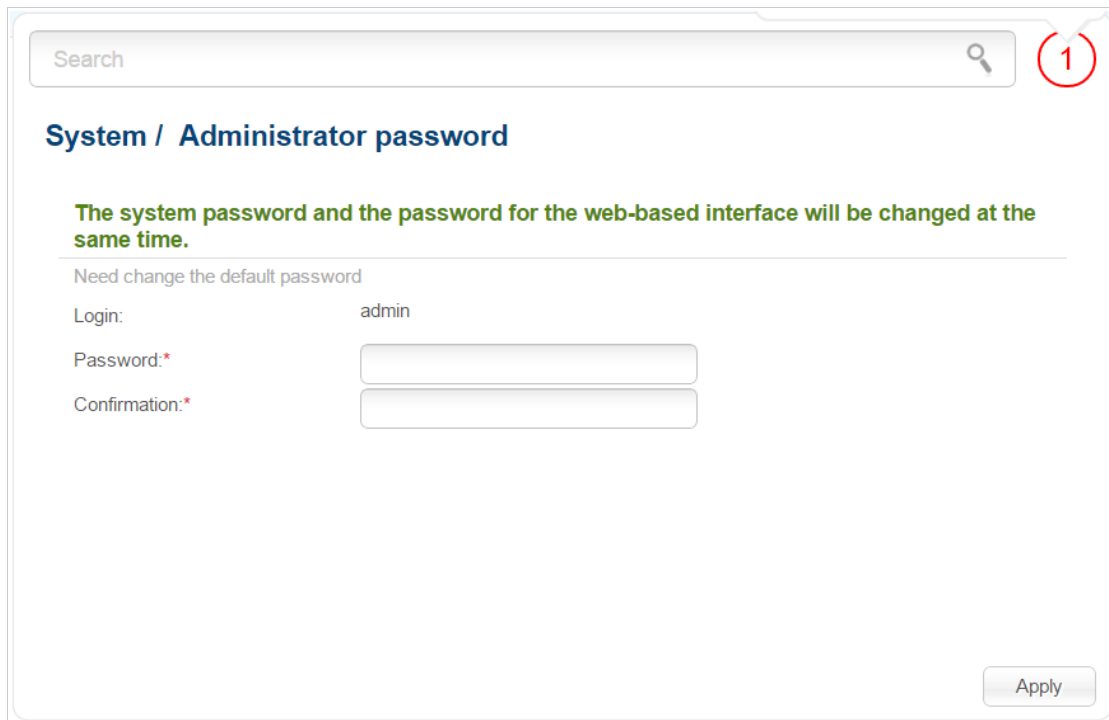
In this menu you can do the following:

- change the password used to access the router's settings
- save the current settings to the non-volatile memory
- reboot the router
- create a backup of the router's configuration
- restore the router's configuration from a previously saved file
- restore the factory default settings
- view the system log
- update the firmware of the router
- configure automatic notification on new firmware version
- configure automatic synchronization of the system time or manually configure the date and time for the router
- check availability of a host on the Internet through the web-based interface of the router
- allow or forbid access to the router via TELNET.

Administrator Password

On the **System / Administrator password** page, you can change the password for the administrator account used to access the web-based interface of the router and to access the device settings via TELNET.

! For security reasons, it is strongly recommended to change the administrator password upon initial configuration of the router.



Search

System / Administrator password

The system password and the password for the web-based interface will be changed at the same time.

Need change the default password

Login: admin

Password:*

Confirmation:*

Apply

Figure 97. The page for modifying the administrator password.

Enter the new password in the **Password** and **Confirmation** fields and click the **Apply** button.

Configuration

On the **System / Configuration** page, you can reboot the device, save the changed settings to the non-volatile memory, restore the factory defaults, backup the current configuration, or restore the router's configuration from a previously created file.

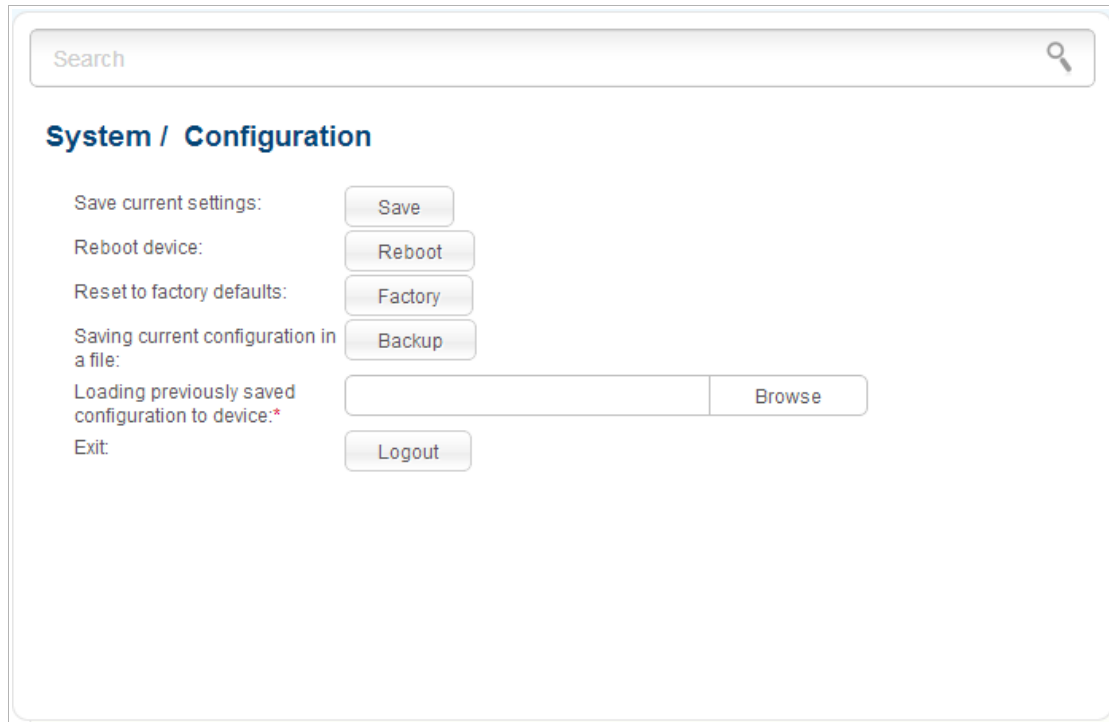


Figure 98. The **System / Configuration** page.

The following buttons are available on the page:

Control	Description
Save	Click the button to save settings to the non-volatile memory. Please, save settings every time you change the router's parameters. Otherwise the changes will be lost upon hardware reboot of the router.
Reboot	Click the button to reboot the device. All unsaved changes will be lost after the device's reboot.
Factory	Click the button to restore the factory default settings. Also you can restore the factory defaults via the hardware RESET button (see the <i>Back Panel</i> section, page 12).
Backup	Click the button to save the configuration (all settings of the router) to your PC. The configuration backup will be stored in the download location of your web browser.
Browse	Click the button and follow the dialog box appeared to select a previously saved configuration file (all settings of the router) located on your PC and upload it.
Logout	Click the button to exit the web-based interface.

Actions of the **Save**, **Reboot**, **Factory**, **Backup**, and **Logout** buttons also can be performed via the top-page menu displayed when the mouse pointer is over the **System** caption.

System Log

On the **System / System log / Configuration** page, you can set the system log options and configure sending the system log to a remote host.

Figure 99. The **System / System log / Configuration** page.

To enable logging of the system events, select the **Logging** checkbox. Then specify the needed parameters.

Control	Description
Logging type	<p>Select a type of logging from the drop-down list.</p> <ul style="list-style-type: none"> • Local: the system log is stored in the router's memory (and displayed on the System / System log / Log page). When this value is selected, the Server and Port fields are not displayed. • Remote: the system log is sent to the remote host specified in the Server field. • Local and remote: the system log is stored in the router's memory (and displayed on the System / System log / Log page) and sent to the remote host specified in the Server field.
Logging level	Select a type of messages and alerts/notifications to be logged.
Server	The IP or URL address of the host from the local or global network, to which the system log will be sent.

Control	Description
Port	A port of the host specified in the Server field. By default, the value 514 is specified.

After specifying the needed parameters, click the **Apply** button.

To disable logging of the system events, deselect the **Logging** checkbox and click the **Apply** button.

On the **System / System log / Log** page, the events specified in the **Logging level** list are displayed.

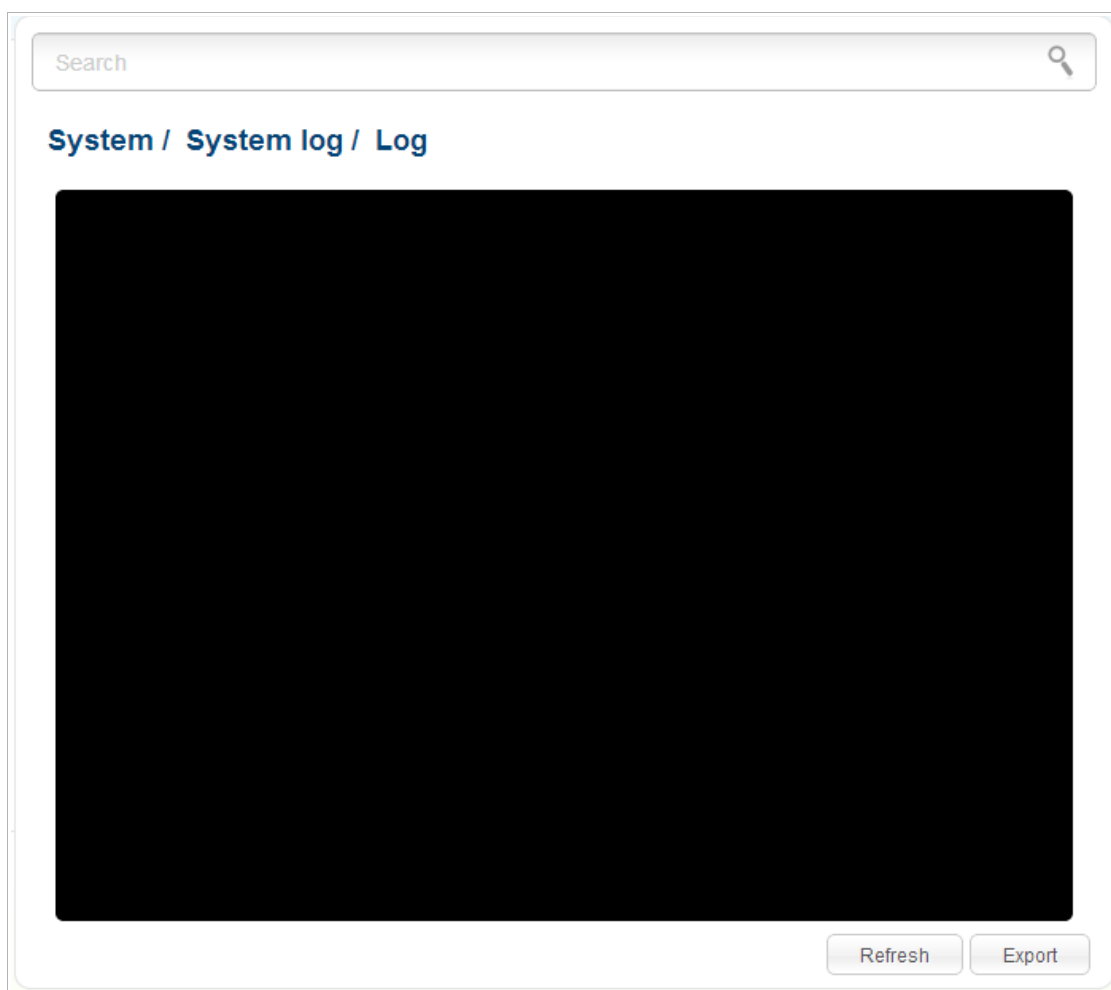


Figure 100. The **System / System log / Log** page.

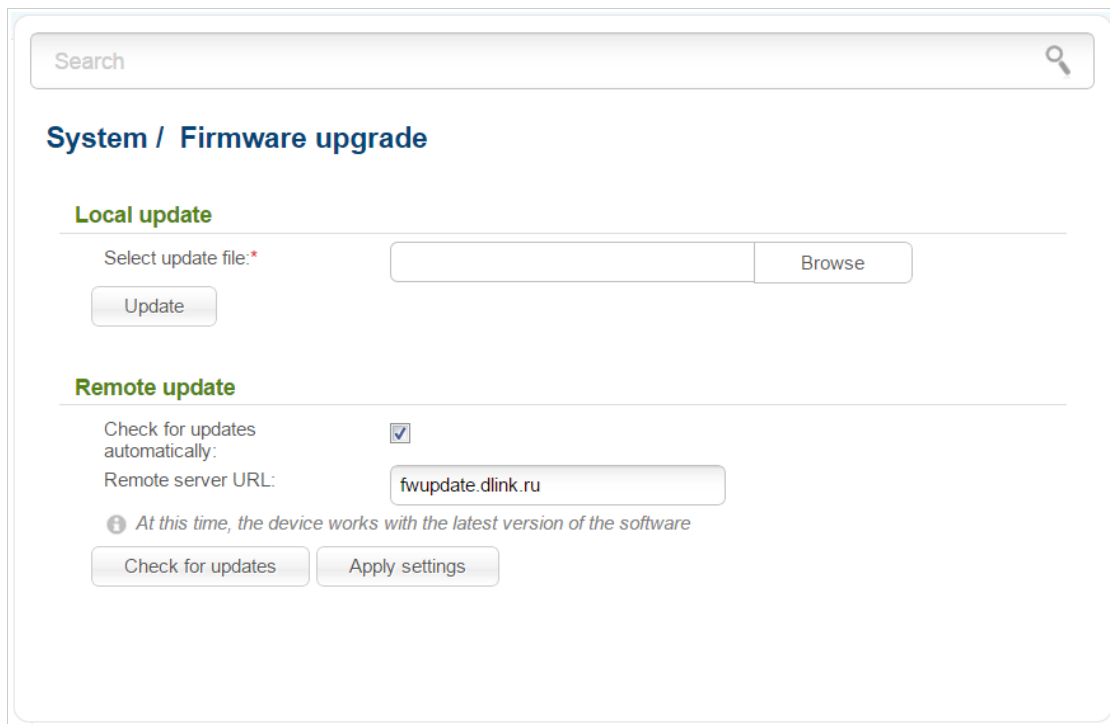
To view the latest system events, click the **Refresh** button.

To save the system log to your PC, click the **Export** button and follow the dialog box appeared.

Firmware Upgrade

On the **System / Firmware upgrade** page, you can upgrade the firmware of the router and configure the automatic check for updates of the router's firmware.

! Upgrade the firmware only when the router is connected to your PC via a wired connection.



The screenshot shows the 'System / Firmware upgrade' page. At the top, there is a search bar. Below it, the page title 'System / Firmware upgrade' is displayed. The page is divided into two main sections: 'Local update' and 'Remote update'. In the 'Local update' section, there is a text input field for 'Select update file:*', a 'Browse' button, and an 'Update' button. In the 'Remote update' section, there is a 'Check for updates automatically:' checkbox which is checked, and a 'Remote server URL:' text input field containing 'fwupdate.dlink.ru'. Below these fields, there is a note: 'At this time, the device works with the latest version of the software'. At the bottom of the 'Remote update' section, there are two buttons: 'Check for updates' and 'Apply settings'.

Figure 101. The **System / Firmware upgrade** page.

The current version of the router's firmware is displayed next the D-Link logo in the top left corner of the page.

By default, the automatic check for the router's firmware updates is enabled. If a firmware update is available, a notification will be displayed in the top right corner of the page.

To disable the automatic check for firmware updates, in the **Remote update** section, deselect the **Check for updates automatically** checkbox and click the **Apply settings** button.

To enable the automatic check for firmware updates, in the **Remote update** section, select the **Check for updates automatically** checkbox and click the **Apply settings** button. By default, in the **Remote server URL** field, the D-Link update server address (`fwupdate.dlink.ru`) is specified.

You can upgrade the firmware of the router locally (from the hard drive of your PC) or remotely (from the update server).

Local Update

! Attention! Do not turn off the router before the firmware upgrade is completed. This may cause the device breakdown.

To update the firmware of the router locally, follow the next steps:

1. Download a new version of the firmware from www.dlink.ru.
2. Click the **Browse** button on the **System / Firmware upgrade** page to locate the new firmware file.
3. Click the **Update** button to upgrade the firmware of the router.
4. Wait until the router is rebooted (about one and a half or two minutes).
5. Log into the web-based interface using the login (**admin**) and the current password.

After the upgrade is completed, the new version of the firmware will be displayed in the top left corner of the page.

If after updating the firmware the router doesn't work correctly, please restore the factory default settings. To do this, place the mouse pointer over the **System** caption in the top left corner of the

page and click the  (**Reset to factory**) icon. Wait until the router is rebooted.

Remote Update



Attention! Do not turn off the router before the firmware upgrade is completed. This may cause the device breakdown.

To update the firmware of the router remotely, follow the next steps:

1. On the **System / Firmware upgrade** page, in the **Remote update** section, click the **Check for updates** button to check if a newer firmware version exists.
2. Click the **OK** button in the window displayed to upgrade the firmware of the router. Also you can upgrade the firmware of the router by clicking the **Remote update** button (the button is displayed if a newer version of the firmware is available).
3. Wait until the router is rebooted (about one and a half or two minutes).
4. Log into the web-based interface using the login (**admin**) and the current password.

After the upgrade is completed, the new version of the firmware will be displayed in the top left corner of the page.

If after updating the firmware the router doesn't work correctly, please restore the factory default settings. To do this, place the mouse pointer over the **System** caption in the top left corner of the



page and click the **(Reset to factory)** icon. Wait until the router is rebooted.

System Time

On the **System / System time** page, you can manually set the time and date of the router or configure automatic synchronization of the system time with a time server on the Internet.

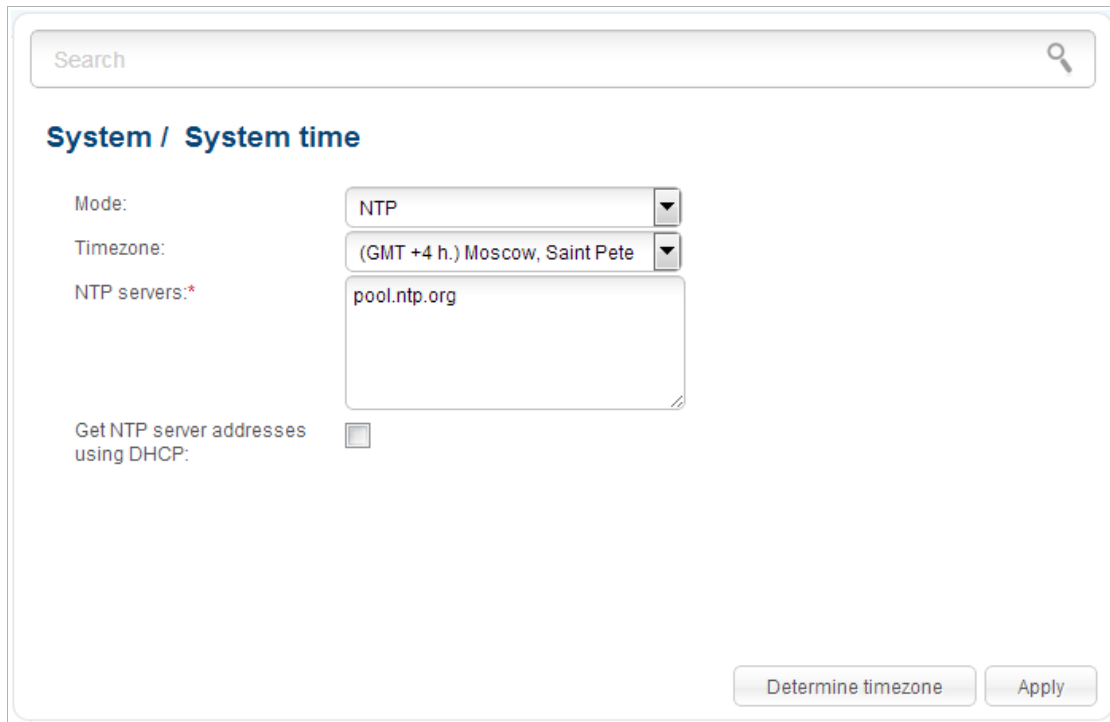


Figure 102. The **System / System time** page.

To set the system time manually, select the **Manual** value from the **Mode** drop-down list and set the time and date in the fields displayed. Then click the **Apply** button.

To enable automatic synchronization with a time server, follow the next steps:

1. Select the **NTP** value from the **Mode** drop-down list.
2. Select your time zone from the drop-down list. To set the time zone in accordance with the settings of your operating system, click the **Determine timezone** button in the bottom right corner of the page.
3. Specify the needed NTP server in the **NTP servers** field or leave the server specified by default.
4. Click the **Apply** button.

In some cases NTP servers addresses are provided by your ISP. In this case, you need to select the **Get NTP server addresses using DHCP** checkbox. Contact your ISP to clarify if this checkbox needs to be enabled. If the **Get NTP server addresses using DHCP** checkbox is selected, the **NTP servers** field is not available.

! When the router is powered off or rebooted, the system time is reset to the default value. If you have set automatic synchronization for the system time, the internal clock of the device will be configured after connecting to the Internet. If you have set the system time manually, you need to set the time and date again (see above).

Ping

On the **System / Ping** page, you can check availability of a host from the local or global network via the Ping utility.

The Ping utility sends echo requests to a specified host and receives echo replies.


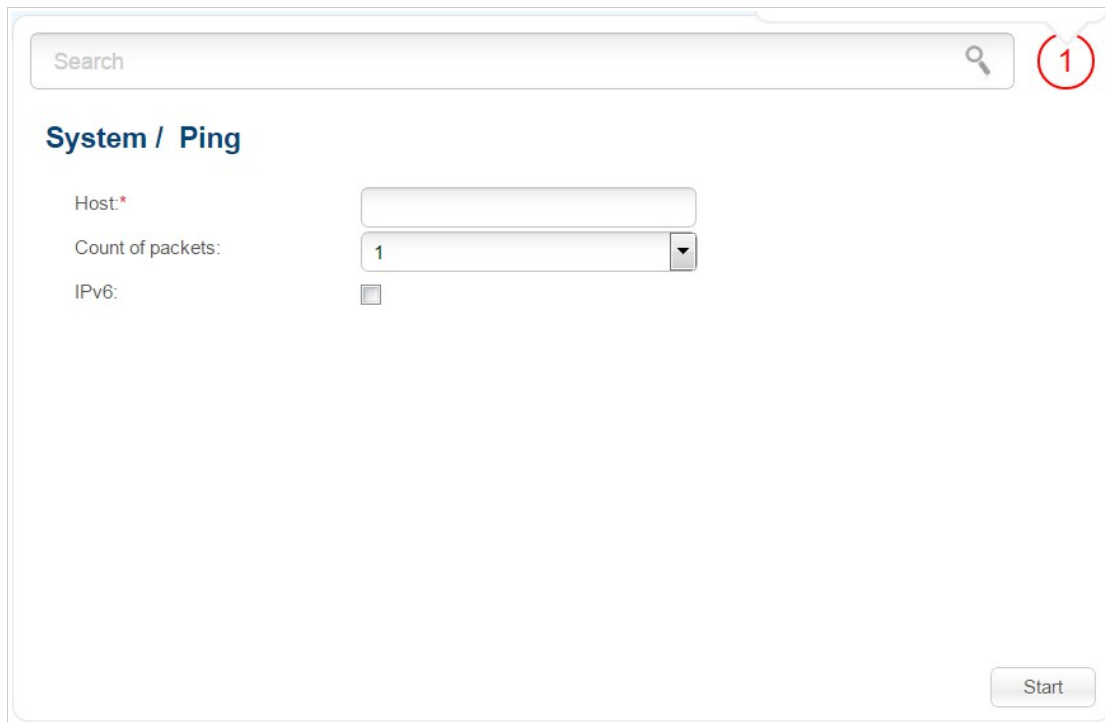


Figure 103. The **System / Ping** page.

To check availability of a host, enter the IP address or name of this host in the **Host** field, and select a number of requests that will be sent in order to check its availability from the **Count of packets** drop-down list. If availability check should be performed with IPv6, select the relevant checkbox. Click the **Start** button. After a while, the results will be displayed on the page.

Telnet

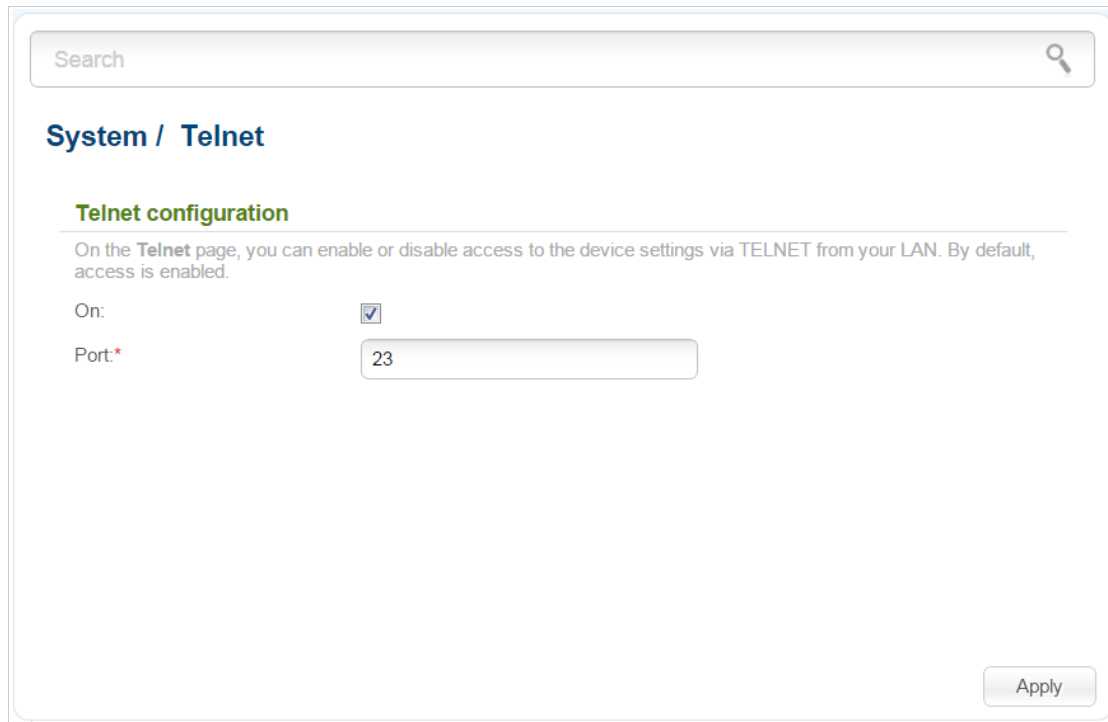On the **System / Telnet** page, you can enable or disable access to the device settings via TELNET from your LAN. By default, access is enabled.



Search

System / Telnet

Telnet configuration

On the **Telnet** page, you can enable or disable access to the device settings via TELNET from your LAN. By default, access is enabled.

On:

Port:*

Apply

Figure 104. The **System / Telnet** page.

To disable access via TELNET, deselect the **On** checkbox and click the **Apply** button.

To enable access via TELNET again, select the **On** checkbox. In the **Port** field, enter the number of the router's port through which access will be allowed (by default, the port **23** is specified). Then click the **Apply** button.

CHAPTER 5. OPERATION GUIDELINES

Safety Instructions

Place your router on a flat horizontal surface or mount the router on the wall (the mounting holes are located on the back panel of the device). Make sure that the router is provided with sufficient ventilation.

To prevent overheating, do not obstruct the ventilation openings of the router.

Plug the router into a surge protector to reduce the risk of damage from power surges and lightning strikes.

Operate the router only from an electrical outlet with the correct power source as indicated on the adapter.

Do not open the cover of the router. Otherwise any warranty will be invalidated.

Unplug the equipment before dusting and cleaning. Use a damp cloth to clean the equipment. Do not use liquid/aerosol cleaners or magnetic/static cleaning devices.

Wireless Installation Considerations

The DSL-2640U device lets you access your network using a wireless connection from virtually anywhere within the operating range of your wireless network. Keep in mind, however, that the number, thickness and location of walls, ceilings, or other objects that the wireless signals must pass through, may limit the range. Typical ranges vary depending on the types of materials and background RF noise in your home or office. To maximize your wireless range, follow the guidelines below.

1. Keep the number of walls and ceilings between the DSL-2640U device and other network devices to a minimum – each wall or ceiling can reduce your wireless network range by 3-90 feet (1-30 meters).
2. Be aware of the direct line between network devices. Place your devices so that the signal travels straight through a wall or ceiling (instead of at an angle) for better reception.
3. Building materials make a difference. A solid metal door or aluminum studs may have a negative effect on your wireless range. Try to position your router, access points, and computers so that the signal passes through drywalls or open doorways. Materials and objects such as glass, steel, metal, walls with insulation, water (fish tanks), mirrors, file cabinets, brick, and concrete will degrade your wireless signal.
4. Keep your router away (at least 3-6 feet or 1-2 meters) from electrical devices or appliances that generate RF noise.
5. If you are using 2.4 GHz cordless phones or X-10 equipment (wireless devices such as ceiling fans, lights, and home security systems), your wireless connection may degrade dramatically or drop completely. Make sure your 2.4 GHz phone base is as far away from your wireless devices as possible. Note, that the base transmits a signal even if the phone is not in use.

Creating Two Connections on One Channel

ADSL WAN Connections

In some cases, it is necessary to assign two WAN connections to one virtual channel (that is, to specify the same values of the VPI/VCI).

For example, your ISP provides access to the Internet via the VLAN with the tag (VLAN ID) **20** and the IPTV service (VPI = 0, VCI = 35) via the VLAN with the tag (VLAN ID) **10**. You need to configure a WAN connection of the Bridge type for the set-top-box connected to the LAN 2 port of the router and a WAN connection of Dynamic IP type for the computer connected to the LAN 3 port of the router and the laptop connected to the wireless interface of the router.

To configure the router, follow the steps below:

1. Go to the **Net / WAN** page and click the **Add** button.
2. Select the **Bridge** value from the **Connection Type** drop-down list.
3. Select the **DSL(new)** value from the **Interface** drop-down list.
4. Fill in the **VPI** and **VCI** fields.
5. In the **VLAN** section, select the **Allow to create several connections assigned to this port** and **Use VLAN** checkboxes.
6. In the **VLAN ID** field, enter **10**.
7. Click the **Apply** button.
8. Click the **Add** button again.
9. Select the **Dynamic IP** value from the **Connection Type** drop-down list.
10. Select the **vc0(0/35)** value from the **Interface** drop-down list.
11. In the **VLAN** section, select the **Use VLAN** checkbox.
12. In the **VLAN ID** field, enter **20**.
13. Click the **Apply** button.

	Name	Connection Type	Interface	Status	Direction	Default gateway	Default IPv6 gateway
<input type="checkbox"/>	bridge_0_35_1	Bridge	vc0(0/35)	down	WAN	<input type="radio"/>	
<input type="checkbox"/>	dynamic_0_35_2	Dynamic IP	vc0(0/35)	down	WAN	<input checked="" type="radio"/>	

Figure 105. Two WAN connections with the same values of the VPI and VCI.

14. Go to the **Advanced / Interface grouping** page.
15. Create a group containing the WAN connection of the Bridge type and the LAN 2 port.
16. Create another group containing the WAN connection of the Dynamic IP type, the LAN 3 port, and the wireless interface.

Name	Type of group	LANs	WANs
DEFAULT	Local	LAN4; LAN1; WI-FI;	
1	Transparent bridge	LAN2;	bridge_0_35_1;
2	NAT	LAN3;	dynamic_0_35_2;

Figure 106. Groups of ports for the created WAN connections.

17. Save the settings and wait until the router is rebooted.

Ethernet WAN Connections

In some cases, it is necessary to assign two WAN connections to one physical interface.

For example, the ISP provides the IPTV service via the VLAN with the tag (VLAN ID) **10** and access to the Internet via the VLAN with the tag (VLAN ID) **20**. Your private Ethernet line is connected to the LAN 3 port of the router. You need to configure a WAN connection of the Bridge type for the set-top-box connected to the LAN 2 port of the router and a WAN connection of Dynamic IP type for the computer connected to the LAN 4 port of the router and the laptop connected to the wireless interface of the router.

To configure the router, follow the steps below:

1. Go to the **Advanced / EtherWAN** page.
2. Place the mouse pointer on the **LAN3** port and left-click it.
3. Click the **Apply** button.
4. Go to the **Net / WAN** page and click the **Add** button.
5. Select the **Bridge** value from the **Connection Type** drop-down list.
6. Select the **LAN3** value from the **Interface** drop-down list.
7. In the **VLAN** section, select the **Use VLAN** checkbox.
8. In the **VLAN ID** field, enter **10**.
9. Click the **Apply** button.
10. Click the **Add** button again.
11. Select the **Dynamic IP** value from the **Connection Type** drop-down list.
12. Select the **LAN3** value from the **Interface** drop-down list.
13. In the **VLAN** section, select the **Use VLAN** checkbox.
14. In the **VLAN ID** field, enter **20**.
15. Click the **Apply** button.

	Name	Connection Type	Interface	Status	Direction	Default gateway	Default IPv6 gateway
<input type="checkbox"/>	bridge_LAN3_1	Bridge	LAN3	down	WAN	<input type="radio"/>	
<input type="checkbox"/>	dynamic_LAN3_2	Dynamic IP	LAN3	down	WAN	<input checked="" type="radio"/>	

Figure 107. Two WAN connections for one physical interface.

16. Go to the **Advanced / Interface grouping** page.
17. Create a group containing the WAN connection of the Bridge type and the LAN 2 port.
18. Create another group containing the WAN connection of the Dynamic IP type, the LAN 4 port, and the wireless interface.

Name	Type of group	LANs	WANs
DEFAULT	Local	LAN1;	
1	Transparent bridge	LAN2;	bridge_LAN3_1;
2	NAT	LAN4; Wi-Fi;	dynamic_LAN3_2;

Figure 108. Groups of ports for the created WAN connections.

19. Save the router's settings.

CHAPTER 6. ABBREVIATIONS AND ACRONYMS

AES	Advanced Encryption Standard
ARP	Address Resolution Protocol
BSSID	Basic Service Set Identifier
CRC	Cyclic Redundancy Check
DDNS	Dynamic Domain Name System
DDoS	Distributed Denial of Service
DHCP	Dynamic Host Configuration Protocol
DMZ	DeMilitarized Zone
DNS	Domain Name System
DTIM	Delivery Traffic Indication Message
GMT	Greenwich Mean Time
IGD	Internet Gateway Device
IGMP	Internet Group Management Protocol
IP	Internet Protocol
IPoA	Internet Protocol over ATM
L2TP	Layer 2 Tunneling Protocol
ISP	Internet Service Provider
LAN	Local Area Network
LCC	Logical Link Control
LCP	Link Control Protocol
MAC	Media Access Control
MTU	Maximum Transmission Unit
NAT	Network Address Translation
NTP	Network Time Protocol
OFDM	Orthogonal Frequency Division Multiplexing
PBC	Push Button Configuration
PIN	Personal Identification Number

PPPoA	Point-to-Point Protocol over ATM
PPPoE	Point-to-point protocol over Ethernet
PPTP	Point-to-point tunneling protocol
PSK	Pre-shared key
QoS	Quality of Service
RIP	Routing Information Protocol
RTS	Request To Send
RTSP	Real Time Streaming Protocol
SIP	Session Initiation Protocol
SSID	Service Set Identifier
TKIP	Temporal Key Integrity Protocol
UPnP	Universal Plug and Play
URL	Uniform Resource Locator
VC	Virtual Circuit
VCI	Virtual Circuit Identifier
VLAN	Virtual Local Area Network
VPI	Virtual Path Identifier
VPN	Virtual Private Network
WAN	Wide Area Network
WEP	Wired Equivalent Privacy
Wi-Fi	Wireless Fidelity
WLAN	Wireless Local Area Network
WPA	Wi-Fi Protected Access
WPS	Wi-Fi Protected Setup