

# **D-Link DP-300U**

Ethernet/USB Print Server

## **Manual**

**D-Link**

Building Networks for People

# Contents

Package Contents ..... 3

Introduction ..... 4

Setting up the DP-300U ..... 7

Getting Started ..... 9

Using the Web Configuration ..... 10

TCP/IP Printing for Windows XP ..... 17

TCP/IP Printing for Windows 2000 ..... 26

TCP/IP Printing for Windows 98SE/ME ..... 35

Unix/Linux Printing ..... 46

Setting up AppleTalk or LPR Printing in MAC OSX ..... 47

Setting up AppleTalk Printing in MAC OS9 ..... 54

Port Pinouts ..... 58

Networking Basics ..... 59

Technical Specifications ..... 71

Contacting Technical Support ..... 72

Warranty and Registration ..... 73

Appendix: DP-300U Printer Compatibility List ..... 75

# Package Contents



## Contents of Package:

- **D-Link DP-300U**  
Fast Ethernet Print Server
- Manual and Warranty on CD
- Printed *Quick Installation Guide*

*If any of the above items are missing, please contact your reseller.*

## System Requirements:

- A computer with an installed Ethernet adapter
- Windows XP/2000/NT4/ME/98SE/95
- Apple Mac OS with AppleTalk
- Linux, Solaris, SCO Unix, AIX
- NetWare 5.x (Native NDS)
- Internet Explorer 6.0, or Netscape Navigator version 6.0 or above, with JavaScript enabled
- Printer must support required Operating System

# Introduction

The D-Link DP-300U is a Fast Ethernet print server that connects to your Ethernet or Fast Ethernet network anywhere you wish to locate printer services. The DP-300U manages the flow of print files from workstations or file servers to connected printers, delivering print jobs to printers much faster than a file server or a PC acting as a print server can. With two IEEE1284 parallel ports and one 1.1 USB port, DP-300U can connect to almost any make and model printer on the market today.

The DP-300U includes easy-to-use software to install on most Windows-based networks. Protocol support for TCP/IP, NetBEUI, and AppleTalk are provided to ensure seamless connection to major networking Operating Systems.

The DP-300U has a built in Web-Based management feature that allows users to easily configure and manage multiple print queues through TCP/IP. The DP-300U also supports Telnet as an alternative method to configure the unit.

The DP-300U improves network printing services in the following ways:

- The DP-300U delegates print jobs to connected printers. This provides workload relief to your file servers, and allows the file servers' full capacity to be used for file access or other direct services to network users. On peer-to-peer networks, workstations can print directly to the Print Server without increasing the load of another workstation or server.
- The DP-300U's parallel printer ports are IEEE1284-compliant high-speed bi-directional ports, which can transmit to high-speed laser printers much faster than a PC's parallel printer port. High-speed laser printers connected to the Print Server's parallel ports can be operated at their full capacity.
- Because the DP-300U is very portable and inexpensive compared to a PC-based print server, and Print Server connects to your file servers through the network, printers can be deployed to locations of maximum convenience to users.

The DP-300U offers extraordinary flexibility, operating with all major network operating systems and protocols:

■ **TCP/IP**

UNIX lpr/lpd (HP-UX, SunOS, Solaris, SCO, UnixWare, IBM AIX)  
Windows NT/2000, Windows 95/98SE/ME, Windows XP  
NetWare 5.x NDPS LPR Remote Printing

■ **NetBEUI**

Windows NT/2000/XP, Windows 95/98SE/ME, Windows for Workgroups,  
Microsoft LAN Manager, IBM LAN Server

■ **AppleTalk**

MacOS EtherTalk

Windows-based setup and administration software, *PS Admin*, is supplied with the Print Server, making configuration and management quick and easy. The Print Server also supports configuration and management via the Telnet protocol for networks without Windows-compatible machines.

## External Features

### *Port Connectors*

The DP-300U's three printer ports are located on its rear panel. One USB and two identical parallel ports are labeled USB, LPT1 and LPT2. These printer ports are independently configurable using the *PS Admin* program or the print server's Telnet interface. (See the *PS Admin User's Guide*, available on the CD that came with the DP-300U, for information about configuring the print server's ports.) The Print Server also supports web configuration permitting users to configure settings through the web browser. Default IP Address as follows:


■ Default IP Address – 192.168.0.10

■ Subnet Mask – 255.255.255.0

**Note:**

The PC's IP Address must be in the same subnet as the Print Server's IP Address for the two devices to communicate. (For example, if your Print Server's IP Address is 192.168.0.10, with a subnet mask of 255.255.255.0, then your computer's IP Address should be 192.168.0.x, where x is a value between 1-254, excluding 10.)

# Rear Panel Connectors

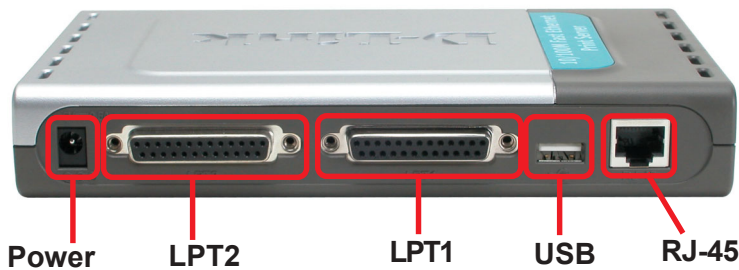

## Network Cable Connector


The Print Server’s rear panel features an RJ-45 connector for connection to 10Base-T Ethernet cabling or 100Base-TX Fast Ethernet cabling (which should be Category 5 twisted-pair cable). The port supports the NWay protocol, allowing the Print Server to automatically detect or negotiate the transmission speed of the network.

## DC Power Connector

The DC power input connector is located on the Print Server’s rear panel and is labeled DC 5V.

## LED Indicators

The front panel of the Print Server features five LED indicators:

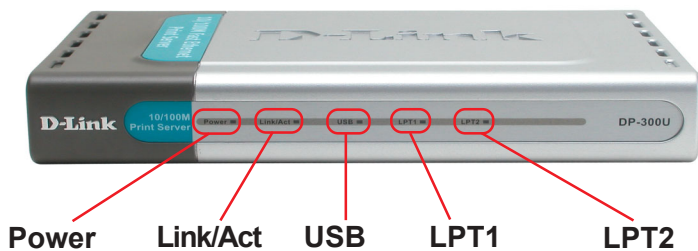

# Front Panel LED Indicators

## ■ Power

Steady or flashing green confirms that the Print Server is powered **ON**.

## ■ Link/Act

Steady or flashing green confirms that the Print Server has a good connection to the Ethernet or Fast Ethernet network.

The indicator blinks off briefly to indicate that the Print Server is receiving or transmitting from the network.

## ■ USB, LPT1, LPT2

These LED indicators light to show that the Print Server is transferring print data through the appropriate parallel port or USB port.

These three indicators are also used by the Print Server's Power-**ON** Self Test (POST) to indicate any hardware failures.

## Setting up the DP-300U

### Installing the Print Server

**WARNING:** Configuration problems may result if the Print Server is powered up without first establishing its network connection. Follow this procedure to avoid complications at the configuration stage.

1. Confirm proper operation of each of the printers to be connected to the DP-300U.
2. When you have confirmed proper operation of each printer, switch its power **OFF**.
3. Confirm that your network is operating normally.
4. Connect the DP-300U RJ-45 Connector to the network, using an Ethernet CAT5 cable.
5. While each printer is powered **OFF**, install the corresponding parallel or USB printer cable to connect the printer's parallel port or USB port to the printer port of the Print Server.
6. Switch on each connected printer.
7. Plug the AC power adapter's DC output plug into the DC 5V power socket on the rear panel of the Print Server.
8. Plug the power adapter into a power outlet. This will supply power to the Print Server, as it has no external power switch. The green Power LED on the Print Server's front panel should illuminate steadily, and the Print Server's Self-Test will proceed.

# Power ON Self-Test

*Every DP-300U has been factory-tested to operate properly.*

When the DP-300U is powered **ON**, it also automatically performs a Self-Test on each of its major components. The final result of the Self-Test is signaled by the state of the USB, LPT1 and LPT2 LED indicators following the Self-Test. Preliminary to the actual component tests, the three LED indicators are tested to confirm their steady and flashing operation.

Immediately after power-up, all five of the green LEDs should illuminate steadily for several seconds. Then the USB, LPT1 and LPT2 LEDs should flash **ON** simultaneously three times. Irregularity of any of the three LEDs during these LED tests may mean there is a problem with the LEDs themselves.

The actual component tests immediately follow the LED tests. A normal (no fault) result is signaled by a simultaneous flashing of these three LEDs, followed by a quiescent state with all three LEDs dark.


If the Self-Test routine traps any component error, then following the LED tests the Self-Test will halt and the LEDs will continuously signal the error according to the following table. In the event of any such error signal, contact your dealer for correction of the faulty unit.

LED Name			Faulty Component
USB	LPT1	LPT2	
low speed flashing			Need to reload firmware
<b>ON</b>			DRAM error
1 long 2 short			Timer INT error
1 long 3 short			Flash Protected
1 long 5 short			Flash Erase/Program error
1 long 6 short			LAN Controller error
1 long 8 short			LPT1 Controller error
1 long 9 short			LPT1 error
1 long 12 short			LPT2 Controller error
1 long 13 short			LPT2 error
1 long 14 short			MII error
1 long 18 short			USB error



# Getting Started

Below is a sample network using the DP-300U. The DP-300U has a built-in Web-based management feature that allows users to easily configure and manage multiple print queues through TCP/IP.

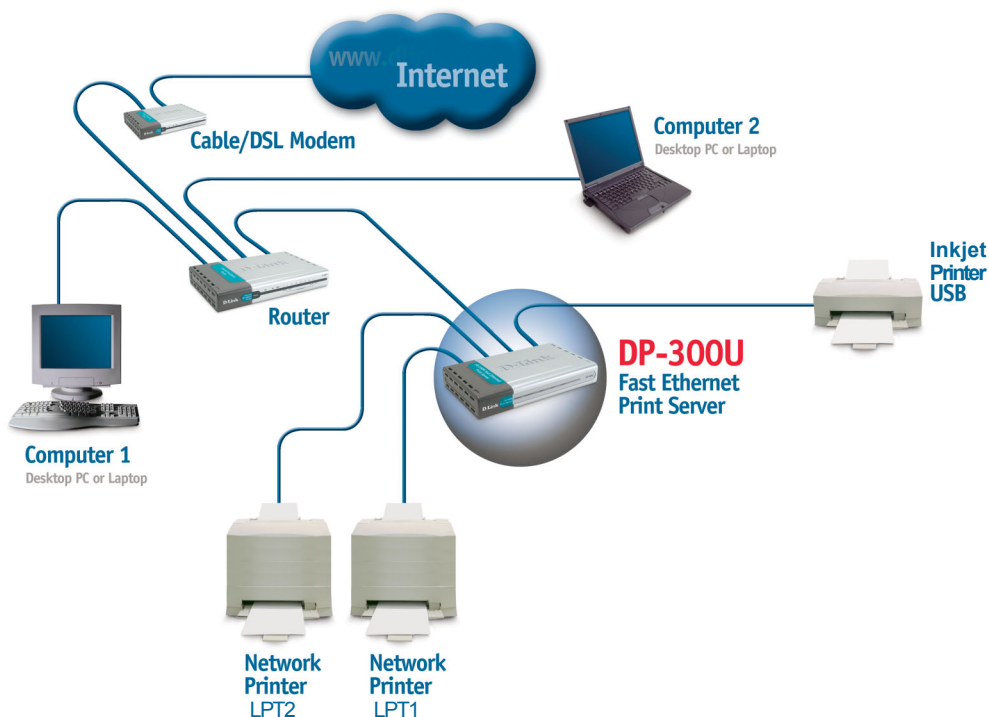

## Warning!

Only a USB printer may be connected to the USB port of the DP-300U. Do not connect any other USB devices to the USB port of the DP-300U; to do so, may damage the unit and will void the warranty for this product.

For a list of printers that are compatible with the DP-300U, please see the **Appendix** in this manual. The compatibility list is not comprehensive. Even if it is not included in the list, your printer may be compatible with the DP-300U.

# Using Web Configuration

Open your web browser and type **http://192.168.0.10** in the address box, and press <Enter>. This set of numbers is the default IP Address of your Print Server.  
***Please note that the PC's IP Address must correspond with the Print Server's IP Address in the same segment for the two devices to communicate.***



When you entered the default IP address, the main screen of the Print Server's configuration will appear (see below). In addition to the product information, you can access and control the Print Server's configuration through four links on the top of this main screen: **Home**, **Configuration**, **Network**, **Tools**, and **Help**.



# Home

Click on **Home** tab from the tools bar of the main screen to display information of the DP-300U's **System Status** and **Printer Status**.

## System Status and Printer Status

When you choose and enter the **Home** tab, it will show you the system information (see below), providing general information regarding the Print Server. Click on the <Refresh> button to acquire the most updated information. Once a printer is connected to the Print Server, the Printer Status will show [Online].



Server Name: The name assigned to the Print Server.

Model: The model of the Print Server.

Hardware Version: The version of the hardware on the Print Server.

Firmware Version: The version of the firmware and release date on the Print Server.

MAC Address: The MAC address of the Ethernet port.

IP Address: The IP Address of the Print Server.

Up Time: The length of time the Print Server has been up.

# Configuration

Click on **Configuration** tab from the tools bar of the main screen to enter the Configuration Page; it provides the configuration options that include **System Device and Port Setting**

## System Device and Port Setting

This option will show you settings required to configure the DP-300U Print Server. Consult your printers owner manual for the PJL(Printer Job Language) and print speed supported on your printer. Click the <Save> button on the bottom of the configuration page to ensure the settings are updated and saved.

**Server Name:** The name assigned to the Print Server.

**Location:** (optional) Input a comment indicating where the Print Server is located.

**Admin Contact:** (Optional) Administrator name for the Print Server.

**Password:** By default the DP-300U does not have a password. This is a security risk; it is recommended that you enter a password for the Print Server.

**Port Name:** This is the assigned name for the USB or LPT port.

**Description:** (Optional) A brief description for the USB or LPT port.

**Speed:** Printer port speed, High or Low.

**PJL Printer:** This feature is used to support Hewlett-Packard PJL (Printer Job Language) standard for bi-directional printing.

**D-Link**  
Building Networks for People

**DP-300U**  
Fast Ethernet Print Server

Home Configuration Network Tools Help

**System Device**

Server Name : PS-1123D6

Location :

Admin Contact :

Password : New Password :

Confirm Again :

**Port Setting**

USB : Port Name : PS-1123D6-U3

Description :

Speed : Low

PJL Printer : No

LPT1 : Port Name : PS-1123D6-P1

Description :

Speed : High

PJL Printer : No

LPT2 : Port Name : PS-1123D6-P2

Description :

Speed : High

PJL Printer : No

Save

## Network

Click on the **Network** tab from the tools bar of the main screen to enter the Network Page; it provides network protocol configuration options that include **TCP/IP**, **NetBEUI** and **AppleTalk**

### TCP/IP Protocol

The TCP/IP Protocol section will show you the settings required to configure the DP-300U Print Server for TCP/IP printing. If you forget your IP Address, you can use the *PS Admin* program to configure the DP-300U Print Server. The default IP Address is 192.168.0.10. Click the **<Save>** button to ensure the settings are updated and saved. NOTE: If you change and save the IP Address of the DP-300U, you would have to make similar changes on your web browser to access the web configuration again.


### NetBEUI Protocol

The NetBEUI Protocol section will show you the settings required to configure the DP-300U Print Server for NetBEUI printing. Click the **<Save>** button to ensure the settings are updated and saved.

### AppleTalk Protocol

The AppleTalk Protocol section will show you the settings required to configure the DP-300U Print Server for AppleTalk printing. Click the **<Save>** button to ensure the settings are updated and saved.

**D-Link**  
Building Networks for People



**DP-300U**  
Fast Ethernet Print Server

Home

Configuration

**Network**

Tools

Help

**TCP/IP Protocol**

IP Address : 192.168.0.10

Subnet Mask : 255.255.255.0

Default Gateway : 0.0.0.0

IP Assignment : 

☒ Manually Assign  
☐ Assign Automatically Using  

☐ RARP  
☐ BOOTP  
☐ DHCP

SNMP Community 1 : Name : public

Access Right : Read/Write

SNMP Community 2 : Name :

Access Right : Read Only

SNMP Community 3 : Name :

Access Right : Read Only

**NetBEUI Protocol**

Workgroup : WORKGROUP

Maximum Limitation : Maximum Connected Stations : 32

Maximum Number of Sessions : 32

**AppleTalk Protocol**

AppleTalk Zone : w

USB : 

Chooser Name : PS-1123D6-U3

Printer Type : LaserWriter

PostScript Level : Level 2

Font Group : Standard 35

LPT1 : 

Chooser Name : PS-1123D6-P1

Printer Type : LaserWriter

PostScript Level : Level 2

Font Group : Standard 35

LPT2 : 

Chooser Name : PS-1123D6-P2

Printer Type : LaserWriter

PostScript Level : Level 2

Font Group : Standard 35

Save

14

## Tools


Click on the **Tools** link from the tools bar of the main screen to enter the Tools Page; it provides the control options that include **Print Test** and **Reset**.

### Print Test

Print Test section will allow you to send an ASCII text page from the print server to your printer. Your Parallel and USB printer will have to support native DOS mode for the test page to print.

### Reset

Reset section will allow you to reset your print server. Click the **<Yes>** button to activate the reset process. Reset will restart the print server. Factory reset will reset all settings to factory default and restart the print server. Default IP address of the print server will be 192.168.0.10 after factory reset.

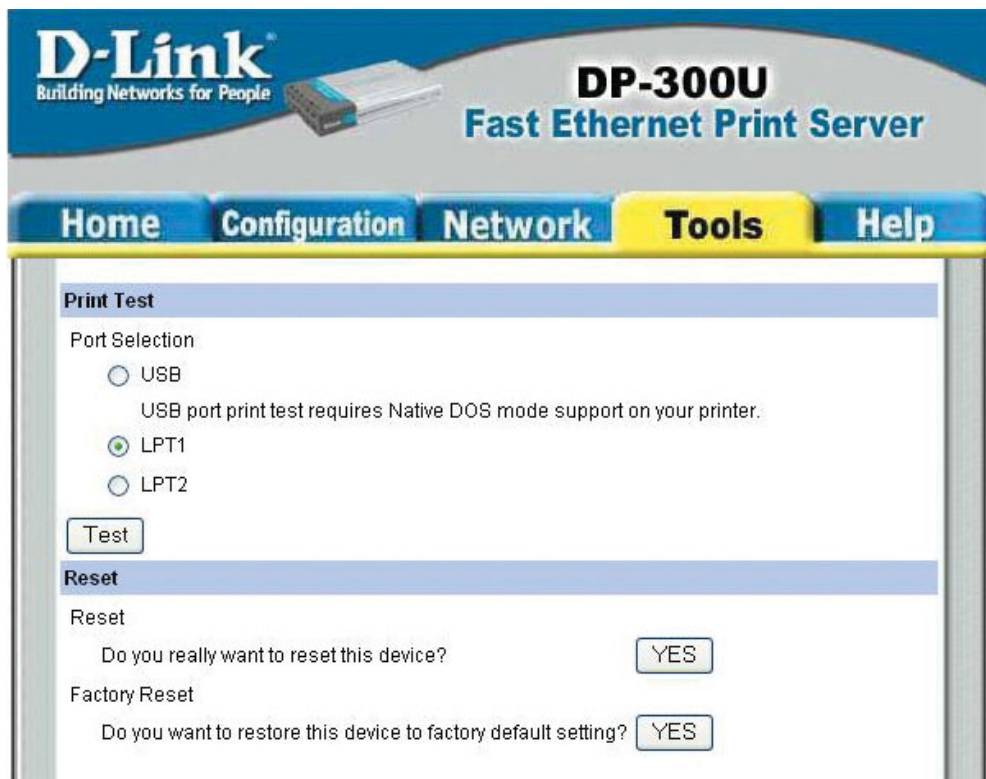

**D-Link**  
Building Networks for People

**DP-300U**  
Fast Ethernet Print Server

Home Configuration Network **Tools** Help

**Print Test**

Port Selection

☐ USB  
USB port print test requires Native DOS mode support on your printer.

☒ LPT1

☐ LPT2

Test

**Reset**

Reset


Do you really want to reset this device? YES

Factory Reset

Do you want to restore this device to factory default setting? YES

## Help

Click on the **Help** link from the tools bar of the main screen to enter the Help Page, it provides a link to D-Link's support website. D-Link's support website will provide the most up to date information on your DP-300U Print Server. Please check the website regularly for product and firmware updates.

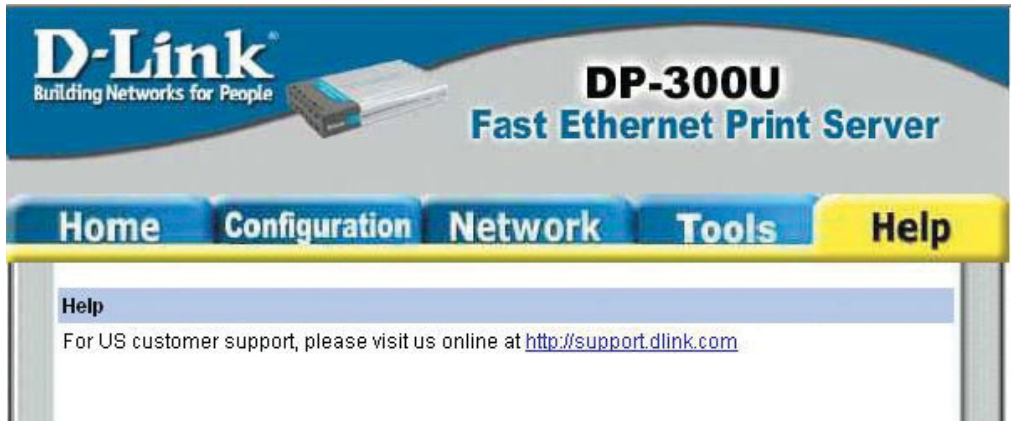




# TCP/IP Printing for Windows XP

Open the web browser, and type in the IP Address of the DP-300U.  
For example, type <http://192.168.0.10> into the **Location** or **Address** field. Press the **Enter** or (**Return**) Key.

## Note:

The PC's IP Address must be in the same subnet as the Print Server's IP Address for the two devices to communicate. (For example, if your Print Server's IP Address is 192.168.0.10, with a subnet mask of 255.255.255.0, then your computer's IP Address should be 192.168.0.x, where x is a value between 1-254, excluding 10.) See *Networking Basics: Assigning a Static IP Address* in this manual to find out how to change an IP Address.

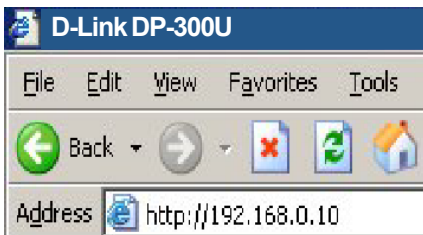

## TCP/IP Printing for Windows XP (continued)

At the **Configuration** window, write down the **Port Names** for future reference. You will need this information later in the configuration process.

**D-Link**  
Building Networks for People

**DP-300U**  
Fast Ethernet Print Server

**Home Configuration Network Tools Help**

**System Device**

Server Name : PS-1123D6

Location :

Admin Contact :

Password : New Password :

Confirm Again :

**Port Setting**

USB : Port Name : PS-1123D6-U3

Description :

Speed : Low ▾

P/L Printer : No ▾

LPT1 : Port Name : PS-1123D6-P1

Description :

Speed : High ▾

P/L Printer : No ▾

LPT2 : Port Name : PS-1123D6-P2

Description :

Speed : High ▾

P/L Printer : No ▾

Save

## TCP/IP Printing for Windows XP (continued)

When you select **TCP/IP Protocol** at the **Network** window, the screen below appears. (We recommend that you keep the default settings as shown.) If you need to make changes, make sure to click **Save** after you have made the changes. (You may wish to make a note of the IP Address.)

The screenshot shows the configuration interface for a D-Link DP-300U Fast Ethernet Print Server. The interface has a blue header with the D-Link logo and product name. Below the header is a navigation bar with tabs: Home, Configuration, Network (selected), Tools, and Help. The main content area is titled 'TCP/IP Protocol' and contains several configuration sections.

**TCP/IP Protocol**

IP Address : 192.168.0.10  
Subnet Mask : 255.255.255.0  
Default Gateway : 0.0.0.0  
IP Assignment : ☒ Manually Assign  
☐ Assign Automatically Using  
☐ RARP  
☐ BOOTP  
☐ DHCP

SNMP Community 1 : Name : public  
Access Right : Read/Write  
SNMP Community 2 : Name :  
Access Right : Read Only  
SNMP Community 3 : Name :  
Access Right : Read Only

**NetBEUI Protocol**

Workgroup : WORKGROUP  
Maximum Limitation : Maximum Connected Stations : 32  
Maximum Number of Sessions : 32

**AppleTalk Protocol**

AppleTalk Zone : \*


USB : Chooser Name : PS-1123D6-U3  
Printer Type : LaserWriter  
PostScript Level : Level 2  
Font Group : Standard 35

LPT1 : Chooser Name : PS-1123D6-P1  
Printer Type : LaserWriter  
PostScript Level : Level 2  
Font Group : Standard 35

LPT2 : Chooser Name : PS-1123D6-P2  
Printer Type : LaserWriter  
PostScript Level : Level 2  
Font Group : Standard 35

## TCP/IP Printing for Windows XP *(continued)*

Go to **Start > Settings > Printers and Faxes > Add a Printer**

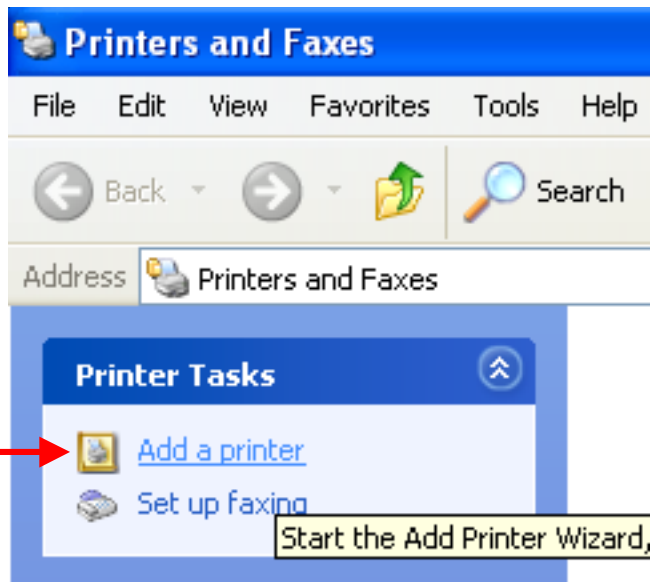


Click **Next**

# TCP/IP Printing for Windows XP (continued)

Select **Local Printer**


Deselect **Automatically detect and install my Plug and Play printer.**

Click **Next**

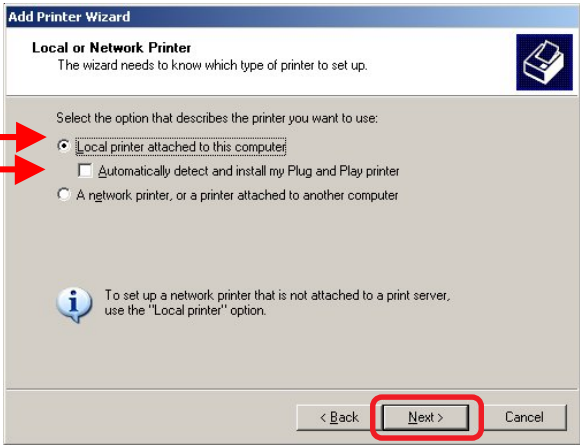


Select **Create a new port.** At the pull-down menu, highlight **Standard TCP/IP Port.**

Click **Next**

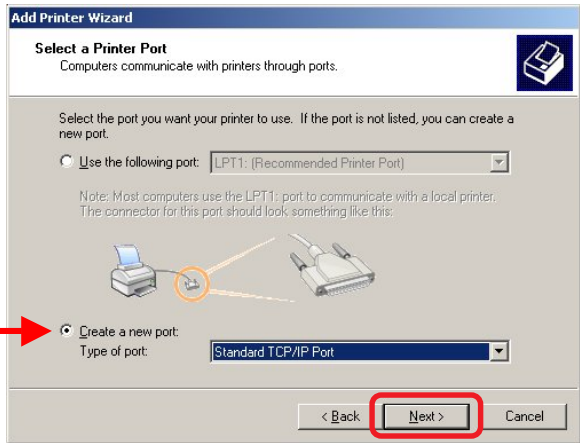


Click **Next**

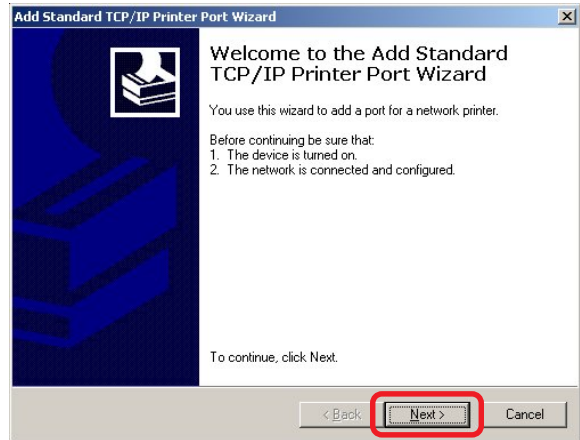

## TCP/IP Printing for Windows XP (continued)

Type in the IP address of the Print Server (i.e. 192.168.0.10). The **Port Name** will automatically be filled in.

Click **Next**

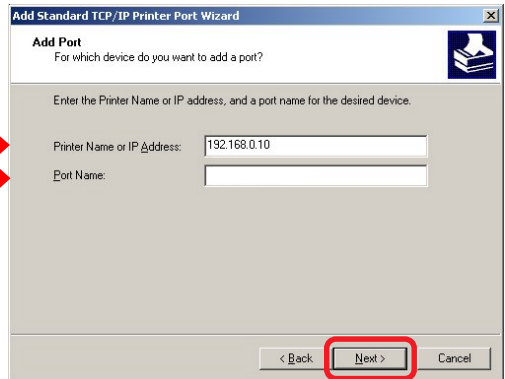

The 'Add Standard TCP/IP Printer Port Wizard' window is shown at the 'Add Port' step. It asks 'For which device do you want to add a port?'. Below, it says 'Enter the Printer Name or IP address, and a port name for the desired device.' There are two text input fields: 'Printer Name or IP Address:' containing '192.168.0.10' and 'Port Name:'. At the bottom right, the 'Next >' button is highlighted with a red rectangle. Two red arrows point from the left towards the 'Printer Name or IP Address' field.

Select **Custom**

Click **Settings**


The screen below will appear.



The 'Add Standard TCP/IP Printer Port Wizard' window is shown at the 'Additional Port Information Required' step. It states 'The device could not be identified.' and lists two requirements: '1. The device is properly configured.' and '2. The address on the previous page is correct.' Below, it says 'Either correct the address and perform another search on the network by returning to the previous wizard page or select the device type if you are sure the address is correct.' There are two radio buttons: 'Standard' (selected) and 'Custom' (highlighted with a red circle). Next to 'Custom' is a 'Settings...' button, also highlighted with a red rectangle. At the bottom right, the 'Next >' button is visible.

Select **LPR**


Enter the **Port Name** in the **LPR Settings Queue Name** field.

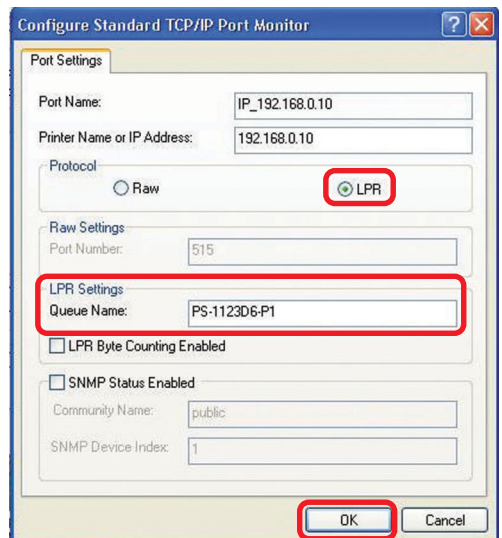

The 'Configure Standard TCP/IP Port Monitor' window is shown at the 'Port Settings' tab. It has several fields: 'Port Name:' with 'IP\_192.168.0.10', 'Printer Name or IP Address:' with '192.168.0.10', and 'Protocol:' with 'Raw' selected. Below, there are 'Raw Settings' (Port Number: 515) and 'LPR Settings' (Queue Name: PS-1123D6-P1, highlighted with a red rectangle). There are also checkboxes for 'LPR Byte Counting Enabled' and 'SNMP Status Enabled'. At the bottom right, the 'OK' button is highlighted with a red rectangle.

Click **OK**

## TCP/IP Printing for Windows XP (continued)

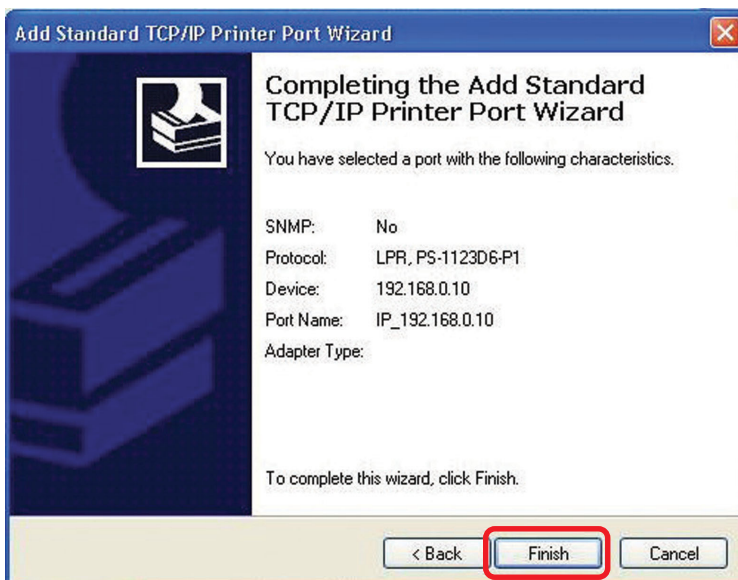




# TCP/IP Printing for Windows XP (continued)


Highlight the printer, as shown.  
If the desired printer is not on the list, click **Have Disk** and insert the printer driver disk that came with your printer to install the printer drivers.

Click **Next**

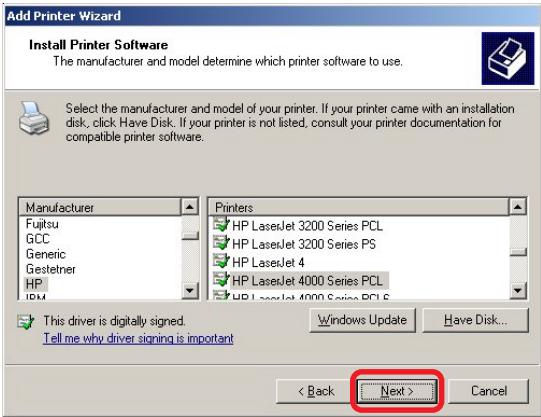


At this screen, you can input a name for the printer.

Click **Next**

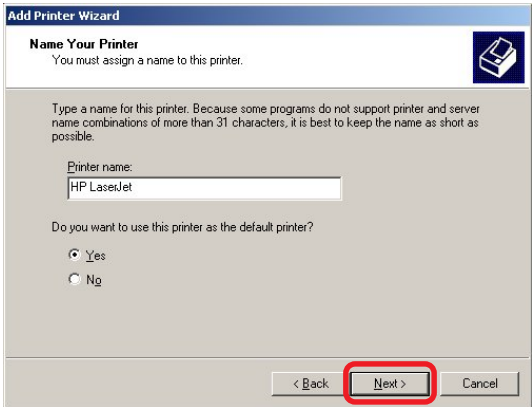


Click **Next**

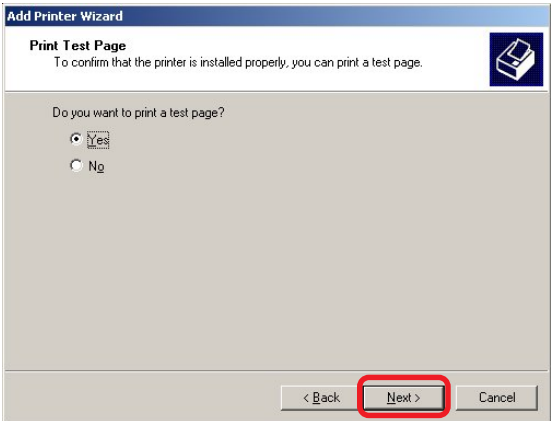



## TCP/IP Printing for Windows XP *(continued)*

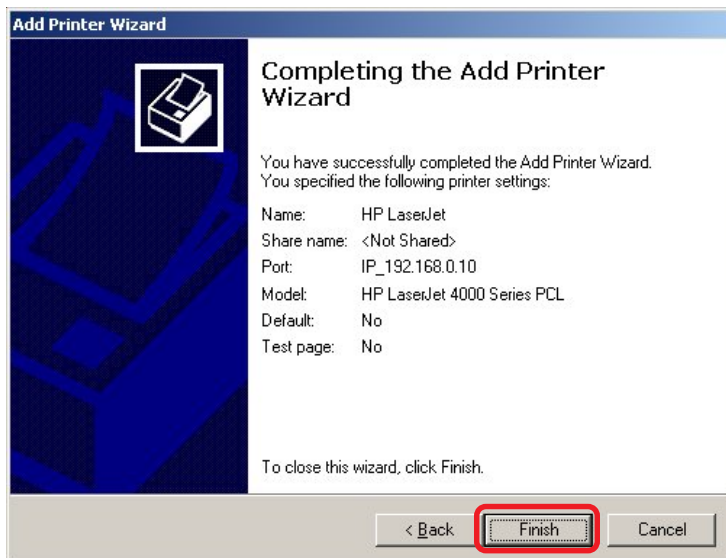

Click **Finish**

The printer is now ready for printing with Windows XP on your network.


# TCP/IP Printing for Windows 2000

Open the web browser, and type in the IP Address of the DP-300U.

For example, type <http://192.168.0.10> into the **Location** or **Address** field. Press the **Enter** or **(Return)** Key.

## Note:

The PC's IP Address must be in the same subnet as the Print Server's IP Address for the two devices to communicate. (For example, if your Print Server's IP Address is 192.168.0.10, with a subnet mask of 255.255.255.0, then your computer's IP Address should be 192.168.0.x, where x is a value between 1-254, excluding 10.)

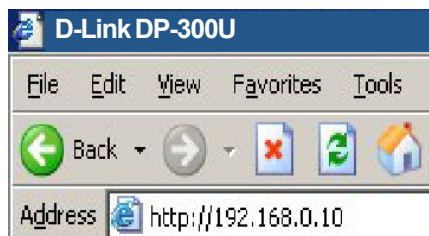

## TCP/IP Printing for Windows 2000 *(continued)*

At the **Configuration** window, write down the **Port Names** for future reference. You will need this information later in the configuration process.

**D-Link**  
Building Networks for People

**DP-300U**  
Fast Ethernet Print Server

**Home Configuration Network Tools Help**

**System Device**

Server Name : PS-1123D6

Location :

Admin Contact :

Password : New Password :

Confirm Again :

**Port Setting**

USB : Port Name : PS-1123D6-U3

Description :

Speed : Low

P/L Printer : No

LPT1 : Port Name : PS-1123D6-P1

Description :

Speed : High

P/L Printer : No

LPT2 : Port Name : PS-1123D6-P2

Description :

Speed : High

P/L Printer : No

Save

## TCP/IP Printing for Windows 2000 *(continued)*

When you select **TCP/IP Protocol** at the **Network** window, the screen below appears. (We recommend that you keep the default settings as shown.) If you need to make changes, make sure to click **Save** after you have made the changes. (You may wish to make a note of the IP Address.)

The screenshot shows the configuration interface for a D-Link DP-300U Fast Ethernet Print Server. The 'Network' tab is selected, displaying the 'TCP/IP Protocol' configuration section. The interface includes fields for IP Address (192.168.0.10), Subnet Mask (255.255.255.0), and Default Gateway (0.0.0.0). Under 'IP Assignment', 'Manually Assign' is selected, with options for RARP, BOOTP, and DHCP. Below this are three SNMP Community sections, each with a Name field and an Access Right dropdown menu. The 'NetBEUI Protocol' section shows a Workgroup of 'WORKGROUP' and maximum limitations for connected stations and sessions, both set to 32. The 'AppleTalk Protocol' section includes an AppleTalk Zone field and configuration for three ports (USB, LPT1, LPT2), each with fields for Chooser Name, Printer Type, PostScript Level, and Font Group. A 'Save' button is located at the bottom left of the configuration area.

**D-Link**  
Building Networks for People

**DP-300U**  
Fast Ethernet Print Server

Home Configuration **Network** Tools Help

**TCP/IP Protocol**

IP Address : 192.168.0.10

Subnet Mask : 255.255.255.0

Default Gateway : 0.0.0.0

IP Assignment : ☒ Manually Assign  
☐ Assign Automatically Using  
☐ RARP  
☐ BOOTP  
☐ DHCP

SNMP Community 1 : Name : public  
Access Right : Read/Write

SNMP Community 2 : Name :  
Access Right : Read Only

SNMP Community 3 : Name :  
Access Right : Read Only

**NetBEUI Protocol**

Workgroup : WORKGROUP

Maximum Limitation : Maximum Connected Stations : 32  
Maximum Number of Sessions : 32

**AppleTalk Protocol**

AppleTalk Zone : \*

USB : Chooser Name : PS-1123D6-U3  
Printer Type : LaserWriter  
PostScript Level : Level 2  
Font Group : Standard 35

LPT1 : Chooser Name : PS-1123D6-P1  
Printer Type : LaserWriter  
PostScript Level : Level 2  
Font Group : Standard 35


LPT2 : Chooser Name : PS-1123D6-P2  
Printer Type : LaserWriter  
PostScript Level : Level 2  
Font Group : Standard 35

Save


## TCP/IP Printing for Windows 2000 (continued)

Go to **Start > Settings > Printers**

Double-click on the **Add Printer** icon.

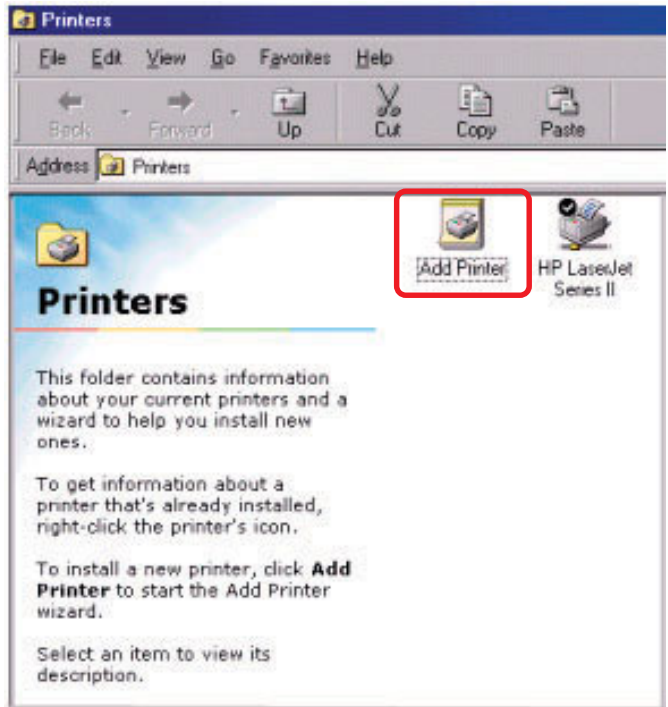


Click **Next**

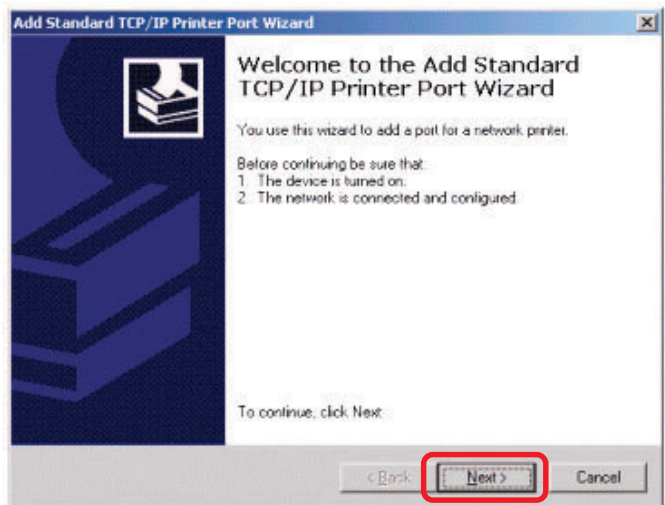


## TCP/IP Printing for Windows 2000 (continued)


Select **Local Printer**

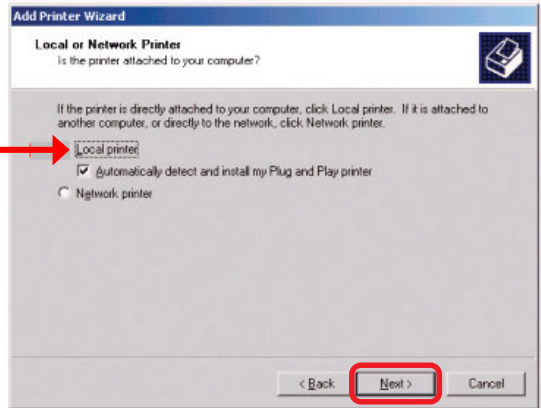

Click **Next**

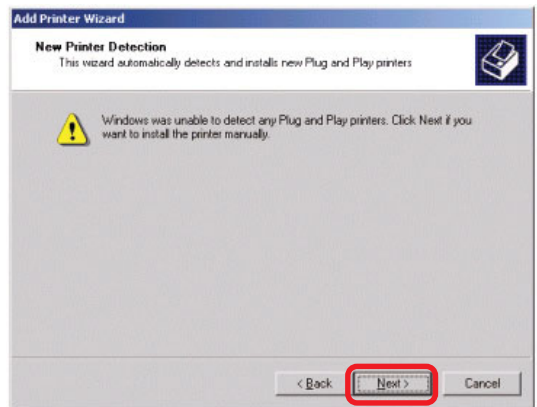


Select **Create a new port** at the pull-down menu, highlight **Standard TCP/IP Port**.

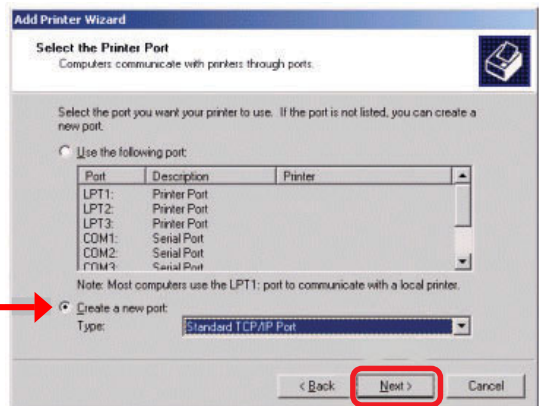


Click **Next**

# TCP/IP Printing for Windows 2000 (continued)

Click **Next**

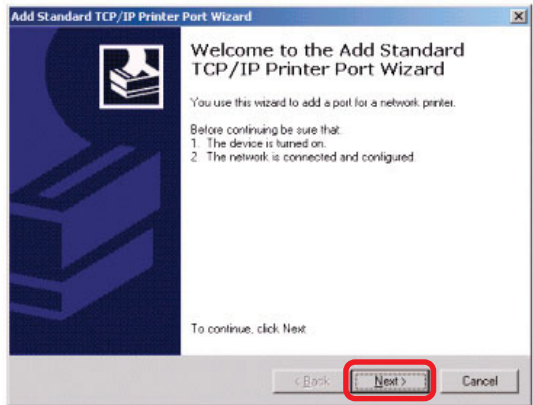

Type in the IP Address of the Print Server in the **Printer Name or IP Address** field. The **Port Name** field will automatically be filled in.

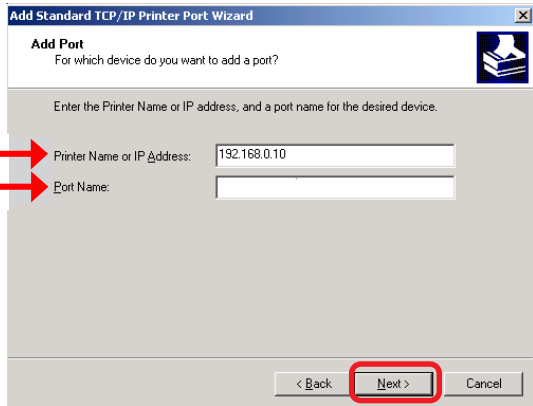

Click **Next**

Select **Custom**

Click **Settings**

The screen on the following page will appear.





## TCP/IP Printing for Windows 2000 (continued)

Select **LPR**

Enter the **Port Name** in the **LPR Settings Queue Name** field.  
The **Port Name** shown here is only an example.

Configure Standard TCP/IP Port Monitor

Port Settings

Port Name: IP\_192.168.0.10

Printer Name or IP Address: 192.168.0.10

Protocol: ☐ Raw ☒ LPR

Raw Settings

Port Number: 515

LPR Settings

Queue Name: PS-1123D6-P1

☐ LPR Byte Counting Enabled

☐ SNMP Status Enabled

Community Name: public

SNMP Device Index: 1

OK Cancel

Click **OK**

Add Standard TCP/IP Printer Port Wizard

**Additional Port Information Required**  
The device could not be identified.

The detected device is of unknown type. Be sure that:

1. The device is properly configured.
2. The address on the previous page is correct.

Either correct the address and perform another search on the network by returning to the previous wizard page or select the device type if you are sure the address is correct.

Device Type

☐ Standard Generic Network Card

☒ Custom Settings...


< Back Next > Cancel

Click **Next**




TCP/IP Printing for Windows 2000 (continued)

Click **Finish**

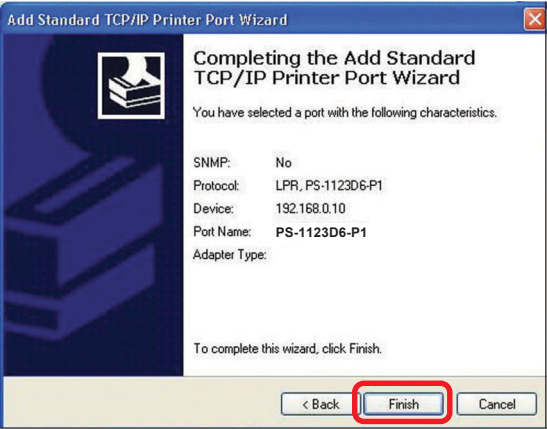


Highlight the printer, as shown. If the desired printer is not on the list, click **Have Disk** and insert the printer driver disk that came with your printer to install the printer drivers.

Click **Next**

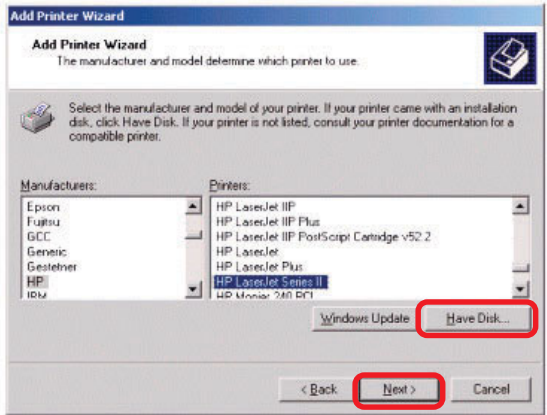


At this screen, you can input a name for the printer.

Click **Next**

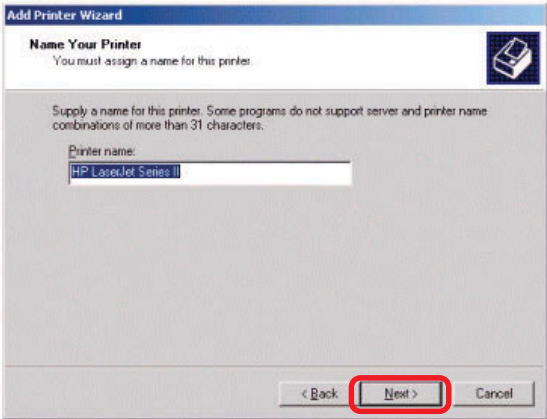


## TCP/IP Printing for Windows 2000 (continued)

Select **Do not share this printer**

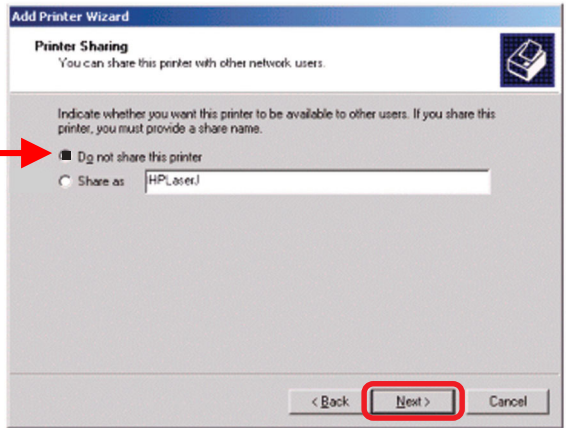

Click **Next**

Select **Yes** to print a test page

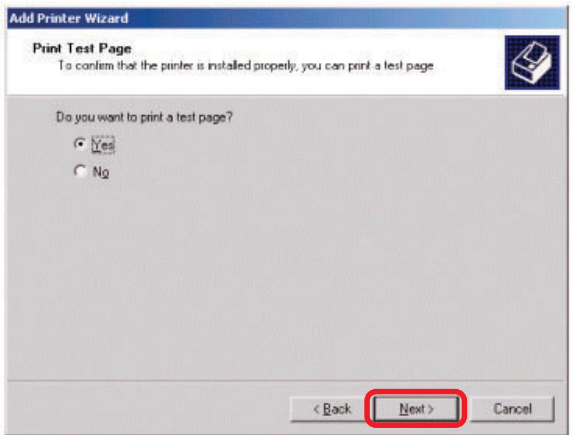

Click **Next**

Click **Finish**



The printer is now ready for printing with Windows 2000 on your network.

# TCP/IP Printing for Windows 98SE/ME

Open the web browser, and type in the IP Address of the DP-300U.  
For example, type <http://192.168.0.10> into the **Location** or **Address** field. Press the **Enter** or (**Return**) Key.

## Note:

The PC's IP Address must be in the same subnet as the Print Server's IP Address for the two devices to communicate. (For example, if your Print Server's IP Address is 192.168.0.10, with a subnet mask of 255.255.255.0, then your computer's IP Address should be 192.168.0.x, where x is a value between 1-254, excluding 10.)



## TCP/IP Printing for Windows 98SE/ME *(continued)*

At the **Configuration** window, write down the **Port Names** for future reference. You will need this information later in the configuration process. The **Port Names** shown here are only examples.

**D-Link**  
Building Networks for People

**DP-300U**  
Fast Ethernet Print Server

**Home** **Configuration** **Network** **Tools** **Help**

**System Device**

Server Name : PS-1123D6

Location :

Admin Contact :

Password : New Password :

Confirm Again :

**Port Setting**

USB : Port Name : PS-1123D6-U3

Description :

Speed : Low

P/L Printer : No

LPT1 : Port Name : PS-1123D6-P1

Description :

Speed : High

P/L Printer : No

LPT2 : Port Name : PS-1123D6-P2

Description :

Speed : High

P/L Printer : No

Save

## TCP/IP Printing for Windows 98SE/ME(continued)

When you select **TCP/IP Protocol** at the **Network** window, the screen below appears. (We recommend that you keep the default settings as shown.) If you need to make changes, make sure to click **Save** after you have made the changes. (You may wish to make a note of the IP Address.)

The screenshot shows the configuration window for the D-Link DP-300U Fast Ethernet Print Server. The window has a blue header with the D-Link logo and the product name. Below the header is a navigation bar with tabs: Home, Configuration, Network (selected), Tools, and Help. The main content area is titled 'TCP/IP Protocol' and contains several sections for configuration.

**TCP/IP Protocol**

IP Address : 192.168.0.10  
Subnet Mask : 255.255.255.0  
Default Gateway : 0.0.0.0  
IP Assignment : ☒ Manually Assign  
☐ Assign Automatically Using  
☐ RARP  
☐ BOOTP  
☐ DHCP

SNMP Community 1 : Name : public  
Access Right : Read/Write  
SNMP Community 2 : Name :  
Access Right : Read Only  
SNMP Community 3 : Name :  
Access Right : Read Only

**NetBEUI Protocol**

Workgroup : WORKGROUP  
Maximum Limitation : Maximum Connected Stations : 32  
Maximum Number of Sessions : 32

**AppleTalk Protocol**

AppleTalk Zone : \*

USB : Chooser Name : PS-1123D6-U3  
Printer Type : LaserWriter  
PostScript Level : Level 2  
Font Group : Standard 35


LPT1 : Chooser Name : PS-1123D6-P1  
Printer Type : LaserWriter  
PostScript Level : Level 2  
Font Group : Standard 35

LPT2 : Chooser Name : PS-1123D6-P2  
Printer Type : LaserWriter  
PostScript Level : Level 2  
Font Group : Standard 35


Save

## TCP/IP Printing for Windows 98SE/ME (continued)

Go to **Start > Settings > Control Panel**  
Double-click on **Network**

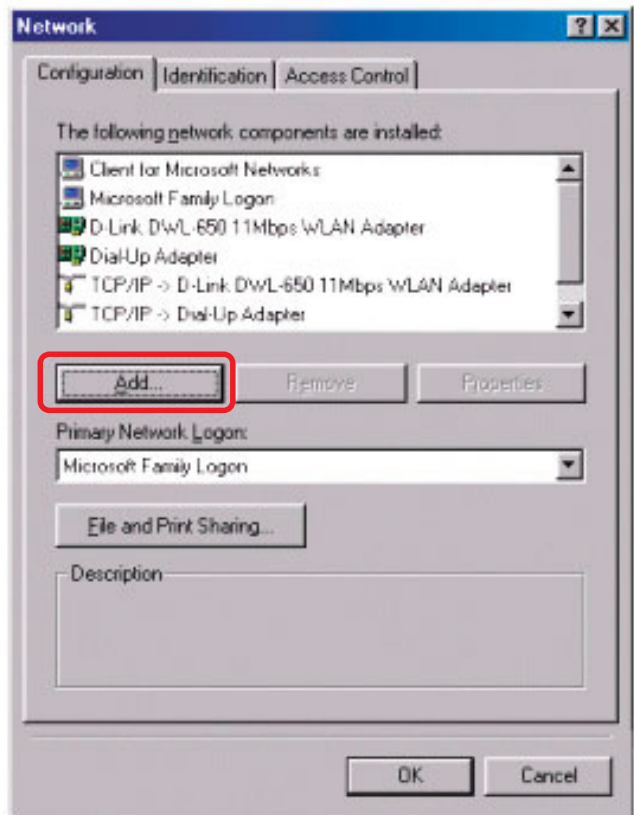

Click **Add**

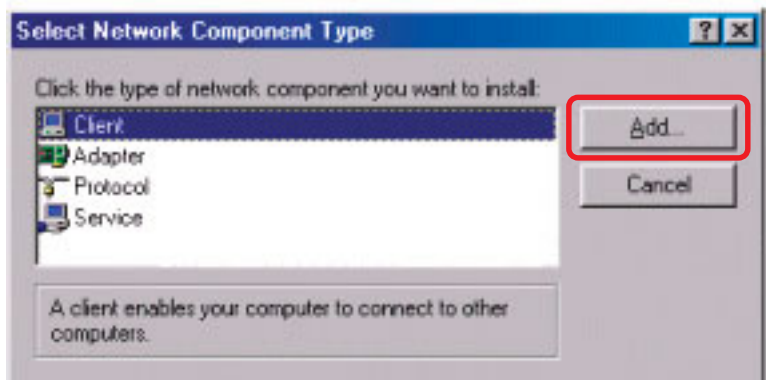


Highlight **Client**


Click **Add**

## TCP/IP Printing for Windows 98SE/ME (continued)

At this window, click **Have Disk**.

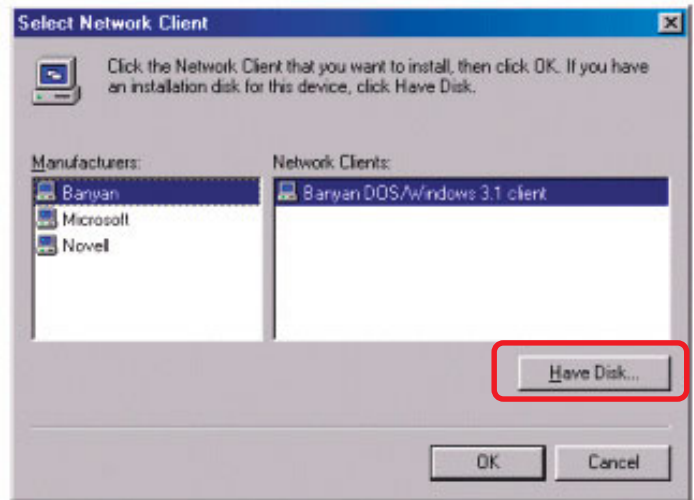

1. Insert the DP-300U CD-ROM into your CD-ROM drive.  
**Select the letter representing the CD-ROM drive on your computer from the pull-down menu.**

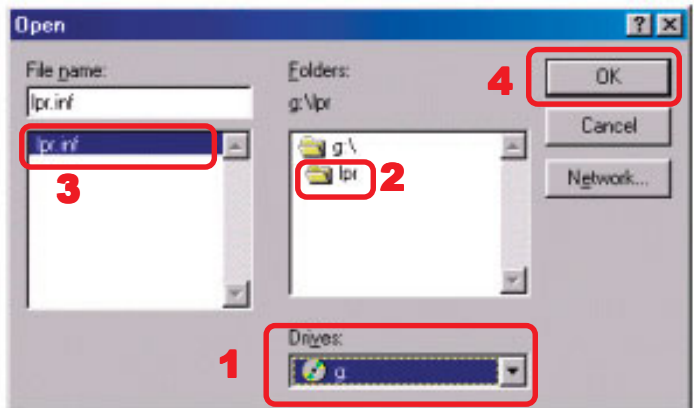

2. Double-click on the folder **lpr**.
3. Highlight **lpr.inf**
4. Click **OK**


Click **OK** to accept the location of the file.






## TCP/IP Printing for Windows 98SE/ME (continued)

Click **OK**

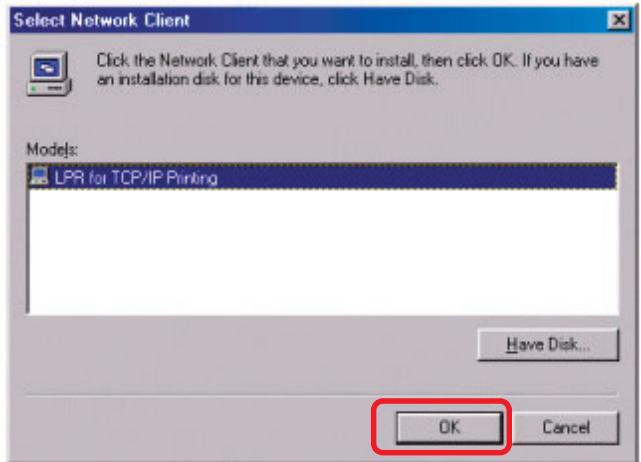

You should now be back to the **Network Properties** Page. Highlight **LPR for TCP/IP Printing**.


Click **Properties**

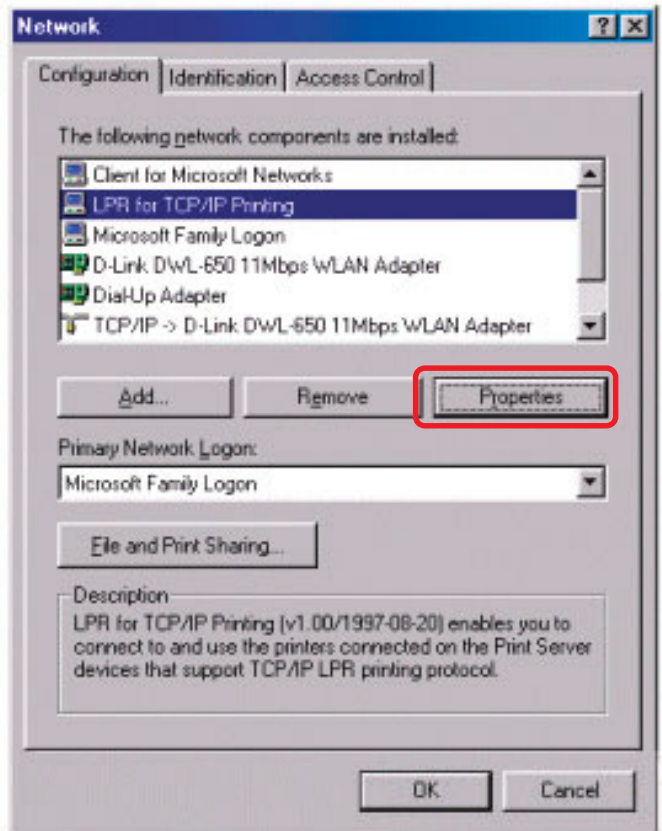




## TCP/IP Printing for Windows 98SE/ME (continued)

Click **Add Port**

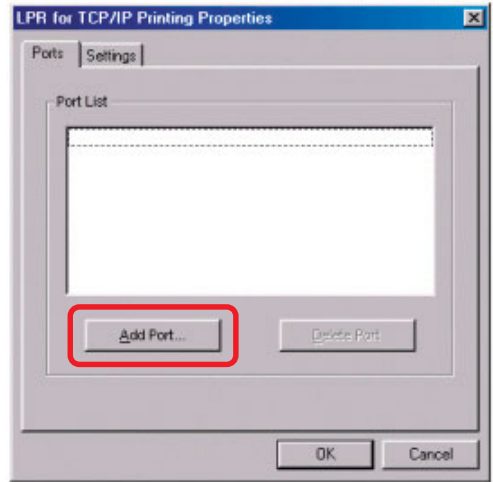


Type in the IP Address of the DP-300U. Make sure the **Port Name** is accurate. (The **Port Name** at right is just an example.)

Click **OK**

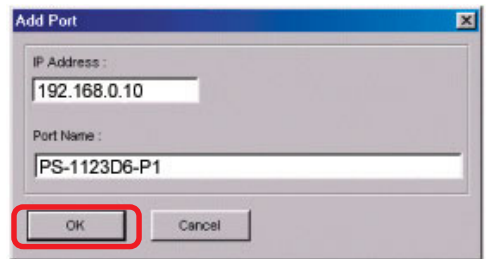


The **Port name** and IP Address will be displayed. (The **Port Name** at right is just an example.)


Click **OK**

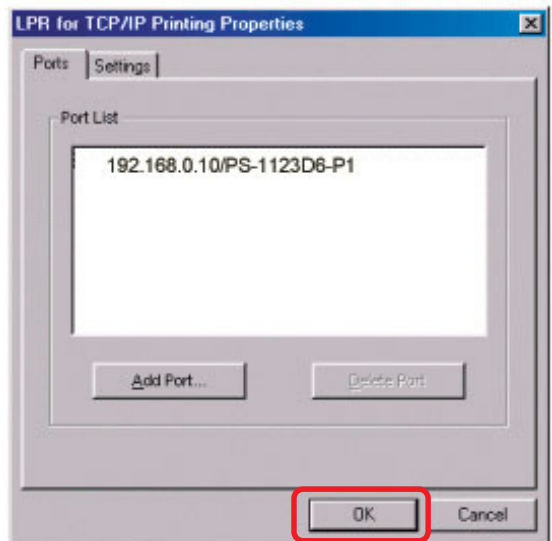

## TCP/IP Printing for Windows 98SE/ME (continued)

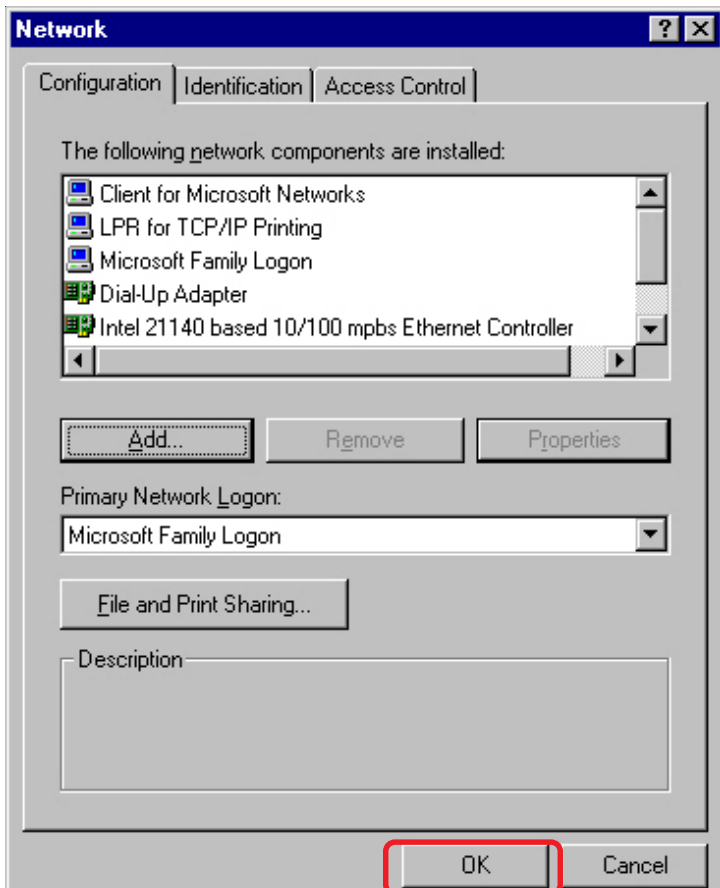

Click **OK**

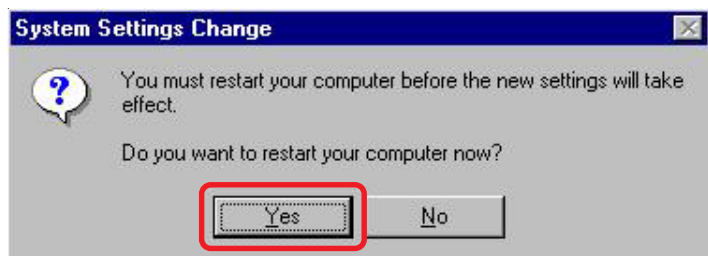

Windows will ask for a restart.


Click **Yes**

## TCP/IP Printing for Windows 98SE/ME (continued)

Once your computer has rebooted, click on  
**Start > Settings > Printers > Add Printer**



When the *Add Printer Wizard* screen appears, Click **Next**.

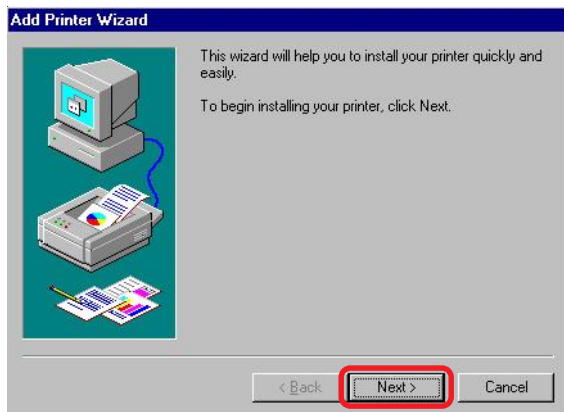


Select *Network Printer*.



Click **Next**

Type in the path if you know it,  
or Click **Browse**.

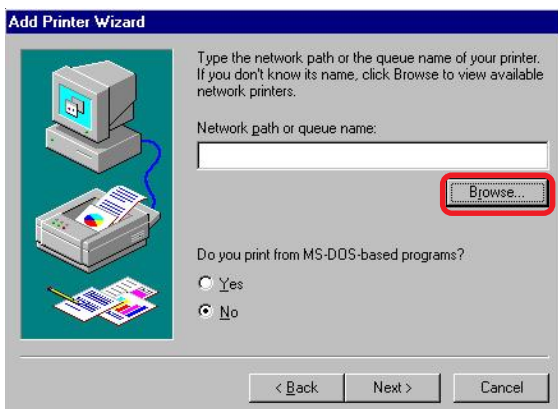

## TCP/IP Printing for Windows 98SE/ME (continued)

At the next screen, browse for the printer port. Highlight the port as shown. (The **Port Name** in this window is just an example.)

Click **OK**

If the network path is not specified, type in the IP Address of the DP-300U and the **Port Name**. (The **Port Name** shown at right is just an example.)





Select **Yes** or **No**, to answer the question: *Do you print from MS-DOS based programs?*

Click **Next**

Highlight the printer, as shown. If the desired printer is not on the list, click **Have Disk** and insert the printer driver disk that came with your printer to install the printer drivers.


Click **Next**

Click **Next**

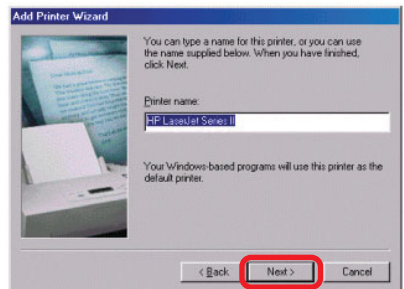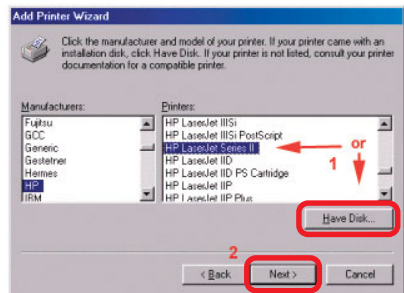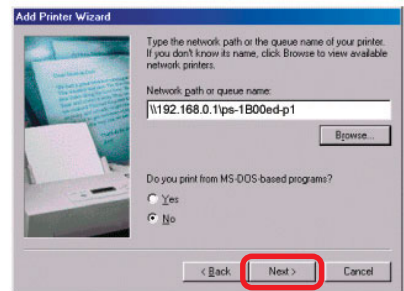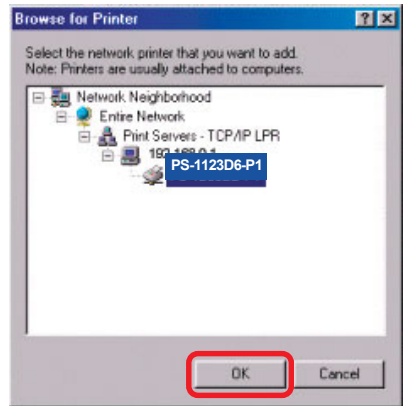


## TCP/IP Printing for Windows 98SE/ME (continued)

Select **Yes** to print a test page.

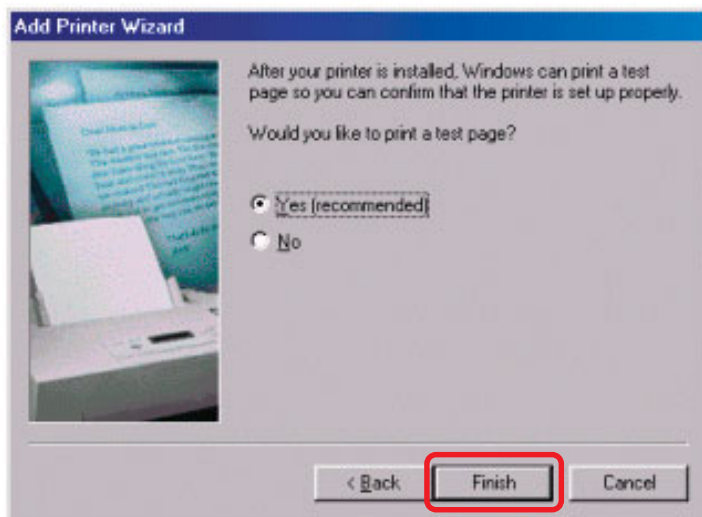

Click **Finish**

Go to **Start > Settings > Printers**  
Check to see that your printer is installed.

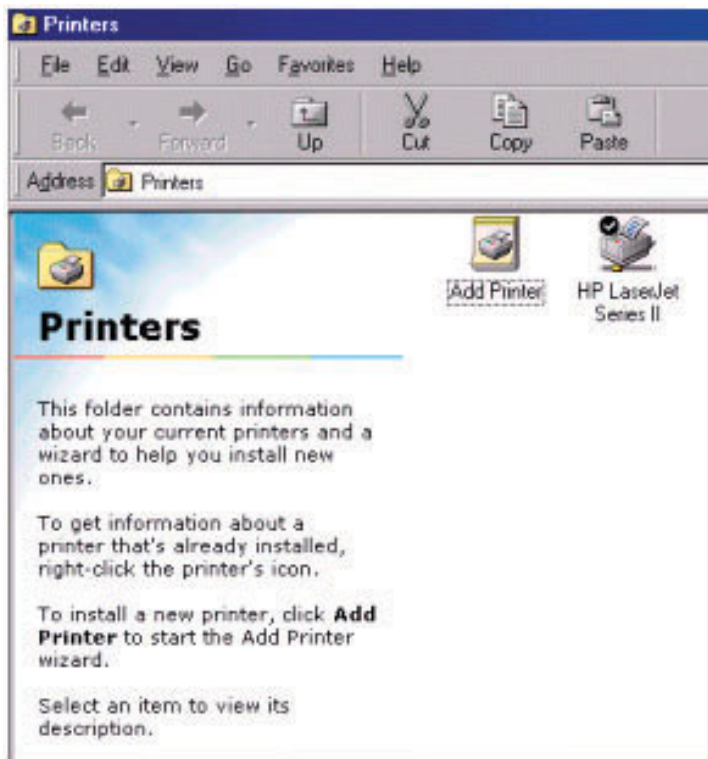

# Unix/Linux Printing

Please refer to the *PS Admin Manual* on the CD included with your purchase for information on setting up the Print Server in Unix/Linux.

# Setting up Apple Talk or LPR Printing *in Mac OS X*


Note: Mac OS printing is supported by Postscript printers only!

With Mac OS X you can use AppleTalk or LPR printers using IP protocols for printing through Print Servers. Follow the instructions below for setting up the Print Server. After attaching the Print Server to your network using the directions provided in the Quick Installation Guide, change the IP Address of your Macintosh to access the Print Server's web configuration.

Open your **System Preferences** window and Click **Network**.




At the **Configure** pull-down menu, select **Manually**

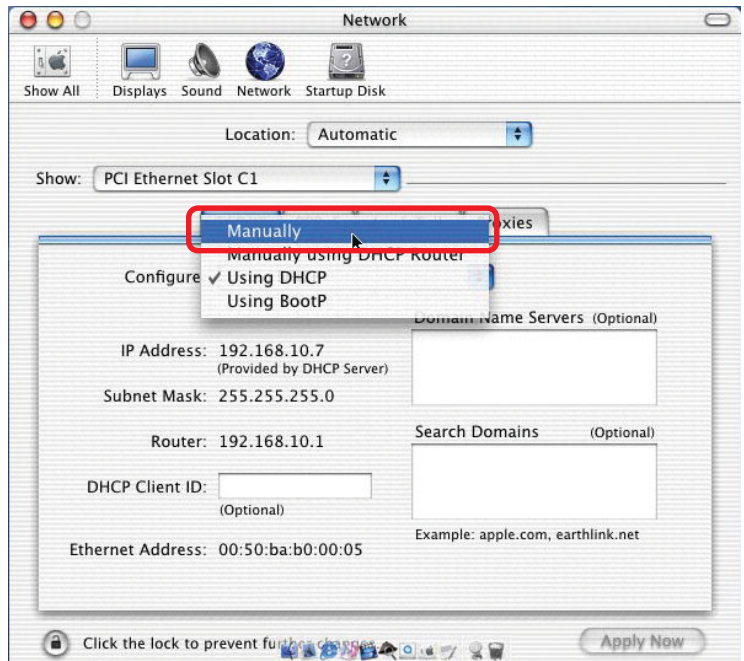


## Setting up Apple Talk or LPR Printing in Mac OS X (continued)

The default IP Address of the Print Server is 192.168.0.10. Manually change your IP Address to 102.168.0.x, where x is any number between 1 and 254 (except 10 which is the IP Address of the Print Server.) The IP Addresses and Subnet Mask shown here are examples only.

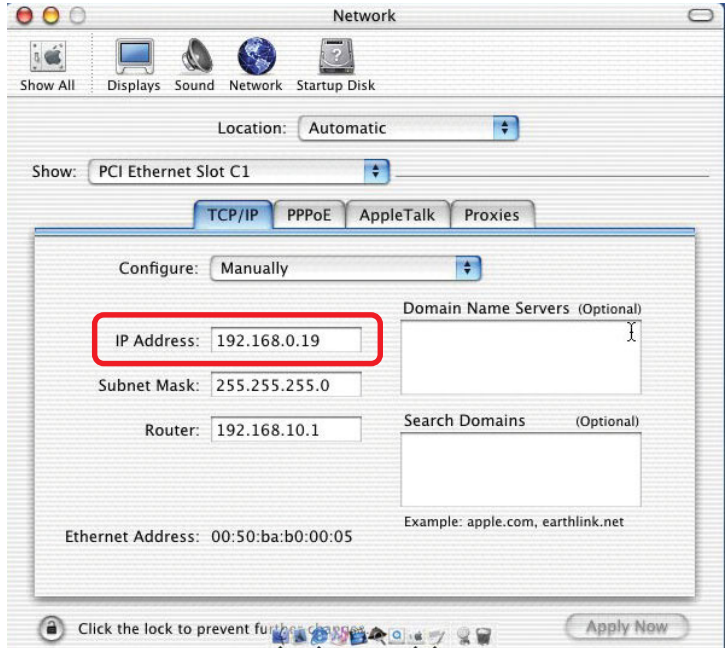

Select the **AppleTalk** tab in this window and check **Make AppleTalk Active**.

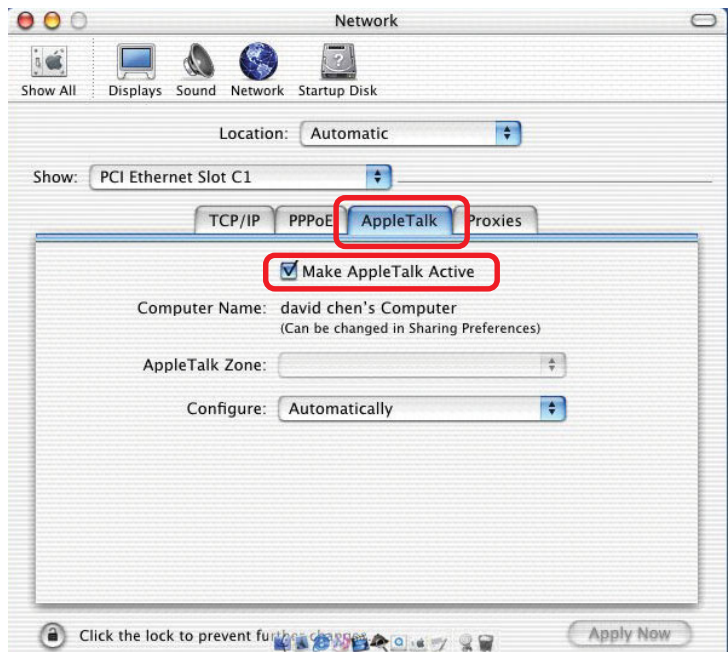



## Setting up Apple Talk or LPR Printing in Mac OS X (continued)

Open your web browser window and type in the IP Address of the DP-300U (192.168.0.10). The web configuration for the DP-300U will appear. Please write down the printer names that appear in this window for future use.

The screenshot shows the D-Link DP-300U web interface. The top navigation bar includes 'Home', 'Configuration', 'Network', 'Tools', and 'Help'. The 'System Status' tab is selected, displaying the following information:

System Status	
Server Name	: PS-1123D6
Model	: DP-300U
Hardware Version	: A1
Firmware Version	: 1.10 (2003-01-03)
MAC Address	: 00 03 1B 11 23 D6
IP Address	: 192.168.0.10 (Manual)
Up Time	: 0 days, 00:00:12

Printer Status	
USB	
Printer Name	: PS-1123D6-U3
Printer Status	: Off line
LPT1	
Printer Name	: PS-1123D6-P1
Printer Status	: Off line
LPT2	
Printer Name	: PS-1123D6-P2
Printer Status	: Off line

A 'Refresh' button is located at the bottom of the printer status section.


Select the **Network** tab in the configuration window. Here you can modify the IP Address of the Print Server to conform to your network, if necessary. If AppleTalk will be used as the default printing protocol, the DP-300U's IP Address will not need to be altered.

The screenshot shows the D-Link DP-300U web interface with the 'Network' tab selected. The 'TCP/IP Protocol' section is expanded, showing the following configuration:


TCP/IP Protocol	
IP Address	: 192.168.0.10
Subnet Mask	: 255.255.255.0
Default Gateway	: 0.0.0.0
IP Assignment	: <input checked="" type="radio"/> Manually Assign <input type="radio"/> Assign Automatically Using <input type="checkbox"/> RARP <input type="checkbox"/> BOOTP <input type="checkbox"/> DHCP
SNMP Community 1 : Name	: public
Access Right	: Read/Write
SNMP Community 2 : Name	:

## Setting up Apple Talk or LPR Printing in Mac OS X (continued)


To print, open a document and select **File > Print** from the menu.

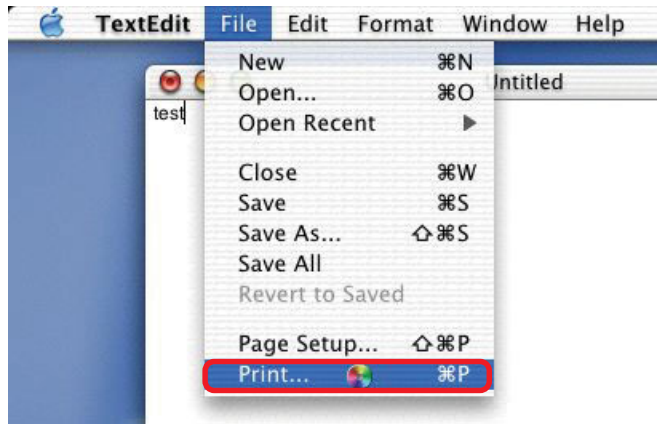

Select **Edit Printer List** from the **Printer** dialog box.

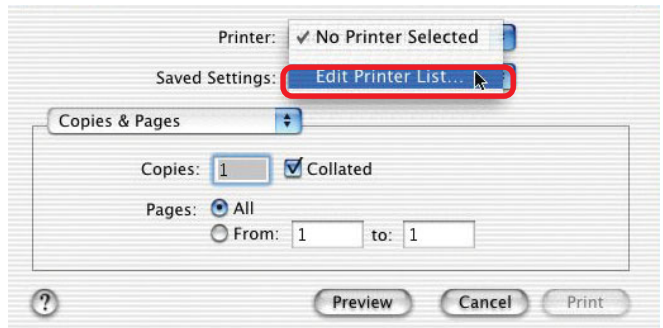


Click **Add Printer**

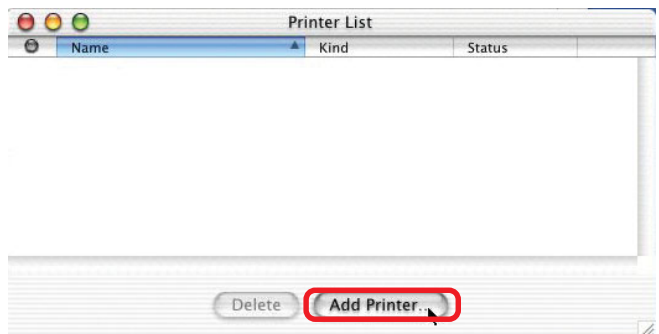


# Setting up Apple Talk or LPR Printing in Mac OS X (continued)

Select the printing protocol preferred, **AppleTalk** or **LPR Printers using IP**. In this example, **AppleTalk** has been selected.

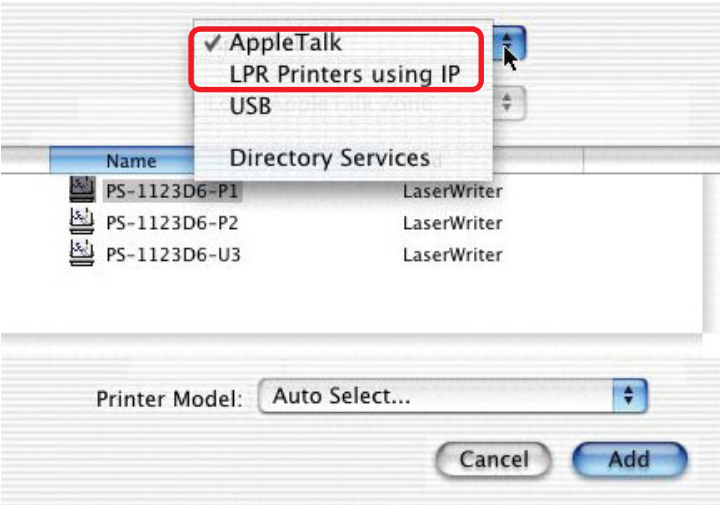

**AppleTalk** protocol:  
After selecting **AppleTalk** the **Port Names** of the Print Server will be displayed. The **Port Names** shown here are examples only.

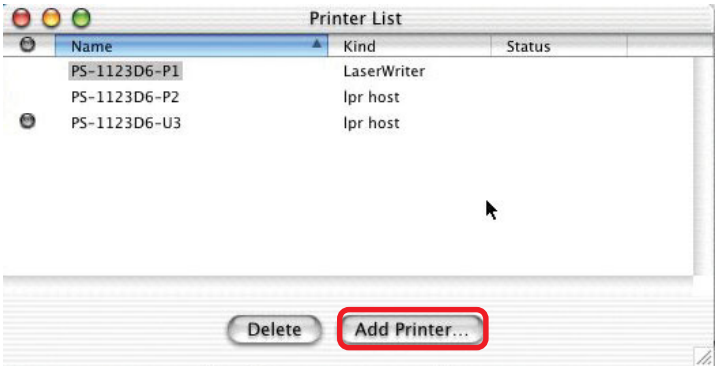

Click on the Port to which the post-script printer is connected.

Then select the printer model from the dialog box displayed here.

Click **Add Printer** and the Printer Port configuration is complete.

Select the Printer Port just configured in the Print window.

Click **Print** to print your document.

## Setting up Apple Talk or LPR Printing in Mac OS X (continued)

### LPR Printers using IP protocol:

When you select **LPR Printers using IP Protocol**, this window will appear.

Type the IP Address of the Print Server into the **LPR Printer's Address field**.

In the **Queue Name** field, type in the **Port Name** of the post-script printer that is connected to the Print Server. The **Port Name** illustrated here is only an example.

Select the printer model from the dialog box.

Click **Add** and the process is complete.

Close all Print Center windows, select the Printer Port that was just selected.

Click **Print** to print the document.

LPR Printers using IP

LPR Printer's Address: 192.168.0.10  
Internet address or DNS name

☐ Use Default Queue on Server

Queue Name: PS-1123D6-P1

Printer Model: Generic

Cancel Add

# Setting up Apple Talk Printing in Mac OS 9

Note: Mac OS printing is supported for Postscript printers only!

The AppleTalk network protocol is used with computers using the MacOS operating system. It can be used for network communications over standard Ethernet or Fast Ethernet using the EtherTalk transport, or over a proprietary low-speed LocalTalk transport.

Your Print Server can be used for network printing to PostScript printers. You can print from any MacOS computer connected to your Ethernet network, either directly using an EtherTalk connection, or indirectly through a LocalTalk-to-EtherTalk router.

**NOTE:** *The Chooser name of a printer connected to one of the Print Server's ports is the same as its **Port Name**. If you are using AppleTalk printing, you will need to make sure that every **Port Name** is unique among all of the network printers in your AppleTalk zone. The **Port Names** shown in this manual are examples only.*

## Setting up the Print Server for AppleTalk Printing

To set up your Print Server so that it can be used for AppleTalk printing:

- Make sure the AppleTalk protocol is enabled in your Macintosh.
- Change the IP Address on one of the computers on your network to 192.168.0.x, where x is any number between 11-254.
- Type 192.168.0.10 into the address field of your web browser. 192.168.0.10 is the default IP Address of the DP-300U.
- Select the Network tab and scroll to the bottom to the AppleTalk protocol section
- If your AppleTalk network is divided into AppleTalk *zones*, you will have to specify which zone the Print Server should be in. You should locate the Print Server in the same zone as most of the users who will be using it. If your network is not divided into zones, the AppleTalk Zone field should contain a single asterisk “\*”.

## Setting up Apple Talk Printing (continued)

For each Printer Port that will be used for AppleTalk printing, you may need to change the AppleTalk Port Settings. Press the appropriate Port Setting button to open the AppleTalk Port Configuration dialog window.

In this window you will see the Port's **Chooser Name** (which is the same as the **Port Name**). **Port Names** are examples only. Here you can change the Port's Settings:

**Printer Type** - Describes the type of printer. Most PostScript printers should use the LaserWriter type.

**PostScriptLevel** - Describes whether the printer supports Level 1 PostScript or Level 2 PostScript. This information can usually be found in the printer's documentation or on the printer test page.

**Font Group** - Describes the print font options supported by the printer such as No Font, All Font, Standard 35, and Standard 13.

Click **Save** to save the changes made to the settings. The Print Server will restart itself and begin serving print jobs.

The screenshot shows the 'AppleTalk Protocol' configuration window. It has two main sections: 'NetBEUI Protocol' and 'AppleTalk Protocol'. Under 'NetBEUI Protocol', there are fields for 'Workgroup' (set to 'WORKGROUP'), 'Maximum Limitation : Maximum Connected Stations' (set to '32'), and 'Maximum Number of Sessions' (set to '32'). Under 'AppleTalk Protocol', there is an 'AppleTalk Zone' field (set to '\*'). Below this, there are three sections for different ports: 'USB', 'LPT1', and 'LPT2'. Each section contains fields for 'Chooser Name', 'Printer Type' (set to 'LaserWriter'), 'PostScript Level' (set to 'Level 2'), and 'Font Group' (set to 'Standard 35'). A 'Save' button is located at the bottom left of the window.

# Printing from MacOS Client Workstations

The exact procedure for selecting a PostScript printer connected to your Print Server may vary slightly, depending on what printer driver version you are using. The procedure described below assumes you are using the LaserWriter 8.


To choose a printer connected to your Print Server as your MacOS workstation's default printer,

Open the Chooser by selecting **Chooser** from the Apple menu.

Select the **LaserWriter 8** icon on the left. Make sure that AppleTalk is set to **Active**.


A list of all networked PostScript printers will be displayed:

Double-click the name of the **Printer Port** you wish to use. The **Printer Ports** shown are examples only.

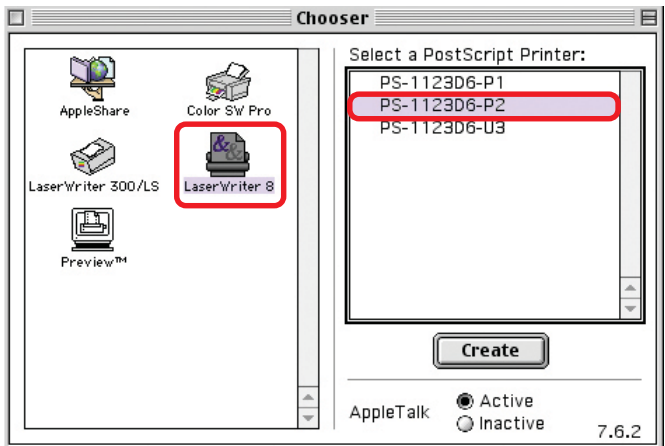


## Printing from MacOS Client Workstations (continued)

If you have not previously set this printer as the default, your computer will prompt you for a PostScript Printer Description file. Choose **Select PPD**.

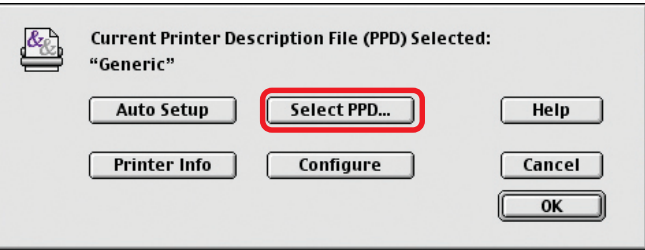

Select the appropriate printer description file for your printer.

Click **Open**.  
(If your printer is not listed, click **Generic** to use a generic printer description.)

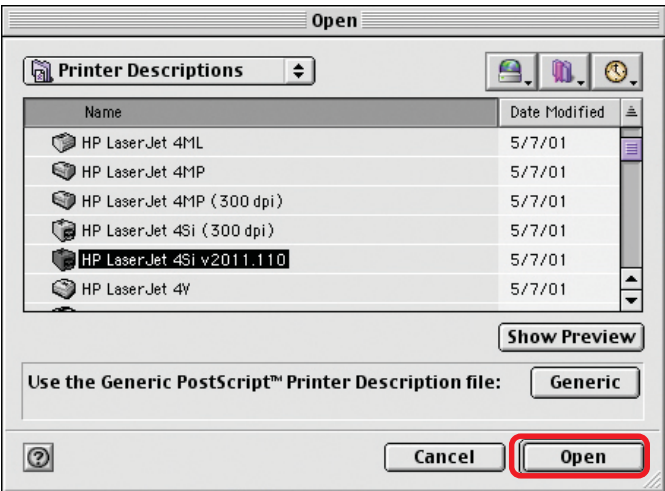

If you wish to access this setting in the future, you can use the **Setup** button in the Chooser window.

The selected printer will become your computer's default printer. You may need to choose **Page Setup** in any applications you have open.



# Port Pinouts

The following table lists the pinouts of the print server's 25-pin parallel port connector (identical to the connector used on most personal computers), as well as the 36-pin Centronics connector used on most printers. Signal names beginning with *n* are active-low signals.

25-pin	Centronics	Signal	Source
1	1	nStrobe	Host
2	2	Data 1	Bi-directional
3	3	Data 2	Bi-directional
4	4	Data 3	Bi-directional
5	5	Data 4	Bi-directional
6	6	Data 5	Bi-directional
7	7	Data 6	Bi-directional
8	8	Data 7	Bi-directional
9	9	Data 8	Bi-directional
10	10	nAck	Printer
11	11	Busy	Printer
12	12	PErrror	Printer
13	13	Select	Printer
14	14	nAutoFd	Host
15	32	nFault	Printer
16	31	nInit	Host
17	36	nSelectIn	Host
18-25	16,17,19-30	Ground	

# Networking Basics

## Using the Network Setup Wizard in Windows XP

In this section you will learn how to establish a network at home or work, using **Microsoft Windows XP**.

*Note: Please refer to websites such as <http://www.homenethelp.com> and <http://www.microsoft.com/windows2000> for information about networking computers using Windows 2000, ME or 98SE.*

Go to **Start>Control Panel>Network Connections**




When this screen appears, Click **Next**

## Networking Basics (continued)

Please follow all the instructions in this window:

Network Setup Wizard

Before you continue...



Before you continue, review the [checklist for creating a network](#).

Then, complete the following steps:

- Install the network cards, modems, and cables.
- Turn on all computers, printers, and external modems.
- Connect to the Internet.

When you click Next, the wizard will search for a shared Internet connection on your network.

< Back


Next >

Cancel

In this window, select the best description of your computer. If your computer connects to the internet through a gateway/router, select the second option as shown.

Network Setup Wizard

Select a connection method.



Select the statement that best describes this computer:

☐ This computer connects directly to the Internet. The other computers on my network connect to the Internet through this computer.  
[View an example.](#)

☒ This computer connects to the Internet through another computer on my network or through a residential gateway.  
[View an example.](#)

☐ Other

Learn more about [home or small office network configurations](#).

< Back

Next >


Cancel

Click **Next**

59

## Networking Basics (continued)

Enter a **Computer description** and a **Computer name** (optional.)

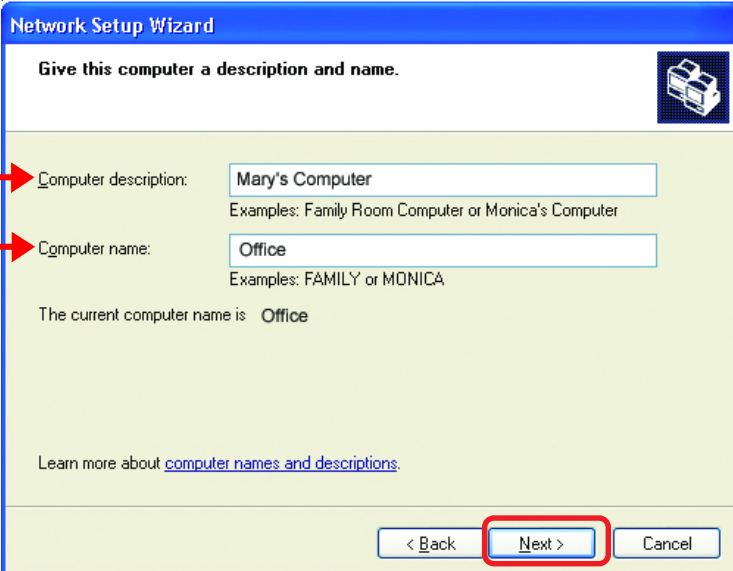

The screenshot shows the 'Network Setup Wizard' window with the title 'Give this computer a description and name.' It contains two text input fields: 'Computer description' with the value 'Mary's Computer' and 'Computer name' with the value 'Office'. Below the 'Computer name' field, it says 'The current computer name is Office'. At the bottom right, there are three buttons: '< Back', 'Next >', and 'Cancel'. The 'Next >' button is highlighted with a red rectangle. Red arrows point from the text instructions to the respective input fields.

Give this computer a description and name.

Computer description:   
Examples: Family Room Computer or Monica's Computer

Computer name:   
Examples: FAMILY or MONICA


The current computer name is Office

Learn more about [computer names and descriptions](#).

< Back   **Next >**   Cancel

Click **Next**

Enter a **Workgroup** name. All computers on your network should have the same **Workgroup name**.

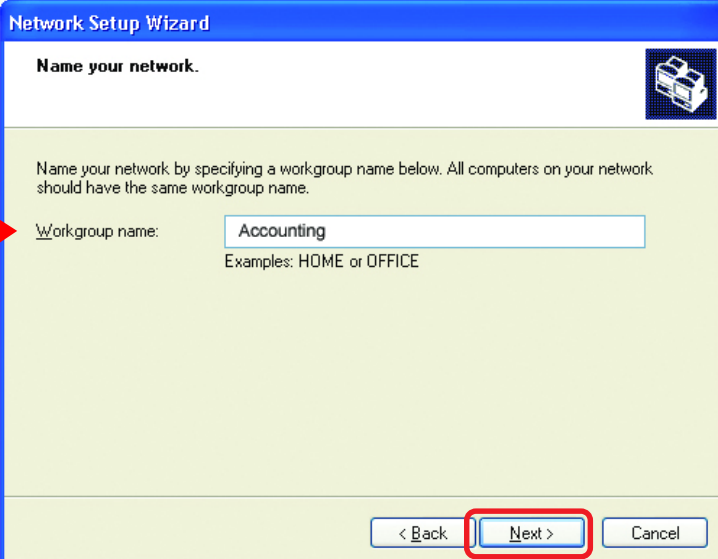

The screenshot shows the 'Network Setup Wizard' window with the title 'Name your network.' It contains a text input field for 'Workgroup name' with the value 'Accounting'. Below the field, it says 'Examples: HOME or OFFICE'. At the bottom right, there are three buttons: '< Back', 'Next >', and 'Cancel'. The 'Next >' button is highlighted with a red rectangle. A red arrow points from the text instructions to the 'Workgroup name' input field.

Name your network.

Name your network by specifying a workgroup name below. All computers on your network should have the same workgroup name.

Workgroup name:   
Examples: HOME or OFFICE


< Back   **Next >**   Cancel

Click **Next**


# Networking Basics (continued)

Please wait while the **Network Setup Wizard** applies the changes.

When the changes are complete, Click **Next**.

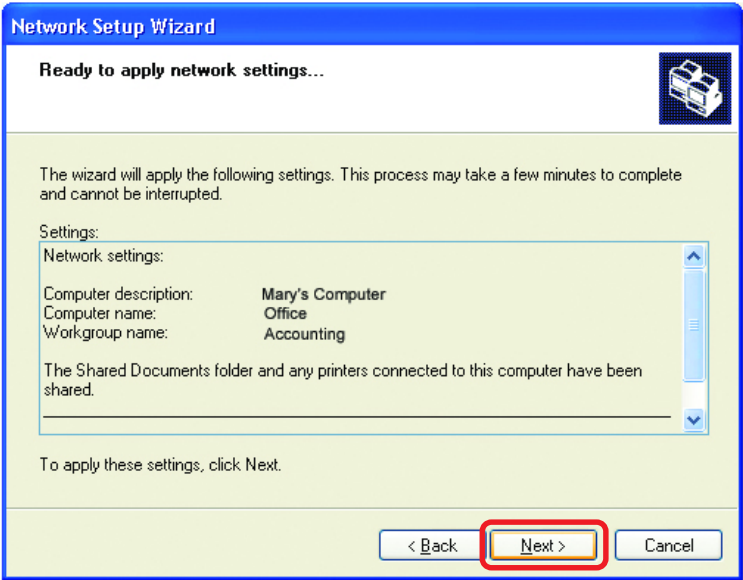


Please wait while the **Network Setup Wizard** configures the computer. This may take a few minutes.

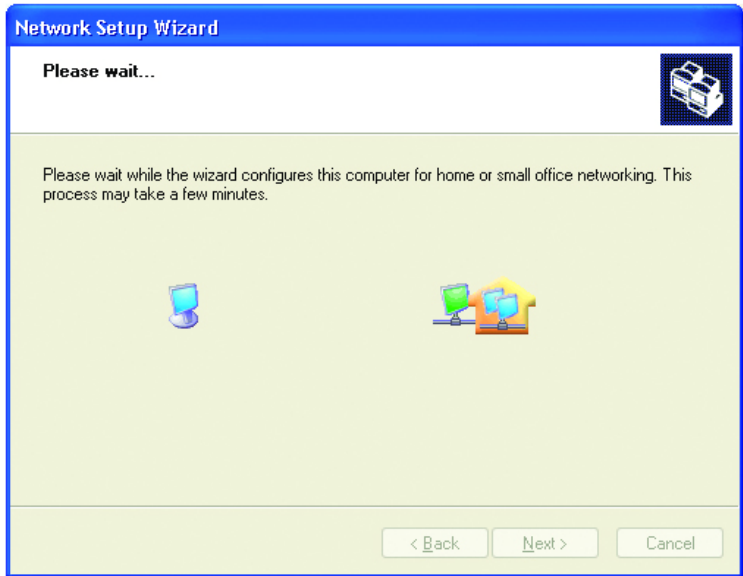


## Networking Basics (continued)

In this window, select the best option. In this example, **Create a Network Setup Disk** has been selected. You will run this disk on each of the computers on your network.

Click **Next**

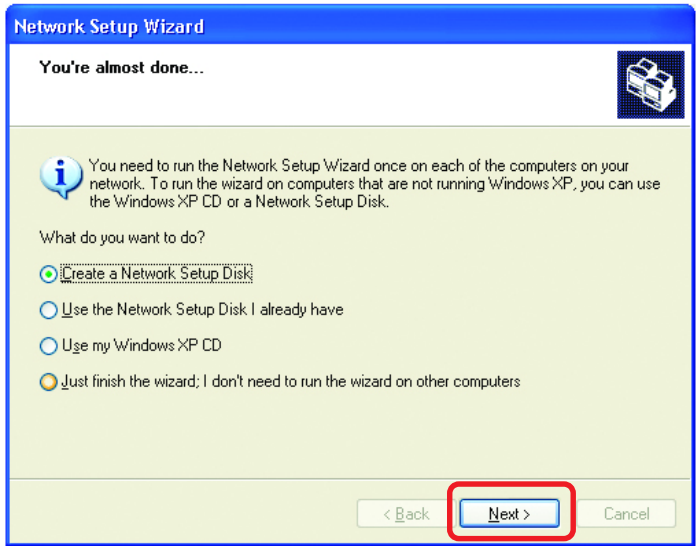


Insert a disk into the Floppy Disk Drive, in this case drive **A**.

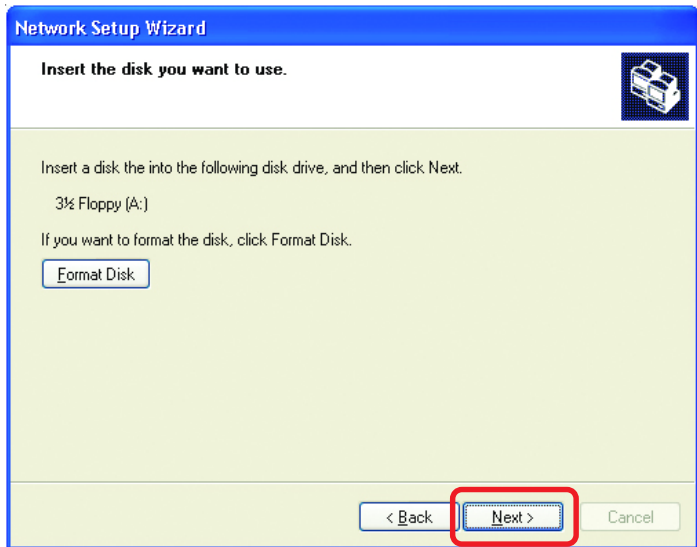


Format the disk if you wish, and Click **Next**

## Networking Basics (continued)


Please wait while the **Network Setup Wizard** copies the files.

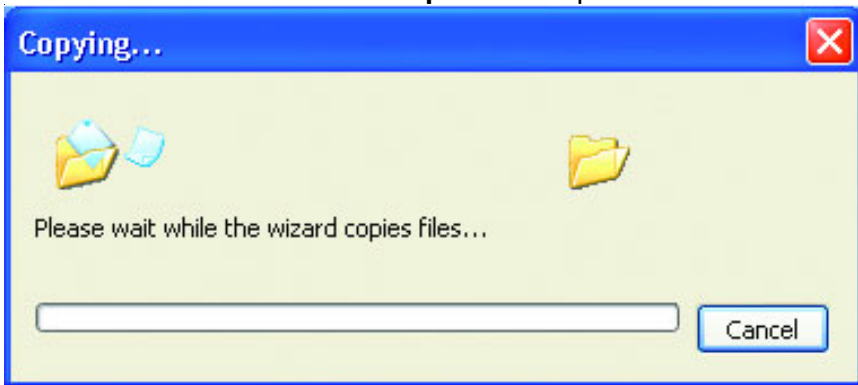


Please read the information under **Here's how** in the screen below. After you complete the **Network Setup Wizard** you will use the **Network Setup Disk** to run the **Network Setup Wizard** once on each of the computers on your network. To continue, Click **Next**.

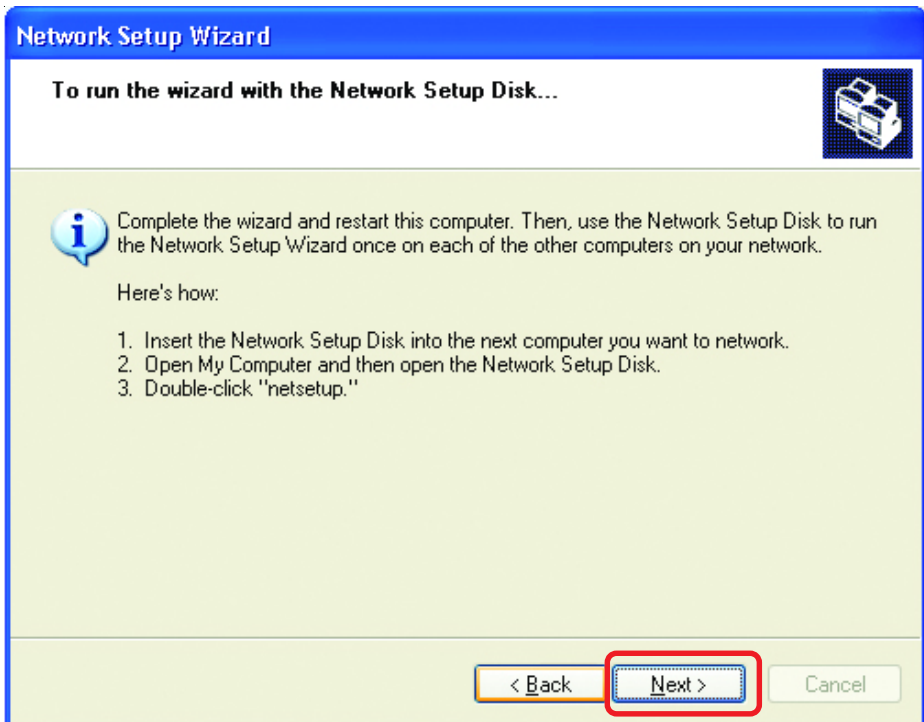

## Networking Basics (continued)

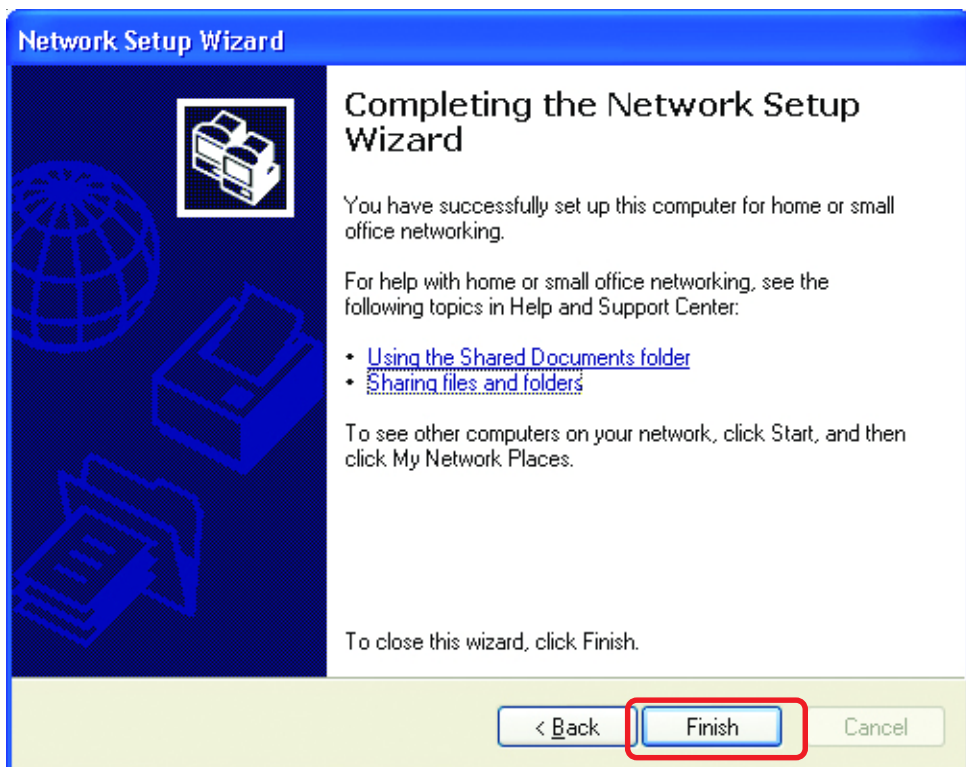

The new settings will take effect when you restart the computer. Click **Yes** to restart the computer.

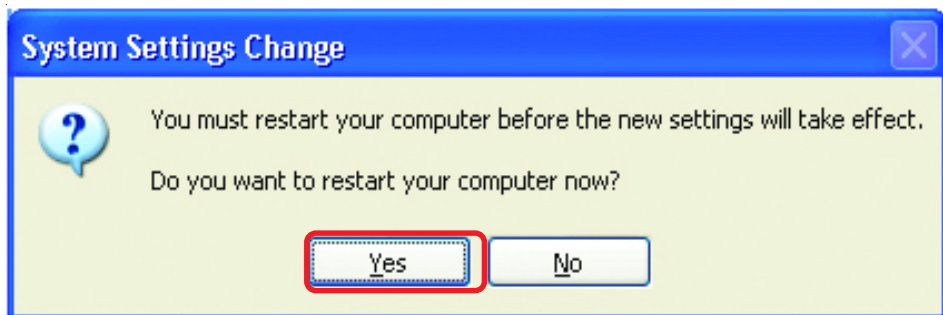

You have completed configuring this computer. Next, you will need to run the **Network Setup Disk** on all the other computers on your network. After running the **Network Setup Disk** on all your computers, your new network will be ready to use.




## Networking Basics (continued)


### How to assign a Name to your computer

To name your computer, please follow these directions in **Windows XP**:

- Click **Start** (in the lower left corner of the screen)
- Right-click **My Computer**
- Select **Properties** and Click

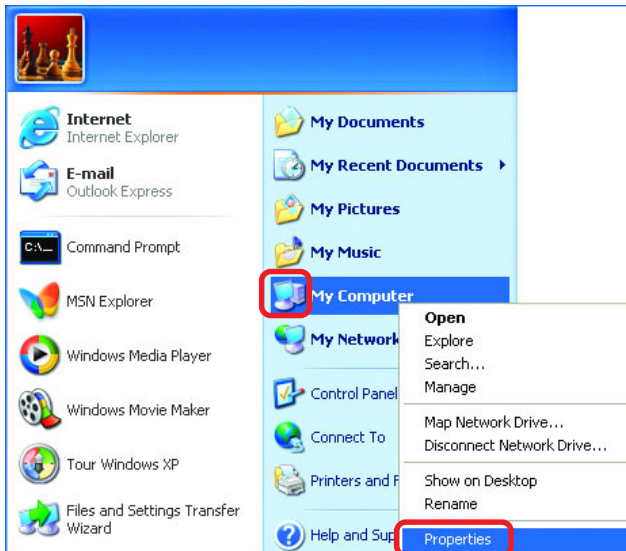


- Select the **Computer Name** tab in the System Properties window.
- You may enter a **Computer Description** (optional).
- To rename the computer and join a domain, Click **Change**.

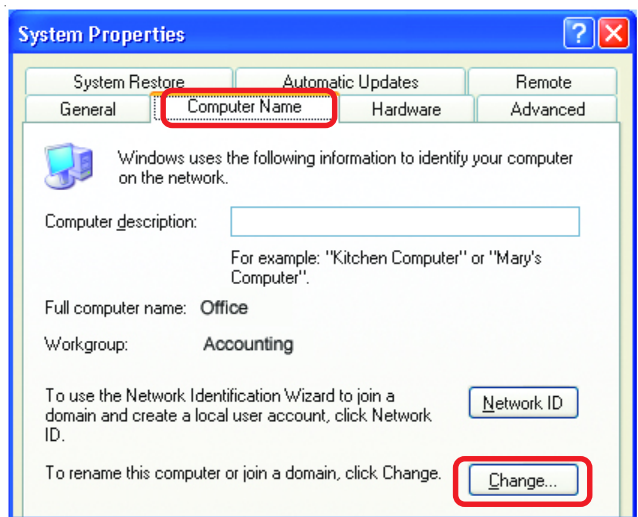

## Networking Basics (continued)

### How to assign a Name to your Computer

- In this window, enter the **Computer name**
- Select **Workgroup** and enter the name of the **Workgroup**
- All computers on your network must have the same **Workgroup** name.
- Click **OK**

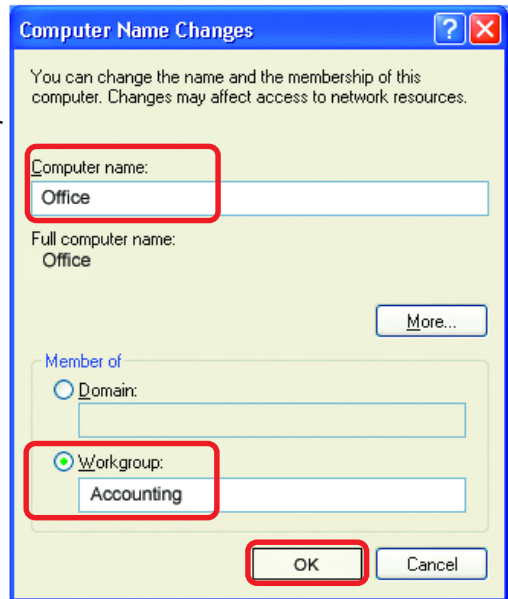

### How to find your IP Address in Windows XP

The adapter-equipped computers in your network must be in the same IP Address range. To verify the IP Address of the adapter, please do the following:

- Right-click on the **Local Area Connection icon** in the task bar
- Click on **Status**




## Networking Basics (continued)

### How to find your IP Address in Windows XP

This window will appear.

- Click the **Support** tab

- Click **Close**

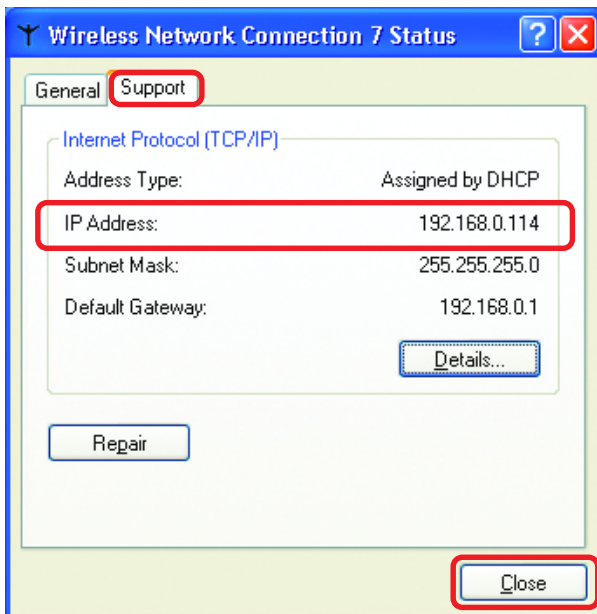


### Assigning a Static IP Address in Windows XP/2000

*Note: Residential Gateways/Broadband Routers will automatically assign IP Addresses to the computers on the network, using DHCP (Dynamic Host Configuration Protocol) technology. If you are using a DHCP-capable Gateway/Broadband Router you will not need to assign Static IP Addresses.*

If you are not using a DHCP capable Gateway/Broadband Router, or you need to assign a Static IP Address, please follow these instructions:


- Go to **Start**
- Double-click **Control Panel**

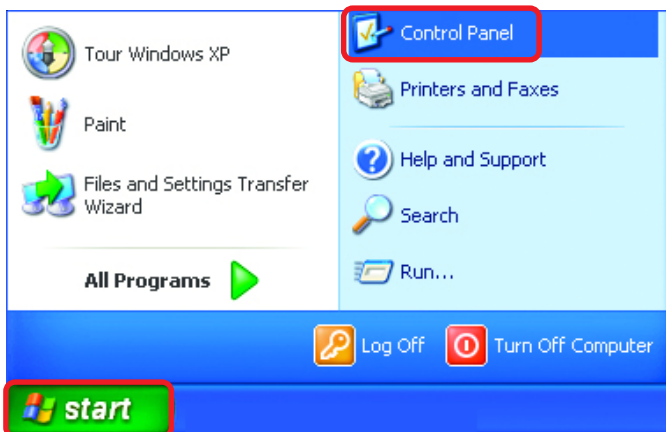

## Networking Basics (continued)


### Assigning a Static IP Address in Windows XP/2000

- Double-click **Network Connections**

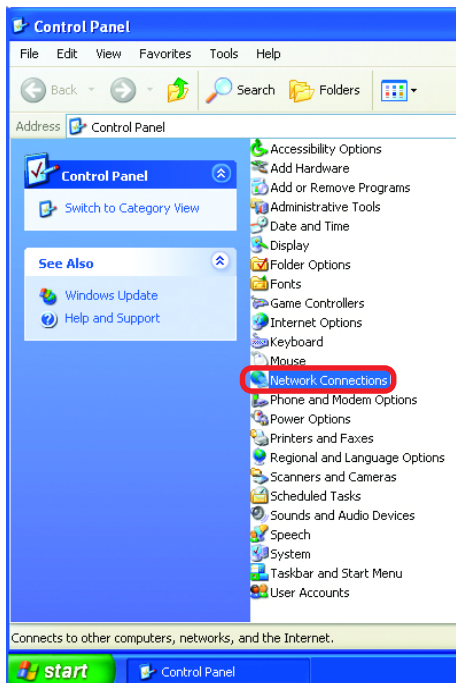

- Right-click **Local Area Connections**



- Double-click **Properties**

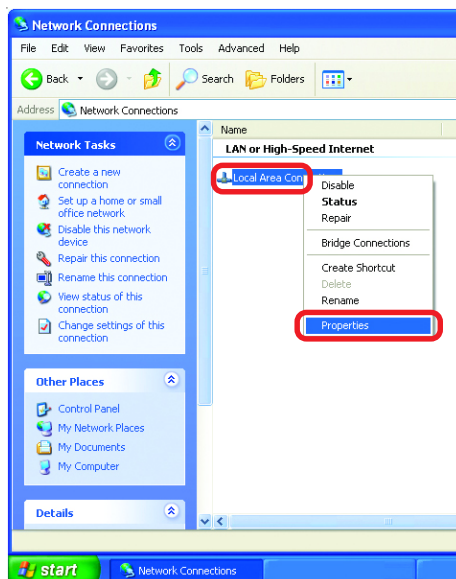

## Networking Basics (continued)

### Assigning a Static IP Address in Windows XP/2000

- Click **Internet Protocol (TCP/IP)**
- Click **Properties**
- Select **Use the following IP Address** in the **Internet Protocol (TCP/IP) Properties** window.
- Input your **IP Address and subnet mask**. (The IP Addresses on your network must be within the same range. For example, if one computer has an IP Address of 192.168.0.2, the other computers should have IP Addresses that are sequential, like 192.168.0.3 and 192.168.0.4. The subnet mask must be the same for all the computers on the network.)
- Input your **DNS server addresses**. (Note: If you are entering a DNS server, you must enter the IP Address of the Default Gateway.)

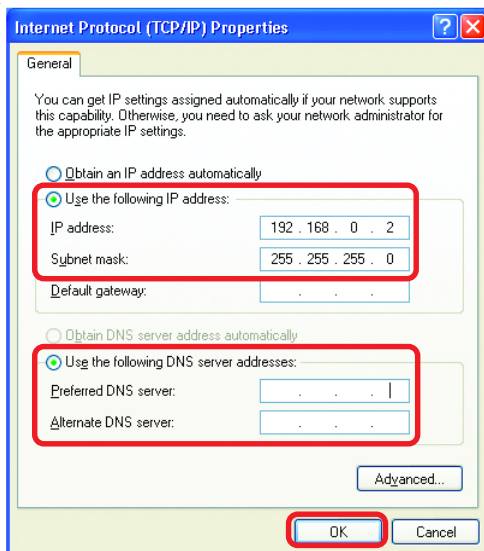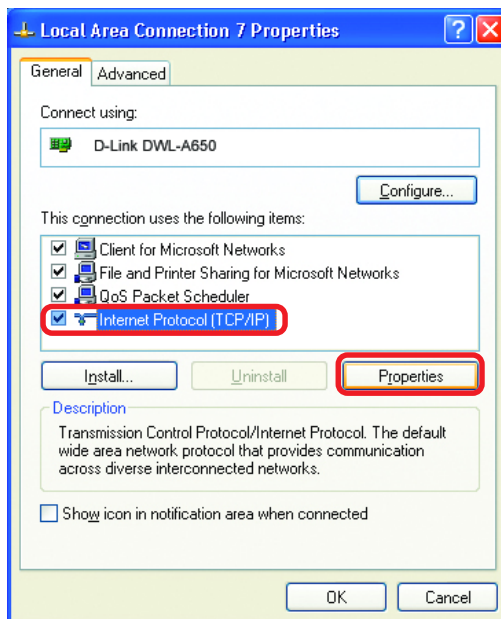

*The DNS server information will be supplied by your ISP (Internet Service Provider.)*

- Click **OK**

# Technical Specifications

## Printer Connection

**Printer Port:** IEEE 1284 standard bidirectional parallel interface with 25-pin connector.  
USB port (ver 1.1)

**Bidirectional Communication:** Hewlett-Packard PJI (Printer Job Language) standard for bidirectional communication.

## Network Connection

**Network Standards:** IEEE 802.3 10Base-T Ethernet

**Network Data Transfer Rate:** 10/100 Mbps (megabits per second)

**Network Connector:** RJ-45 connector for 10Base-T Category 5 twisted-pair connection

## Network Protocols

**Ethernet Frame Types:** 802.2, 802.3, Ethernet II, SNAP (auto-switching)

**Transport Protocols:** TCP/IP, NetBEUI, AppleTalk/EtherTalk, LPR

**TCP/IP Protocols Supported:** BOOTP, SNMP, Telnet, TFTP, FTP, LPD, RARP, DHCP

## Management and Diagnostics

**Standard:** SNMP

**MIBs:** MIB-II (RFC 1213)

**Diagnostic LED Indicators:** Pw, Lk/Act, LPT1, LPT2, USB

## Environmental and Physical

**Power Supply:** External power supply providing 5V/ 2.5A

**Dimensions:** 7.58" x 4.66" x 1.22" (192.5mm x 118.4mm x 31mm)

**Weight:** approx. 10.3 oz. (292g)

**Operating Temperature:** 32 to 122°F (0 to 50°C)

**Storage Temperature:** -13 to 131°F (-25 to 55°C)

**Humidity:** 5% to 95% non-condensing

**Emissions:** FCC Class B, CE Class B, VCCI Class B

# Technical Support

You can find software updates and user documentation on the D-Link website.

D-Link provides free technical support for customers within the United States and within Canada for the duration of the warranty period on this product.

U.S. and Canadian customers can contact D-Link technical support through our website, or by phone.

## Tech Support for customers within the United States:

### ***D-Link Technical Support over the Telephone:***

(877) 453-5465

24 hours a day, seven days a week.

### ***D-Link Technical Support over the Internet:***

<http://support.dlink.com>

email: [support@dlink.com](mailto:support@dlink.com)

## Tech Support for customers within Canada:

### ***D-Link Technical Support over the Telephone:***

(800) 361-5265

Monday to Friday 8:30am to 9:00pm EST

### ***D-Link Technical Support over the Internet:***

<http://support.dlink.ca>

email: [support@dlink.ca](mailto:support@dlink.ca)

*When contacting technical support, please provide the following information:*

- *Serial number of the unit*
- *Model number or product name*
- *Software type and version number*

# Warranty and Registration

Subject to the terms and conditions set forth herein, D-Link Systems, Inc. ("D-Link") provides this Limited warranty for its product only to the person or entity that originally purchased the product from:

- D-Link or its authorized reseller or distributor and
- Products purchased and delivered within the fifty states of the United States, the District of Columbia, U.S. Possessions or Protectorates, U.S. Military Installations, addresses with an APO or FPO.

**Limited Warranty:** D-Link warrants that the hardware portion of the D-Link products described below will be free from material defects in workmanship and materials from the date of original retail purchase of the product, for the period set forth below applicable to the product type ("Warranty Period"), except as otherwise stated herein.

1-Year Limited Warranty for the Product(s) is defined as follows:

- Hardware (excluding power supplies and fans) One (1) Year
- Power Supplies and Fans One (1) Year
- Spare parts and spare kits Ninety (90) days

D-Link's sole obligation shall be to repair or replace the defective Hardware during the Warranty Period at no charge to the original owner or to refund at D-Link's sole discretion. Such repair or replacement will be rendered by D-Link at an Authorized D-Link Service Office. The replacement Hardware need not be new or have an identical make, model or part. D-Link may in its sole discretion replace the defective Hardware (or any part thereof) with any reconditioned product that D-Link reasonably determines is substantially equivalent (or superior) in all material respects to the defective Hardware. Repaired or replacement Hardware will be warranted for the remainder of the original Warranty Period from the date of original retail purchase. If a material defect is incapable of correction, or if D-Link determines in its sole discretion that it is not practical to repair or replace the defective Hardware, the price paid by the original purchaser for the defective Hardware will be refunded by D-Link upon return to D-Link of the defective Hardware. All Hardware (or part thereof) that is replaced by D-Link, or for which the purchase price is refunded, shall become the property of D-Link upon replacement or refund.

**Limited Software Warranty:** D-Link warrants that the software portion of the product ("Software") will substantially conform to D-Link's then current functional specifications for the Software, as set forth in the applicable documentation, from the date of original retail purchase of the Software for a period of ninety (90) days ("Warranty Period"), provided that the Software is properly installed on approved hardware and operated as contemplated in its documentation. D-Link further warrants that, during the Warranty Period, the magnetic media on which D-Link delivers the Software will be free of physical defects. D-Link's sole obligation shall be to replace the non-conforming Software (or defective media) with software that substantially conforms to D-Link's functional specifications for the Software or to refund at D-Link's sole discretion. Except as otherwise agreed by D-Link in writing, the replacement Software is provided only to the original licensee, and is subject to the terms and conditions of the license granted by D-Link for the Software. Software will be warranted for the remainder of the original Warranty Period from the date of original retail purchase. If a material non-conformance is incapable of correction, or if D-Link determines in its sole discretion that it is not practical to replace the non-conforming Software, the price paid by the original licensee for the non-conforming Software will be refunded by D-Link; provided that the non-conforming Software (and all copies thereof) is first returned to D-Link. The license granted respecting any Software for which a refund is given automatically terminates.

**Non-Applicability of Warranty:** The Limited Warranty provided hereunder for hardware and software of D-Link's products will not be applied to and does not cover any refurbished product and any product purchased through the inventory clearance or liquidation sale or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product and in that case, the product is being sold "As-Is" without any warranty whatsoever including, without limitation, the Limited Warranty as described herein, notwithstanding anything stated herein to the contrary.

**Submitting A Claim:** The customer shall return the product to the original purchase point based on its return policy. In case the return policy period has expired and the product is within warranty, the customer shall submit a claim to D-Link as outlined below:

- The customer must submit with the product as part of the claim a written description of the Hardware defect or Software nonconformance in sufficient detail to allow D-Link to confirm the same.



- The original product owner must obtain a Return Material Authorization ("RMA") number from the Authorized D-Link Service Office and, if requested, provide written proof of purchase of the product (such as a copy of the dated purchase invoice for the product) before the warranty service is provided.
- After an RMA number is issued, the defective product must be packaged securely in the original or other suitable shipping package to ensure that it will not be damaged in transit, and the RMA number must be prominently marked on the outside of the package. Do not include any manuals or accessories in the shipping package. D-Link will only replace the defective portion of the Product and will not ship back any accessories.
- The customer is responsible for all in-bound shipping charges to D-Link. No Cash on Delivery ("COD") is allowed. Products sent COD will either be rejected by D-Link or become the property of D-Link. Products shall be fully insured by the customer and shipped to **D-Link Systems, Inc., 53 Discovery Drive, Irvine, CA 92618**. D-Link will not be held responsible for any packages that are lost in transit to D-Link. The repaired or replaced packages will be shipped to the customer via UPS Ground or any common carrier selected by D-Link, with shipping charges prepaid. Expedited shipping is available if shipping charges are prepaid by the customer and upon request.

D-Link may reject or return any product that is not packaged and shipped in strict compliance with the foregoing requirements, or for which an RMA number is not visible from the outside of the package. The product owner agrees to pay D-Link's reasonable handling and return shipping charges for any product that is not packaged and shipped in accordance with the foregoing requirements, or that is determined by D-Link not to be defective or non-conforming.

**What Is Not Covered:** This limited warranty provided by D-Link does not cover: Products, if in D-Link's judgment, have been subjected to abuse, accident, alteration, modification, tampering, negligence, misuse, faulty installation, lack of reasonable care, repair or service in any way that is not contemplated in the documentation for the product, or if the model or serial number has been altered, tampered with, defaced or removed; Initial installation, installation and removal of the product for repair, and shipping costs; Operational adjustments covered in the operating manual for the product, and normal maintenance; Damage that occurs in shipment, due to act of God, failures due to power surge, and cosmetic damage; Any hardware, software, firmware or other products or services provided by anyone other than D-Link; Products that have been purchased from inventory clearance or liquidation sales or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product. Repair by anyone other than D-Link or an Authorized D-Link Service Office will void this Warranty.

**Disclaimer of Other Warranties:** EXCEPT FOR THE LIMITED WARRANTY SPECIFIED HEREIN, THE PRODUCT IS PROVIDED "AS-IS" WITHOUT ANY WARRANTY OF ANY KIND WHATSOEVER INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT. IF ANY IMPLIED WARRANTY CANNOT BE DISCLAIMED IN ANY TERRITORY WHERE A PRODUCT IS SOLD, THE DURATION OF SUCH IMPLIED WARRANTY SHALL BE LIMITED TO NINETY (90) DAYS. EXCEPT AS EXPRESSLY COVERED UNDER THE LIMITED WARRANTY PROVIDED HEREIN, THE ENTIRE RISK AS TO THE QUALITY, SELECTION AND PERFORMANCE OF THE PRODUCT IS WITH THE PURCHASER OF THE PRODUCT.

**Limitation of Liability:** TO THE MAXIMUM EXTENT PERMITTED BY LAW, D-LINK IS NOT LIABLE UNDER ANY CONTRACT, NEGLIGENCE, STRICT LIABILITY OR OTHER LEGAL OR EQUITABLE THEORY FOR ANY LOSS OF USE OF THE PRODUCT, INCONVENIENCE OR DAMAGES OF ANY CHARACTER, WHETHER DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF GOODWILL, LOSS OF REVENUE OR PROFIT, WORK STOPPAGE, COMPUTER FAILURE OR MALFUNCTION, FAILURE OF OTHER EQUIPMENT OR COMPUTER PROGRAMS TO WHICH D-LINK'S PRODUCT IS CONNECTED WITH, LOSS OF INFORMATION OR DATA CONTAINED IN, STORED ON, OR INTEGRATED WITH ANY PRODUCT RETURNED TO D-LINK FOR WARRANTY SERVICE) RESULTING FROM THE USE OF THE PRODUCT, RELATING TO WARRANTY SERVICE, OR ARISING OUT OF ANY BREACH OF THIS LIMITED WARRANTY, EVEN IF D-LINK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE SOLE REMEDY FOR A BREACH OF THE FOREGOING LIMITED WARRANTY IS REPAIR, REPLACEMENT OR REFUND OF THE DEFECTIVE OR NON-CONFORMING PRODUCT. THE MAXIMUM LIABILITY OF D-LINK UNDER THIS WARRANTY IS LIMITED TO THE PURCHASE PRICE OF THE PRODUCT COVERED BY THE WARRANTY. THE FOREGOING EXPRESS WRITTEN WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ANY OTHER WARRANTIES OR REMEDIES, EXPRESS, IMPLIED OR STATUTORY.

**Governing Law:** This Limited Warranty shall be governed by the laws of the State of California. Some states do not allow exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the foregoing limitations and exclusions may not apply. This limited warranty provides specific legal rights and the product owner may also have other rights which vary from state to state.

**Trademarks:** D-Link is a registered trademark of D-Link Systems, Inc. Other trademarks or registered trademarks are the property of their respective manufacturers or owners.

**Copyright Statement:** No part of this publication or documentation accompanying this Product may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from D-Link Corporation/D-Link Systems, Inc., as stipulated by the United States Copyright Act of 1976. Contents are subject to change without prior notice. Copyright® 2002 by D-Link Corporation/D-Link Systems, Inc. All rights reserved.

**CE Mark Warning:** This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

**FCC Statement:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**IMPORTANT NOTE:**

**FCC Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of about 8 inches (20cm) between the radiator and your body.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

**Register your D-Link product online at <http://support.dlink.com/register/>**

## **Appendix:**

# **DP-300U Printer Compatibility List**

### **The Canon Printer**

Canon BJC-255SP  
Canon BJ-330  
Canon BJC-600, 620  
Canon BJC-2000SP  
Canon BJC-4100, 4300, 4500, 4550  
Canon BJC-6000, 6500  
Canon BJC-7000  
Canon BJC-8200  
Canon LBP-720, 740  
Canon Bubble Jet S520

### **The Epson Printer/plotter**

Epson Stylus Photo 700, 710, 750  
Epson Stylus Photo 870  
Epson Stylus Photo 1200, 1270  
Epson Stylus Photo EX  
Epson Stylus Pro XL  
Epson Stylus Color 400, 440, 460, 480  
Epson Stylus Color 600, 640, 660  
Epson Stylus Color 740  
Epson Stylus Color 800, 850, 860  
Epson Stylus Color 900  
Epson Stylus Color 1160  
Epson Stylus Color 1500, 1520  
Epson Stylus Color 3000  
Epson Stylus C60  
Epson Stylus C80  
Epson LQ-100  
Epson LQ-300  
Epson LQ-550, 570+  
Epson LQ-1070C+  
Epson LQ-2070, 2170C  
Epson EPL-N2000, N2010

### **The Fujitsu Printer**

Fuji 10V, 14V  
Fuji DL-700  
Fuji DL-3800

### **The HP Printer/Plotter**

HP Portable  
HP LaserJet III  
HP LaserJet 4P, 4L, 4V  
HP LaserJet 5L  
HP LaserJet 6P, 6L  
HP LaserJet 1100, 1100A  
HP LaserJet 1200  
HP LaserJet 2100, 2100M  
HP LaserJet 2200  
HP LaserColorJet 8500  
HP DeskJet 400, 420  
HP DeskJet 500, 550C, 560C  
HP DeskJet 670C, 695C  
HP DeskJet 720C  
HP DeskJet 810C, 890C  
HP DeskJet 920C  
HP DeskJet 930C(new), 970CXI  
HP DeskJet 1120C  
HP DeskJet 1125C  
HP DesignJet 350C  
HP DesignJet 600C  
HP LaserJet 4000  
HP LaserJet 5000  
HP OfficeJet T45, 710

## **Appendix: DP-300U Printer Compatibility List (continued)**

### **The Lexmark Printer**

Lexmark 4039 10R  
Lexmark 5700  
Lexmark Optra Color 45  
Lexmark Optra C710  
Lexmark Optra E, E+, E310  
Lexmark Optra K1220  
Lexmark Optra M410, M412  
Lexmark Optra N  
Lexmark Optra R+  
Lexmark Optra S1250, S1855  
Lexmark Optra SC-1275  
Lexmark Optra SE-3455  
Lexmark Optra T614  
Lexmark Optra W810  
Lexmark Z53

### **Other Printers**

Brother HL-1260  
CD T120  
Citizen GSX-230  
Futek 84+  
OKI ML-391  
OKIdata OL-400  
Olivetti JP450  
Panasonic 2023  
Panasonic KX-P1624  
Printtec PR856C  
Star NX-2420  
Tektronix Phaser 350

### **The NEC Printer**

NEC P2200  
NEC P3200  
NEC P5300  
NEC P6300  
NEC P7300

Other printers from the brands listed above may also be supported.  
For an updated compatibility list please visit: <http://www.support.dlink.com>